
ADVANTEST[®]
ADVANTEST CORPORATION

R9211A/E
Digital Spectrum Analyzer
Operation Manual

MANUAL NUMBER FOE-8335021H01

Safety Summary

To ensure thorough understanding of all functions and to ensure efficient use of this instrument, please read the manual carefully before using. Note that Advantest bears absolutely no responsibility for the result of operations caused due to incorrect or inappropriate use of this instrument.

If the equipment is used in a manner not specified by Advantest, the protection provided by the equipment may be impaired.

- **Warning Labels**

Warning labels are applied to Advantest products in locations where specific dangers exist. Pay careful attention to these labels during handling. Do not remove or tear these labels. If you have any questions regarding warning labels, please ask your nearest Advantest dealer. Our address and phone number are listed at the end of this manual.

Symbols of those warning labels are shown below together with their meaning.

DANGER: Indicates an imminently hazardous situation which will result in death or serious personal injury.

WARNING: Indicates a potentially hazardous situation which will result in death or serious personal injury.

CAUTION: Indicates a potentially hazardous situation which will result in personal injury or a damage to property including the product.

- **Basic Precautions**

Please observe the following precautions to prevent fire, burn, electric shock, and personal injury.

- Use a power cable rated for the voltage in question. Be sure however to use a power cable conforming to safety standards of your nation when using a product overseas.
- When inserting the plug into the electrical outlet, first turn the power switch OFF and then insert the plug as far as it will go.
- When removing the plug from the electrical outlet, first turn the power switch OFF and then pull it out by gripping the plug. Do not pull on the power cable itself. Make sure your hands are dry at this time.
- Before turning on the power, be sure to check that the supply voltage matches the voltage requirements of the instrument.
- Connect the power cable to a power outlet that is connected to a protected ground terminal. Grounding will be defeated if you use an extension cord which does not include a protected ground terminal.
- Be sure to use fuses rated for the voltage in question.
- Do not use this instrument with the case open.
- Do not place anything on the product and do not apply excessive pressure to the product. Also, do not place flower pots or other containers containing liquid such as chemicals near this

Safety Summary

product.

- When the product has ventilation outlets, do not stick or drop metal or easily flammable objects into the ventilation outlets.
- When using the product on a cart, fix it with belts to avoid its drop.
- When connecting the product to peripheral equipment, turn the power off.

- **Caution Symbols Used Within this Manual**

Symbols indicating items requiring caution which are used in this manual are shown below together with their meaning.

DANGER: Indicates an item where there is a danger of serious personal injury (death or serious injury).

WARNING: Indicates an item relating to personal safety or health.

CAUTION: Indicates an item relating to possible damage to the product or instrument or relating to a restriction on operation.

- **Safety Marks on the Product**

The following safety marks can be found on Advantest products.



: ATTENTION - Refer to manual.



: Protective ground (earth) terminal.



: DANGER - High voltage.



: CAUTION - Risk of electric shock.

- **Replacing Parts with Limited Life**

The following parts used in the instrument are main parts with limited life.

Replace the parts listed below before their expected lifespan has expired to maintain the performance and function of the instrument.

Note that the estimated lifespan for the parts listed below may be shortened by factors such as the environment where the instrument is stored or used, and how often the instrument is used.

The parts inside are not user-replaceable. For a part replacement, please contact the Advantest sales office for servicing.

Each product may use parts with limited life.

For more information, refer to the section in this document where the parts with limited life are described.

Main Parts with Limited Life

Part name	Life
Unit power supply	5 years
Fan motor	5 years
Electrolytic capacitor	5 years
LCD display	6 years
LCD backlight	2.5 years
Floppy disk drive	5 years
Memory backup battery	5 years

- **Hard Disk Mounted Products**

The operational warnings are listed below.

- Do not move, shock and vibrate the product while the power is turned on.
Reading or writing data in the hard disk unit is performed with the memory disk turning at a high speed. It is a very delicate process.
- Store and operate the products under the following environmental conditions.
An area with no sudden temperature changes.
An area away from shock or vibrations.
An area free from moisture, dirt, or dust.
An area away from magnets or an instrument which generates a magnetic field.
- Make back-ups of important data.
The data stored in the disk may become damaged if the product is mishandled. The hard disc has a limited life span which depends on the operational conditions. Note that there is no guarantee for any loss of data.

- **Precautions when Disposing of this Instrument**

When disposing of harmful substances, be sure dispose of them properly with abiding by the state-provided law.

Harmful substances: (1) PCB (polycarbon biphenyl)
(2) Mercury
(3) Ni-Cd (nickel cadmium)
(4) Other
Items possessing cyan, organic phosphorous and hexadic chromium and items which may leak cadmium or arsenic (excluding lead in solder).

Example: fluorescent tubes, batteries

Environmental Conditions

This instrument should only be used in an area which satisfies the following conditions:

- An area free from corrosive gas
- An area away from direct sunlight
- A dust-free area
- An area free from vibrations
- Altitude of up to 2000 m

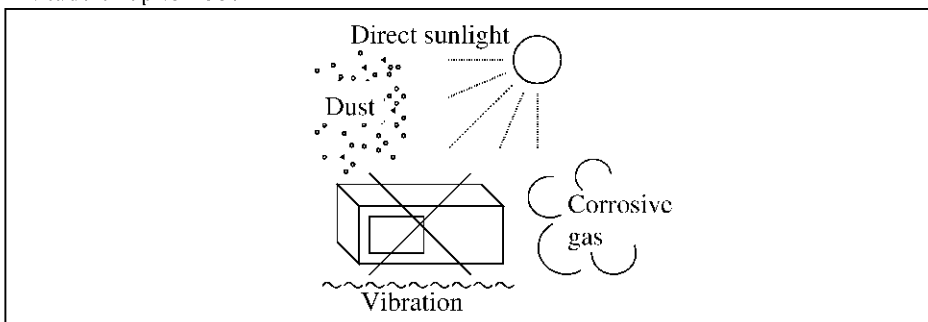


Figure-1 Environmental Conditions

- Operating position

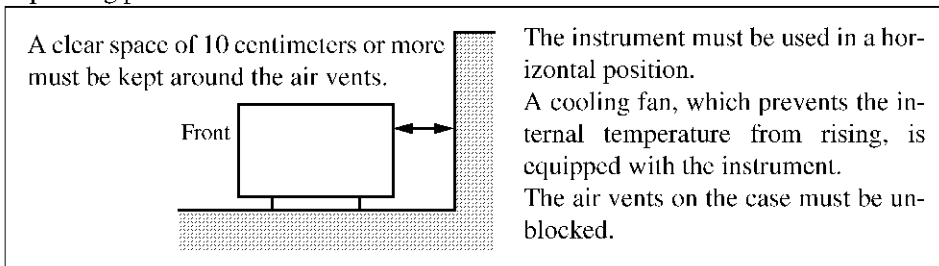


Figure-2 Operating Position

- Storage position

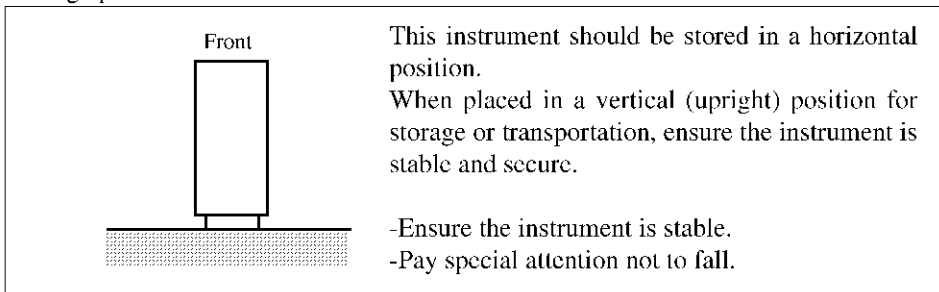


Figure-3 Storage Position

- The classification of the transient over-voltage, which exists typically in the main power supply, and the pollution degree is defined by IEC61010-1 and described below.

Impulse withstand voltage (over-voltage) category II defined by IEC60364-4-443

Pollution Degree 2

Types of Power Cable







Replace any references to the power cable type, according to the following table, with the appropriate power cable type for your country.

Plug configuration	Standards	Rating, color and length	Model number (Option number)
	PSE: Japan Electrical Appliance and Material Safety Law	125 V at 7 A Black 2 m (6 ft)	Straight: A01402 Angled: A01412
	UL: United States of America CSA: Canada	125 V at 7 A Black 2 m (6 ft)	Straight: A01403 (Option 95) Angled: A01413
	CEE: Europe DEMKO: Denmark NEMKO: Norway VDE: Germany KEMA: The Netherlands CEBEC: Belgium OVE: Austria FIMKO: Finland SEMKO: Sweden	250 V at 6 A Gray 2 m (6 ft)	Straight: A01404 (Option 96) Angled: A01414
	SEV: Switzerland	250 V at 6 A Gray 2 m (6 ft)	Straight: A01405 (Option 97) Angled: A01415
	SAA: Australia, New Zealand	250 V at 6 A Gray 2 m (6 ft)	Straight: A01406 (Option 98) Angled: -----
	BS: United Kingdom	250 V at 6 A Black 2 m (6 ft)	Straight: A01407 (Option 99) Angled: A01417
	CCC: China	250 V at 10 A Black 2 m (6 ft)	Straight: A114009 (Option 94) Angled: A114109

Table of Power Cable Options


There are six power cable options (refer to following table).

Order power cable options by Model number.

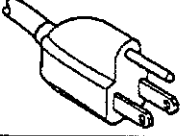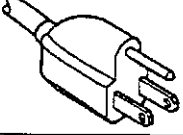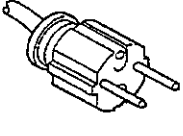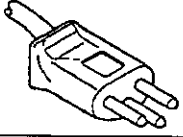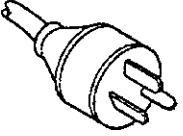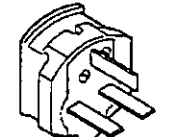	Plug configuration	Standards	Rating, color and length	Model number (Option number)
1		JIS: Japan Law on Electrical Appliances	125 V at 7 A Black 2 m (6 ft)	Straight: A01402 Angled: A01412
2		UL: United States of America CSA: Canada	125 V at 7 A Black 2 m (6 ft)	Straight: A01403 (Option 95) Angled: A01413
3		CEE: Europe DEMKO: Denmark NEMKO: Norway VDE: Germany KEMA: The Netherlands CEBEC: Belgium OVE: Austria FIMKO: Finland SEMKO: Sweden	250 V at 6 A Gray 2 m (6 ft)	Straight: A01404 (Option 96) Angled: A01414
4		SEV: Switzerland	250 V at 6 A Gray 2 m (6 ft)	Straight: A01405 (Option 97) Angled: A01415
5		SAA: Australia, New Zealand	250 V at 6 A Gray 2 m (6 ft)	Straight: A01406 (Option 98) Angled: -----
6		BS: United Kingdom	250 V at 6 A Black 2 m (6 ft)	Straight: A01407 (Option 99) Angled: A01417

BEFORE READING THIS MANUAL


■ How to Use This Manual

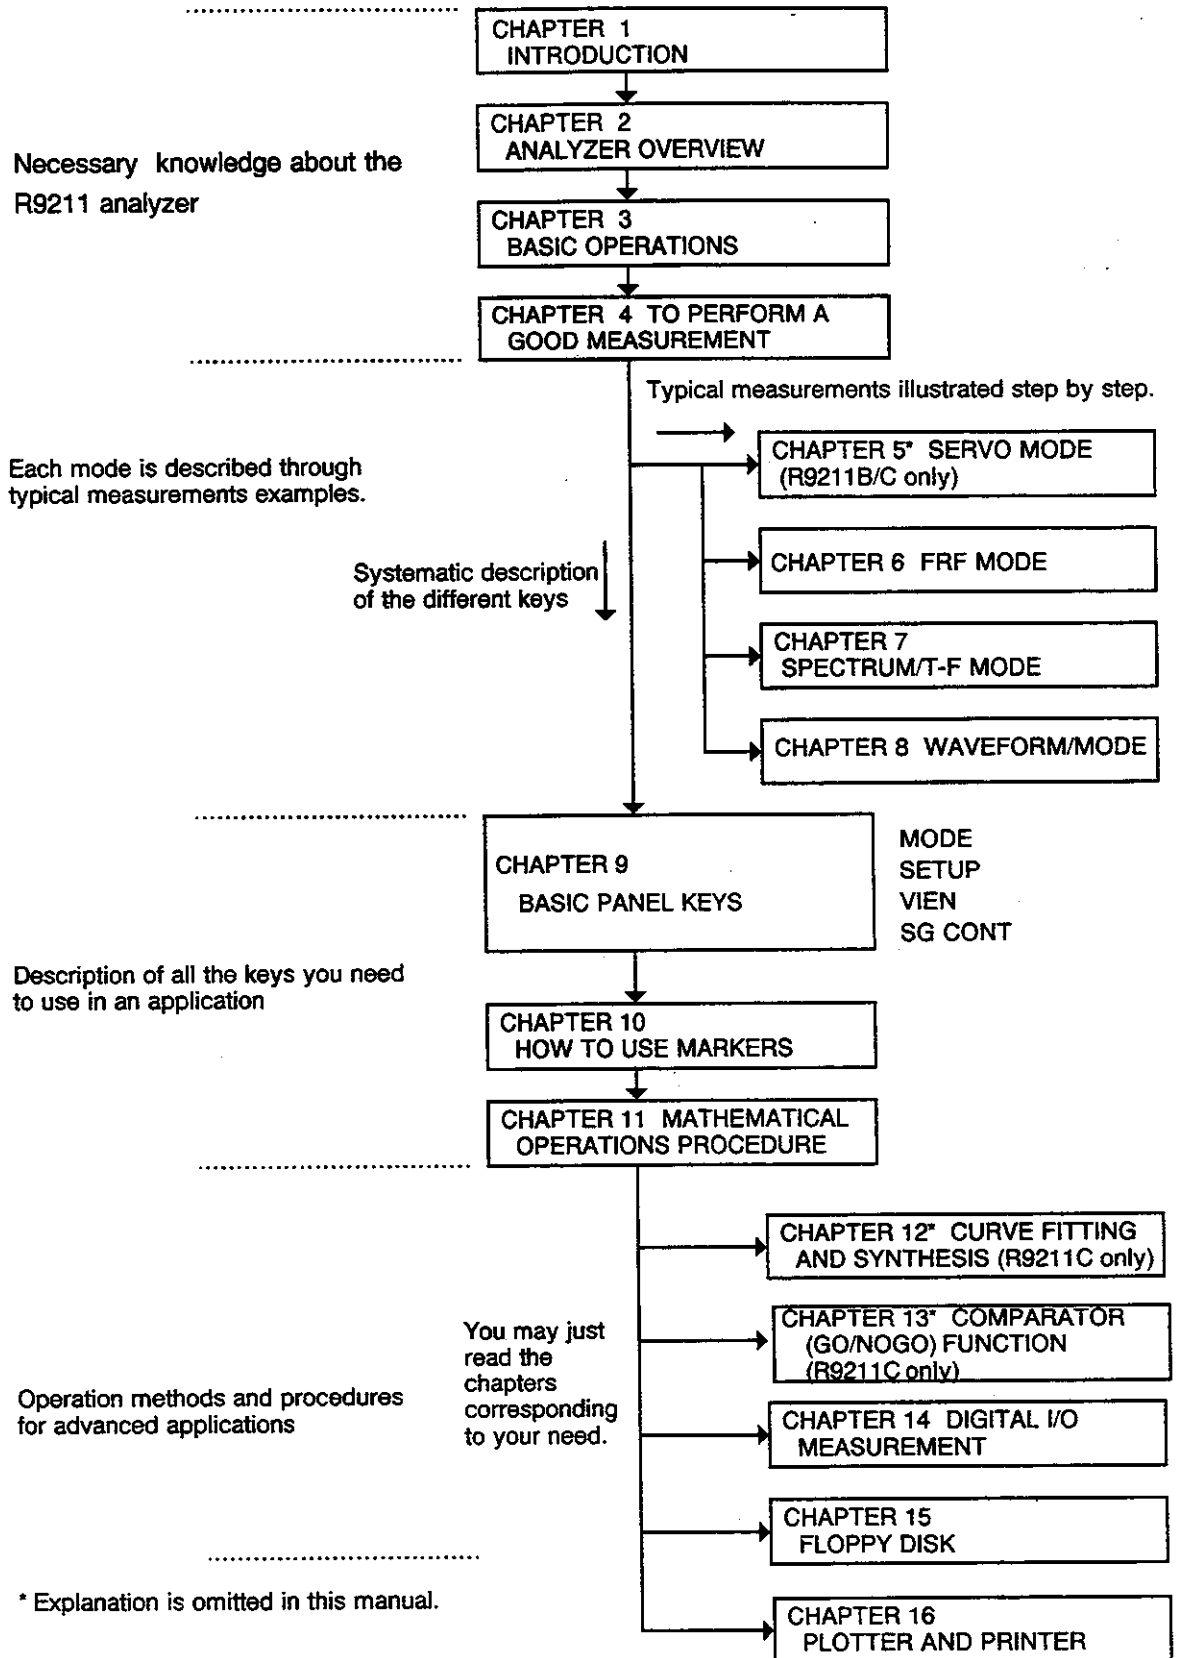

■ Symbolic Notation of the Different Types of Keys throughout This Manual

In this manual, the keys are symbolized so that you can quite easily understand what type they belong to, and what key sequences are proper.

Notation of the Panel Keys

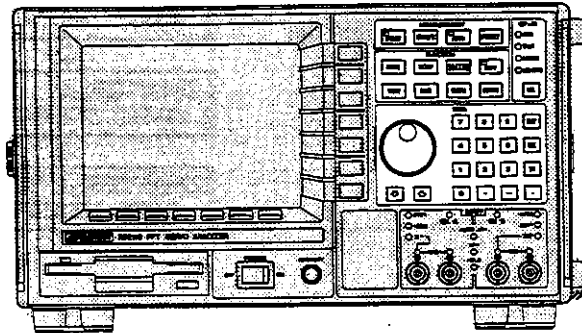


Most panel keys are represented by their name enclosed in a double ledged box.

Example: **SETUP**

But a numeric key is only underlined.

Example: 10 means "Sequentially press the **1** and **0** keys"

Symbolic Notation of Soft Keys

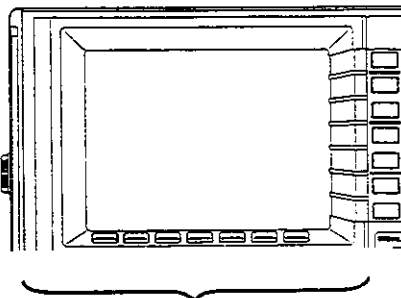

A Y soft key is symbolized by its name overlined and underlined.

Example: FREQ RNG
100kHz

An X soft key is designed by its name enclosed in a ledged box.

Example: **RANGE**

Symbolic Notation of Key Sequences

The keys succession is indicated by arrows(⇒).

Example: **SETUP** ⇒ **RANGE** ⇒ FREQ RNG
100kHz

■ Notation of Model Names

R9211: Represents the R9211A and R9211E.

R9211A: Represents the R9211A only.

R9211E: Represents the R9211E only.

■ Appearance and Accessories Check

When this unit is delivered, make sure that it was not damaged during transportation. If it is damaged or if any standard accessory is missing, contact your nearest sales office or agent.

Addresses and telephone numbers are listed at the end of this manual.

Standard Accessories

Product name	Type	Stock No.	Quantity
Power cable	A01402	DCB-DD2428X01-1	1
Input cable	MI-77	DCB-FM0904-1	2
T-type connector (BNC)	UG274/U	JCF-AB001EX04	1
Fuse	EAWK2A	DFT-AA2A	2
Instruction Manual	Procedures	ER9211A/E (P)	1
Guidebook	Operations	ER9211SERIES (G)	1
GPIB HAND Book	—	ER9211SERIES (H)	1

Note: When ordering an additional accessory, please inform us of its type and stock No.

TABLE OF CONTENTS

Chapter 1 INTRODUCTION

1. Safety Requirements	1-2
Power Supply	1-2
Grounding	1-2
Replacing a Fuse	1-4
2. Use under Normal Conditions	1-5
Operating Environment	1-5
Cooling and Ventilation	1-5
Display (CRT) Intensity and Life Span	1-5
Cleaning the CRT screen	1-5
Destruction of Circuit Elements by CMV Looping of the Power Supply	1-5
NiCd (Nickel Cadmium) Battery	1-6
3. Transportation and Storage	1-7
Transportation	1-7
Storage	1-7
4. Troubleshooting	1-8
Before Ordering Repair	1-8

Chapter 2 ANALYZER OVERVIEW

1. Outline	2-2
The Four Measurement Modes	2-3
2. The Measurement Modes	2-4
FRF Mode	2-4
Spectrum Mode	2-6
Time-Frequency Analysis Mode (T-F MODE)	2-10
Waveform Mode	2-12
3. Comparison between the Different Measurement Modes	2-14
From the Point of View of the Analyzed and Displayed Data	2-14
From the Point of View of the Averaging Modes	2-14
From the Point of View of the Trigger Operation	2-14
4. Measurement Blocks	2-18
Ordinary Measurement Blocks	2-18
Logarithmic Frequency Resolution Spectrum Analysis and Octave Spectrum Analysis	2-19

Chapter 3 BASIC OPERATIONS

1. Mastering Key Operations	3-2
Key Order (Hierarchical Structure)	3-2
Measurement Flow	3-3
2. CRT Intrucluction	3-5
CRT Display Explanation	3-5
Initial Display	3-6
Display Character of Function Key	3-7
Calender Display	3-8
3. After Turning the Power ON	3-9
Self-diagnostic Function	3-9
Initialization	3-11
4. Panels Description	3-12
Front Panel	3-12
Rear Panel	3-16

Chapter 4 TO PERFORM A GOOD MEASUREMENT

1. Input Connection	4-2
Input Circuit	4-2
Selecting an Input Method and Setting a Menu	4-3
Power Supply for Integrated Circuit Piezoelectric Accelerometers (ICP)	4-6
Using an External Trigger Circuit	4-8
2. Input Sensitivity	4-9
Input Sensitivity Auto-range Function	4-9
Input Sensitivity versus Y Scale	4-12
3. Reducing The Noise Effects	4-18
Differential Input Method	4-18
Synchronous Averaging Method	4-19
Synchronous Averaging Setup Example	4-20

Chapter 5 SERVO MODE (R9211B/C only)

Explanation is omitted in this manual.

Chapter 6 FRF MODE

1. The FRF Mode	6-2
2. Basic Setup Procedure	6-3
3. Toward Better Measurement	6-7
Force and Response Windows	6-7
How to Check the Measurement Results	6-10
Delayed Systems Analysis (Interchannel Delay)	6-12

Averaging	6-14
Frequency Range, Number of Lines, and Zoom	6-16
Measuring the SNR (Signal-to-Noise Ratio)	6-19
4. Typical Measurement Examples	6-20
Measurement with an Impulse Hammer	6-20
Example of Utilization of the Equalizer	6-25

Chapter 7 SPECTRUM T-F MODE

1. Spectrum And T-F Modes	7-2
The Spectrum Mode	7-2
The T-F Mode (Extended Spectrum Mode)	7-3
2. Basic Setup Procedure	7-7
Setup Procedure for Linear Resolution Frequency Analysis	7-7
Setup Procedure for Octave and Logarithmic Resolution Frequency Analysis	7-12
3. Toward Better Measurement	7-15
Frequency Range and Number of Lines	7-15
Applying a Window	7-17
Audio Weighting Filter	7-19
Switching ON/OFF the Antialiasing Filter	7-20
Averaging	7-20
Vlt, Vrms, Engineering Unit, and PSD	7-27
Post Measurement Computations (Typical Examples)	7-35
Zoom (R9211A only)	7-39
4. Typical Measurement Examples	7-42
Calibration of a Noise Meter	7-42
Measurement of the Characteristics of an Unevenly Rotating Device	7-46
Advanced Measurement (T-F Mode)	7-50

Chapter 8 WAVEFORM MODE

1. An Introduction To The Waveform Mode	8-2
2. Basic Setup Procedure	8-3
Waveform Observation Setup Procedure	8-3
Histogram Measurement Setup Procedure	8-6
Correlation Function Measurement Setup Procedure	8-7
3. Toward Better Measurement	8-9
Sampling Rate and Number of Points	8-9
Trigger	8-11
Trigger Position Marker	8-15

Lag Window	8-16
Engineering Unit	8-16
4. Typical Measurement Example	8-17
Pulse Rise Time Measurement (Using a Pulse Marker)	8-17

Chapter 9 BASIC PANEL KEYS

1. PRESET KEY OPERATION	9-2
Allocation of MATH Functions	9-2
2. MODE KEY OPERATION	9-3
Selection of the Measurement Mode	9-3
Calibration	9-3
Label	9-4
Calendar's Setting	9-6
Extended Functions' Setting	9-6
A Look at the MODE Menu	9-8
3. SETUP KEY OPERATION	9-9
Measurement Functions and Active Channel Selections	9-9
Setting of the Numbers of Samples and Lines	9-10
Setting of the Input Sensitivity	9-16
Setting of the Signal Input Block	9-17
Setting of the Trigger	9-19
Setting of a Data Acquisition Mode	9-24
Selection of a Window	9-24
Setup of an Averaging Process	9-27
Setting of the Unit	9-31
Setting of the Interchannel Delay	9-35
T-F Analysis Setup	9-37
SETUP Menu List	9-42
4. VIEW KEY OPERATION	9-46
Selection of a Screen in the Multi-Screen Configuration	9-46
Display Related Modifications	9-47
Display Format	9-50
How to Display Various Data	9-55
Selection of the Various Data Display Formats	9-64
Displaying and Setting the X Axis Scale	9-72
Displaying and Setting the Y Axis Scale	9-74
VIEW Menu List	9-76

Chapter 10 HOW TO USE MARKERS

1. CURSOR MARKERS	10-2
How to Use X Axis Cursor Markers	10-2
How to Use Y Axis Cursor Markers	10-4
How to Move Cursor Markers Simultaneously on Different Screens	10-6
How to Set the Position of the Cursor Marker Simultaneously on Different Screens	10-8
2. SEARCH MARKERS	10-10
Relationships between Search Markers and Waveform Types	10-10
What the Search Markers do	10-11
Operating the Search Markers	10-12
Search Markers Display Timing	10-19
3. DISPLAYING LISTS OF MARKERS	10-20
Reference Markers	10-20
Displaying Lists of Search Markers	10-22
4. MAJOR EXAMPLES OF SEARCH MARKER SETTING ..	10-23
How to Use Search Markers	10-23

Chapter 11 MATHEMATICAL OPERATIONS PROCEDURES

1. MATHEMATICAL OPERATIONS	11-2
The Different Types of Mathematical Operations	11-3
Cautions on Engineering Unit setting for Operation Result	11-4
Classification of the Mathematical Operations	11-5
Restrictions on the Mathematical Operations	11-6
2. BASIC PROCEDURES	11-9
Basic Operation Procedure (Example of "X + Y") ..	11-9
3. EXAMPLES OF MATHEMATICAL OPERATIONS	11-11
$1/(j\omega)^2$	11-11
Real Time Operation	11-13
Display of Setting Condition for Operation Result	11-14
Rotation	11-15
Cepstrum and Liftering	11-17
Conversion of a Feedback Loop System	11-22
InCOP (COP, SNR)	11-25
to CMP TIME	11-28
to TIME/to FREQ	11-31
BANDPASS (BANDSTOP)	11-34
TR MATH (Trace MATH)	11-36

Chapter 12 CURVE FITTING AND SYNTHESIS (R9211C ONLY)

Explanation is omitted in this manual.

Chapter 13 COMPARATOR (GO/NOGO) FUNCTION (R9211C ONLY)

Explanation is omitted in this manual.

Chapter 14 DIGITAL I/O AND MEASUREMENT (OPTION 11)

1. Outline	14-2
Digital I/O Connector Pin Configuration	14-3
2. Digital Input	14-4
How to Use the Digital Input Function	14-4
Digital Input Signal and Timing	14-5
Digital Input Connections	14-6
Scale Conversion for Digital Input	14-7
3. Digital Output	14-8
How to Use the Digital Output Function	14-8
Digital Outputs Signal and Timings	14-9
Digital Output Connections	14-10
Scale Conversion for Digital Output	14-11
4. Examples Of Measurement Using The Digital I/O Function	14-12
Measurement of a Frequency Responce Function	14-12

Chapter 15 FLOPPY DISK

1. Outline	15-2
Specifications of the Floppy Disk Drive	15-2
2. How To Use A Floppy Disk	15-3
How to Handle a Floppy Disk	15-3
MEAS File (Data File/View File)	15-5
PANEL File	15-7
Catalog Display and File Names	15-9
Saving Setting	15-11
Data Compatibility between Models	15-12
Menus Related to the Floppy Disk	15-13

3. Operation Method	15-14
Floppy Disk Initializing Operation Procedure	15-14
"SAVE" Operation Procedure for Floppy File Specification	15-15
"COPY" Operation Procedure for Floppy File Specification	15-16
"RECALL/DELETE" Operation Procedure for Floppy File Specification	15-18
Notes on the Retrieving Procedure	15-20
How to Compare New Data with Retrieved Data	15-21
4. Regenerating Floppy Data With an IBM-PC	15-22
Floppy Disk Data Types and Data Format	15-22
R9211 View File Reading Program	15-24

Chapter 16 PLOTTER AND PRINTER

1. Outline	16-2
2. How To Use A Plotter	16-3
Connectable Plotters and Connection Method	16-3
Plotter Setting	16-4
Operation Procedure	16-5
Scale Plot Operation Procedure	16-9
Plot Area for Scale Plot	16-12
Set the Rate of Reduction for Scale Plot	16-13
Precautions	16-15
3. How To Use A Video Printer	16-21
Video Printer Connection Method	16-21
Video Printer Setting	16-22
Precautions	16-22
4. How To Use The Built-In Printer	16-23

APPENDIX

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION	A-2
Specifications	A-2
Accessories	A-8
2. GLOSSARY	A-12
Terms Related to the Analysis Itself	A-12
Audio Weights Characteristics	A-18
Octave filter No., Relation between Center Frequency and Setting Frequency Range	A-20
3. QUICK OPERATION GUIDE	A-21
FRF Mode	A-21
Spectrum Mode	A-22
TIME-FREQ Mode	A-23

Waveform Mode	A-24
Mathematical Operations	A-25
Marker Operations	A-26
4. ERROR MESSAGES	A-27
Meaning of Error Messages	A-27
Display Errors [DY.er]	A-28
Display Messages [DY.mg]	A-32
Floppy Disk Errors [FD.er]	A-35
Floppy Disk Messages [FD.mg]	A-41
GPib Errors [GP.er]	A-44
Marker Errors [MK.er]	A-47
Marker Messages [MK.mg]	A-48
Math Errors [MT.er]	A-49
Math Messages [MT.mg]	A-57
Plot Errors [PL.er]	A-58
Plot Messages [PL.mg]	A-59
Recall & Save Errors [RS.er]	A-60
Recall & Save Messages [RS.mg]	A-63
Setup Errors [SU.er]	A-64
Setup Messages [SU.mg]	A-66
Time-Frequency Errors [TF.er]	A-68
Time-Frequency Messages [TF.mg]	A-70
Welcome Errors [WL.er]	A-70
Welcome Messages [WL.mg]	A-71
Miscellaneous Errors [XX.er]	A-71
Miscellaneous Messages [XX.mg]	A-74

LIST OF ILLUSTRATIONS

No.	Title	Page
1-1	Power Supply Voltage Indicator and Grounding Outlet	1-3
1-2	Power Cable Plug and Adapter	1-3
1-3	Fuse Holder	1-4
1-4	CMV Looping of the Power Supply Line	1-6
2-1	Concept of Measurement System in FRF Mode	2-4
2-2	Concept of Measurement System in the Spectrum Mode	2-6
2-3	Number of Lines and Zoom Effect	2-8
2-4	Effect of Power Spectrum and Complex Spectrum Averaging	2-9
2-5	Concept of Measurement in the Time-frequency Analysis Mode ...	2-10
2-6	Concept of Measurement in Waveform Mode	2-12
2-7	Measurement Block Diagram	2-21
2-8	Logarithmic Frequency Spectrum Measurement Block Diagram ...	2-22
3-1	Description of the Front Panel	3-15
3-2	Description of the Rear Panel	3-17
4-1	R9211 Input Circuits	4-2
4-2	Input Cable	4-2
4-3	Selecting an Input Method	4-3
4-4	Differential Input Connection	4-4
4-5	+ Input Single Ended Connection	4-4
4-6	- Input Single Ended Connection	4-5
4-7	Balanced Circuit of Power Input Unit for Accelerometer	4-6
4-8	Checking Method at the Operation Level	4-7
4-9	Example of External Trigger Input	4-8
4-10	Display of the Y Scale Default Value of a Spectrum Waveform ...	4-12
4-11	Input Waveform	4-13
4-12	Waveform Displayed in Vrms Units	4-13
4-13	Waveform Displayed in Volts (Vlt)	4-14
4-14	Display in Default Mode	4-17
4-15	Display in Auto Scale Mode	4-17
4-16	Differential Input Connection	4-18
4-17	Single-ended Connection	4-18
4-18	Signal Buried in Noise	4-19
4-19	Signal Extracted through Synchronous Averaging	4-19
4-20	Connection Example	4-20
4-21	Averaging Example in the Time Domain (here, the input signal is a saw-tooth signal buried in noise)	4-24

No.	Title	Page
6-1	Typical Example of Display in the FRF Mode	6-2
6-2	Connection Method	6-3
6-3	Bode Diagram	6-6
6-4	Impulse Response Function's Graph	6-6
6-5	Effect of the Application of the Force Window on a Sine-wave	6-8
6-6	A Response Waveform which is not Damped within the Frame Time	6-9
6-7	A Response Waveform Artificially Damped within the Frame Time ..	6-9
6-8	Frequency Response Function Obtained with a Multi-sine Wave ...	6-11
6-9	Frequency Response Function Obtained with a Pseudo Random Wave	6-11
6-10	Input and Output Signals of a Delayed System	6-12
6-11	FRF Measurement of a Delayed System	6-13
6-12	FRF Measurement of a Delayed System after Compensating the Delay between Input and Output Signals	6-13
6-13	Average Example 1	6-14
6-14	Average Example 2	6-15
6-15	Setting the Frequency Range	6-16
6-16	Setting the Frequency Resolution	6-17
6-17	Zoom	6-18
6-18	Connection of the Impulse Hammer	6-20
6-19	Bode Diagram Obtained for a Measurement Using the Impulse Hammer Method	6-24
6-20	Example FRF Equalization	6-27
7-1	Analysis in the Spectrum Mode	7-2
7-2	Analysis in the T-F Mode	7-4
7-3	Analysis Using Data View	7-5
7-4	Block Diagram Representing the Analysis of a Long Duration Signal in the T-F Mode	7-6
7-5	The Screen During the Measurement	7-11
7-6	Display of the Measurement Results	7-11
7-7	Logarithmic Resolution Frequency Analysis (lower)	7-14
7-8	Illustrates the Effect of Time Truncation on the Signal	7-17
7-9	Average Data Overlap Types	7-26
7-10	Displayed Waveforms	7-28
7-11	Rectangular Filter Transfer Function	7-37
7-12	Modulated Signal	7-38
7-13	Envelope of the Modulated Signal	7-38
7-14	Calibration of a Noise Meter with a Pistonphone	7-42

No.	Title	Page
7-15	Display of the Overall Marker	7-45
7-16	Display of the Calibration Value	7-45
7-17	Measurement of Irregular Rotations	7-46
7-18	Irregular Rotation Frequency Analysis	7-49
7-19	3-dimensional Display in T-F Mode	7-55
7-20	Time-frequency Characteristic	7-58
7-21	Display of the Damping Factor of a Metal Plate	7-58
8-1	Time Waveforms Generated when a Sine Waveform is Input to the Analyzer	8-5
8-2	Histogram	8-7
8-3	Cross-correlation Function	8-8
8-4	Histogram	8-11
8-5	Pulse Rise Time Measurement	8-17
8-6	Pulse Fall Time Measurement	8-20
8-7	Pulse Width Measurement	8-20
9-1	Example of T-F Analysis Results	9-41
9-2	Multi-screen Display	9-47
9-3	Read-out Window for Marker Results	9-49
9-4	Read-out Window Display Position	9-49
9-5	Numeric List and Tridimensional Display	9-51
9-6	Display of Superposed Waveforms (OVERLAY ON/OFF)	9-52
9-7	Graticule Display (GRATICULE ON/OFF)	9-52
9-8	Tridimensional Display Y Axis Angle Examples	9-54
9-9	Spectrum Display	9-56
9-10	Display of Saved and Retrieved Data	9-58
9-11	Display of Arithmetic Operation Results	9-60
9-12	Display of TIME-FREQ Data	9-61
9-13	Real Data Display	9-64
9-14	Imaginary Data Display	9-65
9-15	Logarithmic Magnitude Display	9-66
9-16	Magnitude Display	9-67
9-17	Square Magnitude Display	9-67
9-18	Phase Display	9-68
9-19	Inverse Phase Display	9-68
9-20	Group Delay Display	9-69

No.	Title	Page
9-21	Nyquist Diagram Display	9-69
9-22	Bode Diagram Display	9-70
9-23	Co-quad Diagram Display	9-70
9-24	Cole-cole Diagram Display	9-71
9-25	Nichols Diagram Display	9-71
10-1	X Axis Cursor Markers	10-3
10-2	Y Axis Cursor Markers	10-5
10-3	Moving Cursor Markers Simultaneously	10-7
10-4	Setting the Cursor Marker on the Unselected Screen at the Same Position as that on the Selected Screen	10-9
10-5	Displaying a List of Reference Markers	10-21
10-6	Example of Reference Marker Setting	10-21
10-7	Example of Marker Results List Corresponding to Sideband Marker .	10-22
10-8	Displaying the Marked Peak Data	10-24
11-1	$1/(j\omega)^2$	11-13
11-2	Rotation	11-16
11-3	Cepstrum	11-19
11-4	Liftered Spectrum	11-21
11-5	Closed Loop Characteristic	11-24
11-6	Power Spectrum of the Noise Components	11-27
11-7	Voice Envelope	11-30
11-8	Time Waveform Obtained by IFFT	11-33
11-9	BAND PASS	11-35
11-10	TR MATH Operand (before execution)	11-36
11-11	TR MATH	11-37
14-1	Example of A/D Converter Evaluation	14-2
14-2	Conversion of an Analog Signal Generator to a Digital Signal Generator	14-2
14-3	DIGITAL I/O Connector Pin Configuration	14-3
14-4	Block Diagram for Digital Inputs	14-4
14-5	Digital Input Timing	14-5
14-6	Connections for Digital Input	14-6
14-7	Digital Output Block Diagram	14-8
14-8	Digital Output Timings	14-9
14-9	CH-A/CH-B Data Separator Circuit for Digital Output	14-10
14-10	Example of Measurement Using the Digital I/O Function	14-13

No.	Title	Page
15-1	Floppy Disk Write Protection	15-3
15-2	Use Position of the R9211	15-3
15-3	How to Insert a Floppy Disk	15-4
15-4	File Catalog Display	15-9
15-5	Floppy Disk Operation Menus	15-13
16-1	Plotter and Video Printer	16-2
16-2	Plotter Connection Diagram	16-3
16-3	DIP Switches Settings	16-4
16-4	Plotter Output Example	16-4
16-5	Plotting Example: 2 Double Screen Figures are Plotted on a A4 Vertical Piece of Paper Partitioned in 2 Areas	16-8
16-6	Scale and Graph in 100% Plotting	16-14
16-7	Scale and Graph in 50% Plotting	16-14
16-8	Example: TRAC LINE = SOLID LINE	16-16
16-9	Example: TRAC LINE = DASHED LINE	16-17
16-10	Example: TRAC LINE = DOTS LINE	16-17
16-11	MACRO PLT Partition's Area Positions	16-18
16-12	3D DISPLAY Plotter Output Example	16-20
16-13	Video Printer Connection Diagram	16-21
16-14	Built-in Printer	16-23

LIST OF TABLES

No.	Title	Page
1-1	Voltage	1-2
2-1	Instantaneous Analysable Data / Average Data Types	2-15
2-2	Measurement Modes and Averaging Modes	2-16
2-3	Measurement Modes and Trigger	2-17
4-1	Impedances and Maximum Applicable Voltages between the Input Sockets	4-3
4-2	Input Mode versus Menu Setting	4-4
4-3	Maximum Input Values and Y Scale Default Values Corresponding to the Set Input Sensitivity (In the Case of Voltage versus Time Displays)	4-16
7-1	Numbers of Lines versus Number of Active Channels	7-15
7-2	Number of Decades versus Number of Active Channels	7-16
7-3	Selection of the Best Suited Window ("WEIGHTING")	7-18
7-4	Zoom's Limitations	7-40
8-1	Possible Sampling Rates	8-9
8-2	Possible Number of Points per Frame	8-10
9-1	Predetermined Display Formats (Only Set when TRACEonST is Set to ON)	9-7
9-2	Correspondence Between the Sampling Frequency and the Sampling Rate	9-11
9-3	Relationship Between the Frequency Data and the Time Data	9-13
9-4	Maximum Numbers of Lines (linear resolution)	9-14
9-5	Maximum Number of Decades	9-15
9-6	Arm Length Range	9-23
9-7	Windows' Types	9-25
9-8	Measurement Functions and Averaged Data	9-27
9-9	Available Averaging Method for Each Measurement Functions	9-28
9-10	Data and Unit Labels	9-34
9-11	Frequency Ranges and Time Delay	9-36
9-12	Data Monitored when DO is Selected	9-48
9-13	Instantaneous Data which can be Displayed	9-56

No.	Title	Page
9-14	Averaged Data which can be Displayed	9-57
9-15	Coordinates and Displayed Waveforms	9-65
9-16	X Scale Unit and Y Menu	9-72
9-17	Y Scale Unit and Y Menu Display (1)	9-74
9-18	Y Scale Unit and Y Menu Display (2)	9-74
10-1	Possibly Display Search Markers	10-10
10-2	Search Marker Name and Action	10-11
10-3	Search Marker Operations and Display Procedures	10-12
11-1	Mathematical Operations Types (1)	11-3
11-2	Mathematical Operations Types (2)	11-4
11-3	Classification of the Mathematical Operations	11-5
11-4	Possible Combinations of the 4 Basic Arithmetic Operations	11-6
11-5	Enabled Mathematical Operations versus Data Types	11-7
15-1	Differences between DATA FILE and VIEW FILE	15-5
15-2	Data Saved in a DATA FILE	15-6
15-3	Menus Set Conditions of the SETUP Key which can be Saved	15-11
15-4	Data Arrays Saved on Disk	15-23
16-1	Connectable Plotters	16-3

CHAPTER 1

INTRODUCTION

This chapter gives general advices about the use of the R9211 Digital Spectrum Analyzer.

CONTENTS

1. Safety Requirements	1-2
Power Supply	1-2
Grounding	1-2
Replacing a Fuse	1-4
2. Use under Normal Conditions	1-5
Operating Environment	1-5
Cooling and Ventilation	1-5
Display (CRT) Intensity and Life Span	1-5
Cleaning the CRT screen	1-5
Destruction of Circuit Elements by CMV	
Looping of the Power Supply	1-5
NiCd (Nickel Cadmium) Battery	1-6
3. Transportation and Storage	1-7
Transportation	1-7
Storage	1-7
4. Troubleshooting	1-8
Before Ordering Repair	1-8

1. Safety Requirements

■ Power Supply

The power supply voltage is set before delivery and is indicated on the rear panel. (See Table 1-1.)

Before connecting the power cable, check the outlet voltage and make sure that the POWER switch is set to OFF.

Table 1-1 Voltage

Option No.	Standard	Option 32	Option 42	Option 44
Power supply voltage	90-110 VAC	103-132 VAC	198-242 VAC	207-250 VAC
Power supply frequency	48-66Hz			

■ Grounding

The power cable plug has three pins. The round pin in the middle is for grounding.

Whenever possible, insert the power cable plug into an outlet provided with a protective grounding socket.

When connecting an adapter to the plug, be sure to connect to the external ground, the ground wire (Figure 1-2 (a)) of the adapter or the ground output (Figure 1-1) at the rear panel of the main body.

The R9211 being designed for wide band and high sensitivity measurements, improper grounding may generate noise during measurement and consequently inaccurate results. Thus, please, ground the R9211 before using it at the high sensitivity input level.

The included A09034 (KPR-18) adapter conforms to the Electrical Appliance Law.

As shown in Figure 1-2, the A09034 has two different sized pins. When inserting the plug into the outlet, check its proper orientation. If the A09034 do not fit the socket, please separately purchase a suitable adapter.

1. Safety Requirements

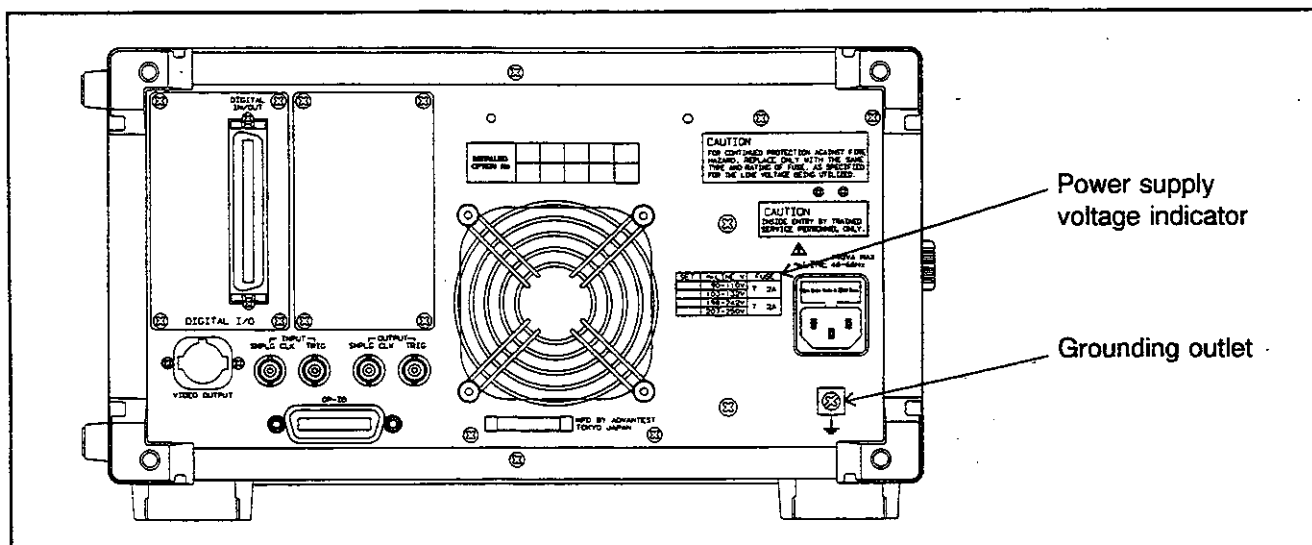


Figure 1-1 Power Supply Voltage Indicator and Grounding Outlet

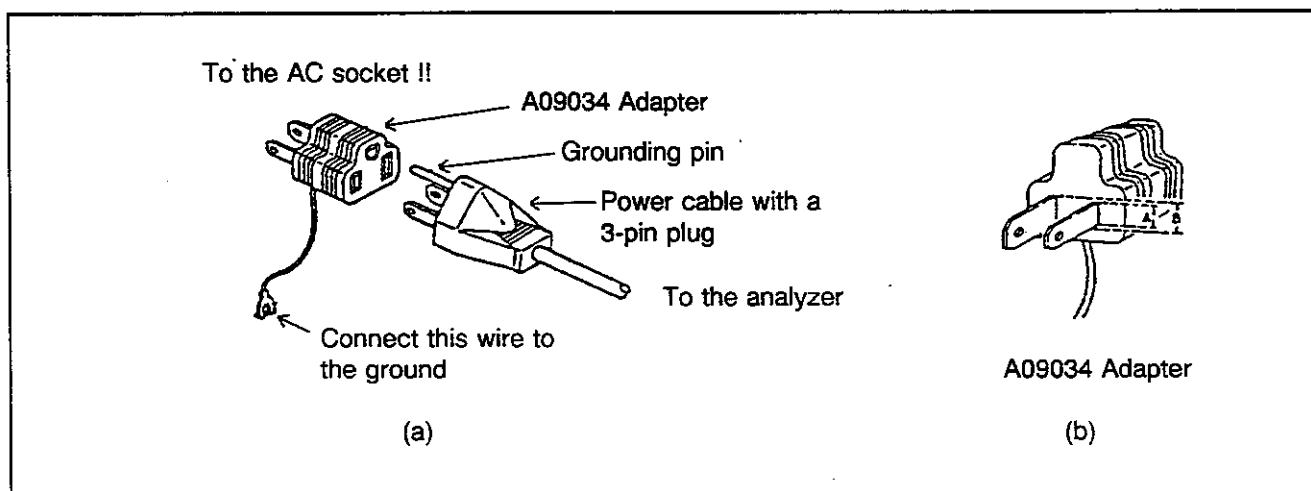


Figure 1-2 Power Cable Plug and Adapter

1. Safety Requirements

■ Replacing a Fuse

The power fuse is in the fuse holder at the rear panel. - To check or replace the fuse, disconnect the power plug, pull out the fuse holder cap toward you, then remove the fuse.

Always use a 24 A fuse (DFT-AA2A), no matter the voltage, because a switching power supply unit is included.

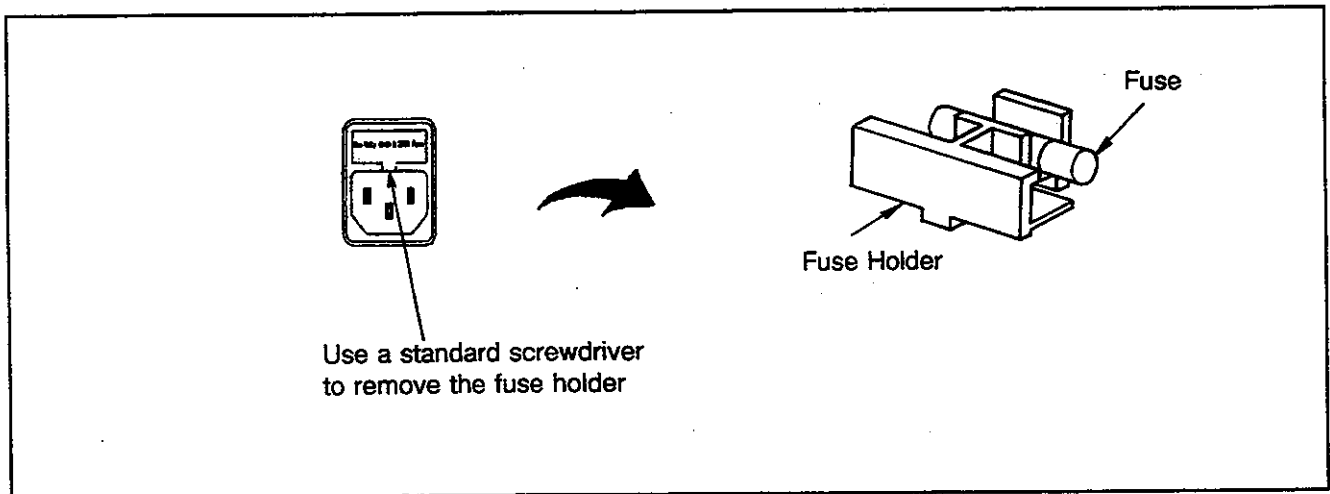


Figure 1-3 Fuse Holder

CAUTION !

Before replacing the fuse, set the POWER switch to OFF and remove the power plug from the socket.

2. Use under Normal Conditions

■ Operating Environment

- (1) Do not use this unit in a heavy-dusted local, or in places subject to direct sunlight, or corrosive gas exposure.
The ambient temperature should lay between +5 and +35°C and the relative humidity must equal 80% at most.
- (2) This unit is designed to resist the noise generated by the AC power supply. However, it is recommended that this unit be used in a place where the noise is reduced to a minimum. If required, use a noise filter.
- (3) When connecting this unit to other measuring units through the interface, please thoroughly read the other units manuals in advance.
- (4) Avoid using this unit in locations subject to heavy vibration.

■ Cooling and Ventilation

This unit is equipped with a cooling fan to prevent its overheating. Cooling air enters and exhausts the analyzer through the rear panel. For this reason, be careful to install the unit to allow free circulation of cooling air, do not use it in a standing up position.

■ Display (CRT) Intensity and Life Span

The CRT's color is umber. Using the CRT with a high intensity level for a long period of time will generate burnt spots on the screen. To use the CRT for a long period of time, reduce the intensity as much as possible.

■ Cleaning the CRT screen

Periodically clean the CRT screen with a soft cloth dampened with alcohol. Do not use other chemicals.

CAUTION !

During maintenance or cleaning, DO NOT USE any solvent such as benzene, toluene, or acetone, which may damage plastic parts.

■ Destruction of Circuit Elements by CMV Looping of the Power Supply

- (1) Peripheral devices such as a desk-top computer or a plotter can be connected to this unit. To protect circuit elements, pay attention to CMV (Common Mode noise Voltage) generation caused by improper grounding.
- (2) When a power supply line is not grounded, the loop formed as shown in Figure 1-4 approximately generates a 50 VAC voltage (CMV) between outlets a1 and a2 and between b1 and b2. If the circuit between grounding plugs b1 and b2 is opened and the circuit between signal outlets a1 and a2 is closed, input/output circuit elements of circuits 1 and 2 may be destroyed or damaged. To prevent this, use a properly grounded power supply line. Switching on/off the unit by inserting or removing the power supply plug will generate the similar CMV. Use the POWER switch to power on/off the unit.
- (3) If it is unavoidable to use an ungrounded power supply line, insert the power cable plug after connecting the ground outlet and signal cable. Then, set the POWER switch to ON.

2. Use under Normal Conditions

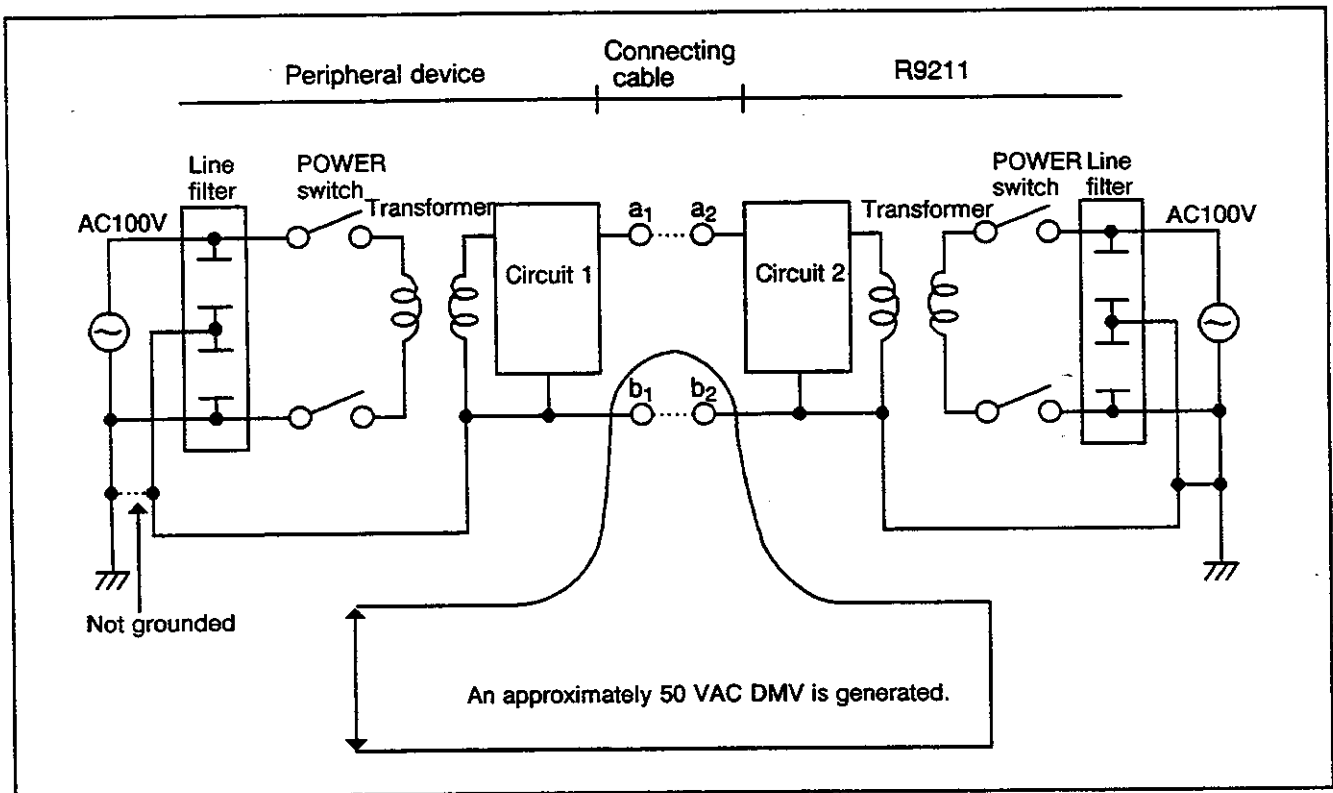


Figure 1-4 CMV Looping of the Power Supply Line

■ NiCd (Nickel Cadmium) Battery

R9211 includes NiCd battery, which backs up a watch of built-in calendar and a setting condition. When the time and date of calendar watch gets out of order, electric discharge or life of NiCd battery is considered to be shortage. After NiCd battery comes to full electric discharge, electric power supply needs to remain "on" as to charge with electricity for approx. 60 hours. When the time and date of calendar watch gets out of order for enough time-electric power supply, and [DEFAULT] is set in the start of electric power supply, life of NiCd battery is considered to be shortage. Inform to Advantest Sales & Support Offices for the exchange of battery.

3. Transportation and Storage

■ Transportation

Use the original package or the equivalent to transport this unit.

■ Storage

The storage temperature ranges between -20 to +60°C. If this unit is not used over a long period, cover it with a vinyl sheet or put it in a cardboard box. Store it in a dry place not directly exposed to the sunlight.

4. Troubleshooting

■ Before Ordering Repair

Before ordering repair, check the following points:

● **No data is displayed when the unit is switched on.**

Check 1 ● Check the power supply line.

Check 2 ● Check whether the fuse is blown.
Switch off, unplug the unit and check whether the proper fuse is used and not blown.

● **The self-diagnosis indicates failure when the power is switched on.**

No Check ● The internal hardware is defective.

● **No input signal is displayed or the "OVER" lamp does not go off.**


Check 1 ● Perform a check in the test mode.

Conditions { Input range: 0dB
Frequency range: 100kHz
Time- or frequency-axis waveform


Displays About -4dB (8kHz frequency)

If an input signal is not displayed under the above conditions, the hardware is defective.

Check 2 ● Check the input coupling.



Check 3 ● Check the input range setting.



Reset the unit if the setup conditions are unknown.

CHAPTER 2

ANALYZER OVERVIEW


This chapter outlines the analyzer and its four measurement modes.

CONTENTS

1. Outline	2-2
The Four Measurement Modes	2-3
2. The Measurement Modes	2-4
FRF Mode	2-6
Spectrum Mode	2-6
Time-Frequency Analysis Mode (T-F Mode)	2-10
Waveform Mode	2-12
3. Comparison between the Different	
Measurement Modes	2-14
From the Point of View of the Analyzed	
and Displayed Data	2-14
From the Point of View of the Averaging	
Modes	2-14
From the Point of View of the Trigger	
Operation	2-14
4. Measurement Blocks	2-18
Ordinary Measurement Blocks	2-18
Logarithmic Frequency Resolution	
Spectrum Analysis and Octave	
Spectrum Analysis	2-19

1. Outline


The R9211 is a 2 channels, 16 bits, spectrum analyzer whose analysis method is based on the Fast Fourier Transformation (FFT). Its maximum analysis frequency reaches 100kHz. It is designed for high speed, high precision, wide dynamic range measurement.

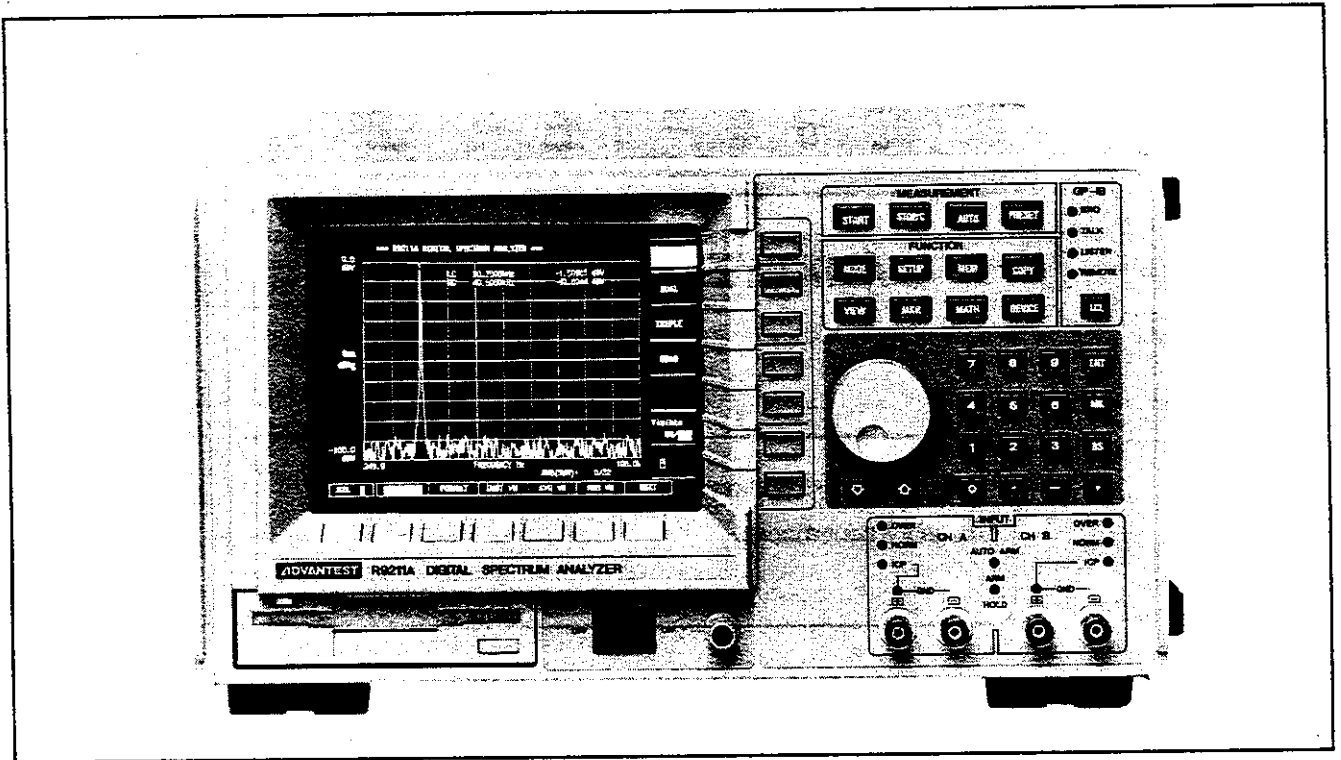

The illustration above shows the R9211A.

■ The Four Measurement Modes

The R9211 digital spectrum analyzer possesses four measurement modes that serve different purposes.

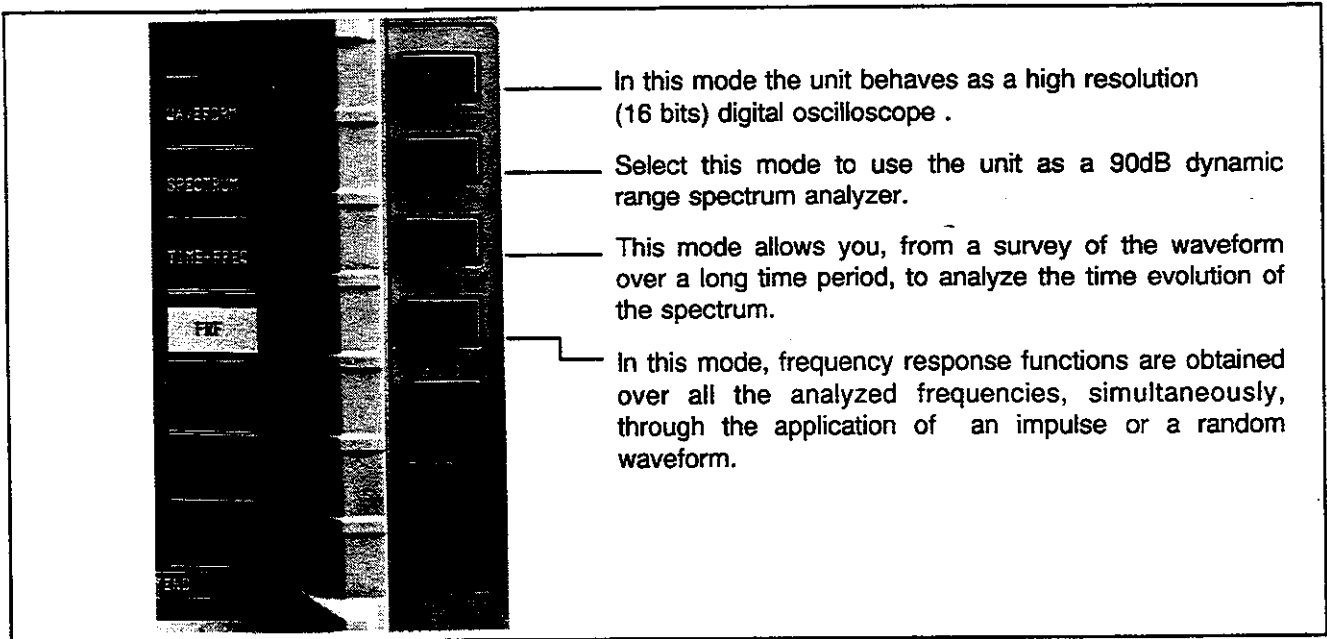

2. The Measurement Modes

■ FRF Mode

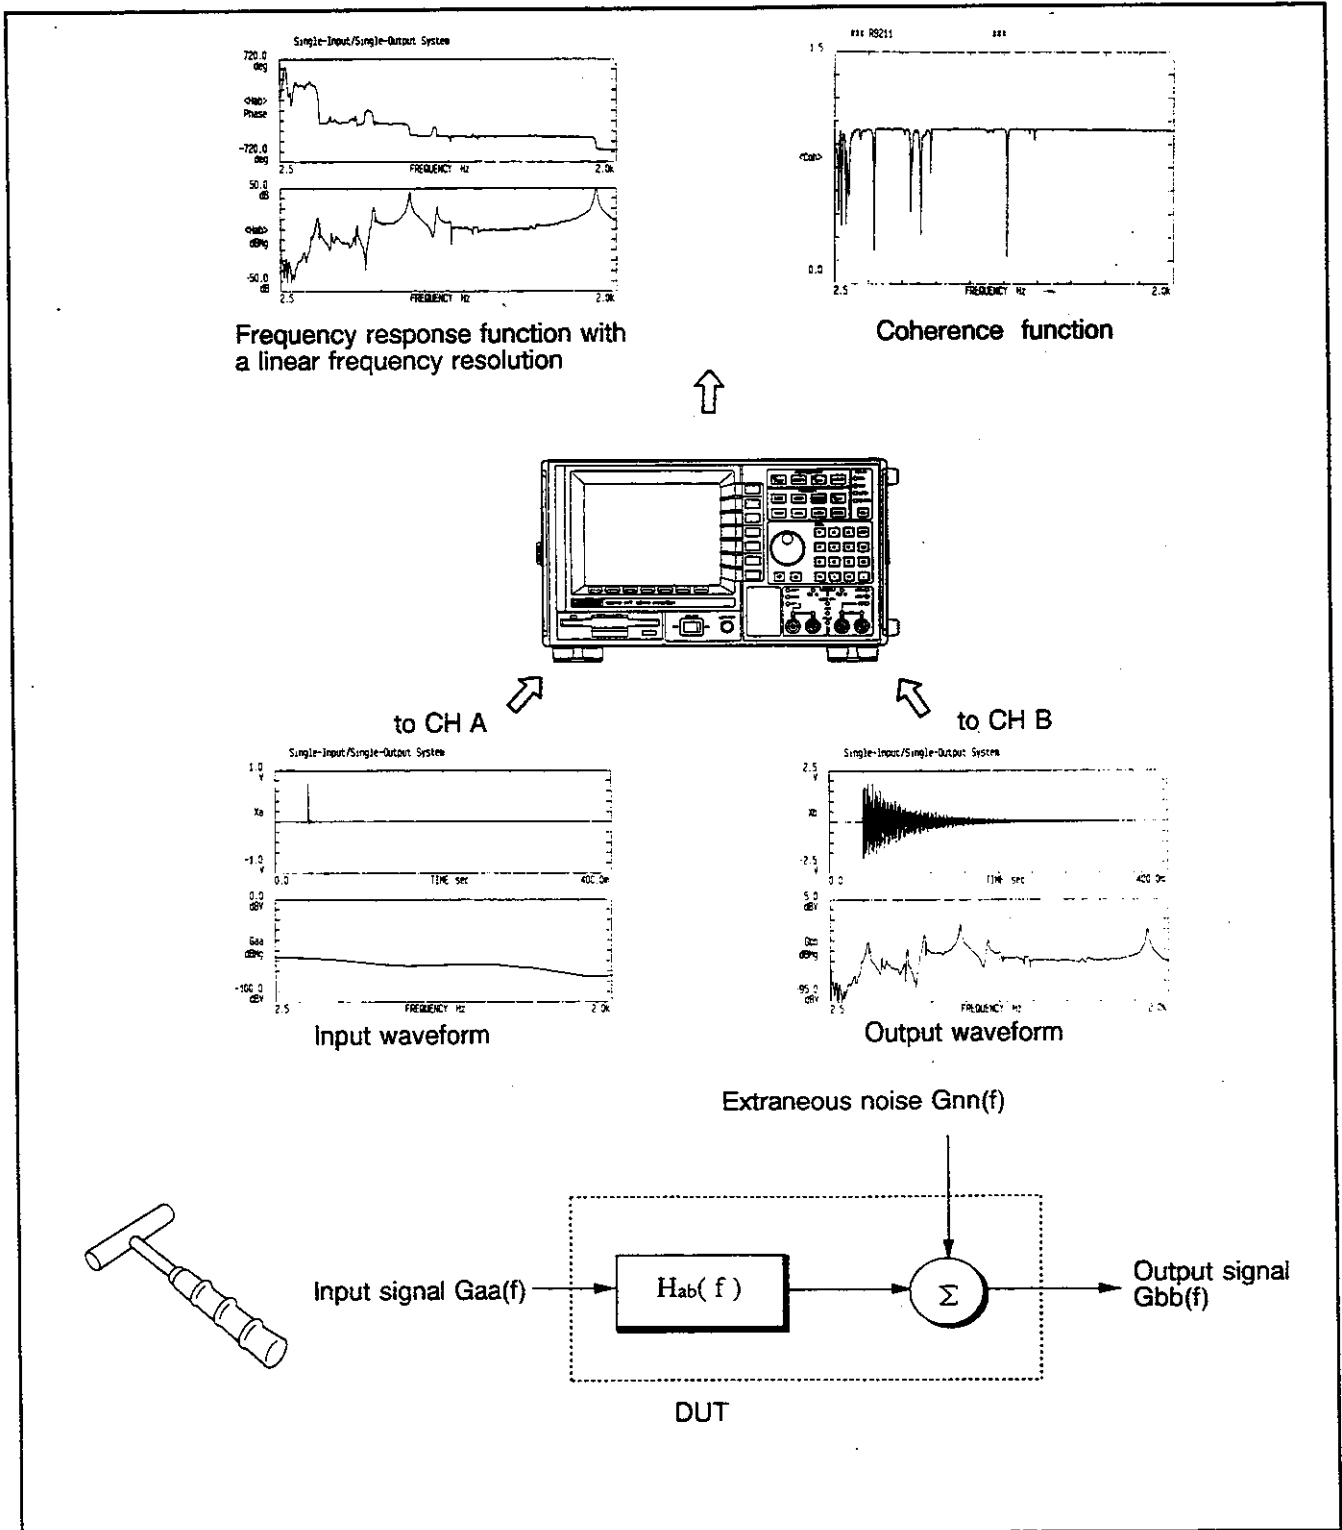


Figure 2-1 Concept of Measurement System in FRF Mode

2. The Measurement Modes

In the FRF mode, linear frequency response functions can be computed only if the excitation signal has a frequency band larger than the frequency band of the analysis. The signal source is an impulse wave generated by the impulse hammer or a random wave, a multi-sine wave, or a swept sine wave generated by the built-in Signal Generator (often noted SG). At this time, the coherence function indicating the influence of the extraneous noise can be measured.

A large delay between the input and output can be compensated with an interchannel delay compensation feature.

Measurement resolution: 25-800 lines

(Linear frequency response function)

64-2048 points (Impulse response function)

Zoom analysis function:
(R9211A only)

Between the start and stop frequencies, chosen by the user, the maximum line span is 800 lines. This function cannot be applied to transient signal analysis when you use the trigger.

2. The Measurement Modes

■ Spectrum Mode

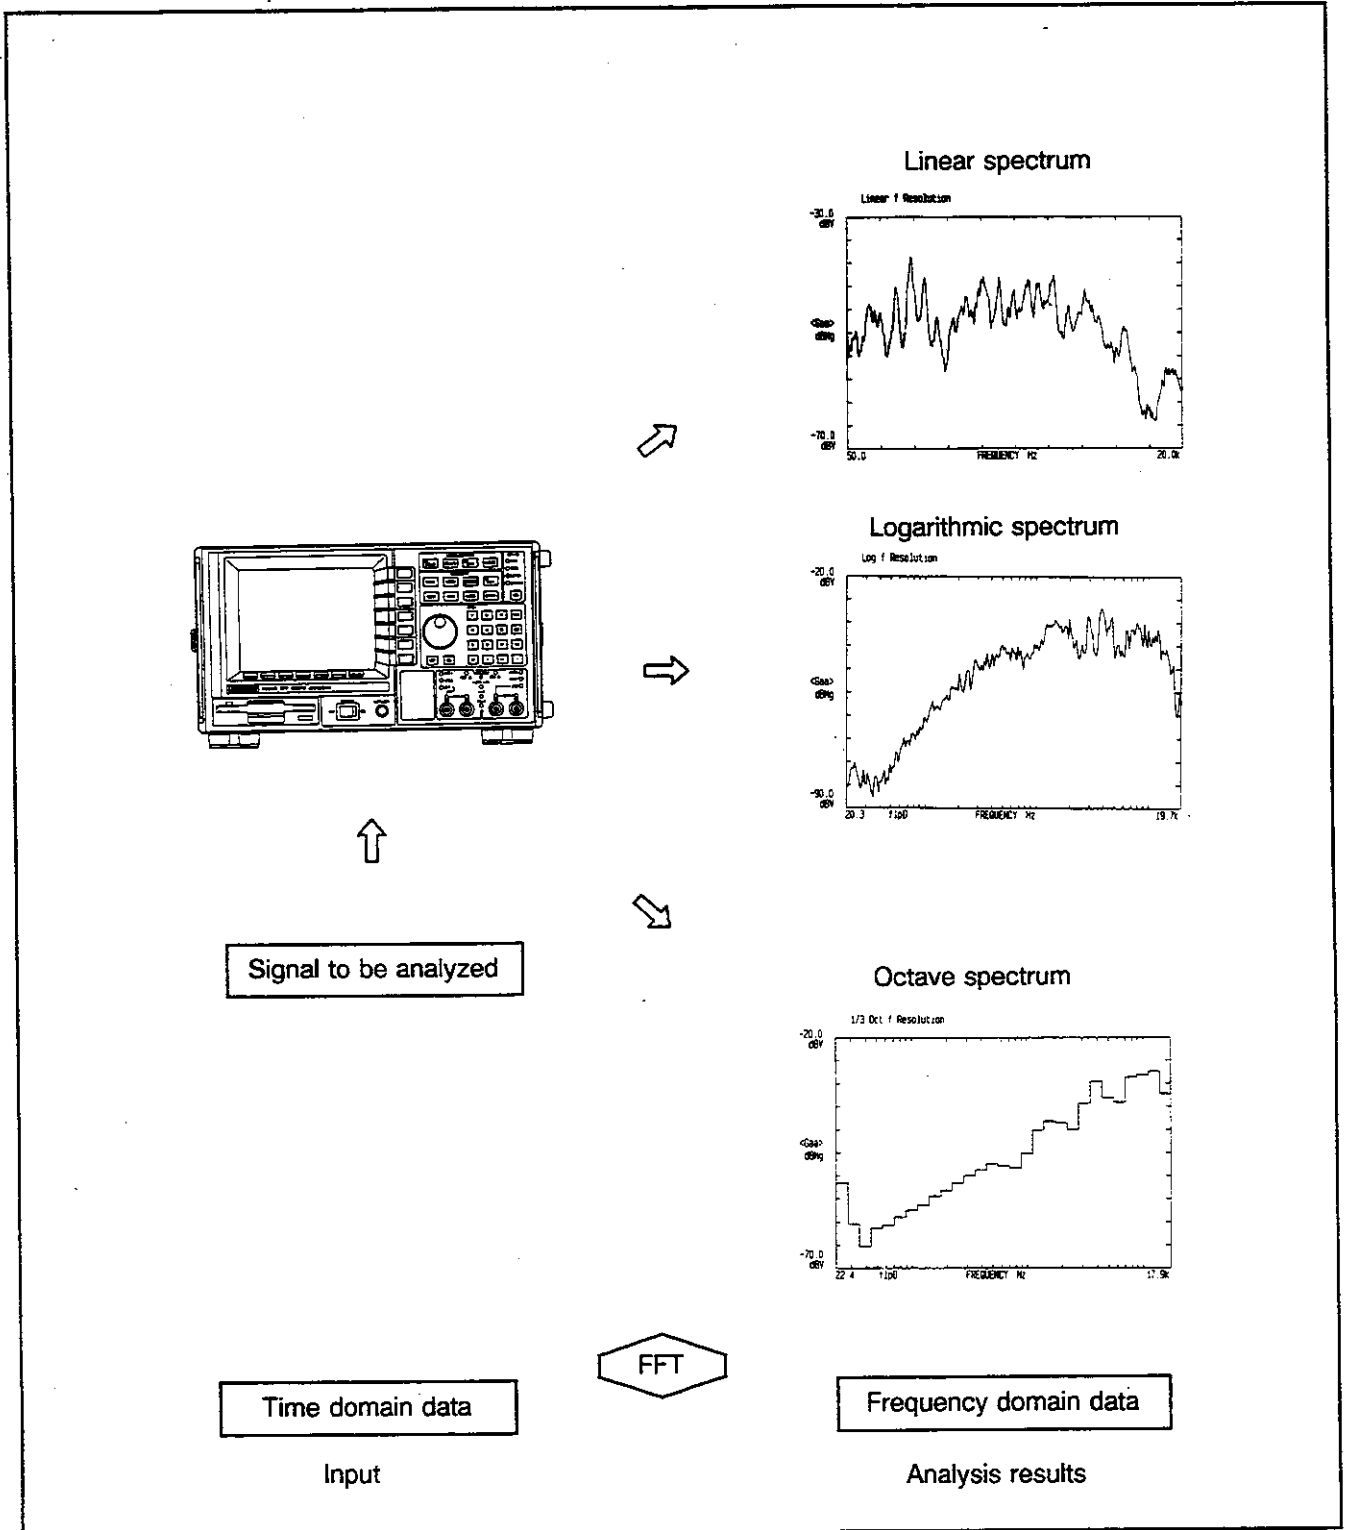


Figure 2-2 Concept of Measurement System in the Spectrum Mode

2. The Measurement Modes

In the spectrum mode, several spectrum representations of the frequency domain data, resulting from the analysis of the input signal, are possible, no matter which channel is selected. One should choose the representation that suits best the analysed data :

- The linear frequency resolution spectrum is best suited to stationary signals analysis (harmonic analysis...)
Analysis resolution: 25-1600 lines (Single channel: 3200 lines)
- The logarithmic frequency resolution spectrum is best suited to non-stationary signals analysis (noise analysis)
Analysis resolution: 80 lines/decade, 1-3 decades
- The octave spectrum is best suited to sound or audio signals analysis.
1/3 octave, 1/1 octave analysis

If a zoom analysis function (provided only on the R9211A) is used, high-resolution spectrum analysis is possible, the minimum span being 10mHz.(For a start frequency higher than 10kHz, the minimum span becomes 100mHz.)

See Figure 2-3.

ADVICE

1. The frequency resolution is enhanced and the noise floor of the measurement system including the measuring equipment is reduced when the number of lines increases. (See Figure 2-3.)
2. Depending on the type of the averaged spectrum data, different applications are possible: (See Figure 2-4.)
 - ▶ Power spectrum average
The spectrum can be smoothed without synchronization by a trigger.
 - ▶ Complex spectrum average
A target signal can be extracted from a noisy signal, by using the synchronization signal of the target signal as a trigger, thus reducing the noise components from the signal when averaging (synchronous averaging).
3. You should use a linear frequency resolution spectrum to measure a continuous wave such as a sine wave. (The logarithmic frequency resolution spectrum does not fit this type of measurement.)

2. The Measurement Modes

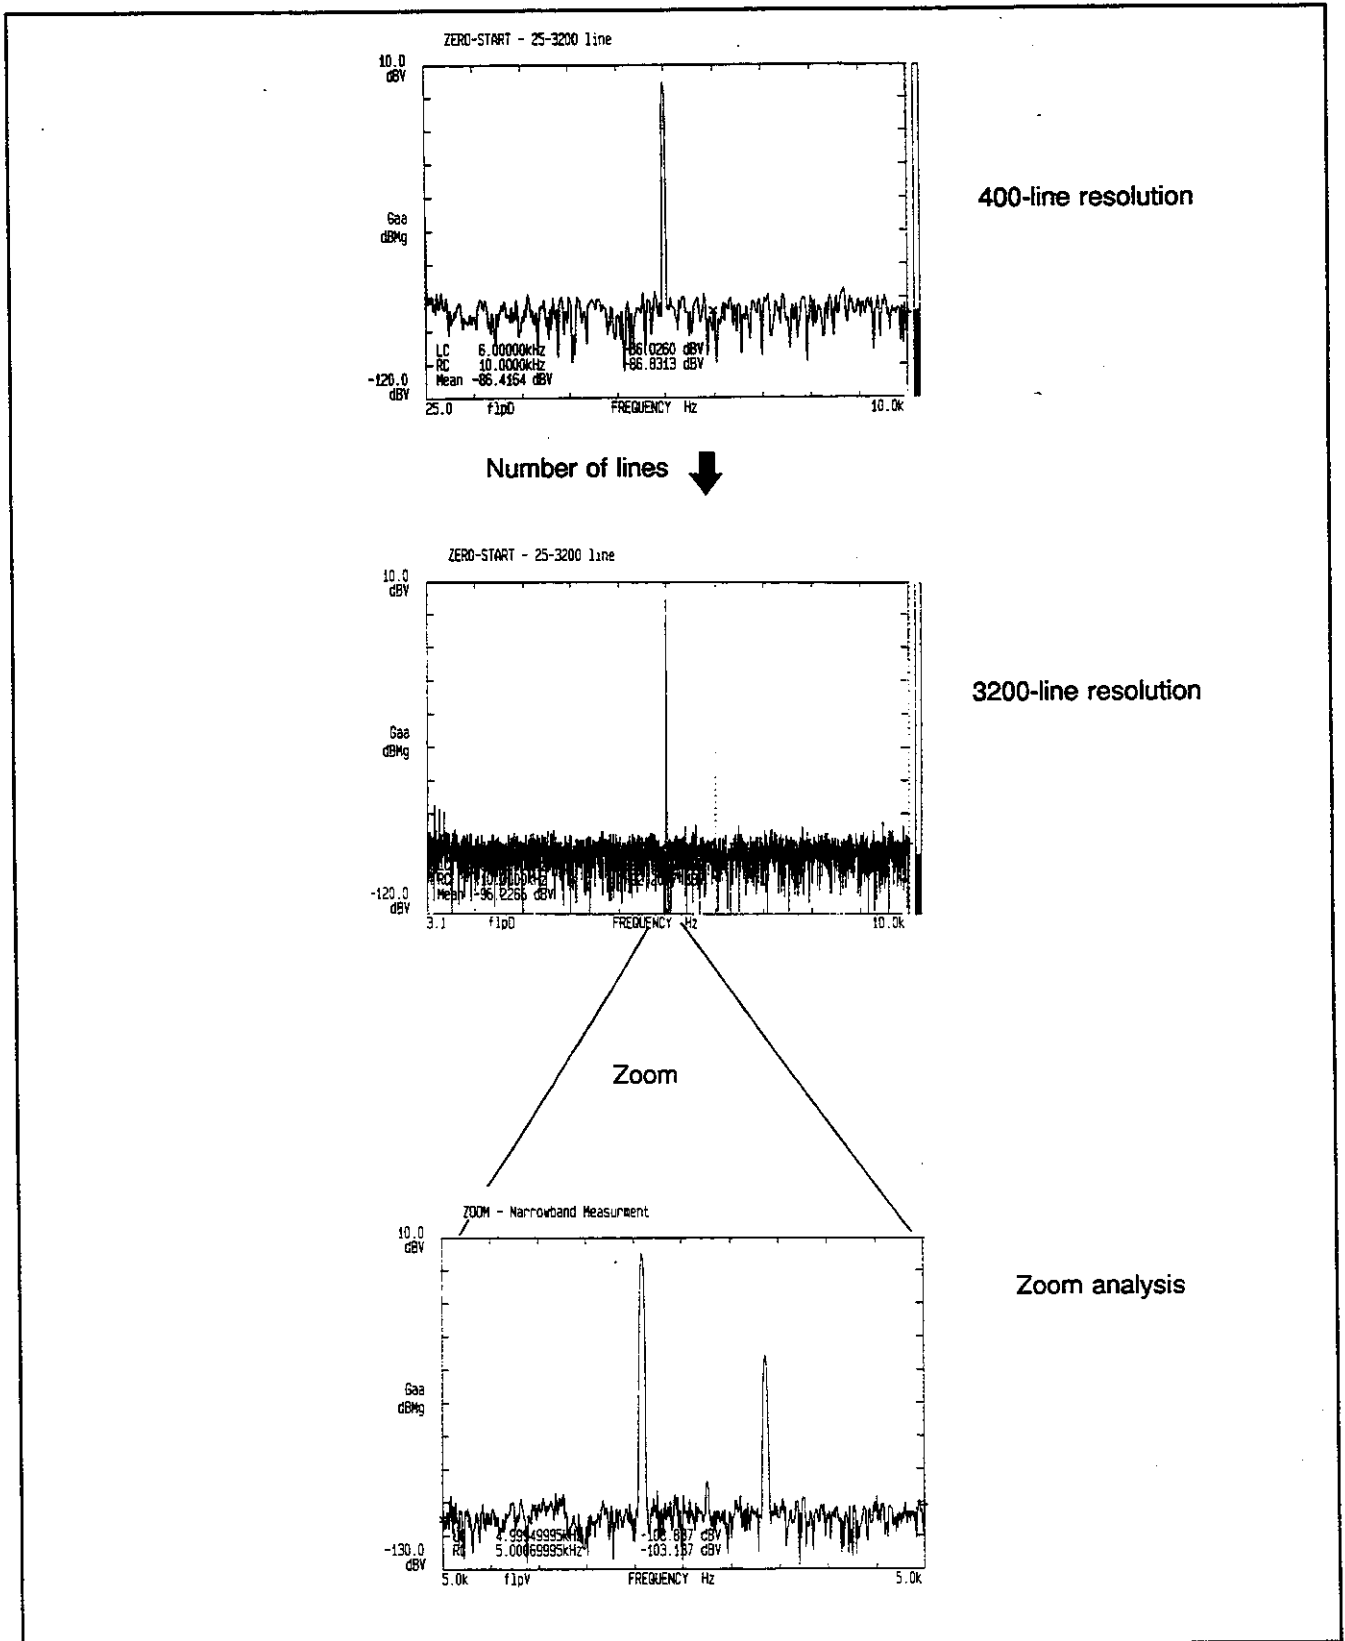


Figure 2-3 Number of Lines and Zoom Effect

2. The Measurement Modes

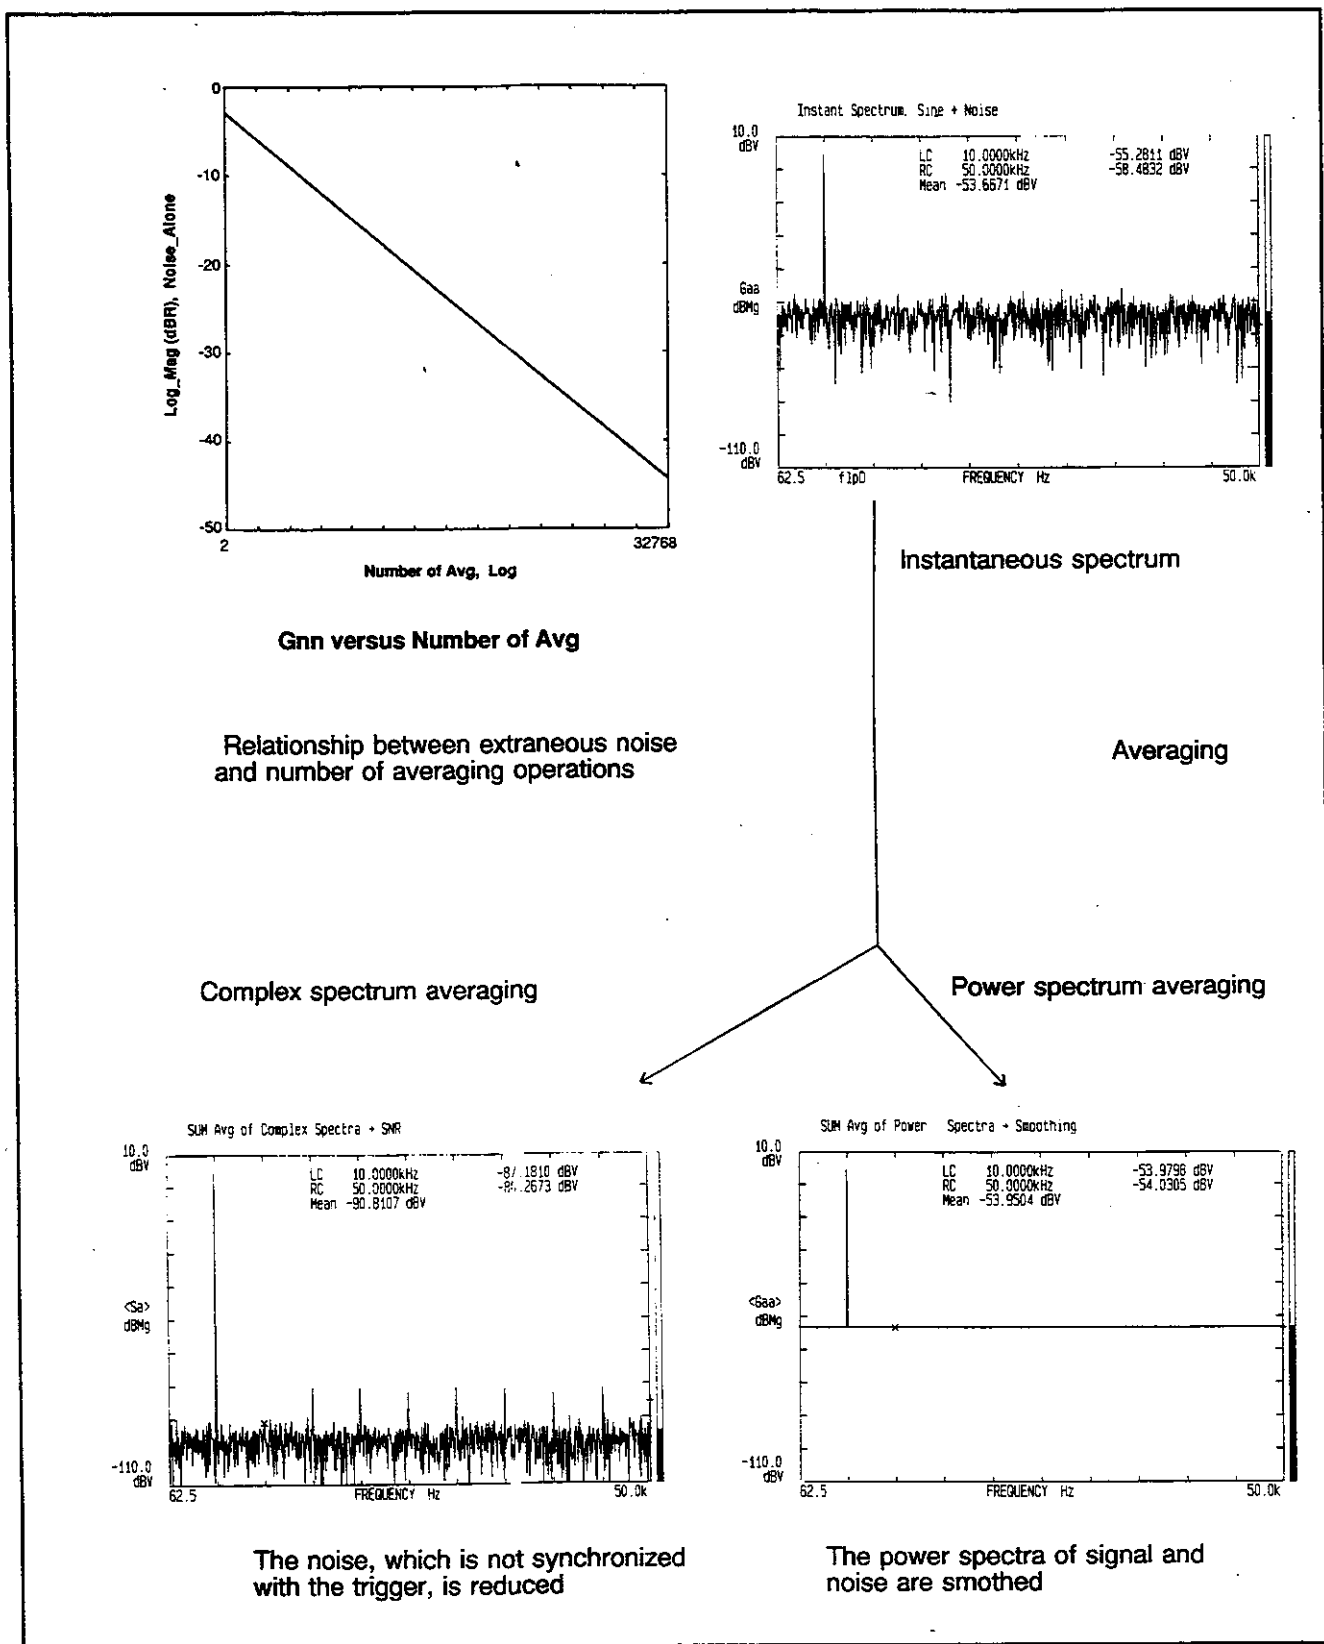


Figure 2-4 Effect of Power Spectrum and Complex Spectrum Averaging

2. The Measurement Modes

■ Time-Frequency Analysis Mode (T-F Mode)

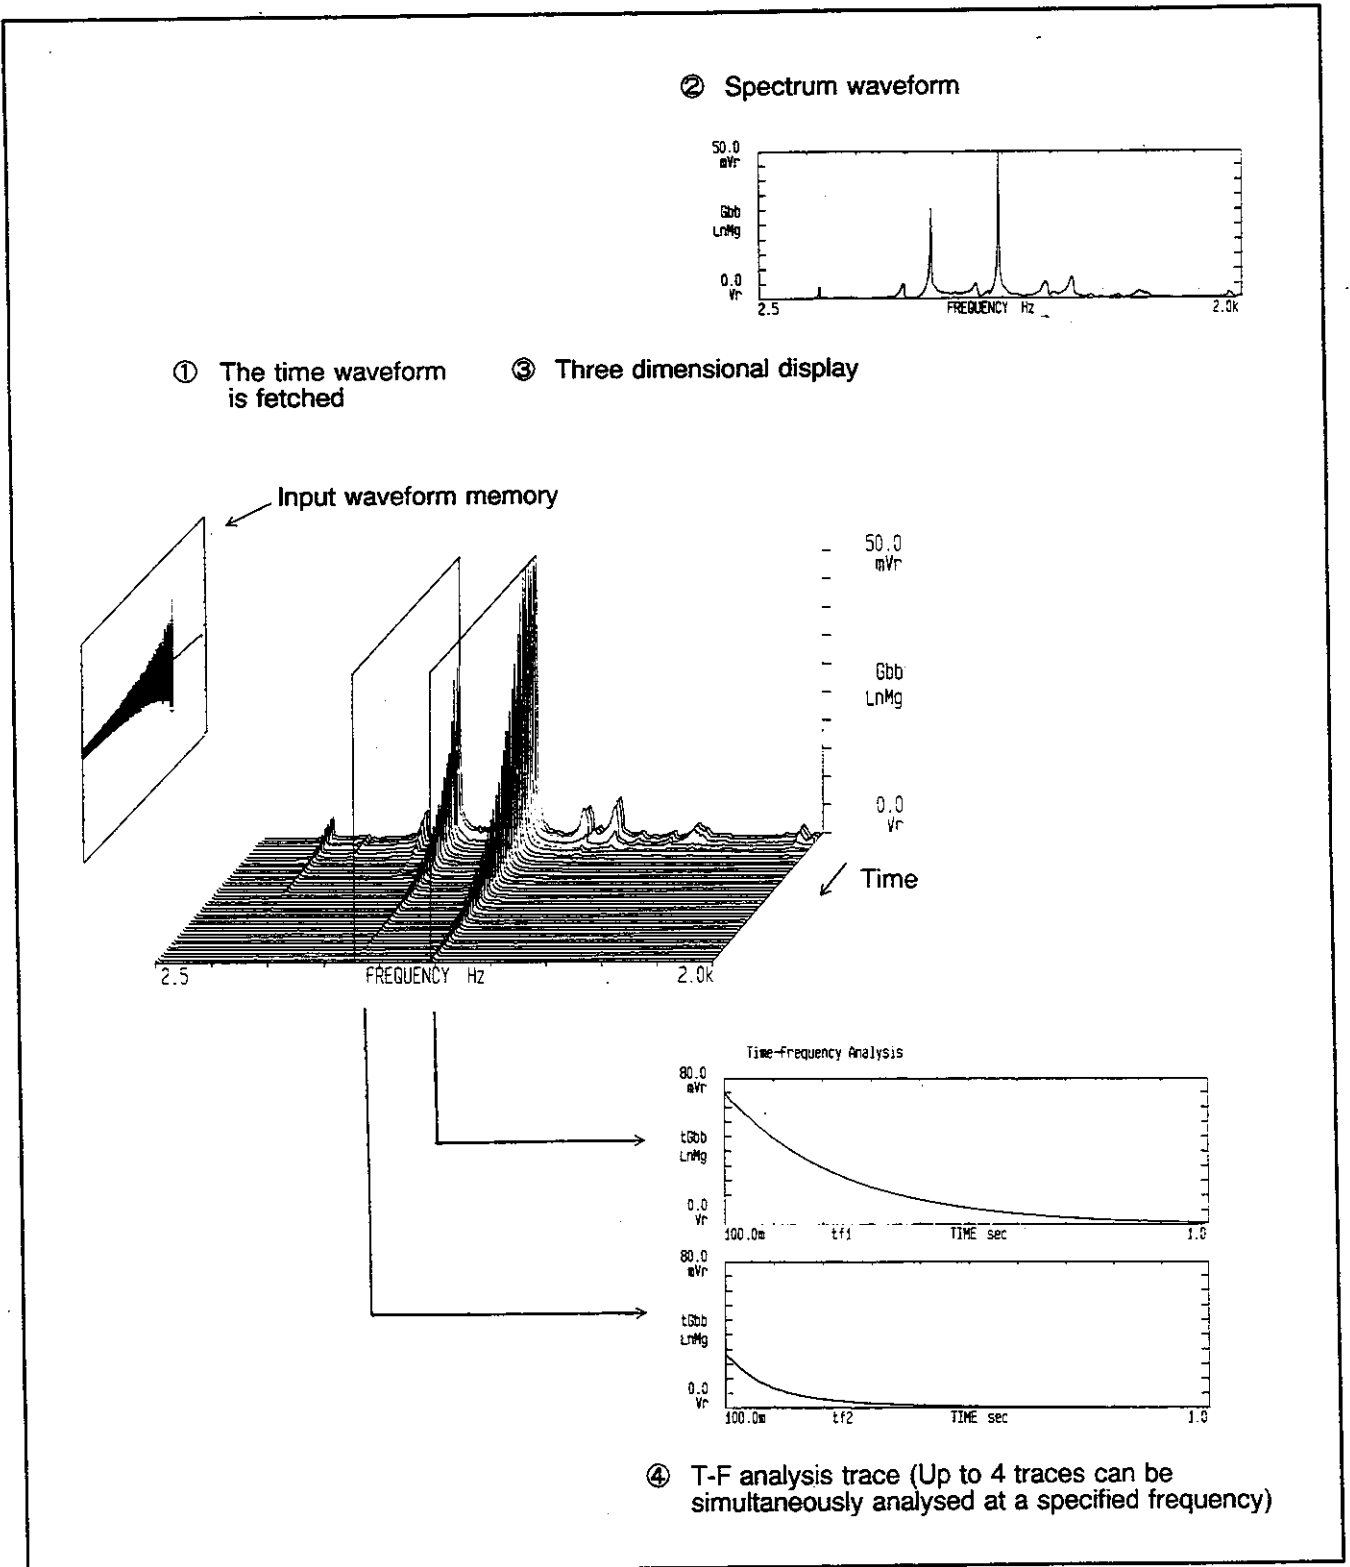


Figure 2-5 Concept of Measurement in the Time-frequency Analysis Mode

2. The Measurement Modes

In the TF mode, a transient signal is recorded in the input waveform memory by using a trigger signal. (① in Figure 2-5)

The following analyses can be performed, depending on the recorded waveform:

- (1) One can observe the instantaneous spectrum of any portion chosen from the recorded waveform. (② in Figure 2-5)
- (2) Spectra can be displayed in three dimensions depending on the recorded waveforms. (③ in Figure 2-5)
- (3) The relationship between a specified frequency and time can be analyzed to obtain a transient signal damping characteristic (T-F analysis). (④ in Figure 2-5)

Input Waveform Memory Sizes

R9211E	
Standard	64K words (Single channel: 128K words)
Standard + CMOS memory (option 10) or Standard + I/O + Memory (option 11)	512K words (Single channel: 1024K words)
R9211A	
Standard	64K words (Single channel: 128K words)
Standard + CMOS memory (option 10)	512K words (Single channel: 1024K words)
Standard + I/O + Memory (option 11)	512K words (Single channel: 1024K words)
Standard + CMOS memory (option 10) + I/O + Memory (option 11)	1024K words (Single channel: 2048K words)

2. The Measurement Modes

■ Waveform Mode

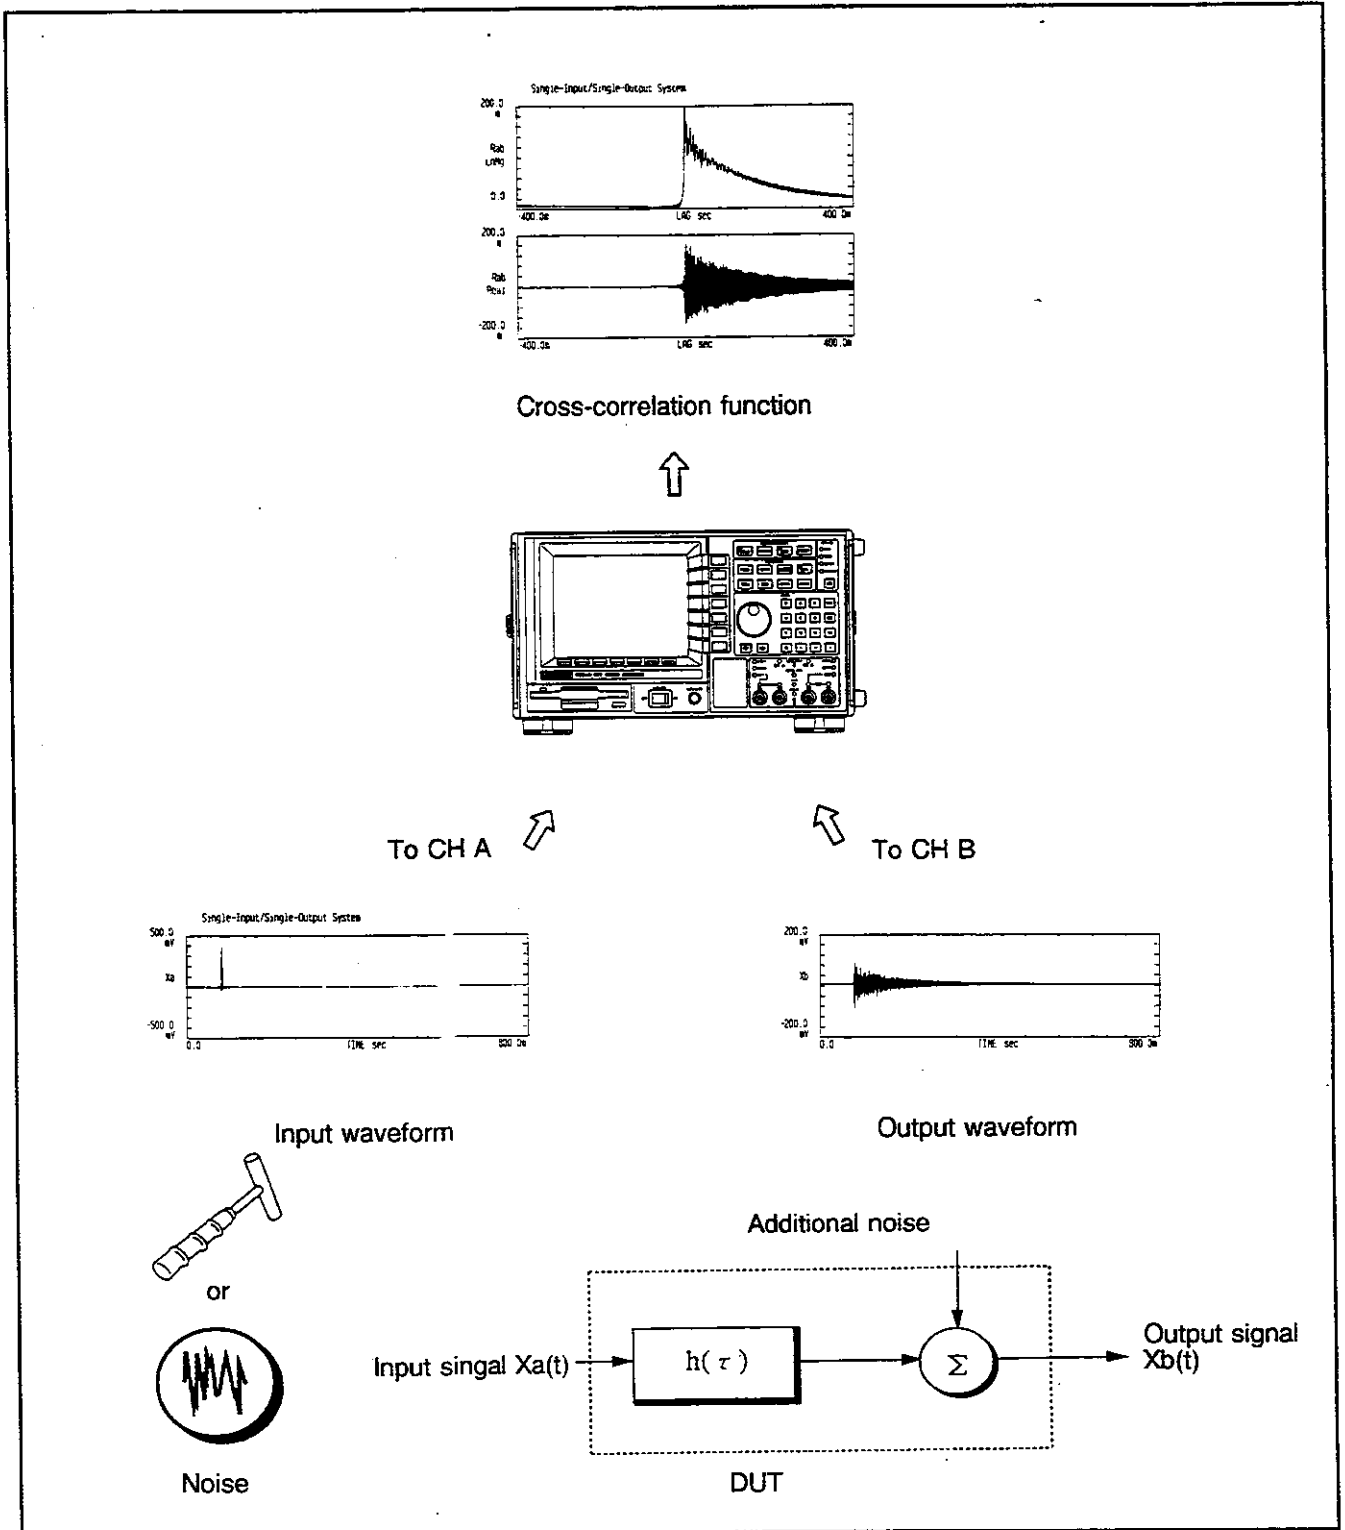


Figure 2-6 Concept of Measurement in Waveform Mode

2. The Measurement Modes

The waveform mode is used for the time domain analysis : the time waveform, the correlation function, and the histogram can be obtained.

- (1) A time waveform can be displayed, repeatedly, at a higher speed than in the other modes.
- (2) An autocorrelation function can be used to evaluate the periodicity of the input signal.
- (3) A cross-correlation function can be used to evaluate the time lag between input signals.
- (4) An amplitude probability density function can be used for statistical signal processing.

3. Comparison between the Different Measurement Modes

■ From the Point of View of the Analyzed and Displayed Data

The data currently being acquired can be displayed as an instantaneous trace by selecting the

VIEW ⇒ **INST VW** operation.

Average measurement is required to remove or smooth the extraneous noise which is being measured. The averaging result can be displayed by selecting the

VIEW ⇒ **AVG VW** operation.

The types of these instantaneous data and averaging data depend on the analysis mode and on the selected function as summarized in Table 2-1.

■ From the Point of View of the Averaging Modes

There are four averaging mode : sum averaging (SUM), exponential averaging (EXP), peak detection averaging (PEAK), and subtract averaging (SUB) modes.

The averaging mode that can be selected depends on the selected measurement mode as summarized in Table 2-2.

Besides, Table 2-2 lists the averaging operations that require triggering for synchronous averaging.

■ From the Point of View of the Trigger Operation

There are four modes for input data triggering: auto-arm, arm, hold, and free run modes.

Table 2-3 indicates the relationships between these modes and measurement modes.

Furthermore, the number of input traces to be acquired can be set only in the T-F mode (arm length).

3. Comparison between the Different Measurement Modes

Table 2-1 Instantaneous Analysable Data / Average Data Types

Analysis mode MODE	Function SETUP Function	Instantaneous data		Average data	
		VIEW	INST VW	VIEW	AVG VW
		CHA & CHB	CHA or CHB	CHA & CHB	CHA or CHB
Waveform	Time	CH-A TIME CH-B TIME ORBITAL	CH-X TIME	CH-A TIME CH-B TIME	CH-X TIME
	AUTOCORR	CH-A TIME CH-B TIME CH-A AUTOCORR CH-B AUTOCORR		CH-A AUTOCORR CH-B AUTOCORR	
	CROSS-CORR	CH-A TIME CH-B TIME CH-A AUTOCORR CH-B AUTOCORR CROSS-CORR		CROSS-CORR	
	HISTOGRAM	CH-A TIME CH-B TIME CH-A HIST CH-B HIST	CH-X TIME CH-X HIST	CH-A HIST CH-B HIST	CH-X HIST
SPECTRUM or TIME-FREQ	POWER SPECT or COMPLEX SPECT	CH-A TIME CH-B TIME CH-A SPECT CH-B SPECT	CH-X TIME CH-X SPECT	CH-A PWR SPECT CH-B PWR SPECT CH-A CMP SPECT CH-B CMP SPECT	CH-X PWR SPECT CH-X CMP SPECT
	CROSS-SPECT	CH-A TIME CH-B TIME CH-A SPECT CH-B SPECT		CROSS-SPECT	
FRF	FRF	CH-A TIME CH-B TIME CH-A SPECT CH-B SPECT CROSS-SPECT		FRF COHERENCE IMPULSE RESPONSE CH-A PWR SPECT CH-B PWR SPECT CROSS-SPECT	
				FRF COHERENCE IMPULSE RESPONSE	

CH-X: Active channel signal
 CH-A: A channel signal
 CH-B: B channel signal
 TIME: Time waveform
 AUTOCORR: Auto correlation function
 CROSS-CORR: Cross-correlation function
 HIST: Histogram

SPECT: Spectrum
 CMP SPECT: Complex spectrum
 PWR SPECT: Power spectrum
 CROSS-SPECT: Cross-spectrum
 FRF: Frequency response function
 COHERENCE: Coherence function
 IMPULSE RESPONSE: Impulse response function

3. Comparison between the Different Measurement Modes

Table 2-2 Measurement Modes and Averaging Modes

Analysis mode	Function	Averaging mode	Data subject to averaging
Waveform	Time < Trigger required >	SUM	Time waveform X_a, X_b
	Auto Corr.	SUM EXP	Auto correlation function R_{aa}, R_{bb}
	Cross-Corr.	SUM EXP	Cross-correlation function R_{ab}
	Histogram	SUM	Histogram P_a, P_b
Spectrum or Time- Frequency	Power Spect	SUM, EXP, PEAK, SUB	Power spectrum G_{aa}, G_{bb}
	Cross Spect	SUM, EXP, PEAK, SUB	Cross-spectrum G_{ab}
	Complex Spect < Trigger required >	SUM, EXP, PEAK, SUB	Complex spectrum S_a, S_b
FRF	FRF	SUM, EXP, PEAK	Power/Cross- spectrum G_{aa}, G_{bb}, G_{ab}

* : This spectrum is used internally : it cannot be displayed.

3. Comparison between the Different Measurement Modes

Table 2-3 Measurement Modes and Trigger

MODE	SETUP	ARM/HLD	SETUP	TRIG	ARM LENGTH
WAVEFORM		possible			impossible
SPECTRUM		possible			impossible
TIME-FREQ		possible			possible
FRF		possible			impossible

4. Measurement Blocks

■ Ordinary Measurement Blocks

Figure 2-7 shows the measurement block-diagram of the R9211.

● Lowpass Filter (2kHz, 5kHz, ..., 100kHz)

The analog input signal is amplified and passed through the low pass filter so that the signal components outside the measurement band are eliminated (in order to prevent frequency aliasing).

● 16-bit A/D Converter

After filtering, the signal is digitized, and the resulting 16 bit digital signal is recorded in the input buffer.

● Zoom Processor (R9211A only)

When the analysis frequency range is lower than 1kHz or when a narrow-band is measured in the zoom measurement mode, the input signal is processed by the zoom processor before it is stored in the input buffer.

● Input Waveform Buffer

Generally, only the latest recorded data are read from the buffer to be displayed or processed.


In the T-F mode, an arbitrary portion of data recorded in the input buffer can be read for analysis and display.

You can select the position in the buffer of the data you wish to analyse with the data view function.



Data view "mode" is selected. The frame selection procedure is described p.9-61.

Furthermore, when a T-F analysis is conducted, the data stored in the input waveform buffer are processed one by one to analyze the relationship between the frequency and time.

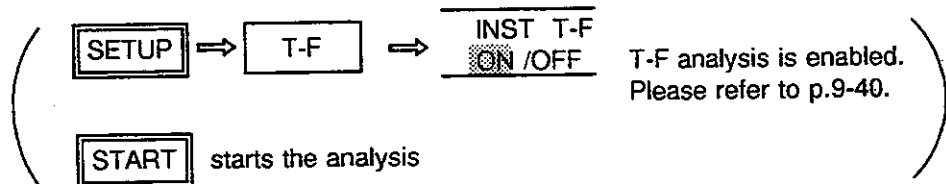

● Fast Fourier Transform (FFT)

The waveform X_a is transformed from the time-domain to the frequency domain (Fourier transform) to obtain the complex spectrum S_a .

The original waveform X_a is multiplied by a window function (Hanning,...), before FFT processing, to reduce the leakage in the frequency domain, due to the discontinuities introduced, in the time domain, by the truncation.

- **Power and Cross-spectrum Estimation**

The power spectrum and cross spectrum are obtained from the complex spectrum.

- **FRF Estimation**

In the servo or FRF mode, the frequency response function and the coherence function are computed from the averaged input/output power spectra and cross-spectrum.

■ **Logarithmic Frequency Resolution Spectrum Analysis and Octave Spectrum Analysis**

In the spectrum or in the T-F mode, a logarithmic frequency resolution spectrum analysis and octave spectrum analysis can be performed in addition to the ordinary linear frequency spectrum analysis. The measurement block is shown in Figure 2-8.

- **Highest Frequency Range's Spectrum**

The last recorded signal frame (1024 points), stored in the input buffer, is analyzed by the FFT method to obtain the spectrum of the highest frequency range (e.g., 20kHz range).

- **1/10 Lowpass Digital Filter**

Ten signal frames, stored in the input buffer, are passed through this filter before FFT analysis to obtain the spectrum of the middle frequency range (2kHz).

- **1/100 Lowpass Digital Filter**

One hundred signal frames, stored in the input buffer, are passed through this filter, before FFT analysis, to obtain the spectrum of the lowest frequency range (200Hz).

- **Constant Ratio Band Filter**

The spectra in these three frequency ranges (20kHz, 2kHz, and 200Hz) are passed through this filter to obtain a logarithmic frequency resolution spectrum.

- **Octave Band Filter**

The logarithmic frequency spectrum is passed through this filter to be transformed to the octave spectrum.

4. Measurement Blocks

● Log/octave analysis

Log filter is operated for the result which Log analysis performed linear FFT each decade. For 400 line-FFT each decade, the filtered result for frequency resolution each decade differs ten times. In-order to correct the difference of frequency resolution, R9211 sets a noise floor to the decade of the worst frequency resolution and displays. Octave filter is used for the result of this Log analysis and octave spectrum is measured.

Therefore, Log octave analysis is suitable for the measurement of signal regulation movement. (When enter continuous waveform such as sign wave and triangle wave, the level don't go to a true value.) Input signal, for the use of filter, doesn't make energy gather to the specified level band, but is supposed to distribute equally such as noise in analysis frequency bound.

For PSD value in Log analysis, equivalent noise bandwidth (ENBW) is not revised.

For the ENBW revise, the following calculation is performed.

$$\text{PSD(ENBW consideration)} = \text{PSD(R9211 display)} / \text{ENBW}$$

ENBW is changed by weighting function. Use the following value.

Weighting function	ENBW(Equivalent Noise Bandwidth)
Rectangular	1.00
Hanning	1.50
Minimum	1.98
Flat pass	6.77

Advantages of the method applied in the R9211

The R9211 does neither switch analog filters nor switch analysis frequency ranges for each octave as time goes by. But it stores all data to be analyzed in the input buffer.

These waveforms are transformed to the logarithmic frequency spectrum or octave spectrum through digital signal processing. Therefore, several data can be analysed simultaneously, enhancing the reproducibility and reliability of octave spectra over multiple ranges.

Note on how to use the R9211

Specify "one decade" if you want to compute the logarithmic frequency resolution spectrum, or the octave spectrum of a transient signal.

4. Measurement Blocks

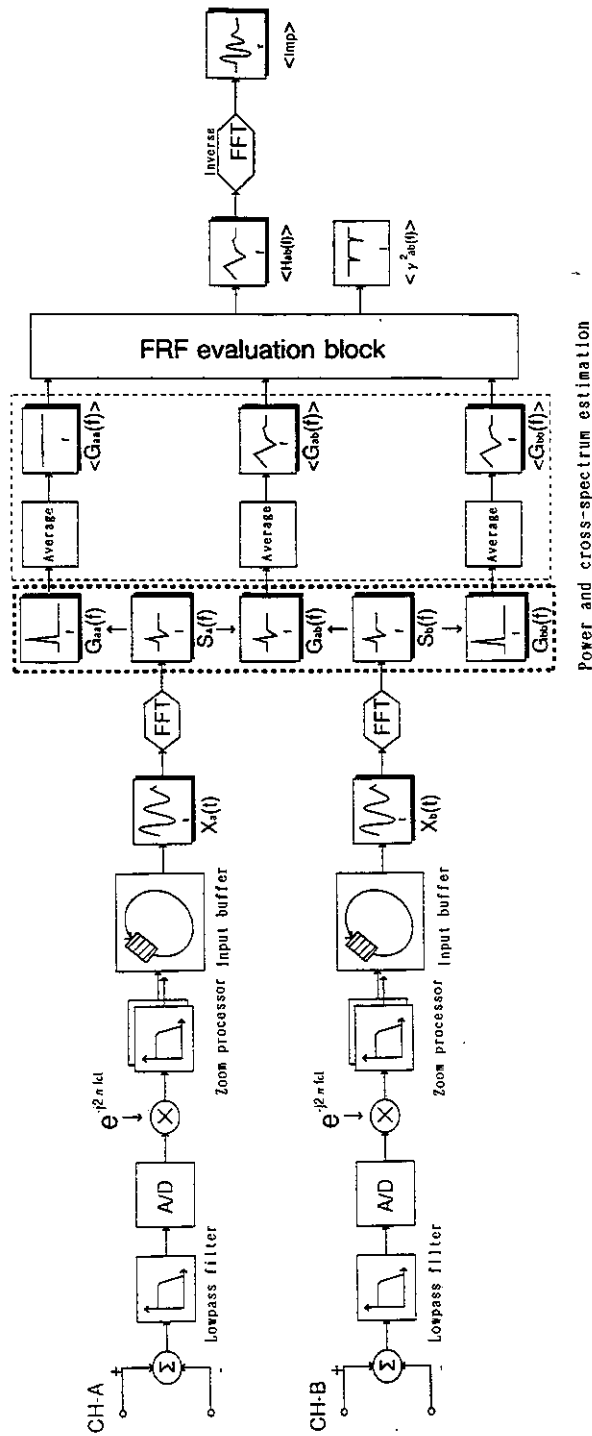


Figure 2-7 Measurement Block Diagram

4. Measurement Blocks

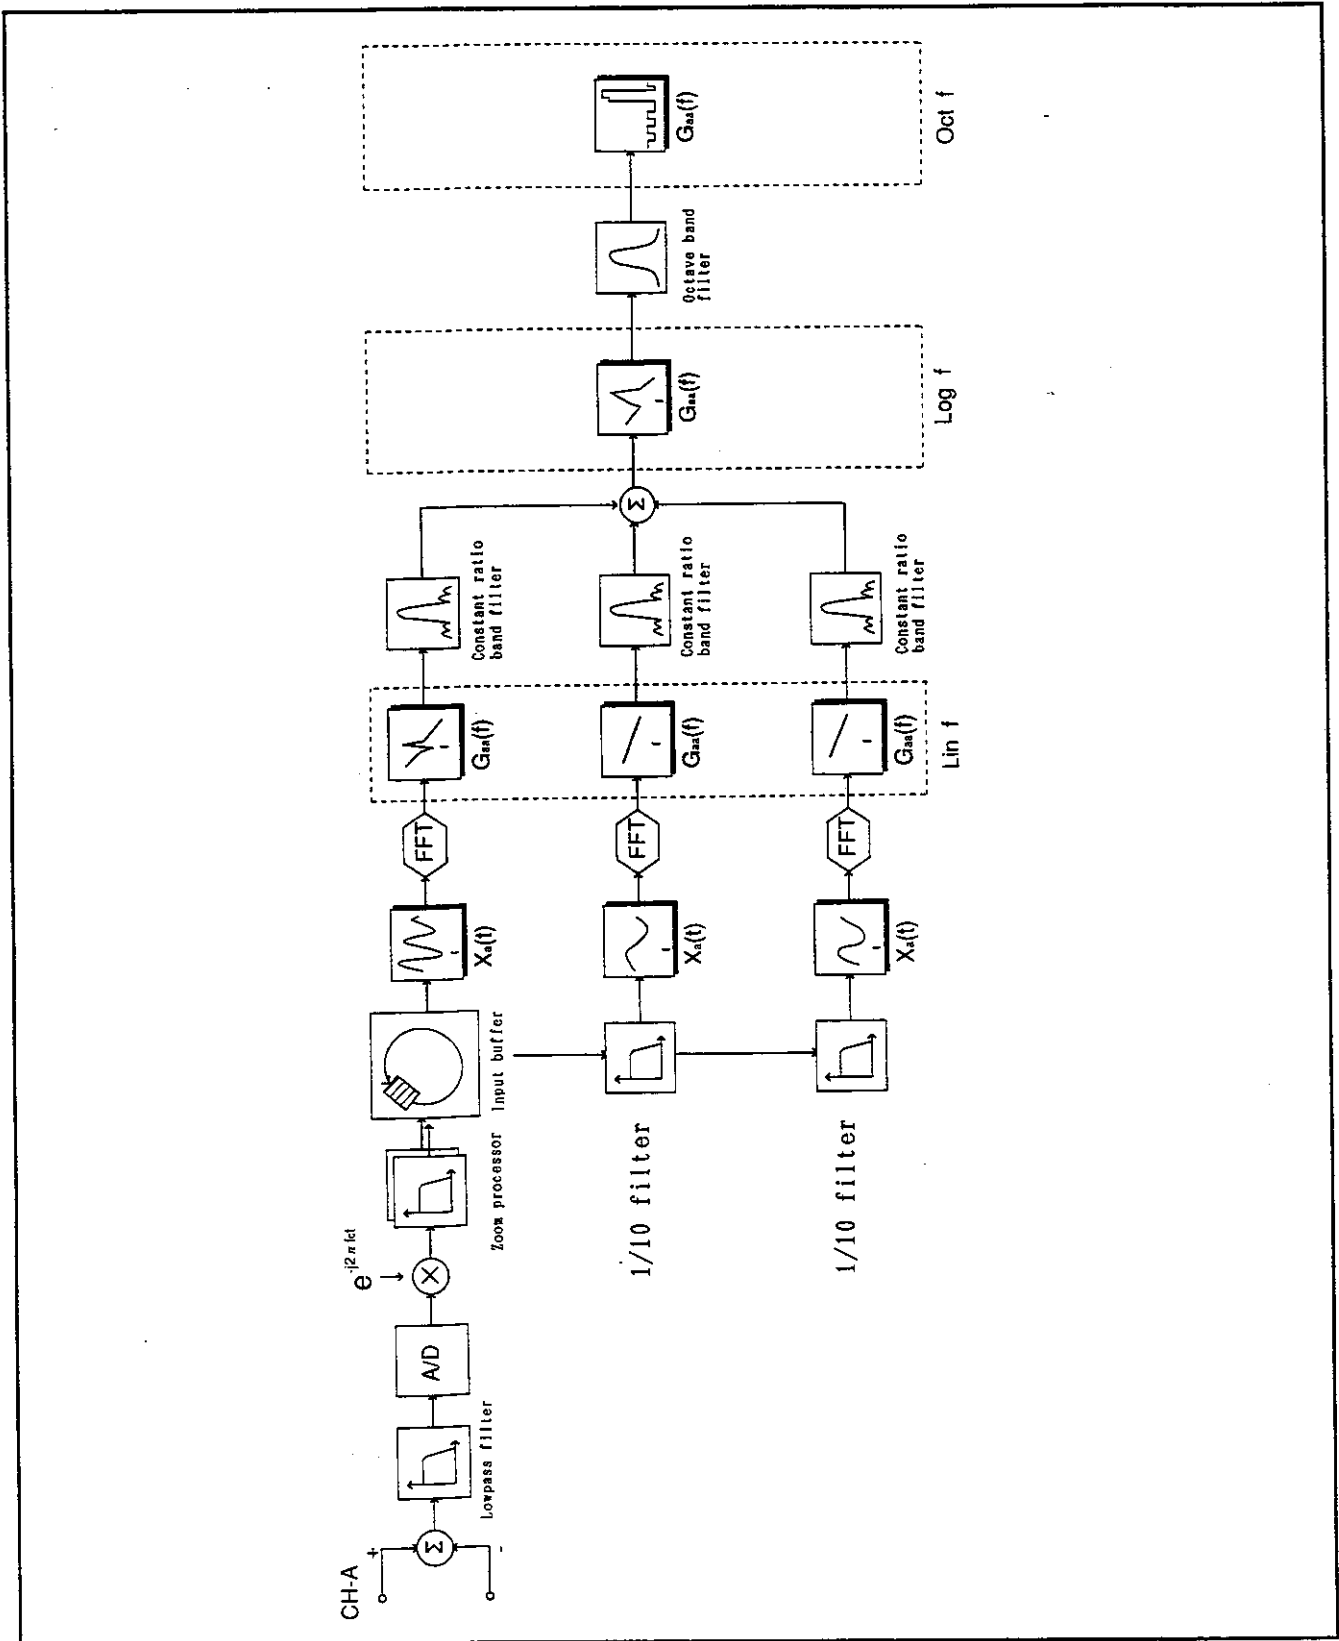


Figure 2-8 Logarithmic Frequency Spectrum Measurement Block Diagram

CHAPTER 3

BASIC OPERATIONS

First, this chapter explains basic key operation rules.
Next, it describes the operations which must be performed after switching the power on.
Lastly, this chapter introduces the front and rear panel.

CONTENTS


1. Mastering Key Operations	3-2
Key Order (Hierarchical Structure)	3-2
Measurement Flow	3-3
2. CRT Introduction	3-5
CRT Display Explanation	3-5
Initial Display	3-6
Display Character of Function Key	3-7
Calender Display	3-8
3. After Turning the Power ON	3-9
Self-diagnostic Function	3-9
Initialization	3-11
4. Panels Description	3-12
Front Panel	3-12
Rear Panel	3-16

1. Mastering Key Operations


To use the R9211 effectively, and to master the operation method quickly, as well as the measurement flow, it is important to understand the order in which the keys must be pressed.

■ Key Order (Hierarchical Structure)

There are two types of keys : the panel keys and the X and Y softkeys, which are displayed on the CRT screen.

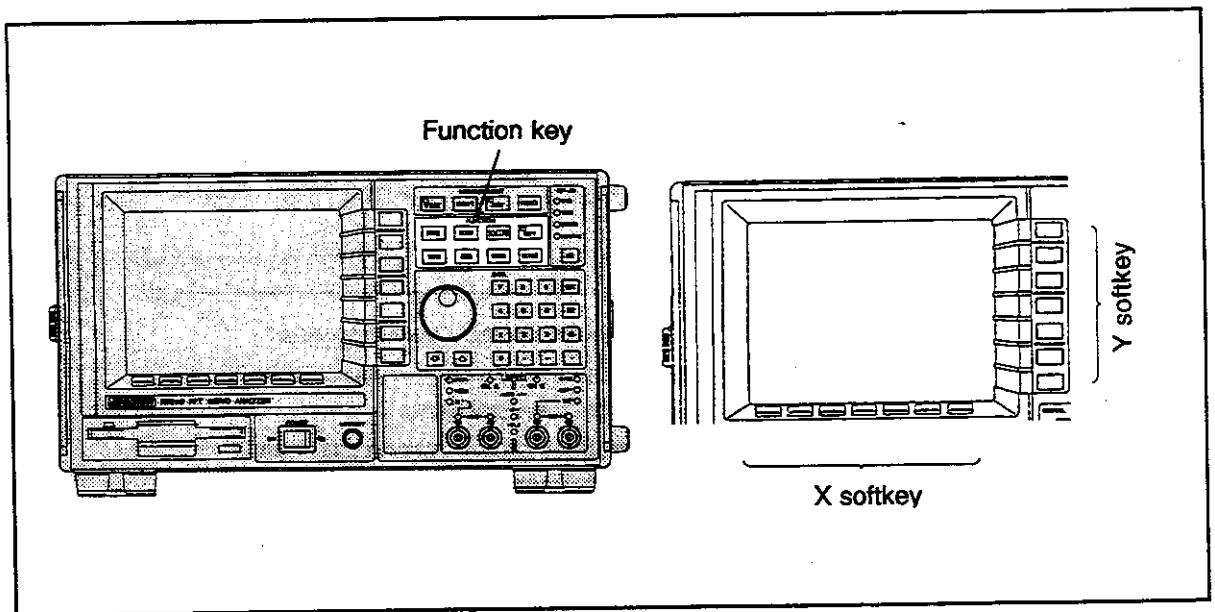

Press the keys in the following order :

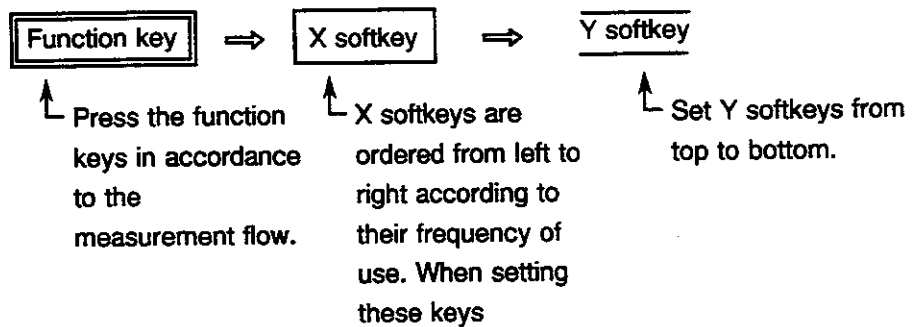


CAUTION !

The X or Y keys you have previously set are displayed in reverse video mode on the screen. You need not press these keys if you do not want to change their settings.

1. Mastering Key Operations

■ Measurement Flow

The sequence of panel key operations indicates the measurement flow.
A basic measurement flow is as follows:

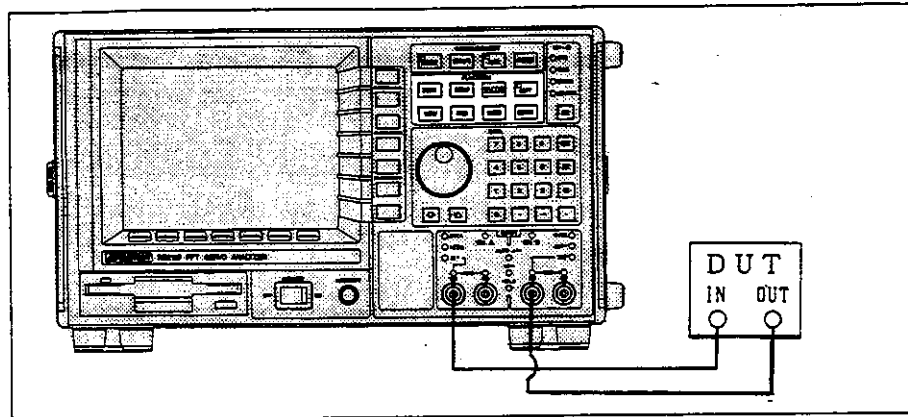1 Connect the DUT to the R9211.**2 Press the **MODE** key.**

Select a measurement mode (according to the type of measurement you intend to perform).

3 Press the **CAL key.**

The DC calibration is then carried out

4 Press the **SETUP key.**

Set the divers measurement parameters according to the measurement conditions.

5 Press the **START key.**

Starts an averaging process or a servo measurement.



1. Mastering Key Operations

6

Press the **VIEW** key.

Allows to display the results of both measurements and mathematical computations, and to set the desired display form.

7

Press the **MATH** key.

Execute the necessary arithmetic computations. (Of course, if you need not use this feature, step directly to the next point.)

8

Press the **MKR** key.

Thanks to the variety of markers, you can retrieve and display different numerical values from both measurement and mathematical computations results.

9

Press the **DEVICE** key.

Set the plotter or the floppy disk drive, either for data saving or for data retrieving.


10

Press the **COPY** key.

Start plotting the measurement data.

2. CRT Introduction

■ CRT Display Explanation

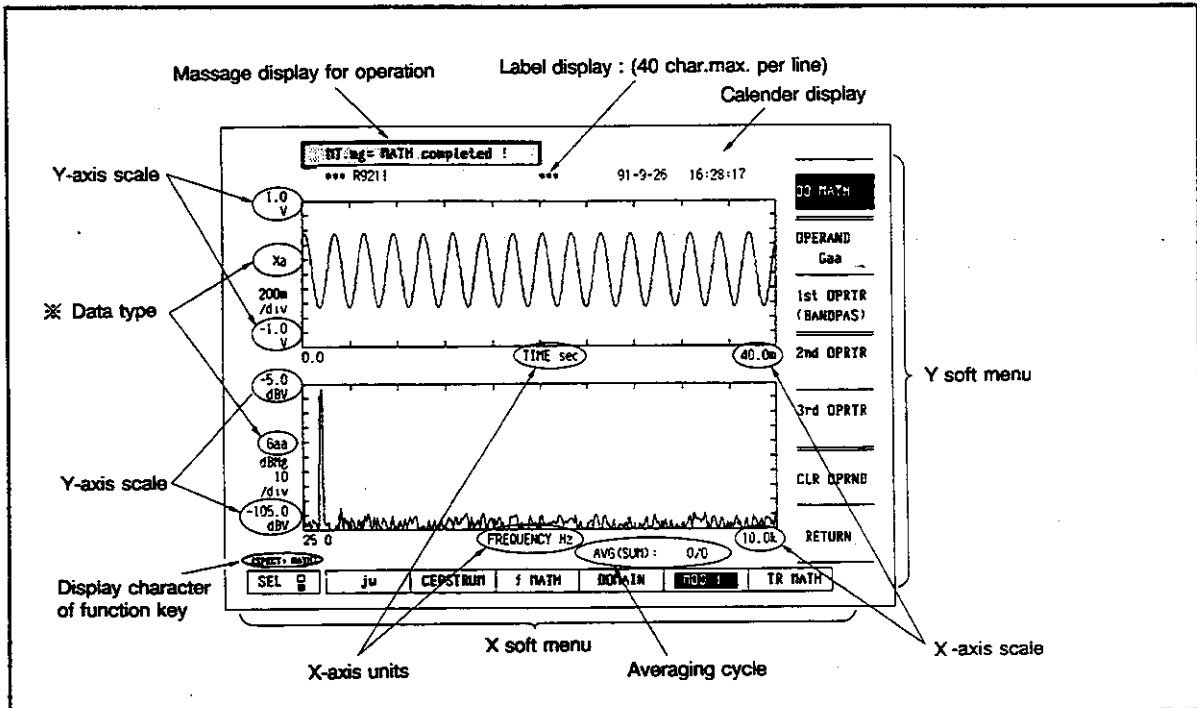

※ indicates as following.

- Xa: Channel A instantaneous time data
- Xb: Channel B instantaneous time data
- < Xa > Channel A average time data
- < Xb > Channel B average time data
- Gaa: Channel A power spectrum
- Gbb: Cross-spectrum
- < Sa > Channel A complex spectrum
- < Sb > Channel B complex spectrum
- < Hab > Frequency-response function
- < Coh > Coherence function


NOTE

The < > brackets indicate averaged data.

2. CRT Introduction

■ Initial Display

When the power is switched on, the R9211 performs a self test and displays the following screen :

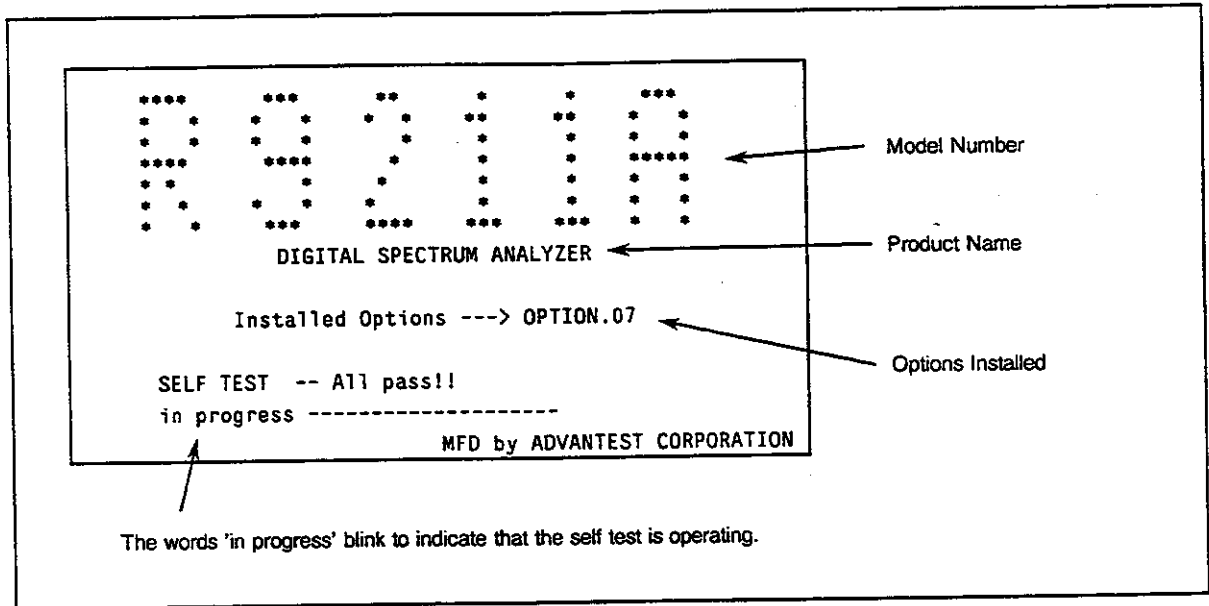


When all self test routines have resulted in a PASS, the main program automatically begins, and the measurement screen is displayed.

If an error occurs in a self-test routine, the screen comes to a temporary stop with an error displayed. Note the error when you make a service call to Advantest. To forcibly start the main program after an error, press any key on the front panel.

■ Display Character of Function Key

The name of measurement mode and select function key on CRT is displayed as to indicate that a displayed soft menu is evolved from which function key.

(1) Output point—Upper left on X1 soft menu

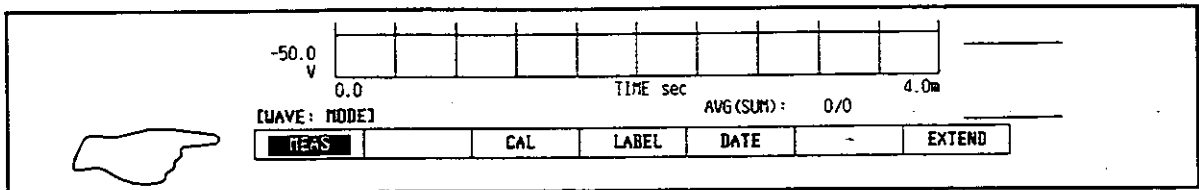


(2) Retations of selected function Keys and display characters

'Function Key'	Measurement mode				
	WAVEFORM	SPECTRUM	TIME-FREQ	FRF	
MODE Key	[WAVE: MODE]	[SPECT: MODE]	[TF: MODE]	[FRF: MODE]	
SETUP Key	[WAVE: SETUP]	[SPECT: SETUP]	[TF: SETUP]	[FRF: SETUP]	
VIEW Key	[WAVE: VIEW]	[SPECT: VIEW]	[TF: VIEW]	[FRF: VIEW]	
MKR Key	[WAVE: MARKER]	[SPECT: MARKER]	[TF: MARKER]	[FRF: MARKER]	
MATH Key	'MATH'	[WAVE: MATH]	[SPECT: MATH]	[TF: MATH]	[FRF: MATH]
	'LIMIT'		[SPECT: LIMIT]	[TF: LIMIT]	[FRF: LIMIT]
	'CFIT'				[FRF: sCVFIT]
	'SYNTH'				[FRF: sSYNTH]
DEVICE Key	[WAVE: DEVICE]	[SPECT: DEVICE]	[TF: DEVICE]	[FRF: DEVICE]	
PRESET Key	[WAVE: PRESET]	[SPECT: PRESET]	[TF: PRESET]	[FRF: PRESET]	

2. CRT Introduction

Calendar Display

The time at which a data selected by the selector left lower on the screen is created, is displayed.

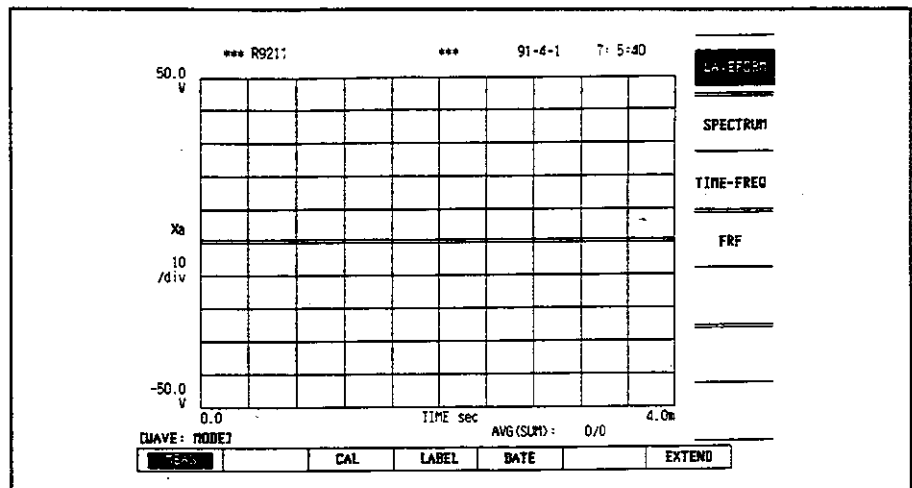

The displayed time and date is different according to kinds of data.

- **Data selected by INST VIEW menu**

Display the time and date at which data is installed by analyzer.

- **Data selected by AVG VIEW**

Display the time and date which starts average.

- **Data selected by MATH VIEW**

Display the time specified in operand 1 when execute operation.

- **Data selected by MEM VIEW**

Display the display time of the previous saved data.

CAUTION!

When floppy disk recorded by the unit without the calendar display, is replayed, the calendar display is not performed for the replayed data in some cases.

3. After Turning the Power ON

■ Self-diagnostic Function


The R9211 executes its internal self-diagnostic program each time, it is switched on. The self-diagnosis process takes 30 to 60 seconds. To stop self-diagnosis and begin measurement immediately, press any panel key

other than **PRESET**.

(Use the **PRESET** key only if you want to preset the R9211. For the

presetting method, see Chapter 9, Section 1 "How to use the **PRESET**


key".

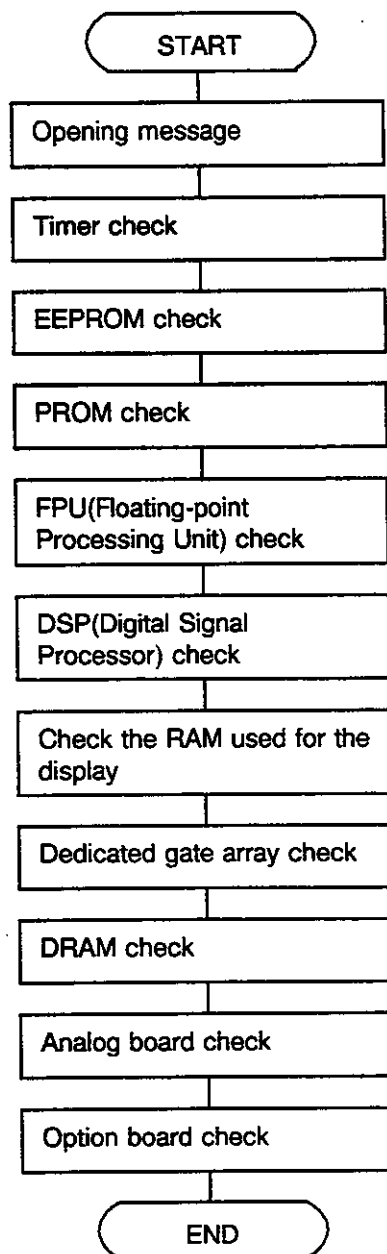

- Information about eventually installed options

3. After Turning the Power ON

Upon the self-diagnosis completion, the result is displayed on the CRT.

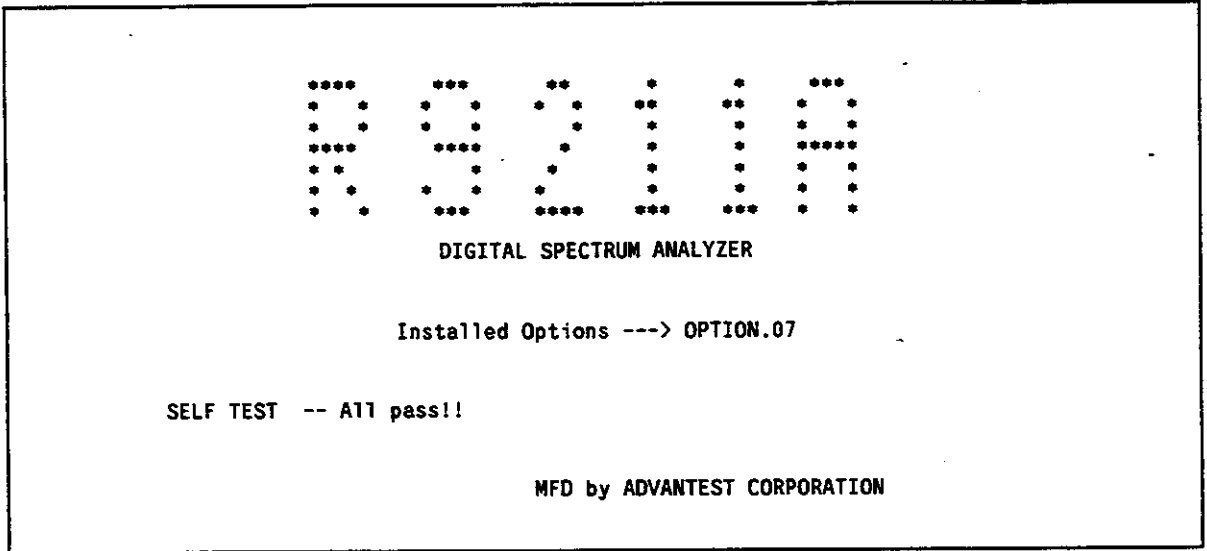

If any fault is detected, the corresponding fail code is displayed, meaning that the analyzer is defective. Contact your nearest sales office or agent.

CAUTION !


Even if you never detect any failure from the R9211 while using it, you should execute the self-diagnostic program monthly for a complete checkup.

3. After Turning the Power ON

Initialization

When you are not certain of the setting conditions, or when you want to reset the initial status, proceed as follows :

- 1 Turn the power on.
- 2 The self-diagnostic program starts.
- 3 Press the **PRESET** key in the MEASUREMENT section during execution of the self-diagnostic program ("in Progress" is blinking). (Do not press other keys before "WL.mg = Default Configuration" is displayed.)
- 4 "WL.mg = Default Configuration" is being displayed for 1 second.
- 5 **WAVEFORM** mode is selected and the default values are set.

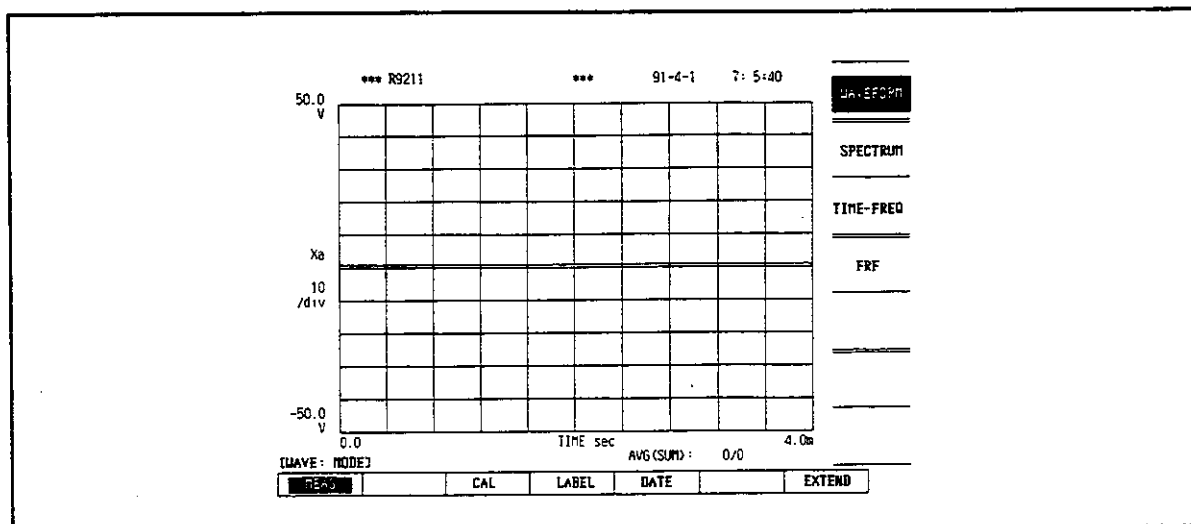

CAUTION !

If the **PRESET** key is pressed after completion of the self-diagnosis program, (that is to say in the measurement mode), it is used to change the function assigned to the **MATH** key. For further details, see Chapter 9, Section 1 " **PRESET** key OPERATION".

4. Panels Description

■ Front Panel

□ MEASUREMENT

- ① START key : Starts average measurement, servo measurement, or T-F analysis.
- ② STOP/C key : Stops/continues average measurement, servo measurement, or T-F analysis.
- ③ AUTO key : Unused
- ④ PRESET key : Presets the units when pressed during the execution of the self-diagnosis program, after the power is turned on. Otherwise, this key is used to change the

function to be assigned to the MATH key.



□ GPIB

- ⑤ SRQ lamp : Service request. Notifies that there is a service request sent to an external device.
- ⑥ TALK lamp : Talker. It is lighted during transmission to an external device.
- ⑦ LISTEN lamp : Listener. It is lighted during reception from an external device.
- ⑧ REMOTE lamp : It is lighted when the analyzer is controlled from an external device.
- ⑨ LCL key : Clears the remote controlled state.

□ FUNCTION

- ⑩ MODE key : Sets a measurement mode.
- ⑪ SETUP key : Sets the measurement conditions.
- ⑫ SG CONT key : This key cannot be used.
- ⑬ COPY key : Controls the GPIB commanded external plotter.
- ⑭ VIEW key : Sets the display conditions.
- ⑮ MKR key : Sets the marker control parameters.
- ⑯ MATH key : Selects different mathematical computations.
- ⑰ DEVICE key : Sets the operating conditions of an eventual external device (floppy disk drive/GPIB plotter/GPIB).

□ DATA

- ⑱ Data knob : Sets the value for a measurement condition or moves the marker.
- ⑲ DOWN  key : Sets the value for a measurement condition or moves the marker.
- ⑳ UP  key : Sets the value of a measurement condition or moves the marker.
- ㉑ 0 to 9 : Numeric keys
- ㉒ . : Decimal point
- ㉓ - : Minus sign
- ㉔ , : Delimiter between numbers
- ㉕ ENT key : Validation of numbers
- ㉖ MK key : Unused
- ㉗ BS key : Backspace. Deletes one character.

4. Panels Description INPUT

- ⊗ CH A lamp : is lighted while channel A is under use.
- ⊗ CH B lamp : is lighted while channel B is under use.
- ⊗ OVER lamp : is lighted when an input channel is overloaded.
- ⊗ NORM lamp : is lighted when the input conditions are normal.
- ⊗ ICP lamp : is lighted when the power of the integrated circuit piezoelectric accelerometer is on.
- ⊗ + connector, + lamp : Plus-side input connector. The lamp is lighted when the + side is grounded.
- ⊗ - connector, - lamp : Minus-side input connector. The lamp is lighted when the - side is grounded.
- ⊗ AUTO ARM lamp : is lighted when trigger data are automatically acquired.
- ⊗ ARM lamp : is lighted when the trigger is in the wait state.
- ⊗ HOLD lamp : is lighted when the data acquiring process stops.

 POWER/INTENSITY

- ⊗ POWER switch : Turns on/off the power.
- ⊗ INTENSITY : Controls the screen intensity.

 Floppy Disk Drive

- ⊗ Floppy disk drive : Disk insertion opening

 Softkeys/Softmenus

- ⊗ Y softmenu
- ⊗ Y softkeys : Sets a parameter or selects one value among two (toggle).
- ⊗ X softmenu
- ⊗ X softkeys : Selects a submenu (i.e. a Y softmenu).

4. Panels Description

(This page has been intentionally left blank.)

4. Panels Description

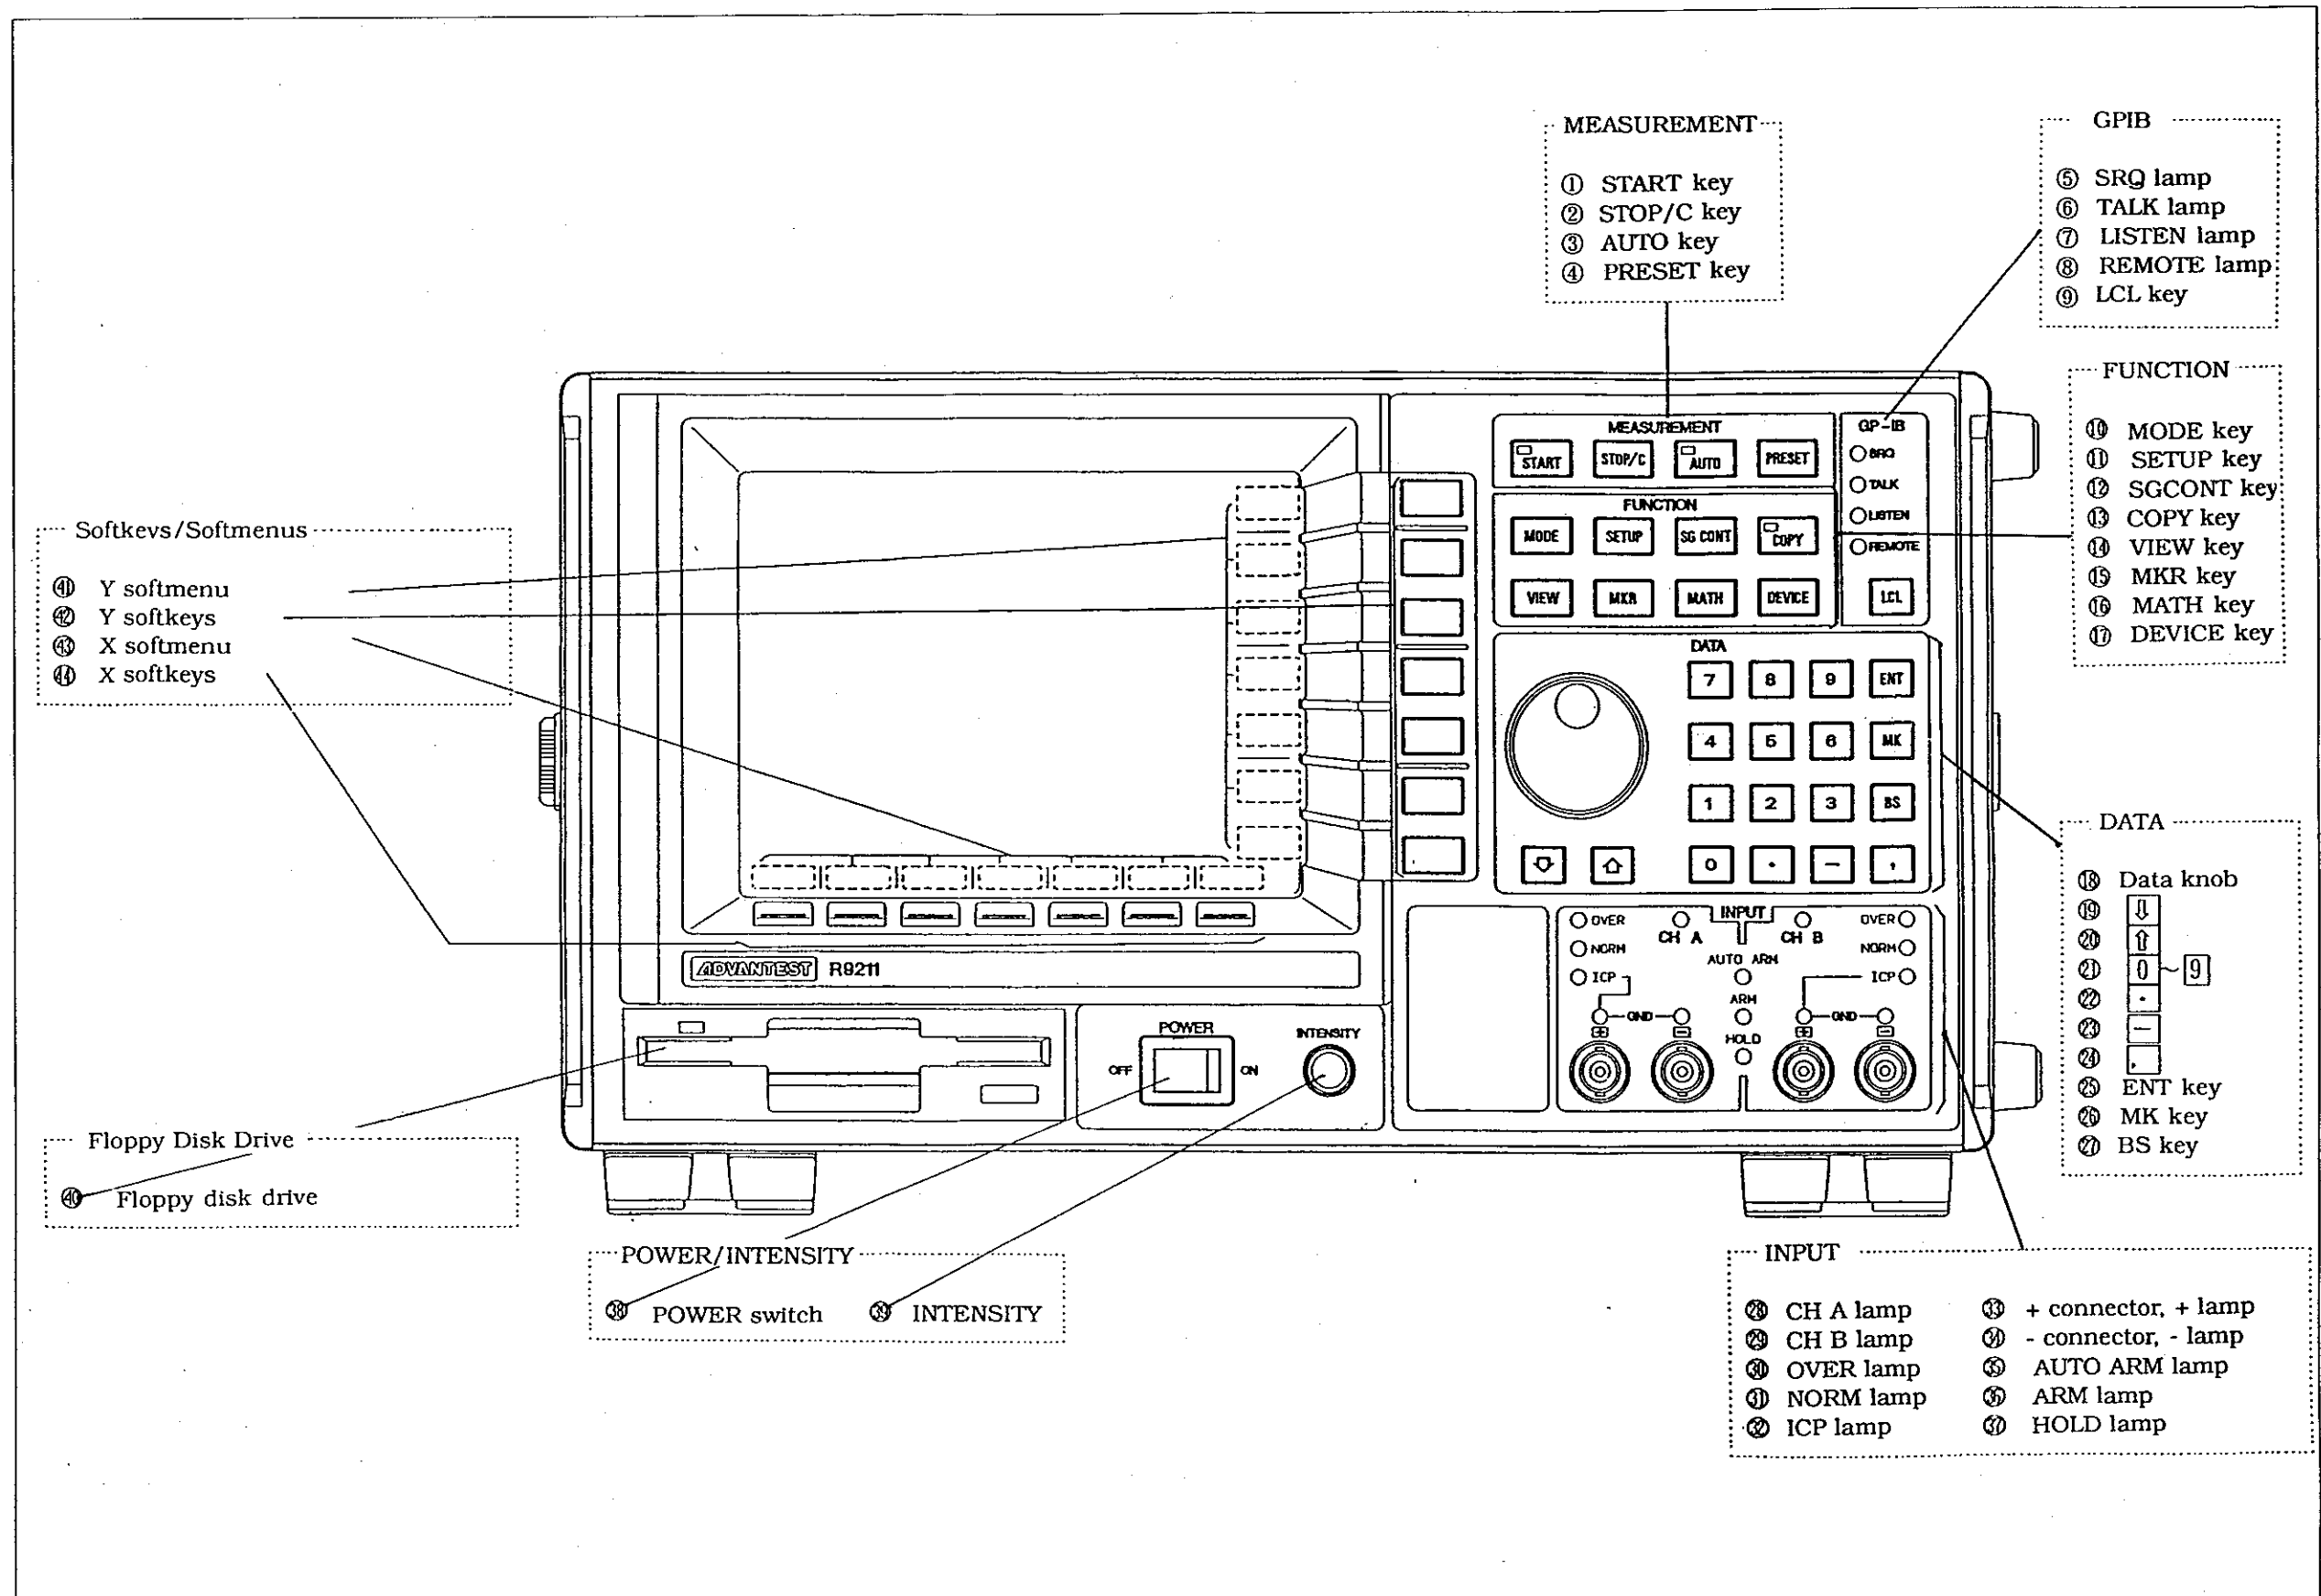


Figure 3-1 Description of the Front Panel

(This page has been intentionally left blank.)

4. Panels Description

■ Rear Panel

DIGITAL I/O

① DIGITAL IN/OUT connector
: Digital input/output connector

VIDEO OUTPUT

② VIDEO OUTPUT connector
: Output connector for a video printer or a TV monitor.
Output type : Separate TTL-level
Clock frequency : 16MHz

GPIB

③ GPIB connector : Connector for GPIB

INPUT, OUTPUT

④ TRIG output connector
: Trigger's output connector

⑤ SMPLG CLK output connector
: Internal sampling clock output connector

⑥ External TRIG input connector
: External trigger input connector

⑦ External SMPLG CLK input connector
: Internal sampling clock input connector

AC Power Socket

⑧ AC power socket : A fuse is installed in the socket.

Indications

⑨ INSTALLED OPTION NO.
: Indicates the type of an eventual option installed in the unit.

⑩ SET. ~ LINE V.FUSE : Indicates the supply voltage and fuse status.

CAUTIONS !

1. **The fuse holder is on the rear panel. Before replacing the fuse, switch the R9211 off and disconnect the power cable from the AC outlet. The standard, type, and voltage of the new fuse must be the same as those of the old one, otherwise, there is fire-hazard.**
2. **Any person other than trained service personnel should not open the panel for inspection.**

4. Panels Description

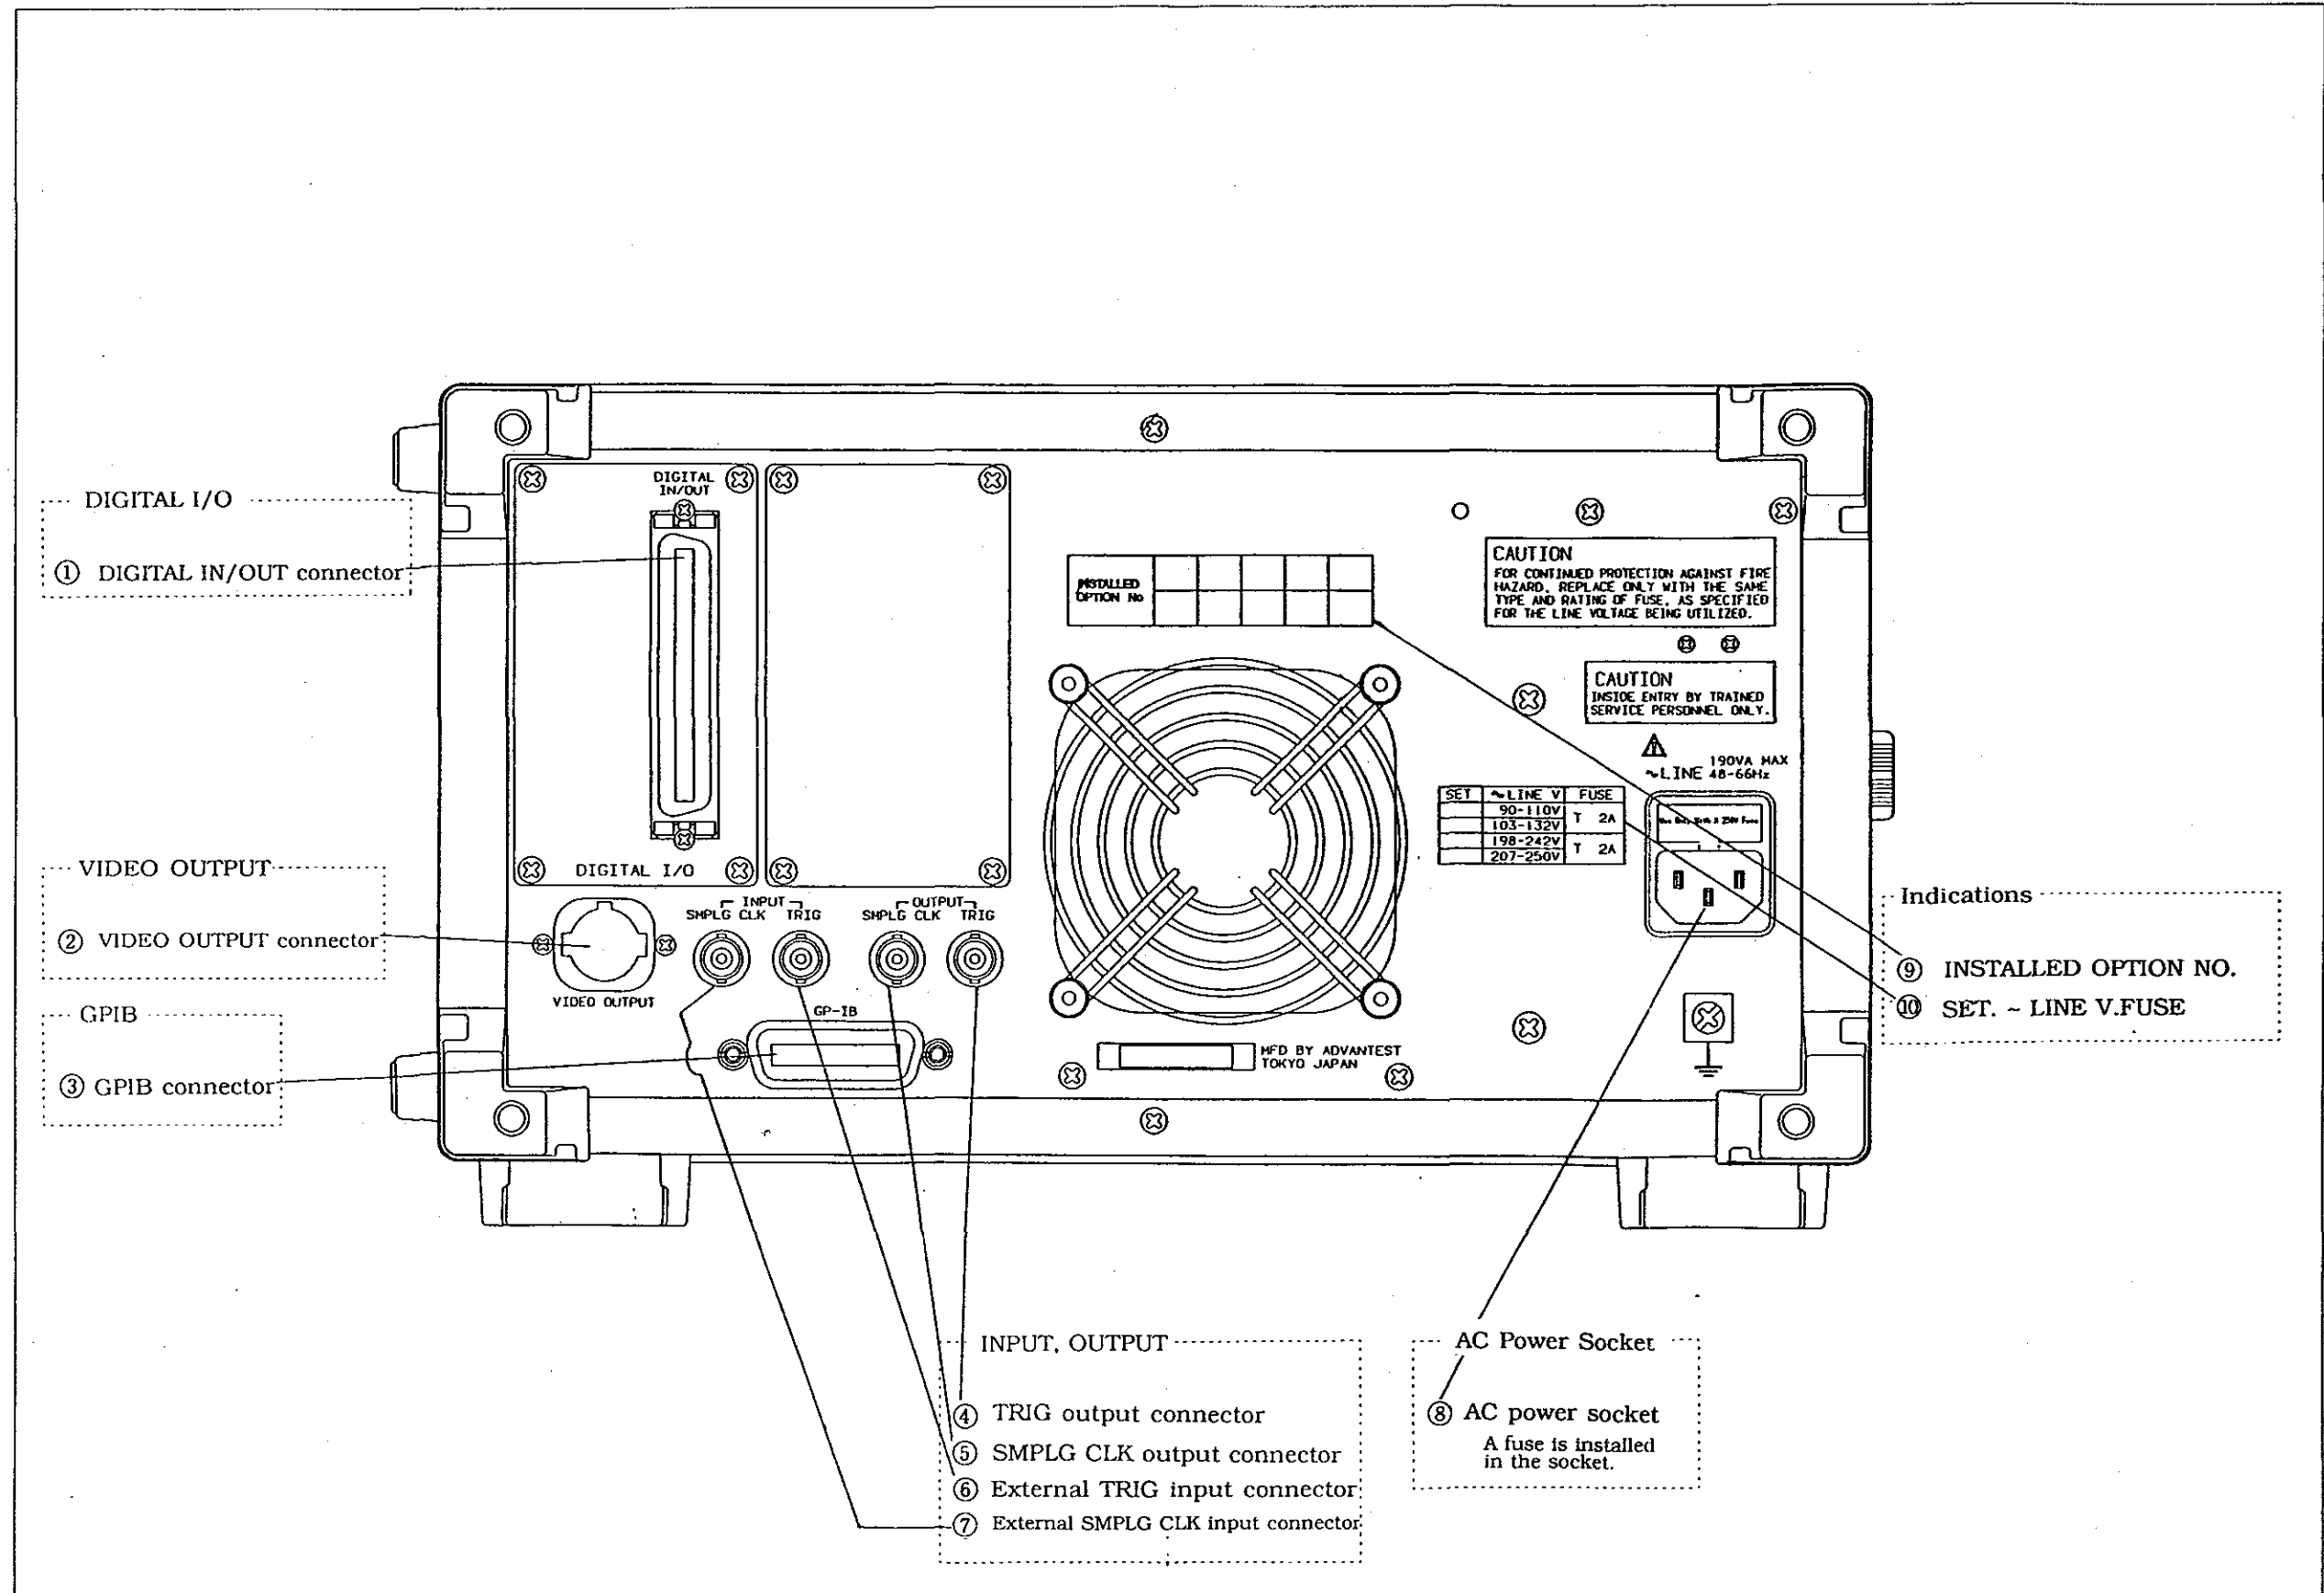


Figure 3-2 Description of the Rear Panel

CHAPTER 4

TO PERFORM A GOOD MEASUREMENT

This chapter deals with the preliminary knowledge, related to the basic connections, the input sensitivity, necessary to a good measurement. It also explains how to reduce the effects of noise on a measurement.

CONTENTS

1. Input Connection	4-2
Input Circuits	4-2
Selecting an Input Method and Setting a Menu	4-3
Power Supply for Integrated Circuit	
Piezoelectric Accelerometers (ICP)	4-6
Using an External Trigger Circuit	4-8
2. Input Sensitivity	4-9
Input Sensitivity Auto-range Function	4-9
Input Sensitivity versus Y Scale	4-12
3. Reducing The Noise Effects	4-18
Differential Input Method	4-18
Synchronous Averaging Method	4-19
Synchronous Averaging Setup Example ..	4-20

1. Input Connection

Input Circuit

The R9211 is provided with two input methods: Differential input and single ended. The input method can be set separately, for each input channel, by selecting the appropriate input condition. Figure 4-1 shows the input circuits.

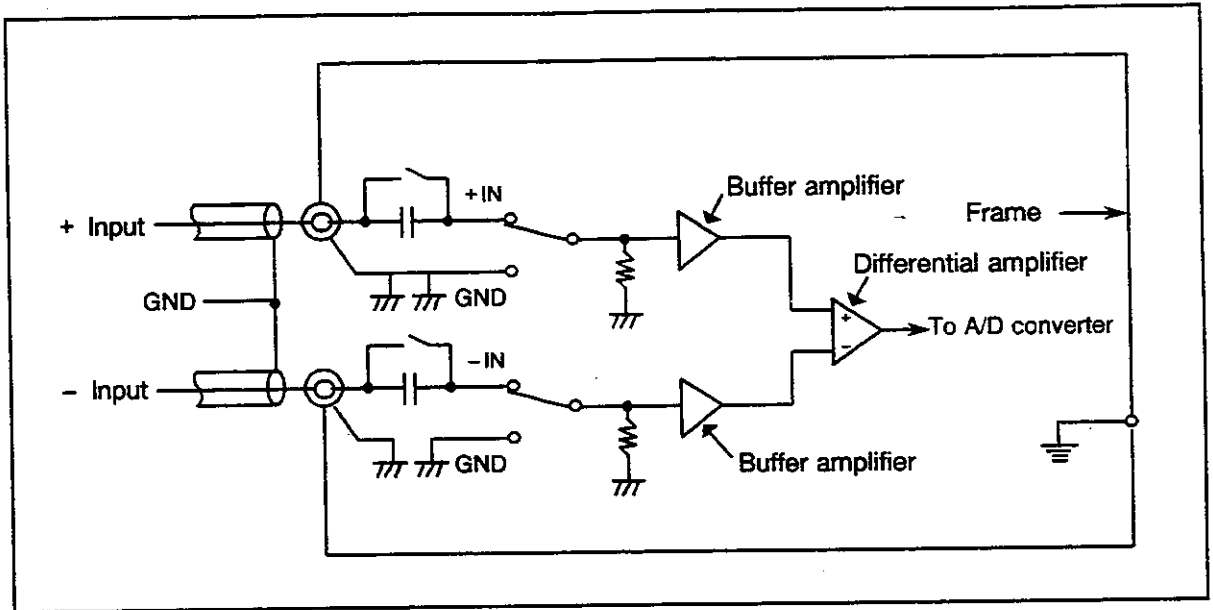


Figure 4-1 R9211 Input Circuits

Input Cable

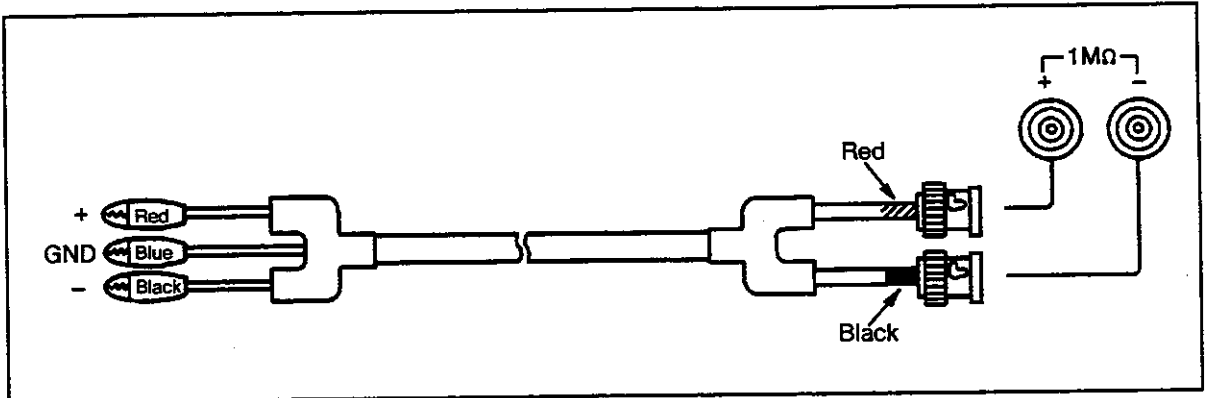


Figure 4-2 Input Cable

The input cable (MI-77) has three input clips (red, black, and blue alligator clips) and two BNC plugs. Connecting the red and black BNC terminals to the + and - inputs allows the following connections:

- Red alligator clip → + input terminal
- Black alligator clip → - input terminal
- Blue alligator clip → GND terminal

1. Input Connection

● **Impedance and Maximum Applied Voltage between the Input Outlets**

The GND input outlet (blue alligator clip) is connected to the frame. If there is a difference between frame and GND voltages, the system cannot be measured. (The outer conductor of the BNC is connected to the frame.)

Table 4-1 lists the impedances between the input sockets (including the frame) and the maximum voltages that may be applied to them.

Table 4-1 Impedances and Maximum Applicable Voltages between the Input Sockets

Maximum applicable voltage / Impedance	+ Input	- Input	GND	Frame
+ Input	2MΩ	400V peak	200V peak	200V peak
- Input	2MΩ	1MΩ	200V peak	200V peak
GND	1MΩ	1MΩ	Short (0Ω)	0V
Frame	1MΩ	1MΩ	Short (0Ω)	Short (0Ω)

■ **Selecting an Input Method and Setting a Menu**

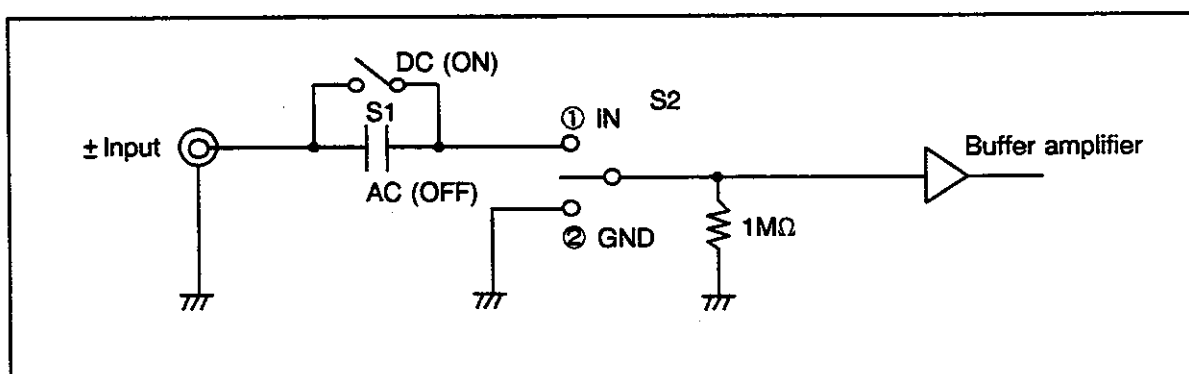


Figure 4-3 Selecting an Input Method

You can choose, for the + or - input, between AC and DC coupling, and between IN and GND. Internally, according to what has been selected for AC/DC at the menu level, S1 is switched to OFF (AC coupling) or to ON (DC coupling). Similarly, S2 switched to ① selects the IN position while S2 switched to ② selects the GND position.

To set these parameters, first press the function key **SETUP**,

then the X softkey **INPUT** and finally the appropriate Y softkey.

1. Input Connection

Table 4-2 Input Mode versus Menu Setting

Input mode		Menu setting	AC / DC	+GND / IN	-GND / IN
Differential	AC coupling		AC	IN	IN
	DC coupling		DC		
Single ended + input	AC coupling		AC	IN	GND
	DC coupling		DC		
Single ended - input	AC coupling		AC	GND	IN
	DC coupling		DC		

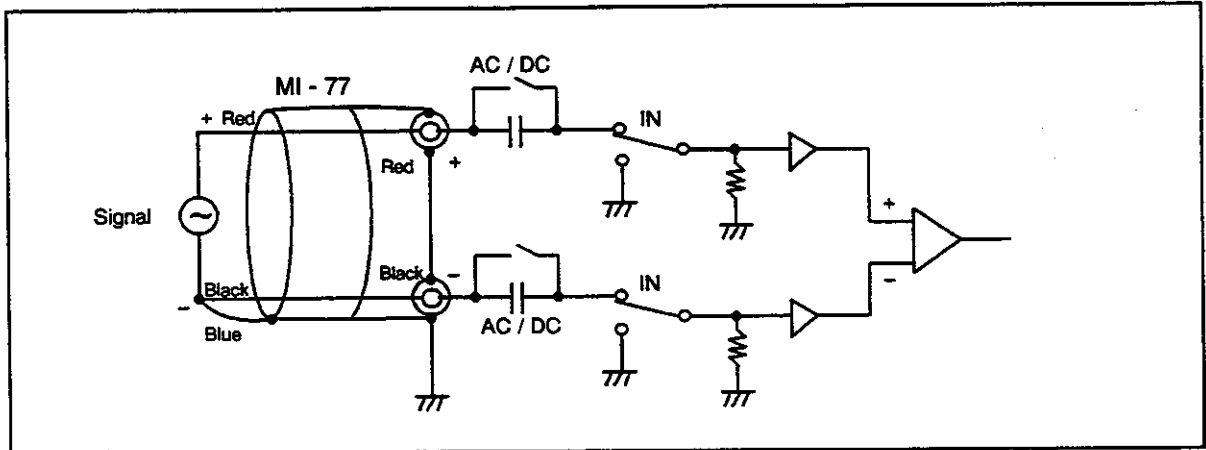


Figure 4-4 Differential Input Connection

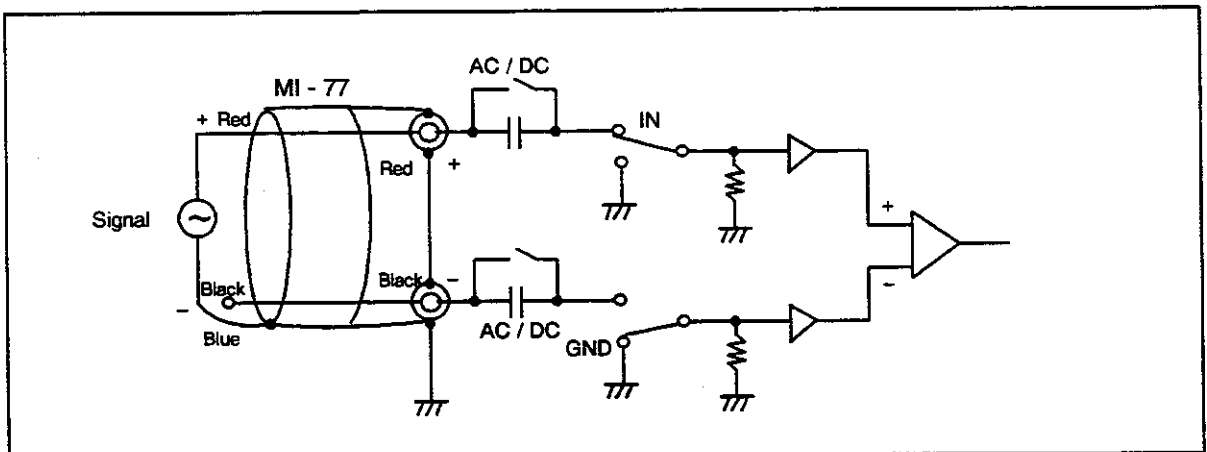


Figure 4-5 + Input Single Ended Connection

1. Input Connection

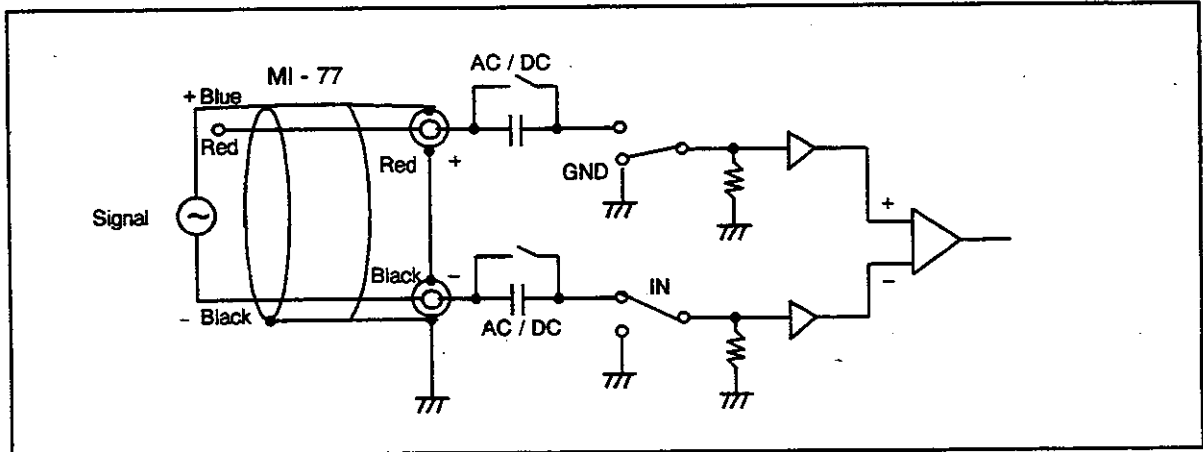


Figure 4-6 - Input Single Ended Connection

1. Input Connection

■ Power Supply for Integrated Circuit Piezoelectric Accelerometers (ICP)

The positive input outlet provides the accelerometer with a constant current of approximately 4mA. It can be used to drive the ICP accelerometer.

● Equivalent Circuit of Accelerometer Power Input Unit

The power for the accelerometer is supplied from the positive input terminals of two input channels (A and B).


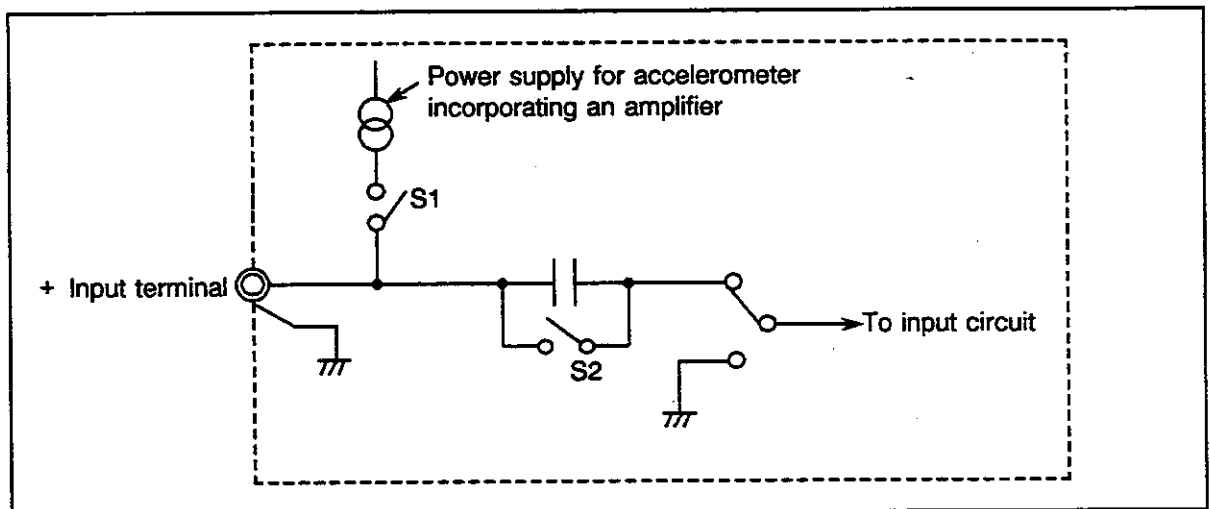


Figure 4-7 Balanced Circuit of Power Input Unit for Accelerometer

1. Input Connection

● Setting Procedure

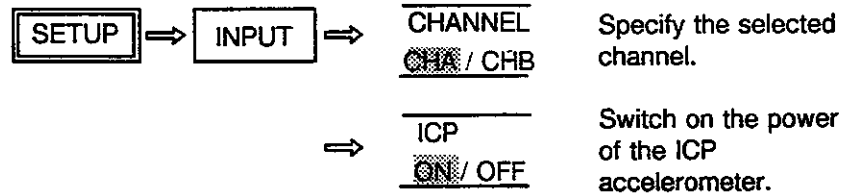

- (1) If the ICP power is ON, the input coupling automatically becomes an AC coupling.
- (2) When the ICP power is ON, the "ICP" LED (red) is lit.

● Caution

- (1) When the ICP power is ON, S2 (Figure 4-7) is switched off for AC coupling. In this case, the frequency at the -3 dB point is 0.2Hz.
- (2) The maximum operating voltage is +18V. If the peak value of the accelerometer exceeds +18V, the DC voltage at the + input terminal does not follow the waveform and the measurement is not correctly performed. Therefore, the DC voltage level must be checked.

Check the DC voltage level assuming that DC coupling is selected for the other channel. (See Figure 4-8.)

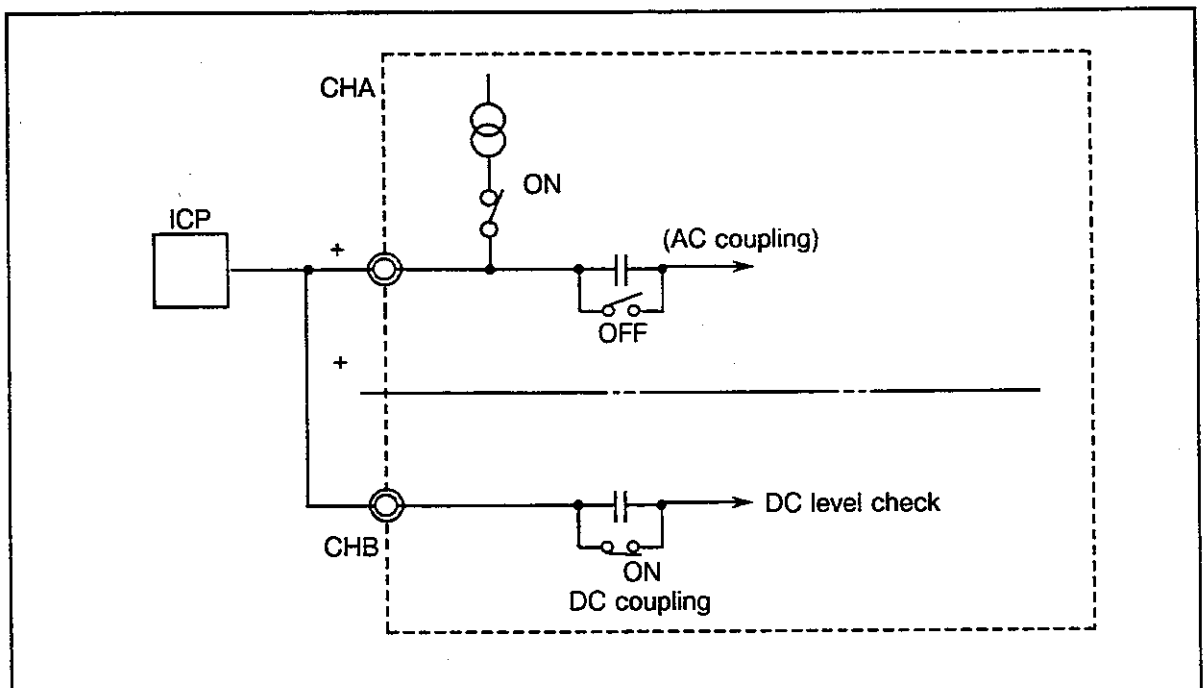


Figure 4-8 Checking Method at the Operation Level

1. Input Connection

WARNING ⚡

If the ICP power is switched ON, without connecting the acceleration sensor to the positive input socket, up to 24 VDC voltage is generated between the positive input socket and the ground.(GND). If a device (e.g. an amplifier) other than the acceleration sensor is connected to the positive input terminal, do not switch the ICP power on.

■ Using an External Trigger Circuit

If an external trigger is used and the external trigger line impedance is high, errors will occur. The control circuit must keep the impedance at less than 10kΩ .

Figure 4-9 shows an application example of the external trigger circuit using a relay or switch.

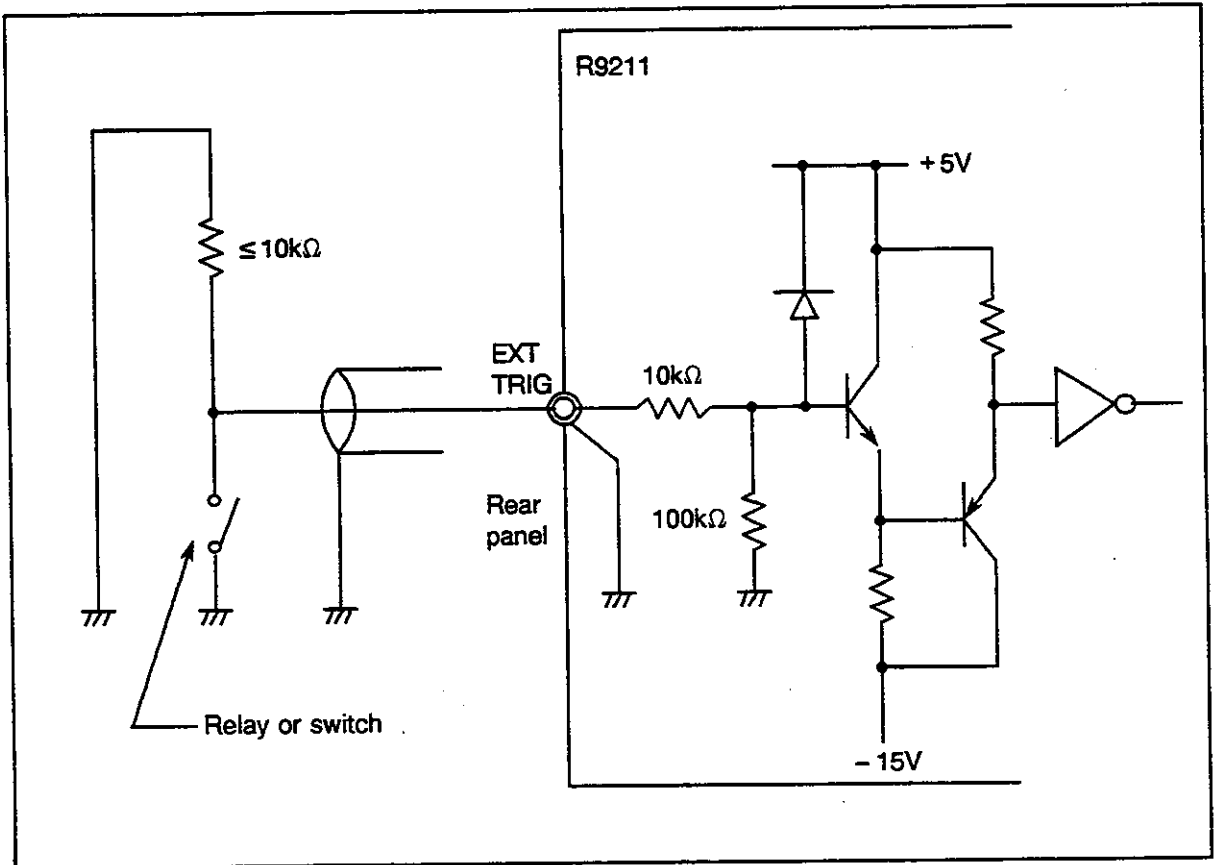


Figure 4-9 Example of External Trigger Input

CAUTION !

Since the external trigger circuit is operated at the TTL level, setting the trigger level, or the hysteresis in the menu is meaningless.

2. Input Sensitivity

■ Input Sensitivity Auto-range Function

● Setting of Input Sensitivity Range

To select one of the 3 input sensitivity range setting methods, offered by the R9211, first select the SENS menu by pressing :

(1) Manual Setting

CH - A
 AUTO / ~~MAN~~

(2) Auto Range Setting (Up and Down)

CH - A A:UP&D / UP
~~AUTO~~ / MAN ⇒ + 30dBV

(3) Auto Range Setting (Up Only)

CH - A A:UP&D / UP
~~AUTO~~ / MAN ⇒ + 30dBV

- (a) You must select a range setting method suited to the input waveform type.
- (b) The data measured during sensitivity range setting are not properly analyzed. For example, if the auto-range up&down function is used when analyzing a transient signal, since it takes time to evaluate a transient signal and to change the range, the waveform to be analyzed may have died away when the range is finally decided.
- (c) If the Autorange up&down function is used when analyzing a periodic signal, whose period is larger than the frame time (thus the frame time contains less than one period), the sensitivity range will keep on going up and down, thus yielding incorrect measurement results.
- (d) In the auto range mode, the range also depends on the signals which are not included in the measurement frequency range, and on the time variation of the common-mode voltage applied to the + and - inputs in the same phase. In this case, select the auto range setting (up only) method or the manual setting method.

When AUTO ARM or ARM has been selected with the ARM/HLD key of


SETUP , change the input sensitivity by the manual setting method.

- (e) Note that the input sensitivity function is automatically changed under certain conditions : if you are in the Autorange mode, and press the ARM/HOLD key, the input sensitivity range setting mode becomes manual.

2. Input Sensitivity



(f) The auto range setting method cannot be used for logarithmic frequency resolution analysis, octave analysis, and zoom analysis (spectrum mode /T-F mode).

Example:

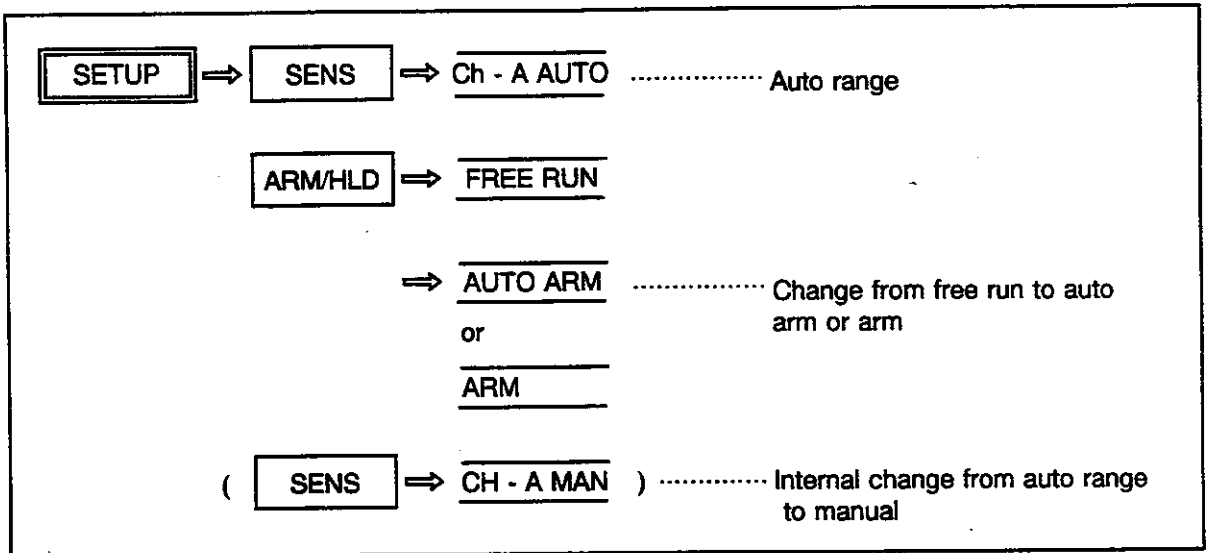


● Range Setting Methods Appropriate to the Waveform Type

(1) The frame time represents a small number of periods of the input signal.

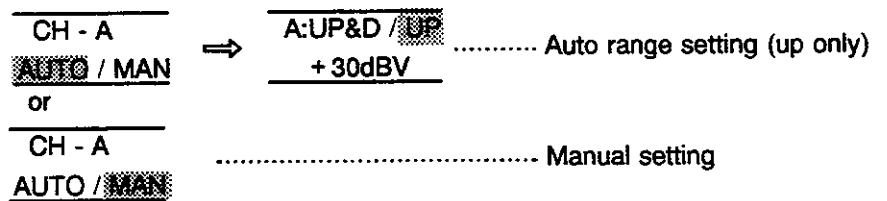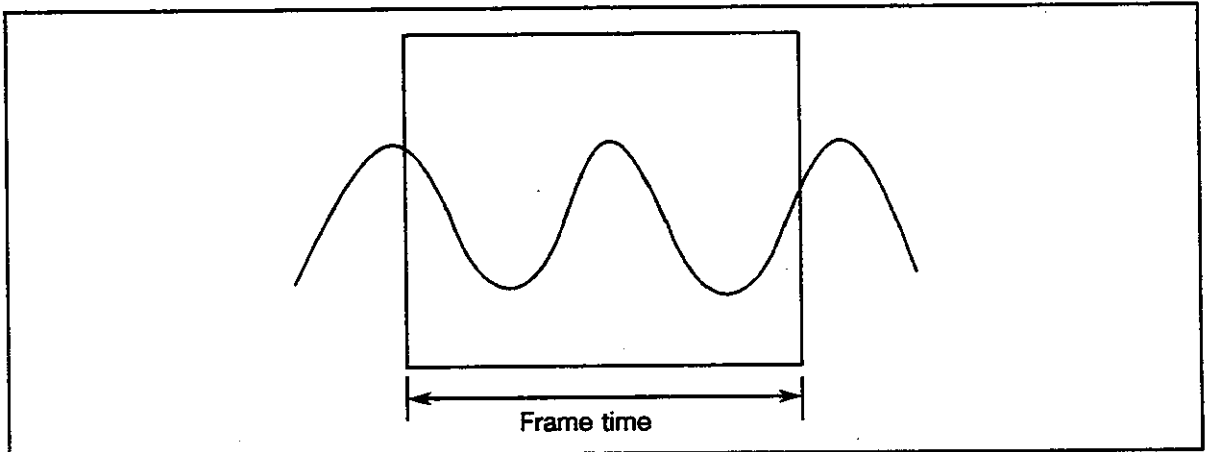


2. Input Sensitivity

(2) The input signal is a transient signal, generated periodically.

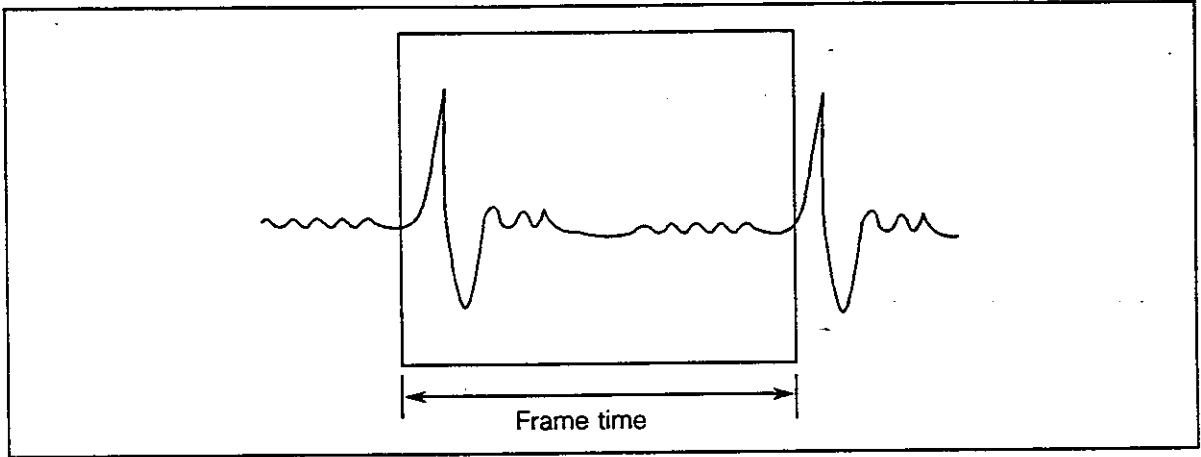

CH - A	⇒	A:UP&D / <u>UP</u>	Auto range setting (up only)
AUTO / MAN		+ 30dBV		
or				
CH - A			 Manual setting
AUTO / MAN				

(3) The frame time represents a large number of the input signal periods.

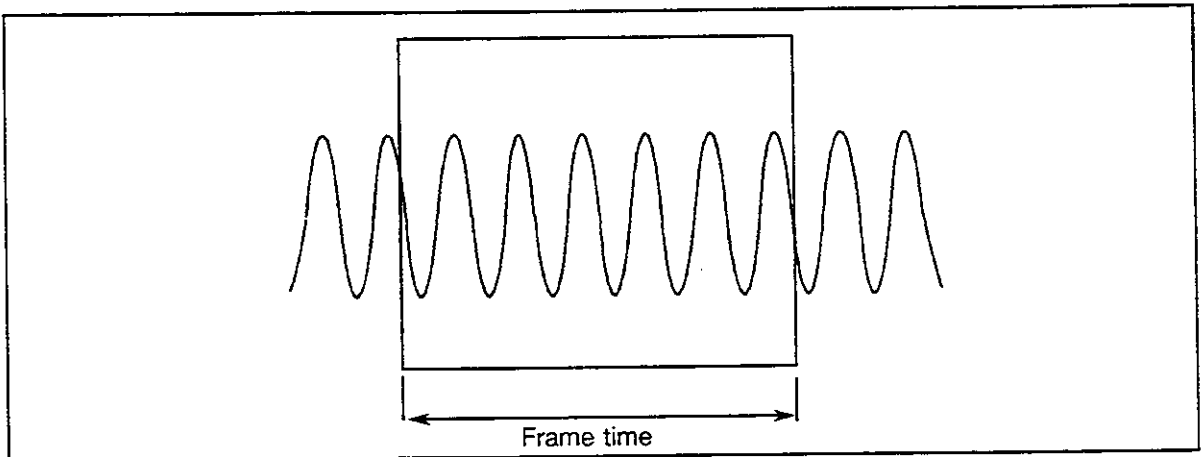

CH - A	⇒	A:UP&D / <u>UP</u>	Auto range setting (up and down)
AUTO / MAN		+ 30dBV		

2. Input Sensitivity

■ Input Sensitivity versus Y Scale

● Y scale Default Value for Spectra

Figure 4-10 shows the relationship between the input sensitivity (x dBV) and the Y scale default value.

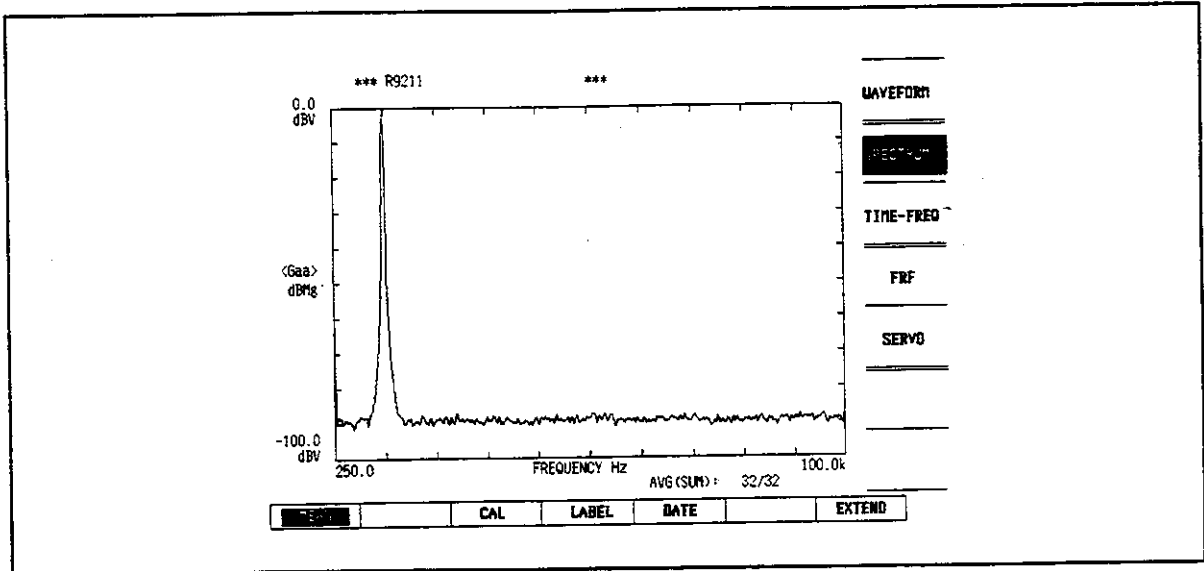


Figure 4-10 Display of the Y Scale Default Value of a Spectrum Waveform

For example, when the input sensitivity is set to 10dBV, the Y scale default value is 10dBV through -90dBV.


● Display of Spectra in Volts rms (Vrms) or Volts (Vlt)

As for spectra displaying, setting the unit to Vrms or Vlt

SETUP ⇒ **UNIT** , results in such displays as are shown in Figure

4-11, 4-12, and 4-13. Figure 4-13 represents the input signal used in this example, Figure 4-12 and 4-13 represent the resulting spectrum in Vrms and Vlt units respectively.

For further details on unit setting, see "■ Setting of the Unit" in Chapter 9. When sine waves are input in the spectrum mode, the relational expression is as follows:

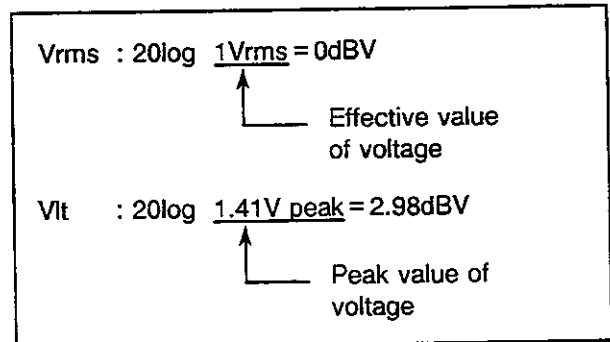

2. Input Sensitivity

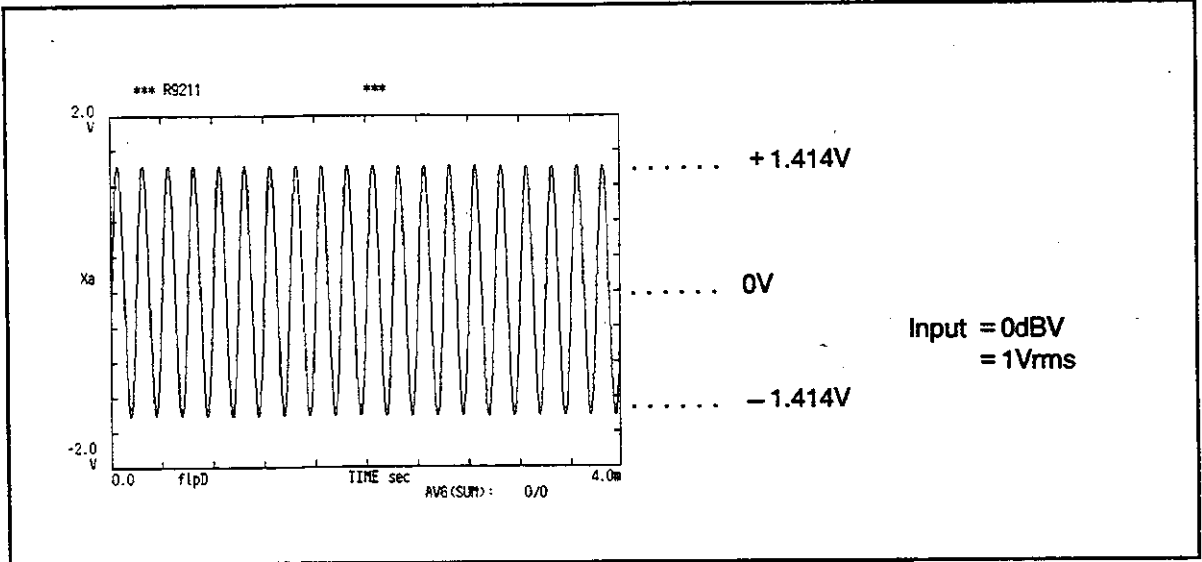


Figure 4-11 Input Waveform


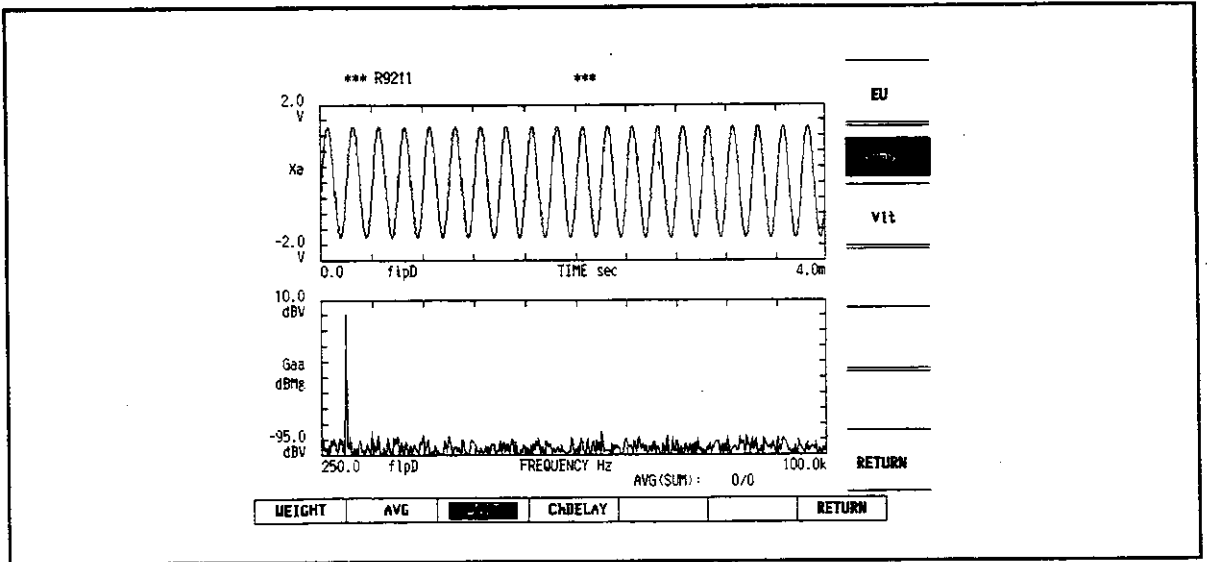


Figure 4-12 Waveform Displayed in Vrms Units


2. Input Sensitivity

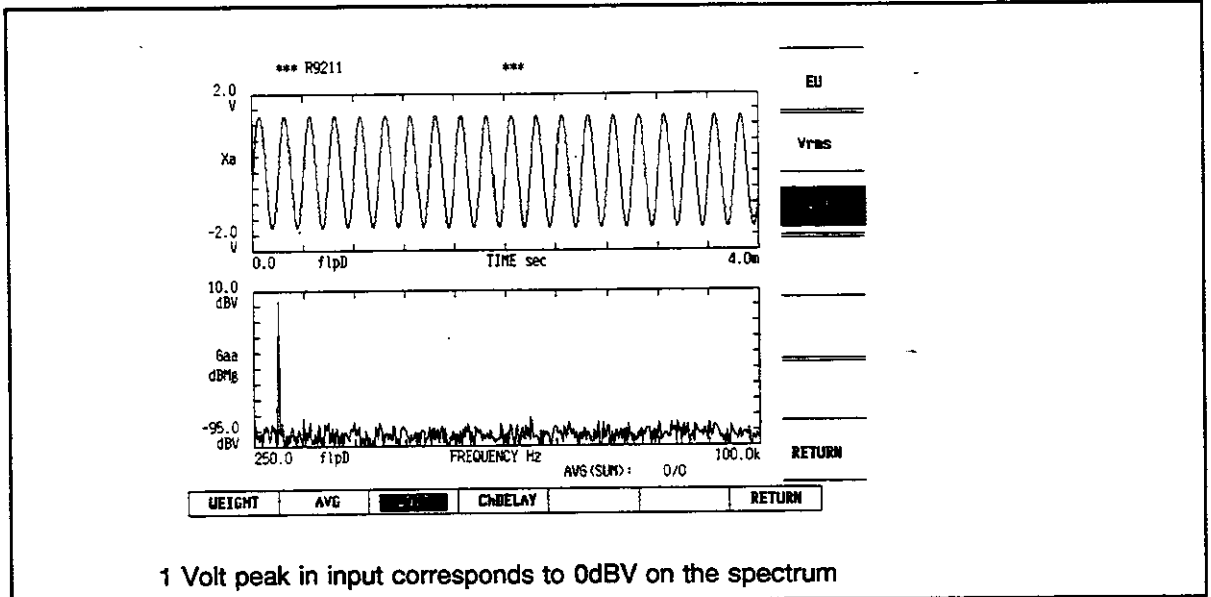

1 Volt peak in input corresponds to 0dBV on the spectrum

Figure 4-13 Waveform Displayed in Volts (Vt)

- **Maximum Input Voltage and Y Scale of Time Waveform**
 The maximum input voltage and the default value of the Y scale depend on the set input sensitivity. (See Table 4-3.)
 You can display the default value by executing the following procedure :

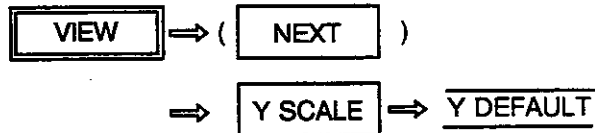

2. Input Sensitivity

● Input Sensitivity and Maximum Input Voltage

When the input sensitivity is 0 dBV, the maximum input value (P-P value is Peak-Peak value) is as follows:

$$0\text{dBV} = 1\text{Vrms} = (1.414 \times 2) \text{V}_{\text{P-P}}$$

In this case, the maximum value of the A/D converter ranges from +1.414 V to -1.414V. Moreover, if an input value lays outside this range, the OVER lamp (red) on the front panel lights and the measurement data is not reliable. Furthermore, if an input value represents 93% or more of the maximum input value, the OVER lamp lights.

When an input value represents from 50% to 93% of the maximum input value, the NORM lamp (green) lights to indicate that the input sensitivity is normal. If neither the NORM lamp nor the OVER lamp lights, the input value represents less than 50% of the set input sensitivity. In this case, you must lower the input sensitivity so that it becomes normal.

For further details about the input sensitivity setting, see "■ Setting of the Input Sensitivity" in Chapter 9.

When the input sensitivity is 10dBV, the P-P value is as follows:

$$10\text{dBV} = 3.16\text{Vrms} = (4.471 \times 2) \text{P-P}$$

In this case, the maximum value of the A/D converter ranges from +4.471 to -4.471V.

2. Input Sensitivity

Table 4-3 Maximum Input Values and Y Scale Default Values Corresponding to the Set Input Sensitivity (In the Case of Voltage versus Time Displays)

Input sensitivity (dBV)	Maximum input voltage		Y scale default value	Input sensitivity (dBV)	Maximum input voltage		Y scale default value
	Vrms	Vit			Vrms	Vit	
30	31.62 V	± 44.72 V	± 50V	-17	0.141 V	± 199.8mV	± 200mV
29	28.18 V	± 39.86 V		-18	0.126 V	± 178.0mV	
28	25.12 V	± 35.52 V		-19	0.112 V	± 158.7mV	
27	22.39 V	± 31.66 V		-20	0.100 V	± 141.4mV	
26	19.95 V	± 28.22 V		-21	89.13mV	± 126.0mV	
25	17.78 V	± 25.15 V		-22	79.43mV	± 112.3mV	
24	15.85 V	± 22.41 V		-23	70.79mV	± 100.1mV	
23	14.13 V	± 19.98 V		-24	63.10mV	± 89.23mV	
22	12.59 V	± 17.80 V		-25	56.23mV	± 79.53mV	
21	11.22 V	± 15.87 V		-26	50.12mV	± 70.88mV	
20	10.00 V	± 14.14 V	-27	44.67mV	± 63.17mV	± 100mV	
19	8.913 V	± 12.60 V	-28	39.81mV	± 56.30mV		
18	7.943 V	± 11.23 V	-29	35.48mV	± 50.18mV		
17	7.079 V	± 10.01 V	-30	31.62mV	± 44.72mV		
16	6.310 V	± 8.923V	-31	28.18mV	± 39.86mV		
15	5.623 V	± 7.953V	-32	25.12mV	± 35.52mV	± 50mV	
14	5.012 V	± 7.088V	-33	22.39mV	± 31.66mV		
13	4.467 V	± 6.317V	-34	19.95mV	± 28.22mV		
12	3.981 V	± 5.630V	-35	17.78mV	± 25.15mV		
11	3.548 V	± 5.018V	-36	15.85mV	± 22.41mV		
10	3.162 V	± 4.442V	-37	14.13mV	± 19.98mV	± 20mV	
9	2.818 V	± 3.986V	-38	12.59mV	± 17.80mV		
8	2.512 V	± 3.552V	-39	11.22mV	± 15.87mV		
7	2.239 V	± 3.166V	-40	10.00mV	± 14.14mV		
6	1.995 V	± 2.822V	-41	8.913mV	± 12.60mV		
5	1.778 V	± 2.515V	-42	7.943mV	± 11.23mV	± 10mV	
4	1.585 V	± 2.241V	-43	7.079mV	± 10.01mV		
3	1.413 V	± 1.998V	-44	6.310mV	± 8.923mV		
2	1.259 V	± 1.780V	-45	5.623mV	± 7.953mV		
1	1.122 V	± 1.587V	-46	5.012mV	± 7.088mV		
0	1.000 V	± 1.414V	-47	4.467mV	± 6.317mV	± 5mV	
-1	0.891 V	± 1.260V	-48	3.981mV	± 5.630mV		
-2	0.794 V	± 1.123V	-49	3.548mV	± 5.018mV		
-3	0.708 V	± 1.001V	-50	3.162mV	± 4.472mV		
-4	0.631 V	± 892.3mV	-51	2.818mV	± 3.986mV		
-5	0.562 V	± 795.3mV	-52	2.512mV	± 3.552mV	± 2mV	
-6	0.501 V	± 708.8mV	-53	2.239mV	± 3.166mV		
-7	0.447 V	± 631.7mV	-54	1.995mV	± 2.822mV		
-8	0.398 V	± 563.0mV	-55	1.778mV	± 2.515mV		
-9	0.355 V	± 501.8mV	-56	1.585mV	± 2.241mV		
-10	0.316 V	± 447.2mV	-57	1.413mV	± 1.998mV	± 500mV	
-11	0.282 V	± 398.6mV	-58	1.259mV	± 1.780mV		
-12	0.251 V	± 355.2mV	-59	1.122mV	± 1.587mV		
-13	0.224 V	± 316.6mV	-60	1.000mV	± 1.414mV		
-14	0.200 V	± 282.2mV					
-15	0.178 V	± 251.5mV					
-16	0.158 V	± 224.1mV					

2. Input Sensitivity

● **Optimizing the Y Scale of Time Waveforms**

When the default of the Y scale is used, the maximum input voltage is limited and consequently the amplitude may be reduced (see Figure 4-14). In this case, by selecting the auto scale method for the Y scale, one can optimize the display (see Figure 4-15). The display obtained by selecting the autoscale method is as follows :

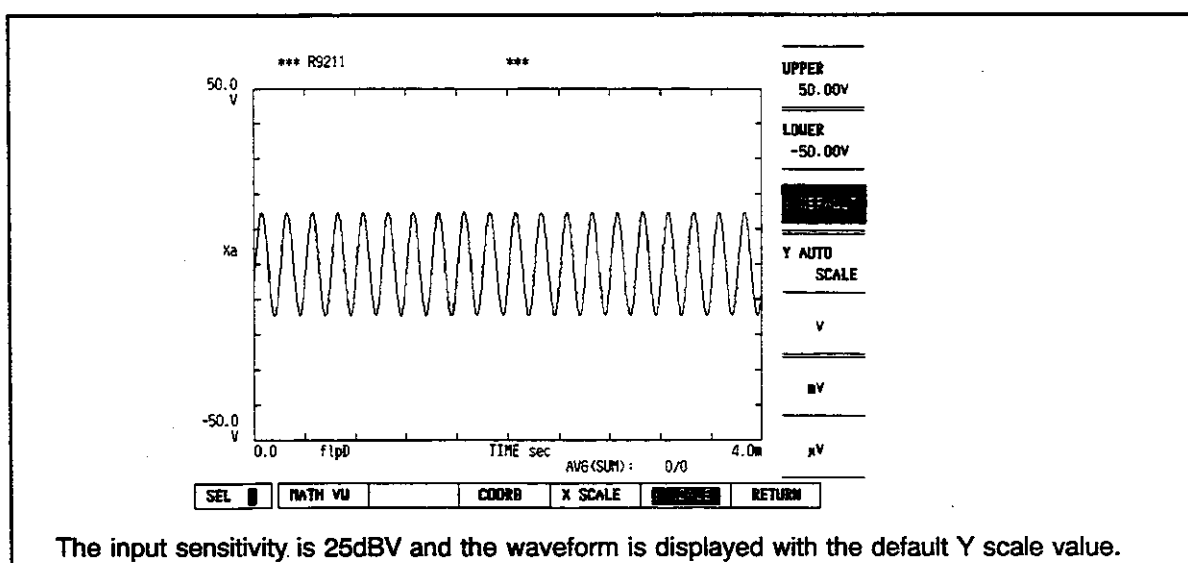


Figure 4-14 Display in Default Mode

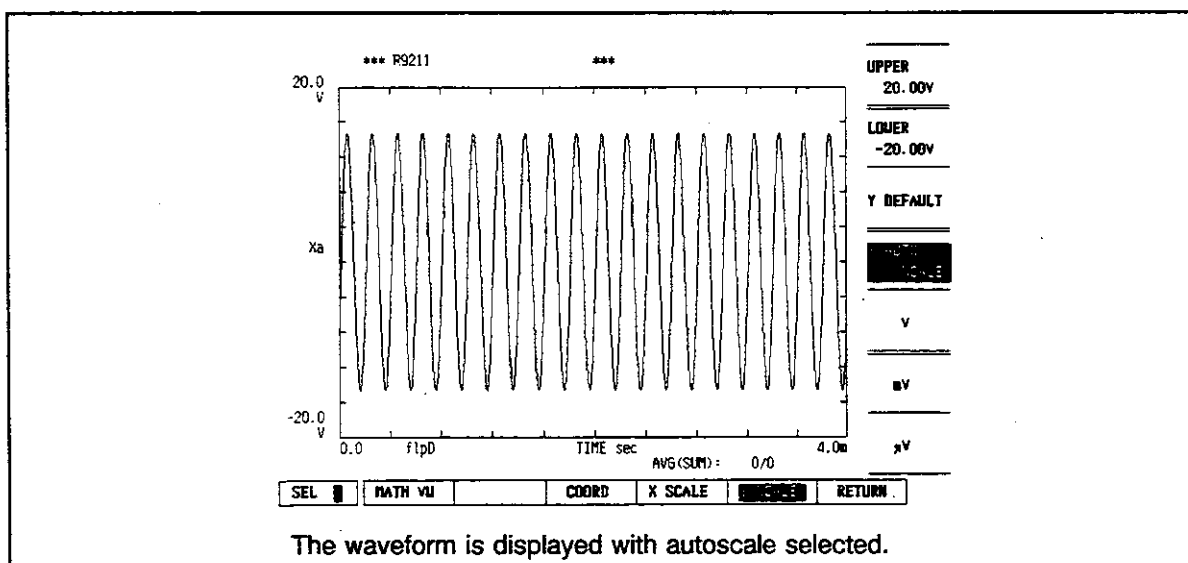


Figure 4-15 Display in Auto Scale Mode

3. Reducing The Noise Effects

■ Differential Input Method

When the differential input method is applied (Figure 4-16), the noise input to the positive input and that to the negative input, in the same phase, cancel each other, when going through the differential amplifier. When the single-ended method is applied (Figure 4-17), since the noise voltage is output by the amplifier without any transformation, the input sensitivity cannot be enhanced. As for the differential input method, the optimum range can be set irrespective of noise because the induction noise can be annihilated.

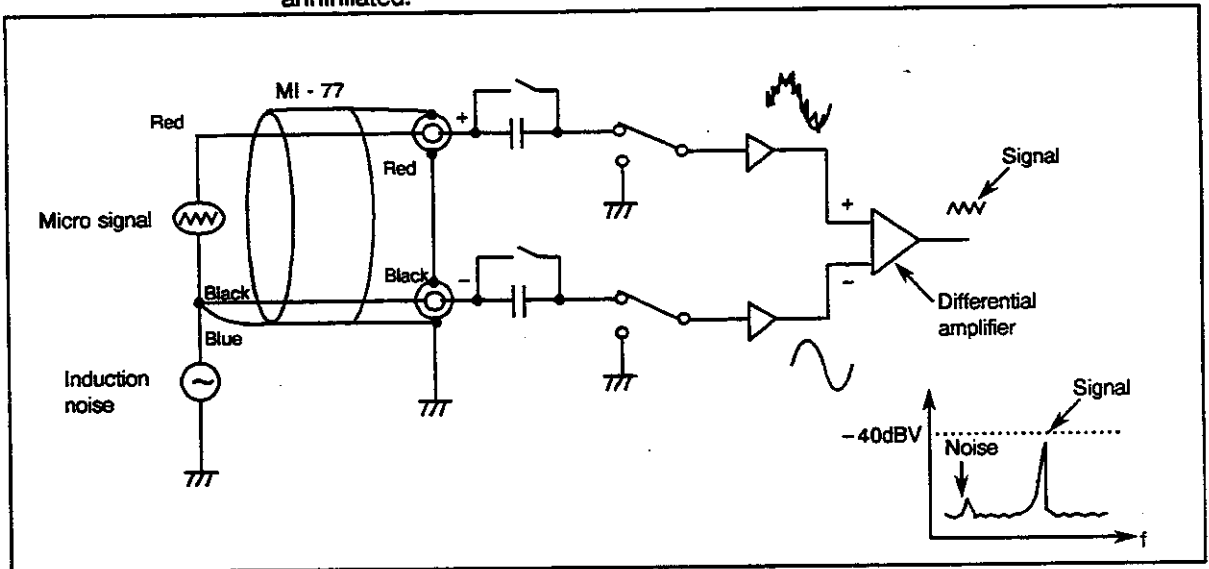


Figure 4-16 Differential Input Connection

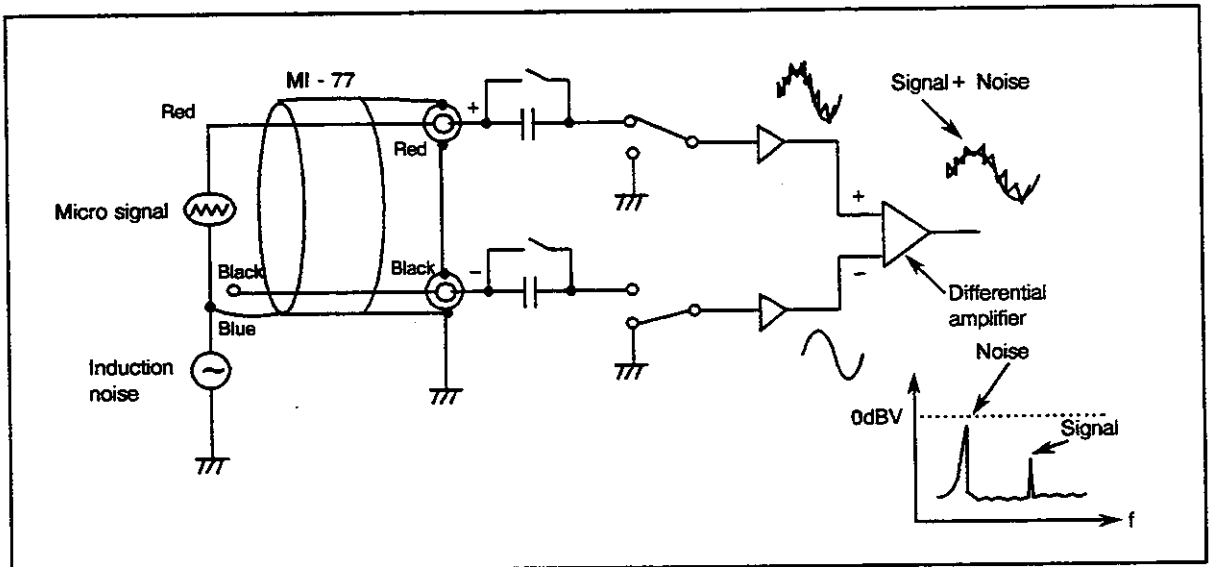


Figure 4-17 Single-ended Connection

3. Reducing The Noise Effects

■ Synchronous Averaging Method

In the domain, one method to extract a signal from a periodic signal buried in noise (cf. Figure 4-18), is to perform a synchronous averaging of the noisy signal (cf. Figure 4-19).

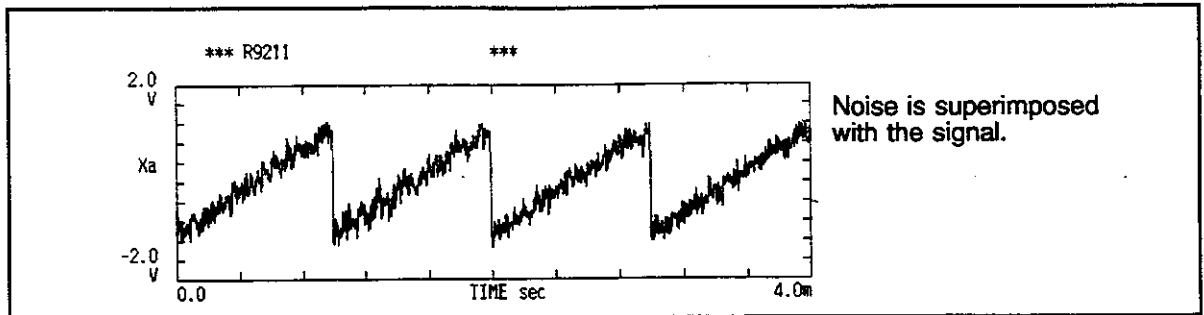


Figure 4-18 Signal Buried in Noise

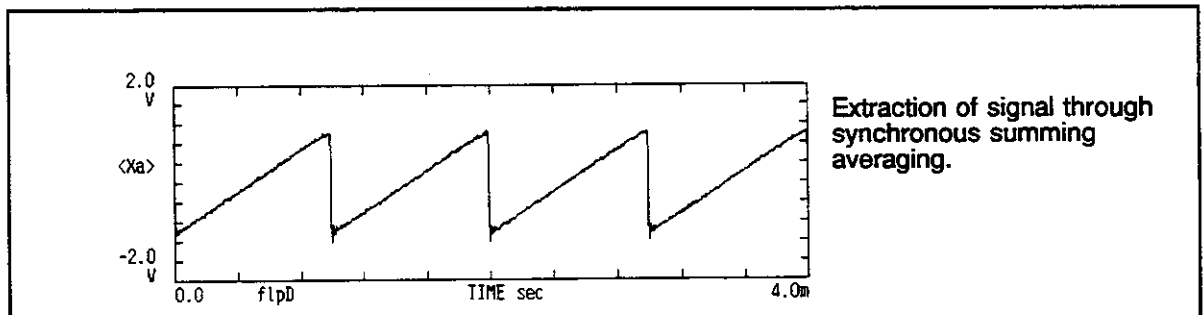


Figure 4-19 Signal Extracted through Synchronous Averaging

The signal to be measured must be synchronized and then averaged. Different synchronization methods are available :

- (1) The signal to be measured is used as a trigger source.
- (2) The synchronization signal (TTL level) of the target signal is input to the R9211 as an external trigger signal. This method is effective when the noise is greater than the signal to be measured.

ADVICE

Select a complex spectrum analysis mode to perform synchronous averaging in the frequency domain. For further details, see "■ Averaging" in Section 3 "Toward Better Measurement" in Chapter 7.

3. Reducing The Noise Effects

■ Synchronous Averaging Setup Example

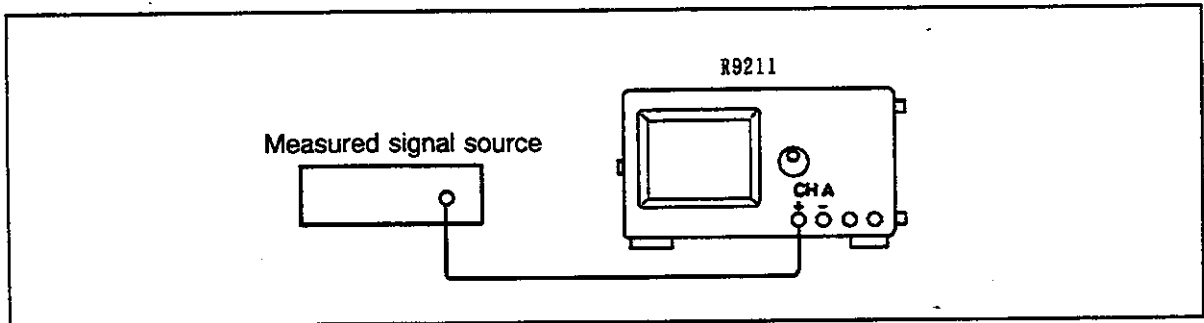


Figure 4-20 Connection Example


What follows now, explains the procedure to be executed in order to measure the waveform represented in Figure 4-20 (saw-toothed waveform buried in noise). In this setup example, the signal to be measured is input to channel A and is itself used as a trigger source.

1

Connect the signal source to the R9211 as shown in Figure 4-20.


2

Select the waveform mode as the measurement mode.




3

Select the time axis waveform function as the measurement function.

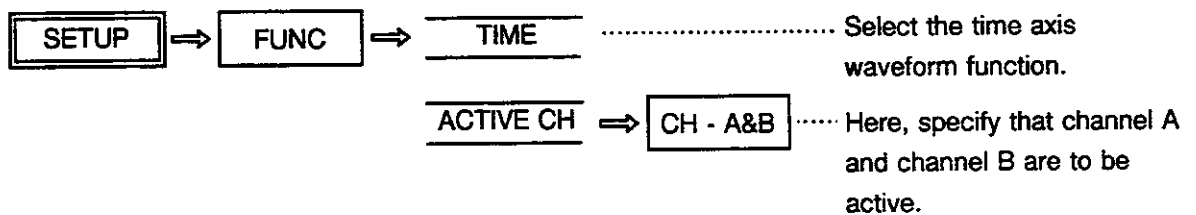

3. Reducing The Noise Effects

4 Set the time axis resolution.

⇒ **RANGE** ⇒ SAMPL RAT Set the time axis resolution with the  keys.

5 Set the input sensitivity.

⇒ **SENS** ⇒ CHA - A MAN Select the manual mode as input sensitivity mode. (In the case of a transient signal the manual mode is compulsory)

⇒ SET CH - A Then set the input sensitivity of channel A with the numeric keys followed by the **ENT** key, or with the knob.

⇒ CHA - B MAN

⇒ SET CH - B Then set the input sensitivity of channel A with the numeric keys followed by the **ENT** key, or with the knob.

6 Set the inputs coupling.

⇒ **INPUT** ⇒ CHANNEL First select either CH-A or CH-B.
CH - A/CH - B

⇒ COUPLING For the specified channel, select a coupling method (AC or DC).
AC/DC

⇒ + INPUT Select the + input socket status (active or GND).
IN/GND

⇒ - INPUT Select the - input socket status (active or GND).
IN/GND

⇒ FILTER Select the filter status (ON or OFF).
ON/OFF


In the case of a time analysis, the filter must be switched off. Indeed, if it is switched on, ringing effects are generated on the waveform, because the antialiasing filter, by limiting the signal frequency band width, eliminates signal harmonics.



3. Reducing The Noise Effects


9

Set the averaging conditions.

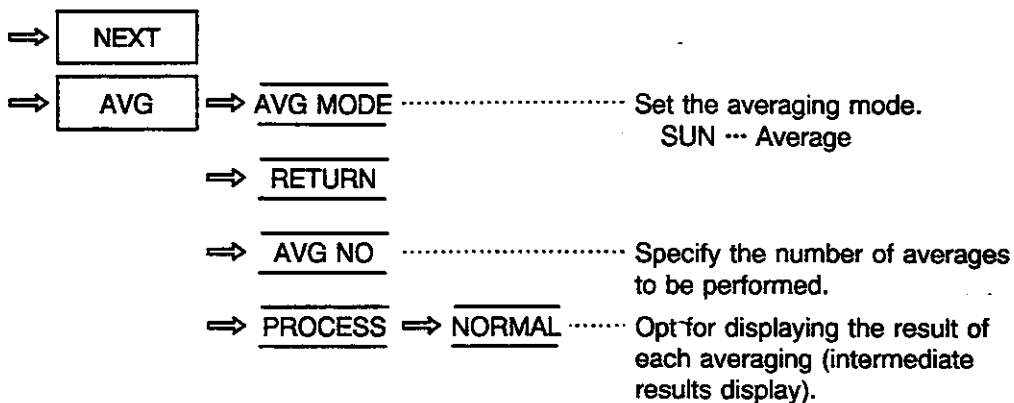


10

Start the measurement.



11

Set the display conditions.

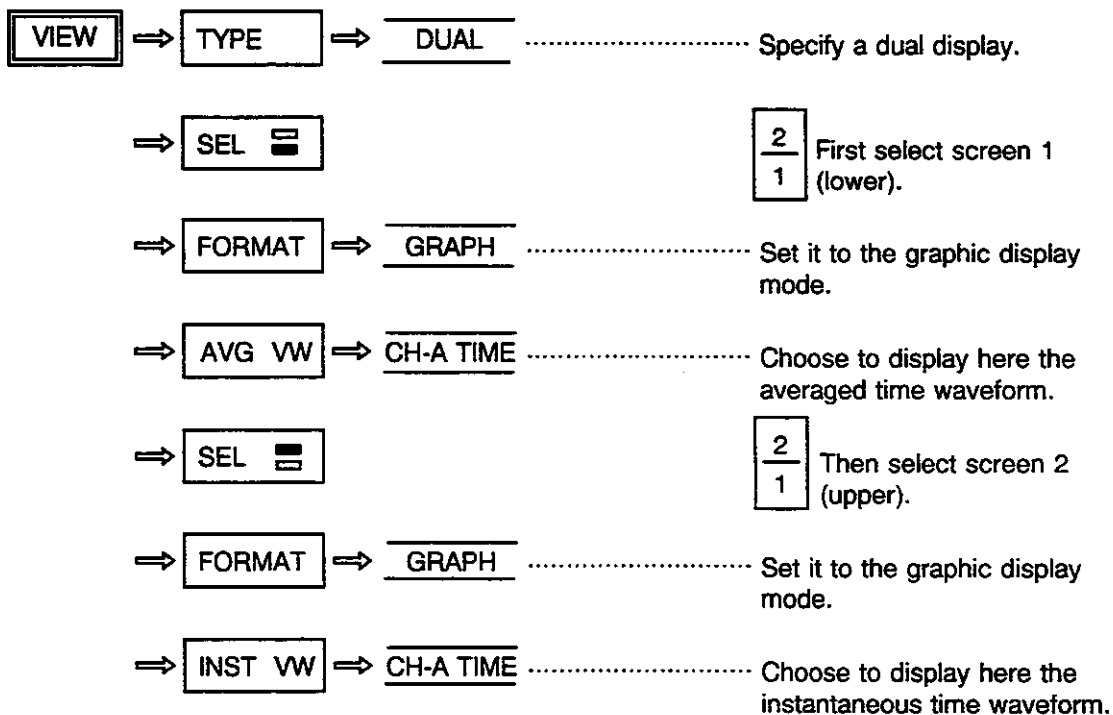

3. Reducing The Noise Effects

The averaged time waveform of channel A is displayed on screen 1 (lower) and the instantaneous time waveform of channel A is displayed on screen 2 (upper). (See Figure 4-21.)

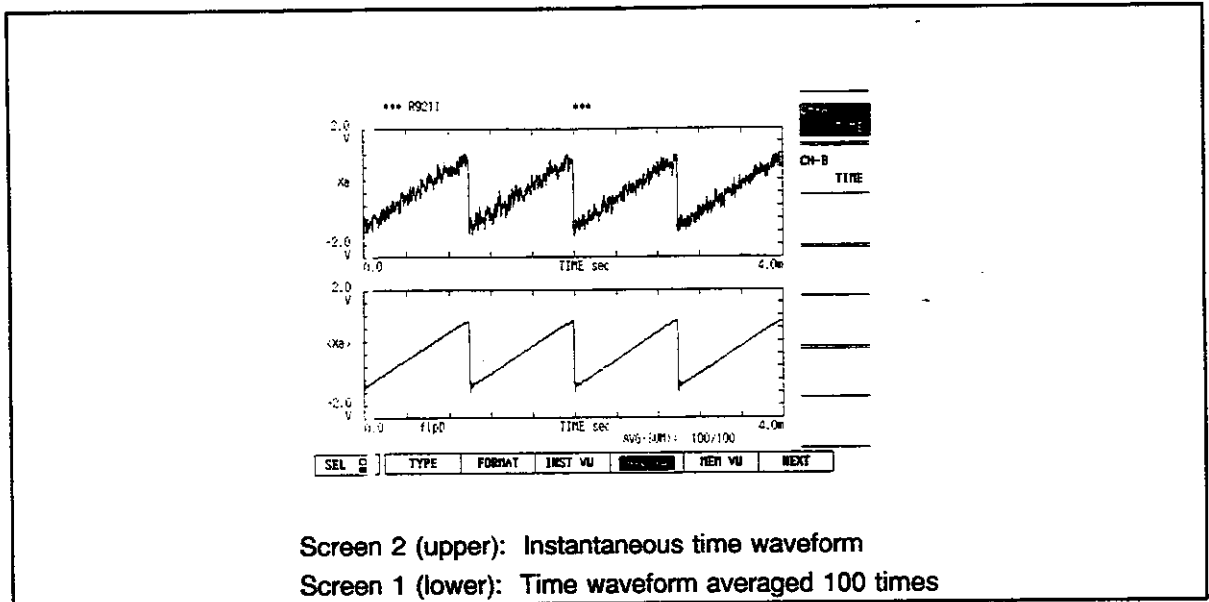


Figure 4-21 Averaging Example in the Time Domain (here, the input signal is a saw-tooth signal buried in noise)

CHAPTER 5

SERVO MODE (R9211B/C Only)

Explanation is omitted in this manual.

CHAPTER 6

FRF MODE

In this chapter, the analysis procedure in the FRF mode is explained, and all the necessary information about this mode is given. Finally, the FRF is illustrated through several examples.

CONTENTS

1. The FRF Mode	6-2
2. Basic Setup Procedure	6-3
3. Toward Better Measurement	6-7
Force and Response Windows	6-7
How to Check the Measurement Results ..	6-10
Delayed Systems Analysis (Interchannel Delay)	6-12
Averaging	6-14
Frequency Range, Number of Lines, and Zoom ..	6-16
Measuring the SNR (Signal-to-Noise Ratio) ...	6-19
4. Typical Measurement Examples	6-20
Measurement with an Impulse Hammer ...	6-20
Example of Utilization of the Equalizer	6-25

1. The FRF Mode

The FRF mode is used to measure the frequency response function of filters, structure etc. The input signal to the DUT is connected to channel A while the output signal is connected to channel B to measure the relationship between the input and output. The Coherence function will enable you to verify the reliability of the measurement. And, if you need, you can compute the impulse response function by applying an Inverse Fourier Transform to the Frequency Response Function.

NOTE

Since the input signal is not a swept signal, an external signal generator can be used for the input.

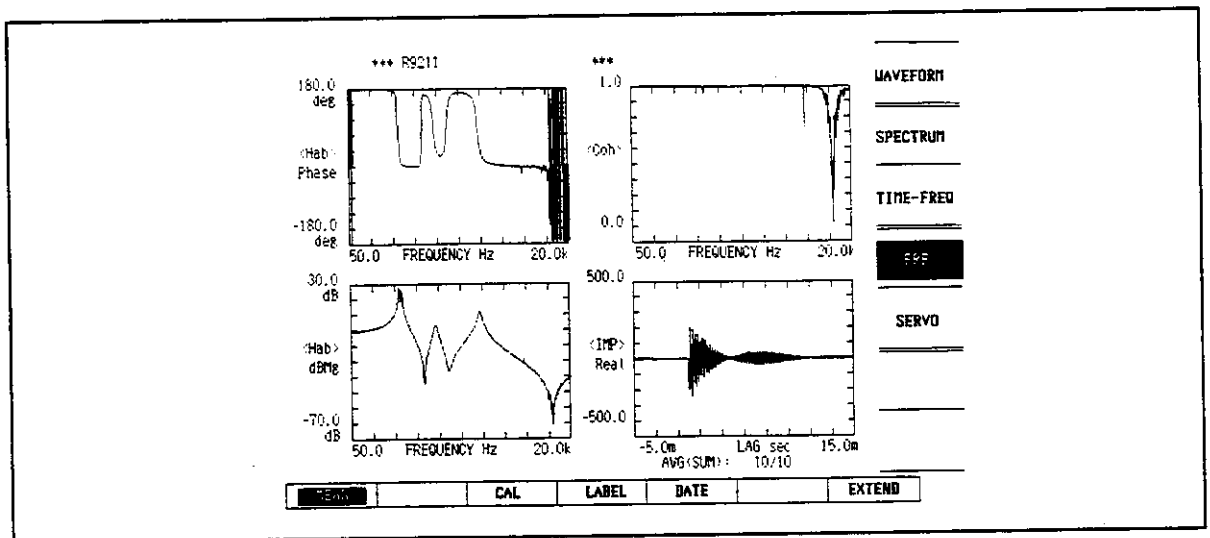


Figure 6-1 Typical Example of Display in the FRF Mode

2. Basic Setup Procedure

When measuring the frequency response function of a device (filter ...), you need a signal generator that can generate a signal at every frequency of the frequency span over which you want to know the FRF. Since white noise or maximum length sequence noise are made of frequency components distributed over a wide frequency range, either of these signals can be used as an input signal.

Following is a description of the measurement procedure of a filter, using a white noise generator.

1 Connect the DUT (filter) and signal generator to the R9211.


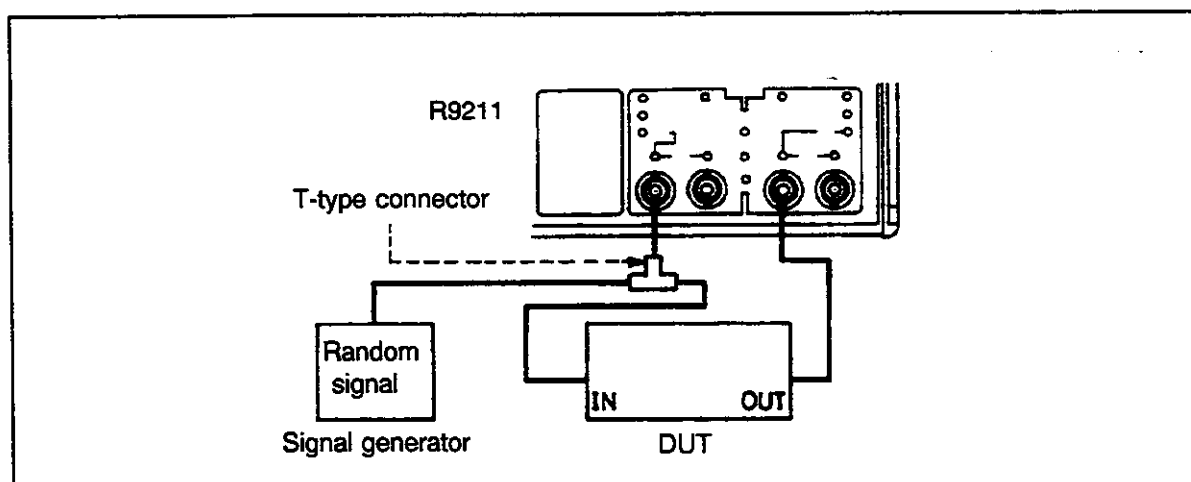


Figure 6-2 Connection Method

2 Select the FRF mode.




3 Set the input sensitivity.

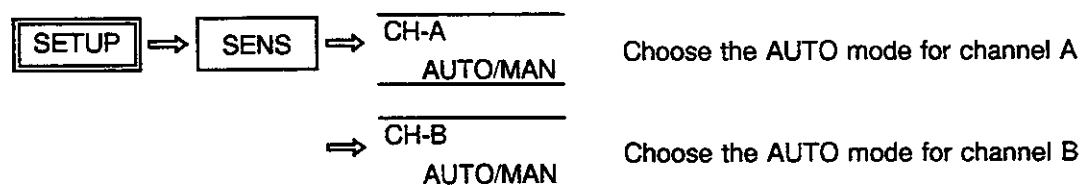

2. Basic Setup Procedure

4

Set the frequency range.

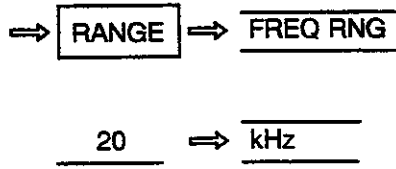


Set the upper limit of the frequency range of the measurement.
(If you know the FRF of the DUT, choose 100kHz)

This is how you would enter 20kHz.

5

Set the input coupling conditions.

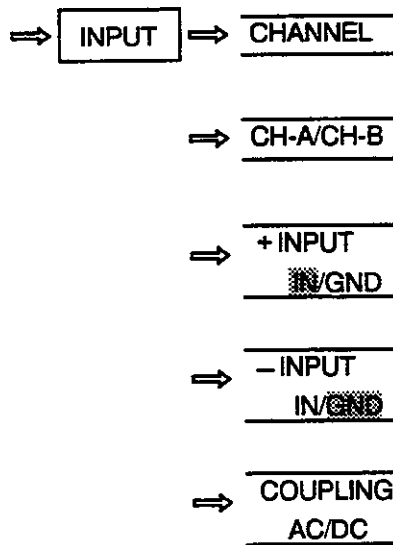

Select the channel for which the input conditions are to be set up.

Set the + INPUT to IN.


Set the - INPUT to GND.

Set the input coupling method (AC or DC).

Set up the INPUT menu for both channels.

6

Select the Hanning window.

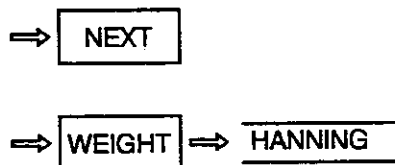

Call the second page of the Y soft menu.



2. Basic Setup Procedure

7

Set the averaging conditions.

⇒ **AVG** ⇒ AVG NO

Set the number of averages.

32 ⇒ **ENT**

This is how you would average 32 times.

MODE ⇒ **EXTEND** ⇒ TRACEonST
ON/OFF

To display the FRF and the coherence function as the averaging is being processed, in the double screen configuration, set TRACEonST ON.

If you set it to OFF, the current screen is displayed with no transformation from the beginning of the averaging process until its end : you don't see the evolution averaging induces on the FRF and coherence function.

VIEW ⇒ **TYPE** ⇒ DUAL

8

Switch the **START** key ON.

The averaging process starts.

When the **START** key LED goes off, indicating that the averaging process is completed, check the measurement results.

9

Visualize the measurement results.

VIEW ⇒ **AVG VW** ⇒ FRF

⇒ **NEXT**

⇒ **FRF CORD** ⇒ BODE

Display a Bode diagram.

⇒ **Y SCALE** ⇒ Y AUTO
SCALE

Adjust the Y scale of the lower screen.

⇒ **SEL** ⇒ Y AUTO
SCALE

Select the upper screen to adjust its Y scale.



2. Basic Setup Procedure

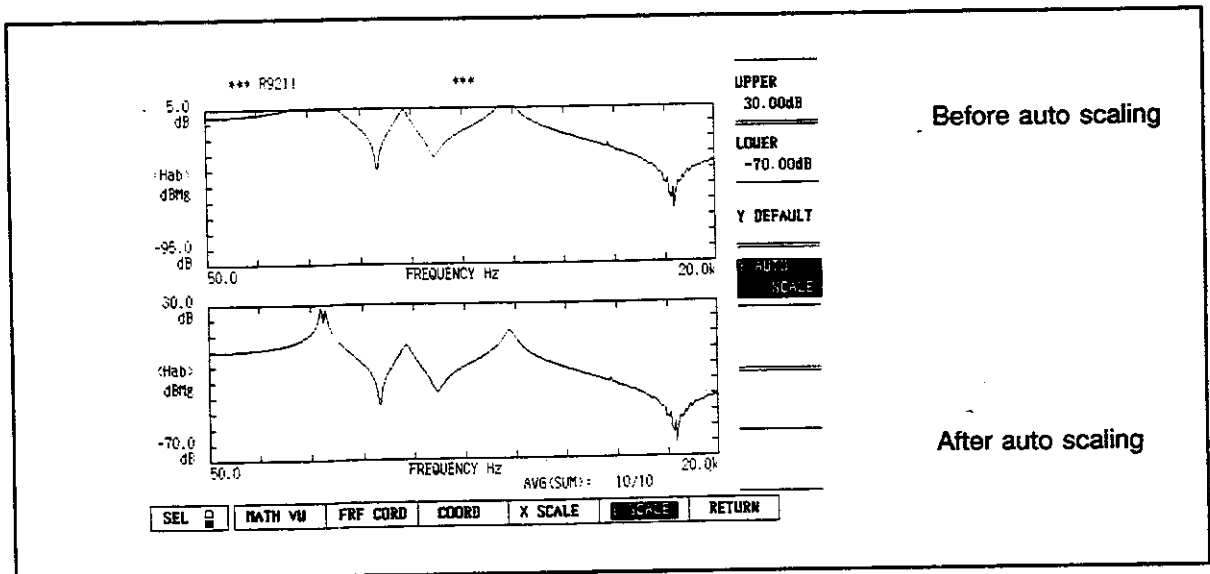


Figure 6-3 Bode Diagram

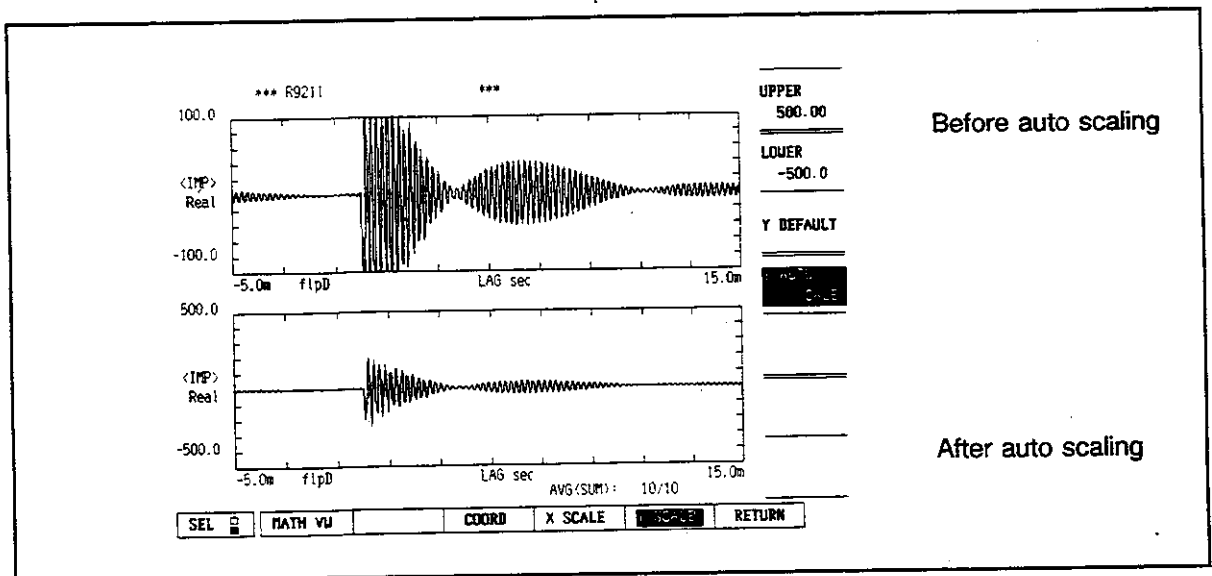
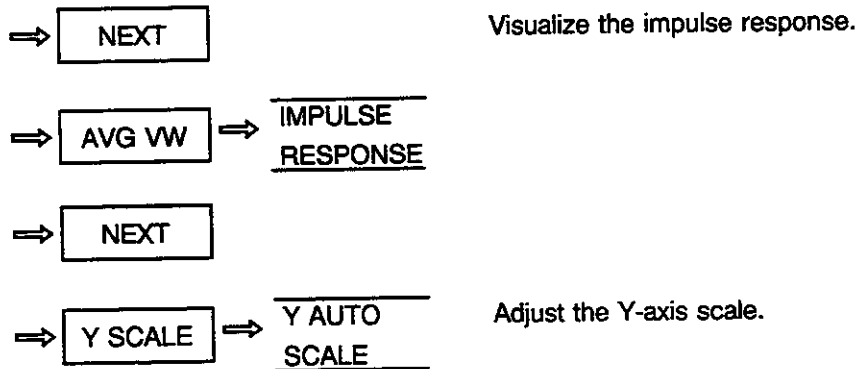


Figure 6-4 Impulse Response Function's Graph

3. Toward Better Measurement


Force and Response Windows

Since the impulse wave is generated during a short period of time, the signal power is low and it is easily affected by noise elements. To prevent this, non-signal portions are replaced with zeros to cancel the influence of the noise components. This is performed by multiplying the signal by a so-called force window.

If the impulse response is not damped within the frame time, a clipping error is caused by the time window. In this case, the response waveform is multiplied by the exponential function to damp the impulse response within the frame time, thus recovering the clipping error.

If it is so specified in the setup, channel A's waveform is automatically multiplied by a force window, while channel B's waveform is multiplied by a response window, and then the results are displayed.

● Setting the Force Window

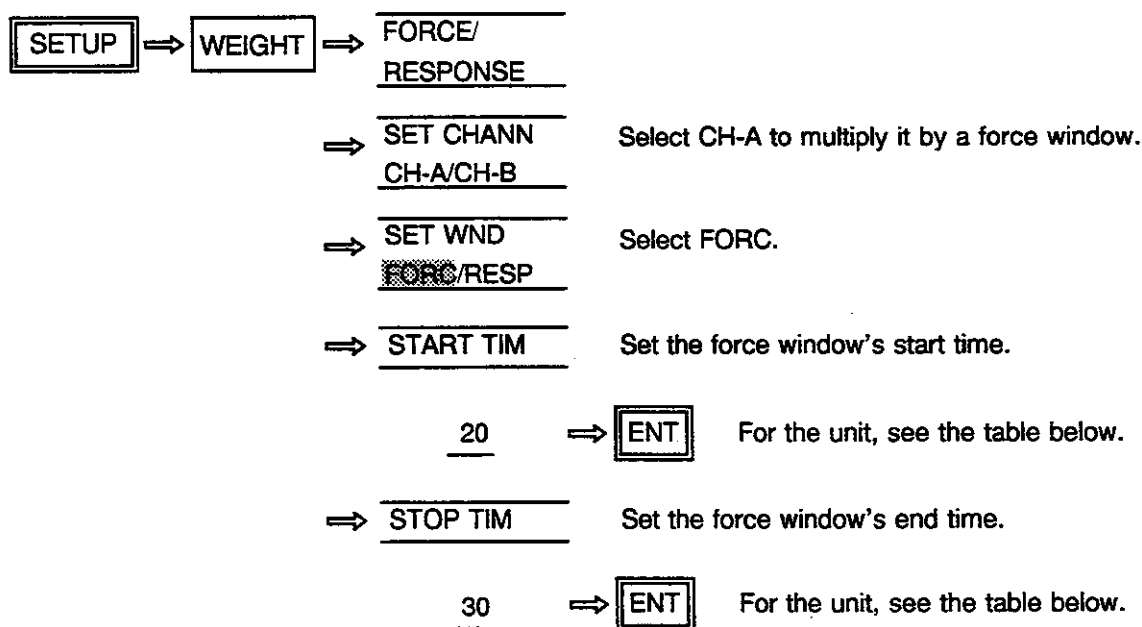

● Setting the Force/Response Windows' Start and End Times

A value greater than the end time value cannot be specified as the start time value. When the start time value, which you want to set, is bigger than the end time value actually set (from the preceding setup), you must first set the new end time value, and only then can you set the new start time value. In the same way, a value smaller than the start time cannot be specified as the end time. When the new end time value is smaller than the previously set start time value, the new start time value must be set before the end time value is changed.

The unit of time is determined depending on the frequency range as follows:

3. Toward Better Measurement

Frequency range	Unit
100kHz to 500Hz	μ sec
200Hz to 500mHz	msec
200mHz to 10mHz	sec

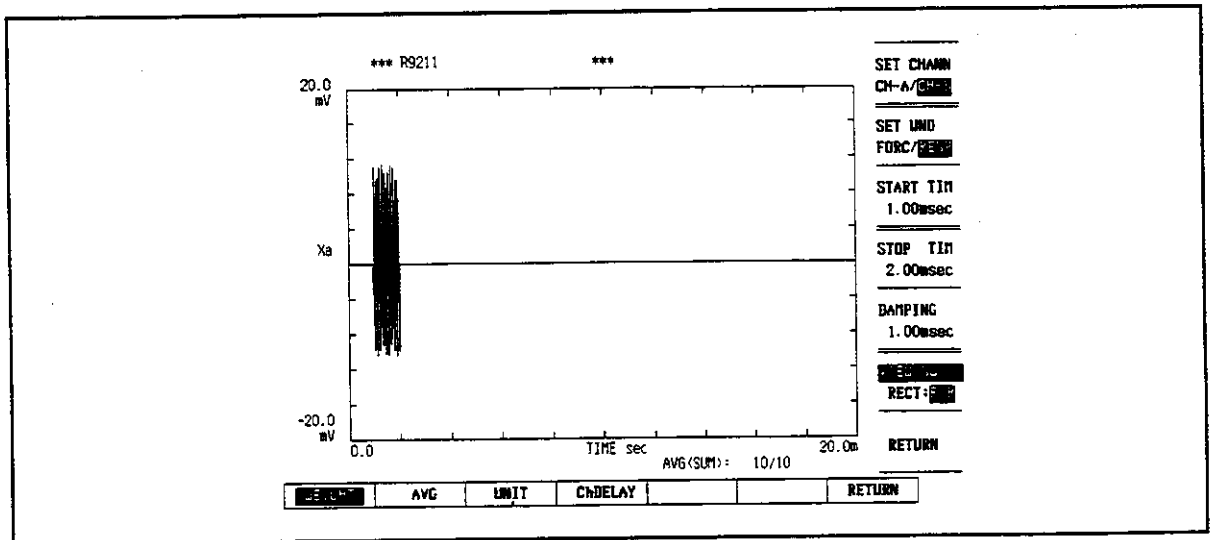


Figure 6-5 Effect of the Application of the Force Window on a Sine-wave

- ⇒ SET CHANN
CH-A/CH-B Select CH-B to multiply it by a response window.
- ⇒ SET WND
FORC/RESP Select RESP.
- ⇒ START TIM Set the response window's start time.
- ⇒ STOP TIM The end time value of the response window has no meaning ; however, it must be greater than the start time value.
- ⇒ DAMPING Set the response window damping time.

3. Toward Better Measurement

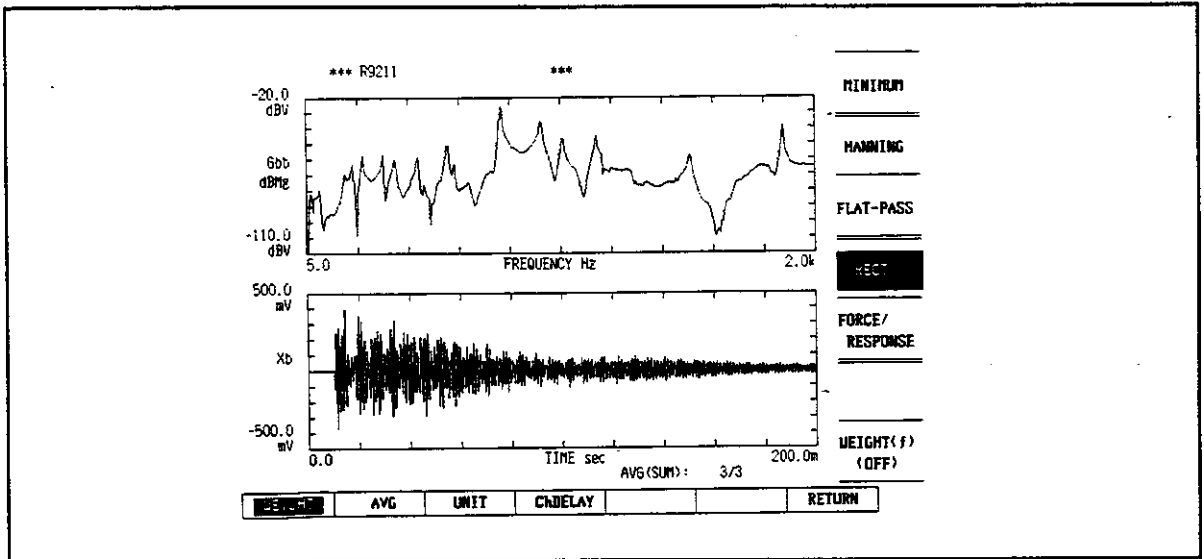


Figure 6-6 A Response Waveform which is not Damped within the Frame Time

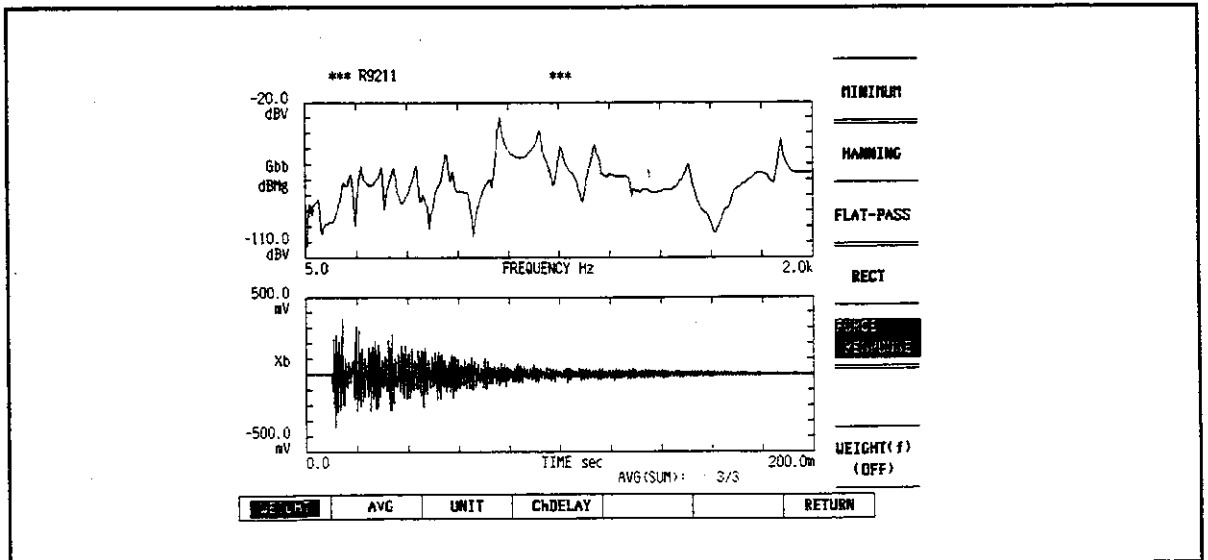


Figure 6-7 A Response Waveform Artificially Damped within the Frame Time

3. Toward Better Measurement

■ How to Check the Measurement Results


When you measure a FRF, it is important that you check the coherence function. Indeed, if the DUT seems to function non-linearly, or if some extraneous noise perturbs the measurement, or if there is another source of signal, measurement reliability cannot be checked using only the FRF. For this reason, the cause-effect relationship between the input signal and the output signal must be checked with the coherence function.

The coherence function takes its values between 0 and 1. The closer the coherence function is to 1, the stronger the cause-effect relationship between the input and the output, therefore meaning that the FRF results are reliable.

Conversely, the closer the coherence function comes to 0, the weaker the cause-effect relationship between input and output : the FRF results are not reliable and do not characterize the system's behavior.

Thus, whether the measurement method and point are suitable can be verified by analyzing the coherence function.

● How to Visualize the Coherence Function

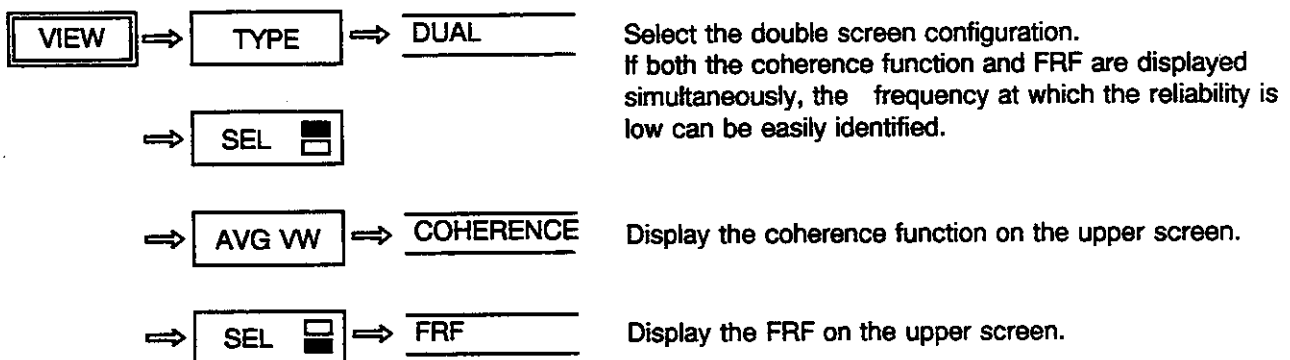

Figures 6-8 and 6-9 show the results obtained when the same filter is analyzed with a multi-sine waveform and a pseudo random waveform.

3. Toward Better Measurement

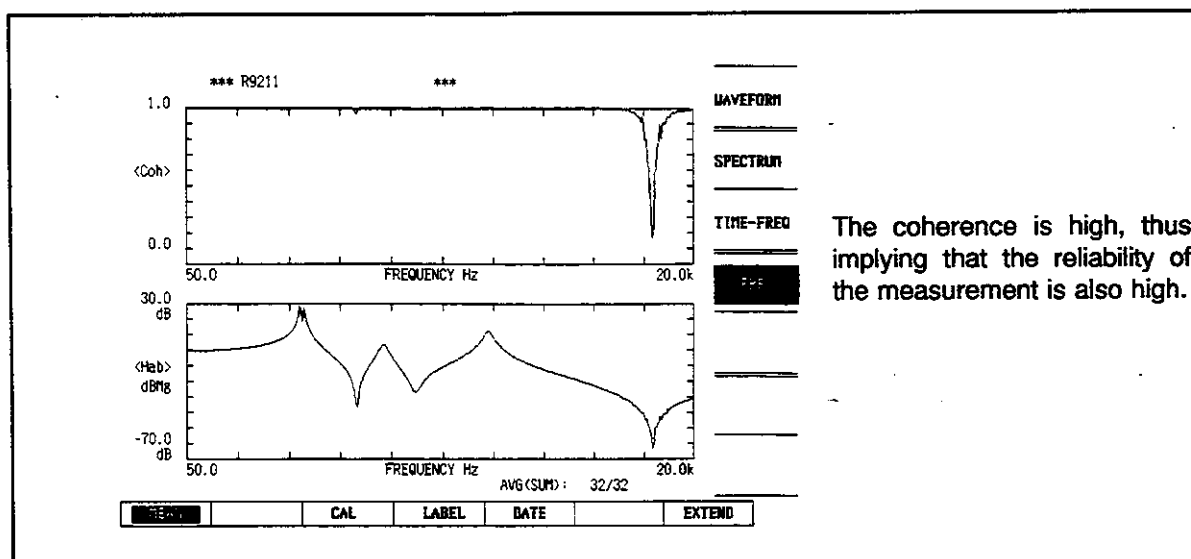


Figure 6-8 Frequency Response Function Obtained with a Multi-sine Wave


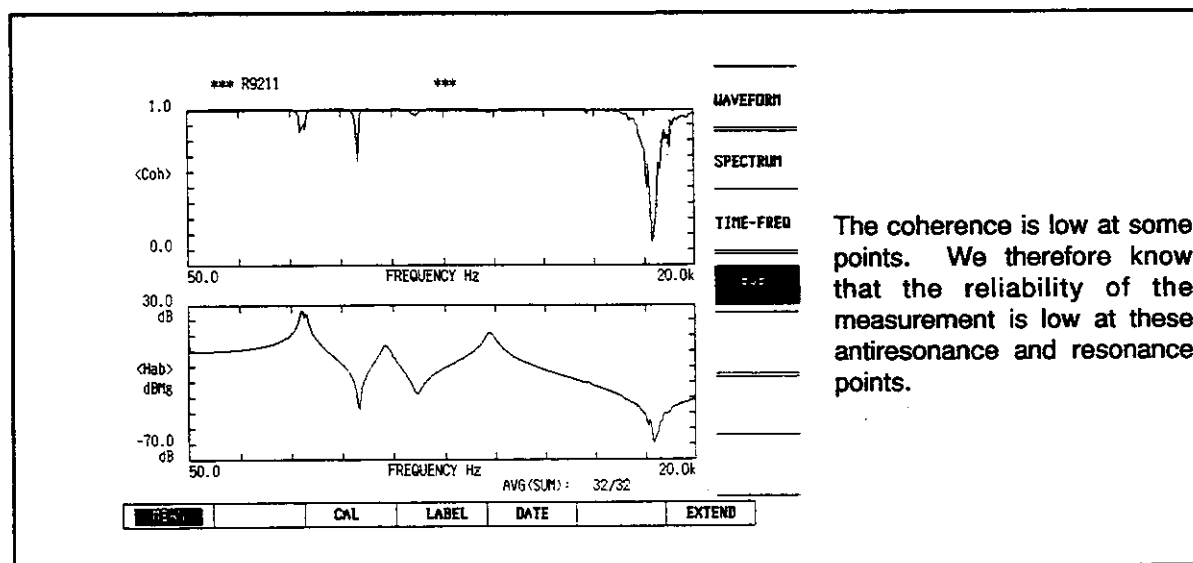


Figure 6-9 Frequency Response Function Obtained with a Pseudo Random Wave

3. Toward Better Measurement

■ Delayed Systems Analysis (Interchannel Delay)

If there is a delay between the input and the output, the output signal is affected by sources of signal other than the input signal, which reduces the coherence and increases the frequency response function error. By using the interchannel delay function, you can compensate the delay between the input and the output signals inside the R9211. Thus, you can measure the frequency response function accurately.

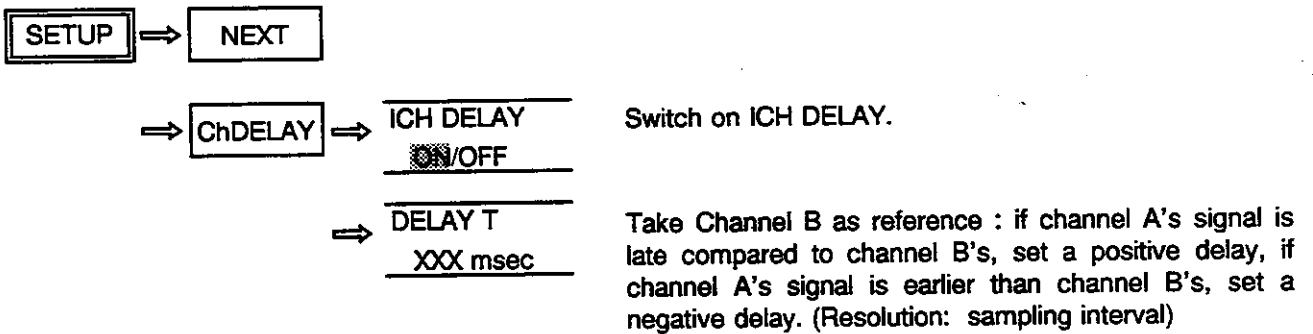

Say you want to measure a system whose input and output are similar to those represented in Figure 6-10. Since channel B's signal is 26ms late compared to channel A's, if you undertake the measure as you would for a normal system, the reliability of the FRF would be low, which is indicated by a small coherence function.


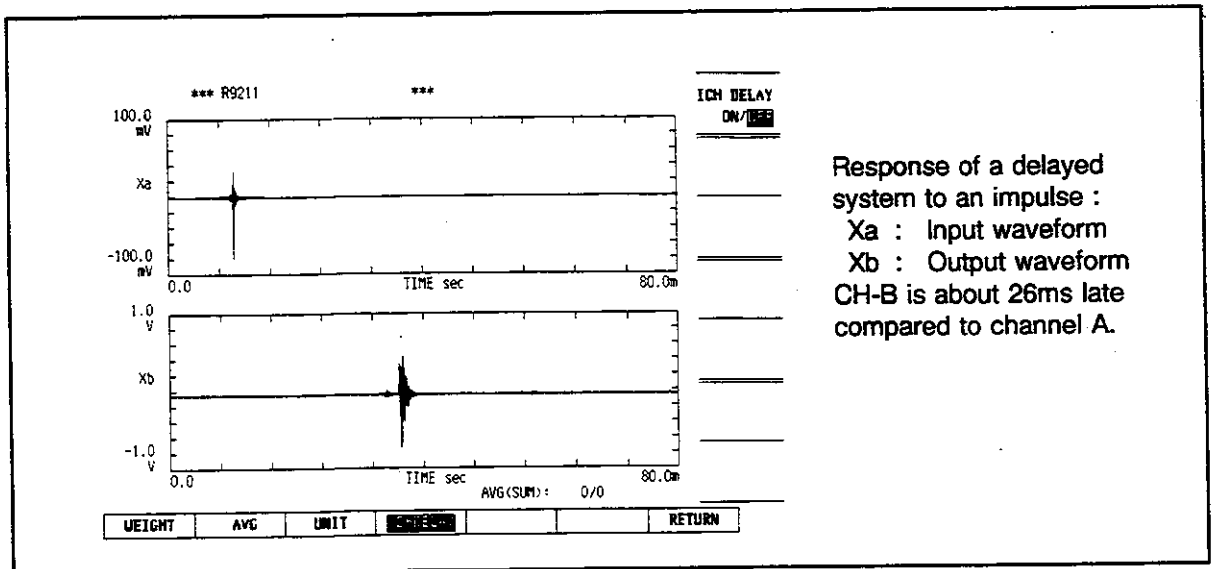



Figure 6-10 Input and Output Signals of a Delayed System

3. Toward Better Measurement

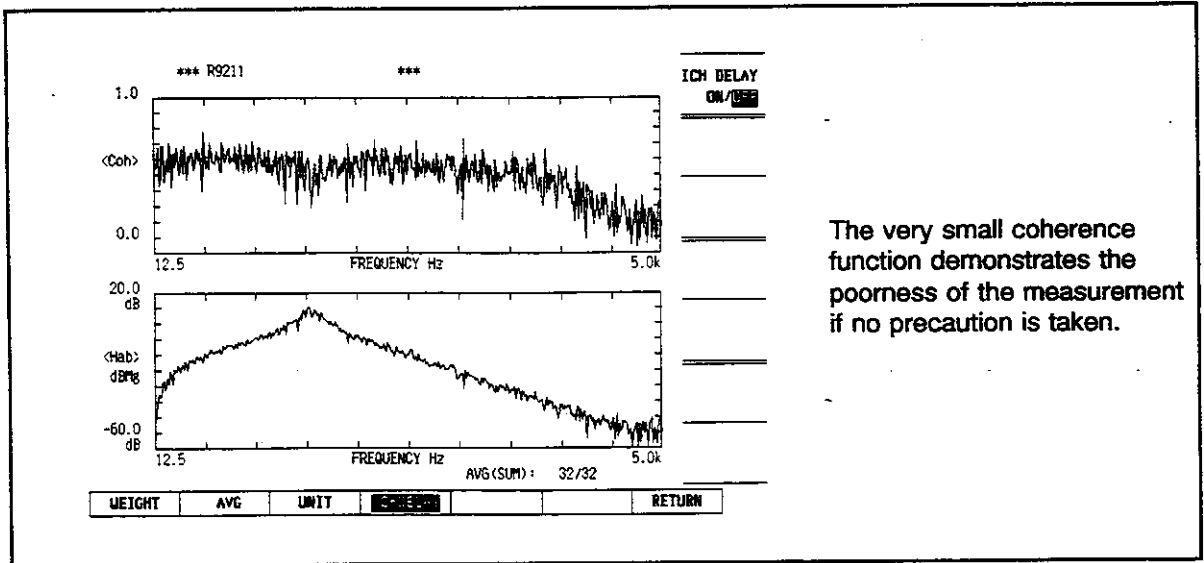

The very small coherence function demonstrates the poorness of the measurement if no precaution is taken.

Figure 6-11 FRF Measurement of a Delayed System

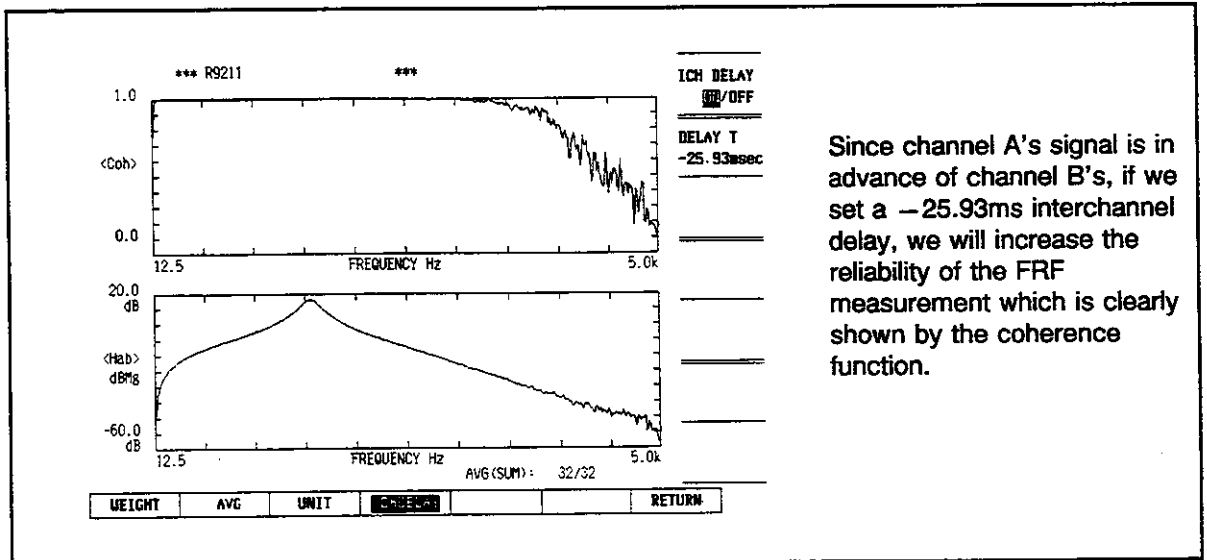



Since channel A's signal is in advance of channel B's, if we set a -25.93ms interchannel delay, we will increase the reliability of the FRF measurement which is clearly shown by the coherence function.

Figure 6-12 FRF Measurement of a Delayed System after Compensating the Delay between Input and Output Signals

3. Toward Better Measurement

■ Averaging


To measure a FRF, you must average the signal. By averaging, both the FRF measurement's reliability and state can be guaranteed. When some extraneous noise perturbs the measurement, averaging improves the Signal-to-Noise Ratio.

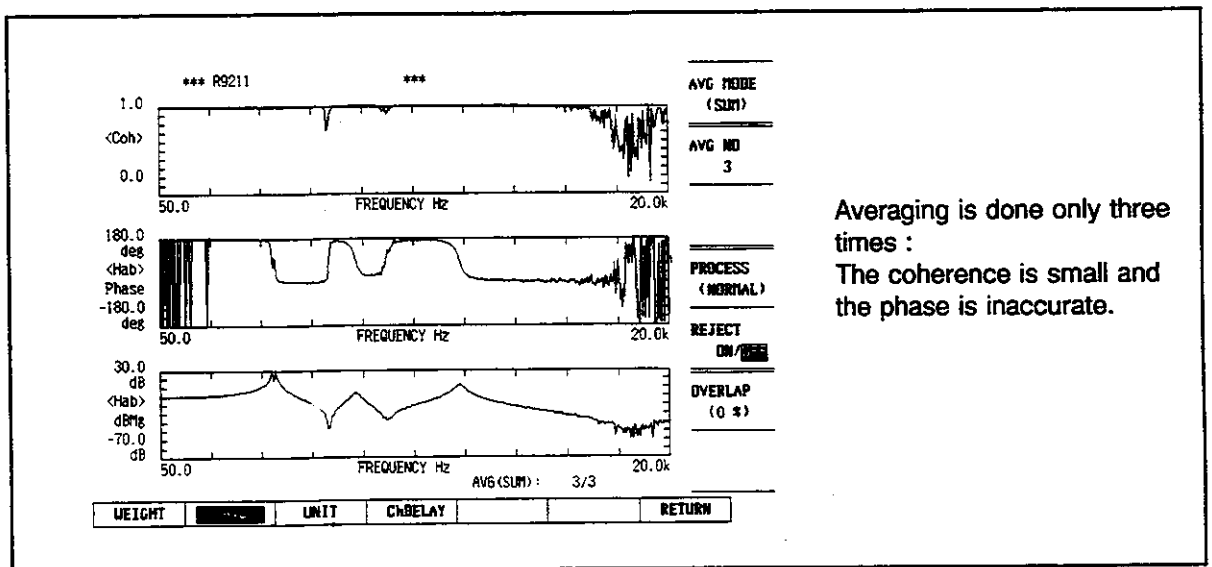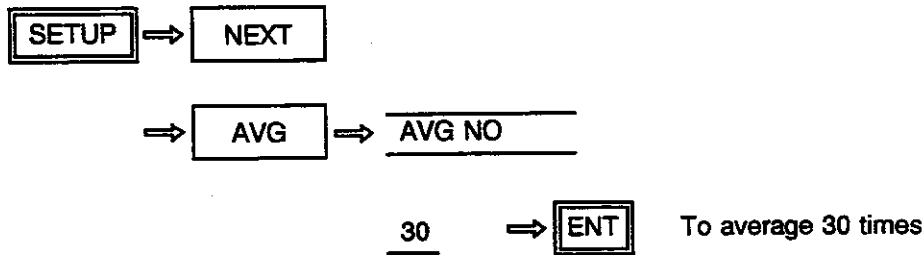

Averaging is done only three times :
The coherence is small and the phase is inaccurate.

Figure 6-13 Average Example 1

3. Toward Better Measurement

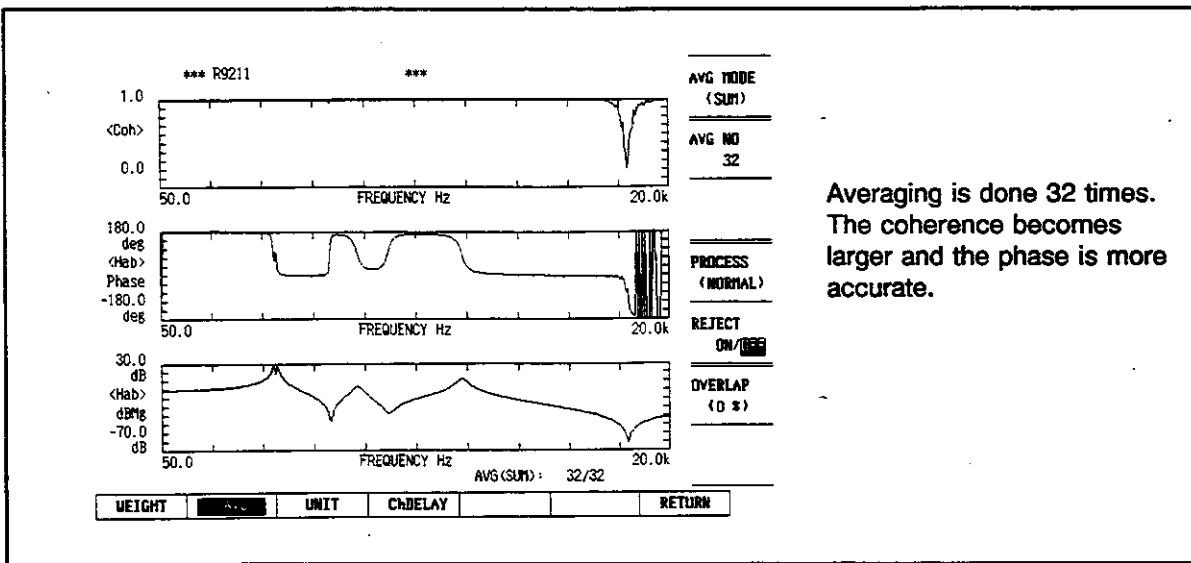

Averaging is done 32 times. The coherence becomes larger and the phase is more accurate.


Figure 6-14 Average Example 2

3. Toward Better Measurement

■ Frequency Range, Number of Lines, and Zoom

To obtain a highly reliable measurement result, it is essential to select the measurement frequency range and resolution according to the characteristics of the DUT.

● How to Set the Frequency Range



To set a frequency range of [0 ; 20kHz], type this sequence.



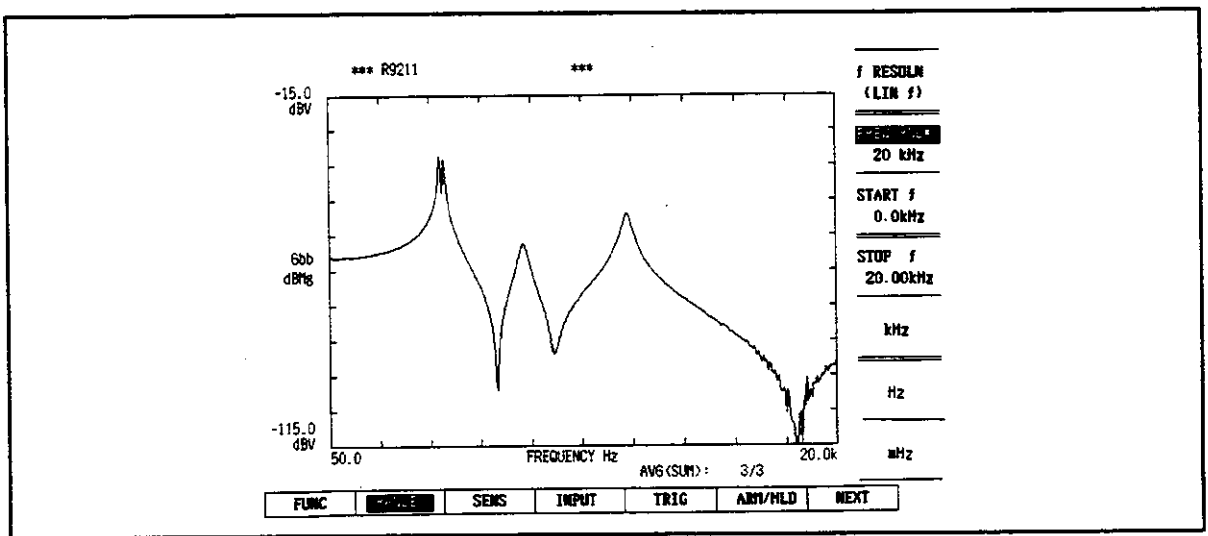


Figure 6-15 Setting the Frequency Range

● How to Set the Frequency Resolution

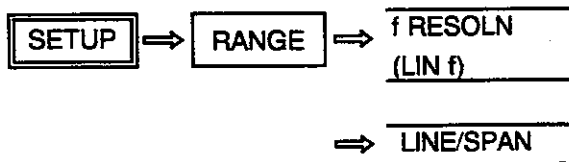

To set a frequency resolution of 800 lines.

3. Toward Better Measurement

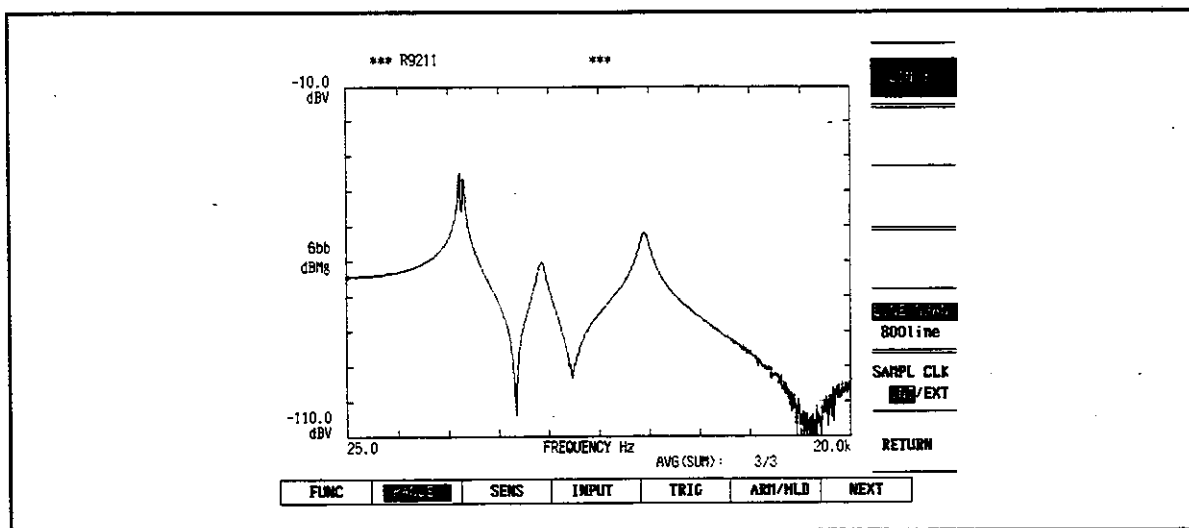


Figure 6-16 Setting the Frequency Resolution


● Zoom

When you want to analyze, in detail, only a specific frequency domain, you can use the frequency zoom. A complex characteristics filter possesses several poles and zero. First, obtain the FRF over the entire frequency range, then analyze each pole and zero (resonance points), in detail, with the frequency zoom.

In the menu, specify the start and end frequencies of the domain to be zoomed in.

NOTE

The zoom function is provided only on the R9211A.

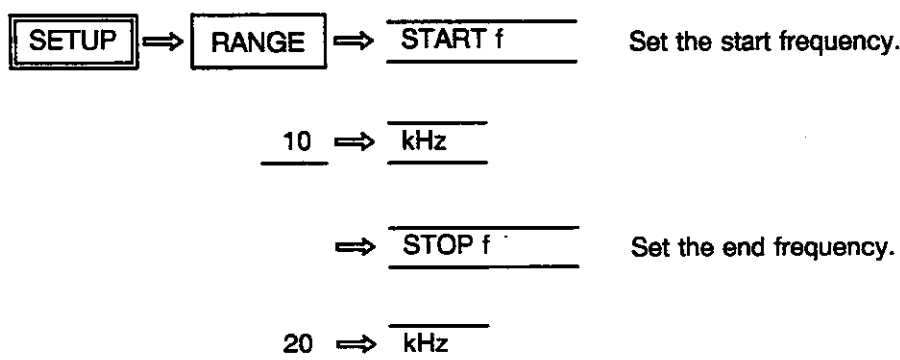

If you press the START f or STOP f, a * mark appears to show that the specified domain is being zoomed in.

3. Toward Better Measurement

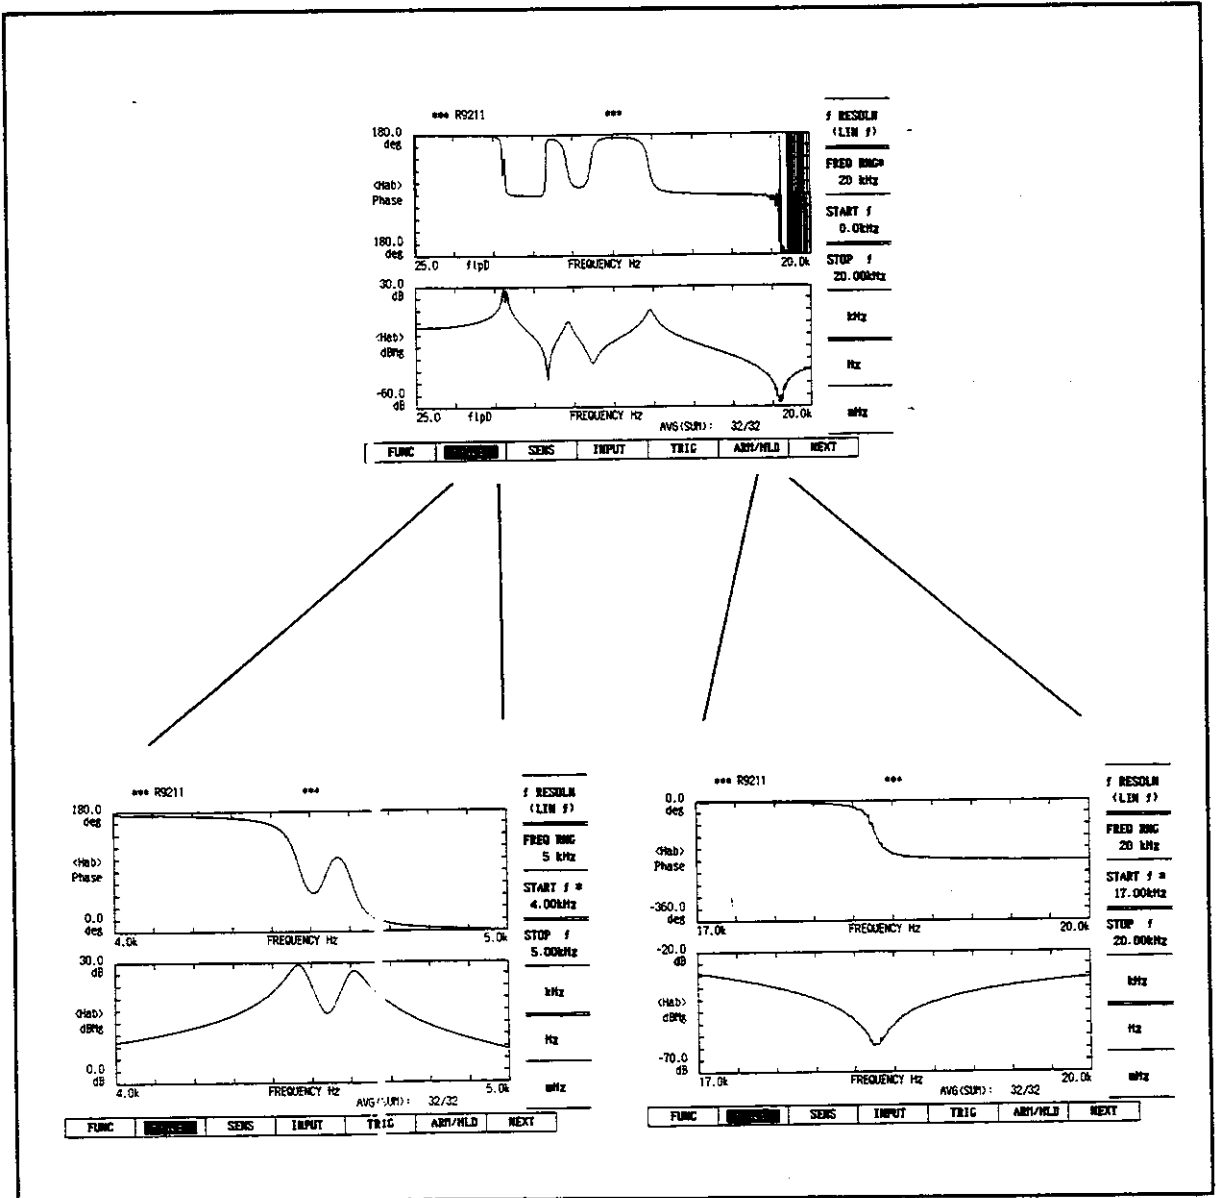



Figure 6-17 Zoom

■ Measuring the SNR (Signal-to-Noise Ratio)

The SNR (signal-to-noise ratio) is defined as the ratio of the power spectrum of the signal to that of the noise. It can be calculated with the coherence function.

$$\langle \text{SNR} \rangle = \frac{\langle G_{ss}(f) \rangle}{\langle G_{nn}(f) \rangle} = \frac{\langle \text{COP} \rangle}{\langle \text{In COP} \rangle} = \frac{\langle \text{COH} \rangle \langle G_{bb} \rangle}{(1 - \langle \text{COH} \rangle) \langle G_{bb} \rangle}$$

- < Gss(f) > : Power spectrum of the signal
- < Gnn(f) > : Power spectrum of the noise
- < COP > : Coherent output power spectrum (generated only when an input signal is applied to the DUT)
- < In COP > : Power spectrum of the noise
- < COH > : Coherence function
- < Gbb > : Power spectrum of the DUT's output

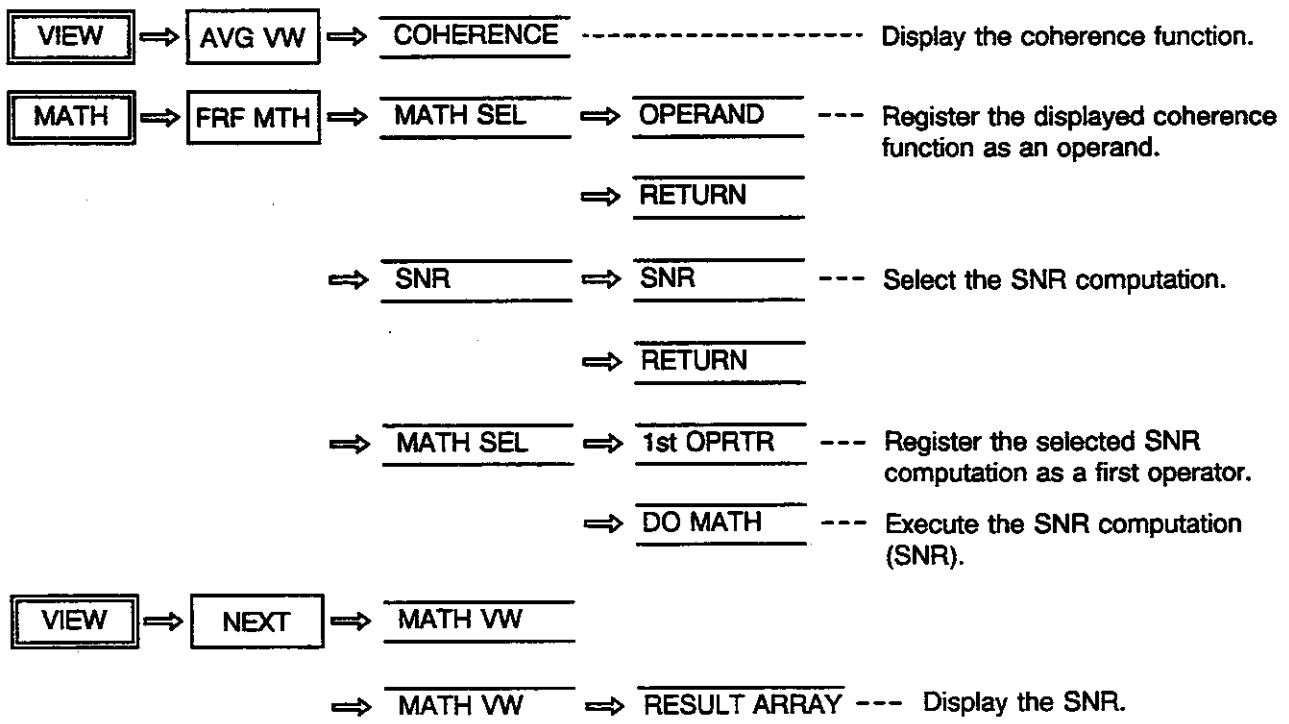

4. Typical Measurement Examples

■ Measurement with an Impulse Hammer

The impulse hammer is used to rapidly analyze the frequency response function of a structure.

The fact that a pulse possesses frequency components over a wide range, enables a complete analysis in a very short time. To analyze the mechanical vibration modes of a structure, provide the head of the hammer with a pickup and measure the frequency response function between this pickup and a second pickup located on the DUT. This method requires only simple measurement equipment and it can be used readily for analyzing vibrations of a large structure such as an engine block.

A power supply unit for accelerometers is built into the R9211. If you use an accelerometer provided with a built-in amplifier, you can readily measure the vibration modes of the DUT without the necessity of using an extraneous power supply unit or an amplifier.

REFERENCE

For more detailed information about the built-in power supply unit for accelerometers, refer to what concerns the ICP (Integrated Circuit Piezoelectric) : p4-6, 4-7, 9-18.

1

Be sure to fix the accelerometer on the structure so that it will not move.

The following measurement procedure's description assumes that the accelerometer, which is used, is provided with a built-in amplifier.

2

Connect the accelerometer to the R9211. (See Figure 6-18.)

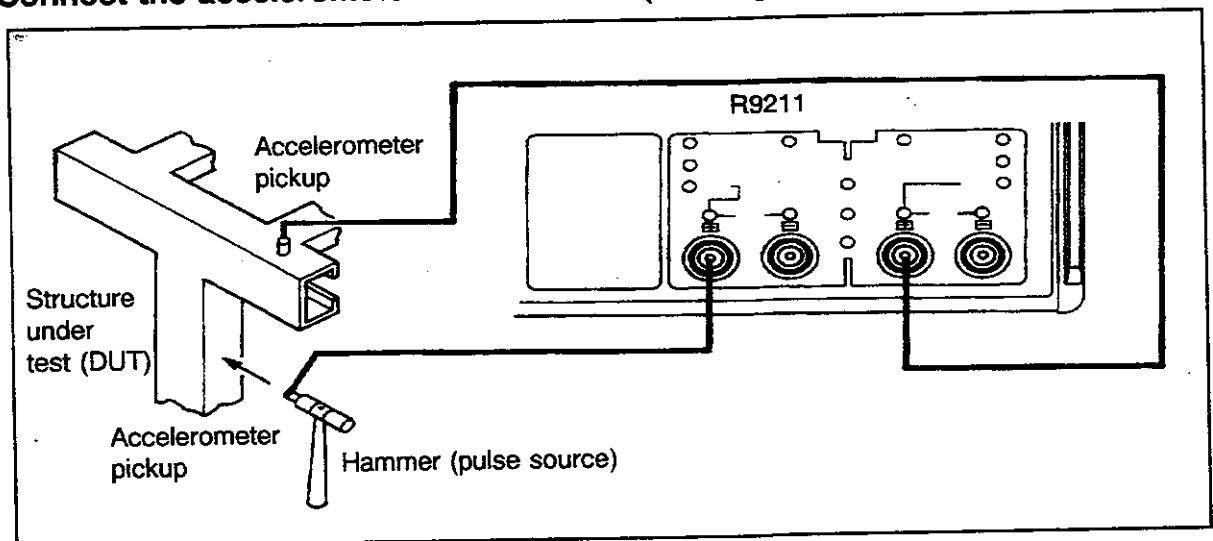


Figure 6-18 Connection of the Impulse Hammer


NOTE

Connect the pickups to the + sockets of channels A and B.




4. Typical Measurement Examples


3 Select the FRF mode.



4 Select the rectangular window (RECT).

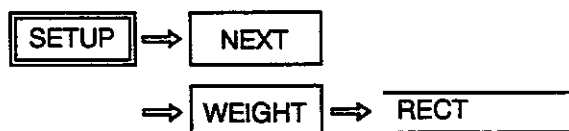


5 Set the input coupling conditions.

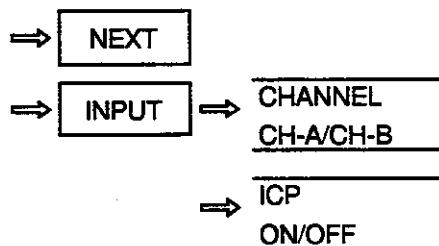

Select the channel you are now going to set up.

When ICP is switched on, the input coupling automatically becomes AC.

6 Set the input sensitivity.

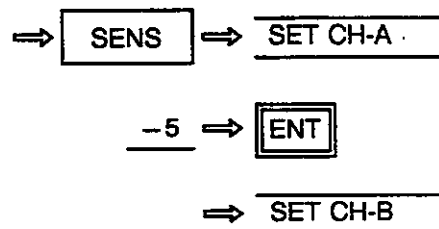


Set the input sensitivity of channel A.

To enter -5 dBV.

Set channel B in the same way.

7 Set the frequency range.

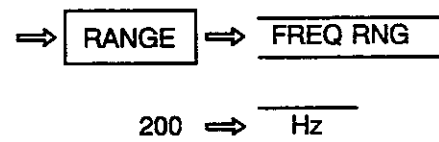

Set the maximum frequency of the range.

To enter 200Hz.



4. Typical Measurement Examples

8

Set the trigger conditions.

⇒ **TRIG** ⇒ SOURCE Select channel A as the trigger source.

⇒ CH-A

⇒ RETURN

⇒ SLOPE

⇒ +SLOPE Trigger along the positive slope.

⇒ RETURN

⇒ LEVEL The displayed unit is then adopted.

100 ⇒ **ENT** Enter 100 to set 0.1V when the unit is mV.

⇒ HYSTERESI Set the hysteresis level.

5 ⇒ **ENT** Enter 5 to set 5mV when the unit is mV.

⇒ DELAY Set the triggering position.

1 ⇒ msec Enter 1 to set 1ms.


⇒ RETURN




4. Typical Measurement Examples

9


Set the averaging conditions.

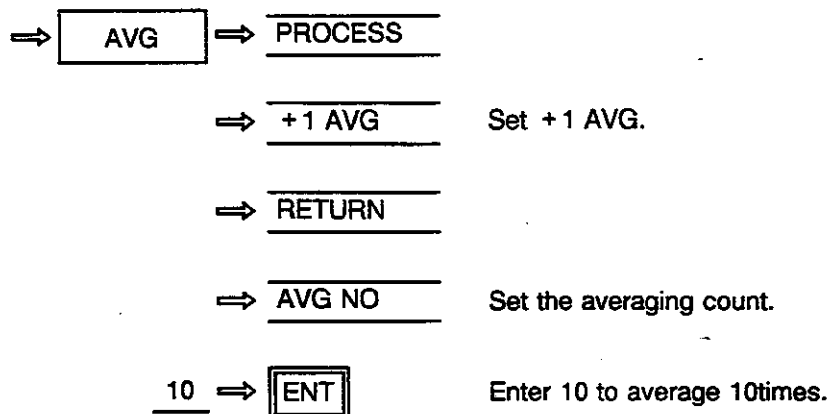

With the +1 AVG mode, data are acquired in the arm or auto arm mode and are checked while averaging is being performed.

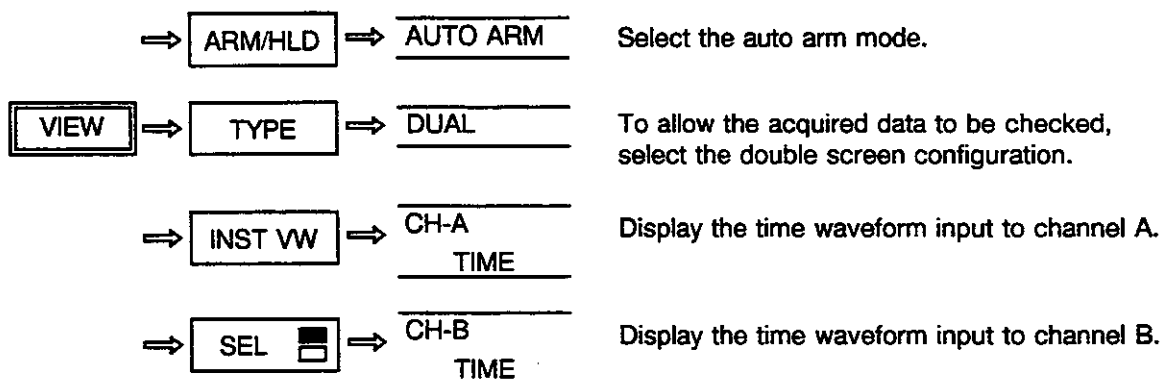

Generate vibrations with the impulse hammer to adjust the trigger level so that the HOLD lamp between the connectors of channels A and B lights. If the OVER lamp of each channel lights, cancel the auto arm mode (FREE RUN) and adjust the input sensitivity.



4. Typical Measurement Examples

10 Switch the **START** key ON.

11 Generate vibrations with the impulse hammer.

Observe the data acquired at both channels. If what you observe is correct, press the **STOP/C** key to start averaging.

Again, generate vibrations with the hammer and press the **STOP/C** key if the data are correct, until the **START** key's lamp dies out, thus indicating the completion of averaging.

12 Visually check the measurement results.

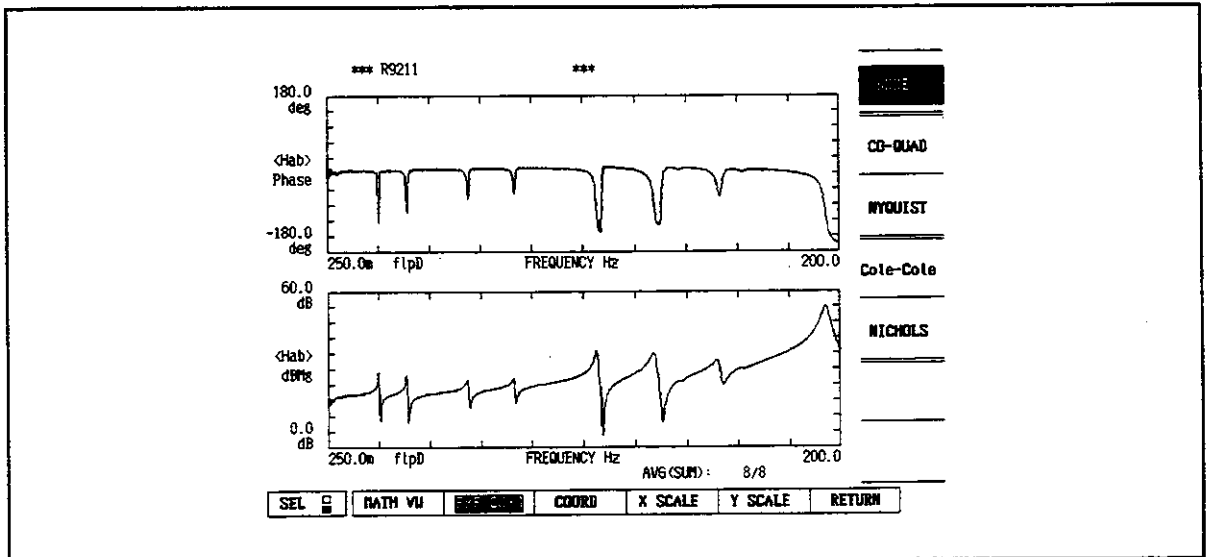
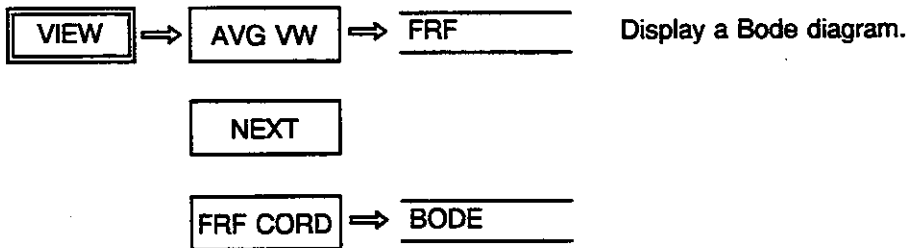



Figure 6-19 Bode Diagram Obtained for a Measurement Using the Impulse Hammer Method

Example of Utilization of the Equalizer

In some cases, the use of sensors such as pickups, to measure the frequency response function of a system, induces perturbations in the system's behavior. To compensate for the error due to this perturbation, and obtain the actual frequency response function, one can make use of the equalizer. In fact, if a system is constituted of 2 blocks serially connected, the equalizer permits you to obtain the characteristics of the first block only.


- Hab : FRF of the serial system : Block1 + Block2
- Hab1 : FRF of Block1
- Hab2 : FRF of Block2

$$Hab1 = \frac{Hab}{Hab2}$$

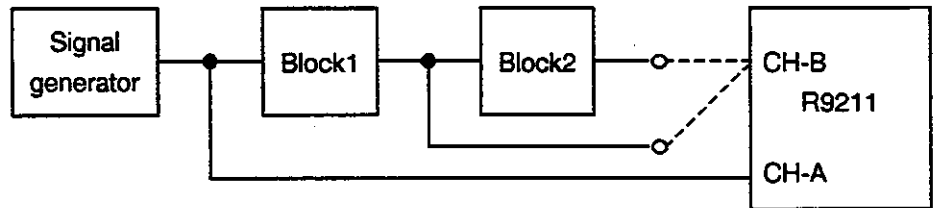


1 Record the characteristics of Block2 in the memory.

Measure the FRF of Block2 and display it on the screen.

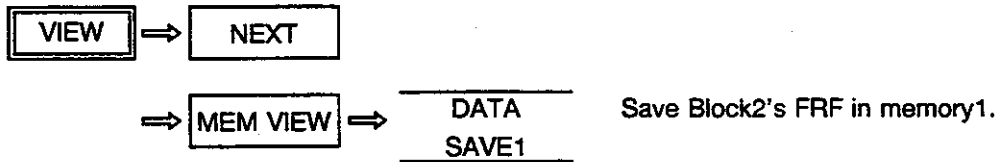

2 Measure the characteristics of the global system.



4. Typical Measurement Examples

3

Use the Equalizer.




Register the displayed FRF as operand of the equalizing operation. (This operand is the numerator (Hab) of the above mentioned quotient.)



Display the previously recorded FRF.




Switch on EQUALIZE.



Now the displayed FRF is registered as the denominator of the quotient (Hab2).



Equalize.



Display the equalized FRF.



4. Typical Measurement Examples

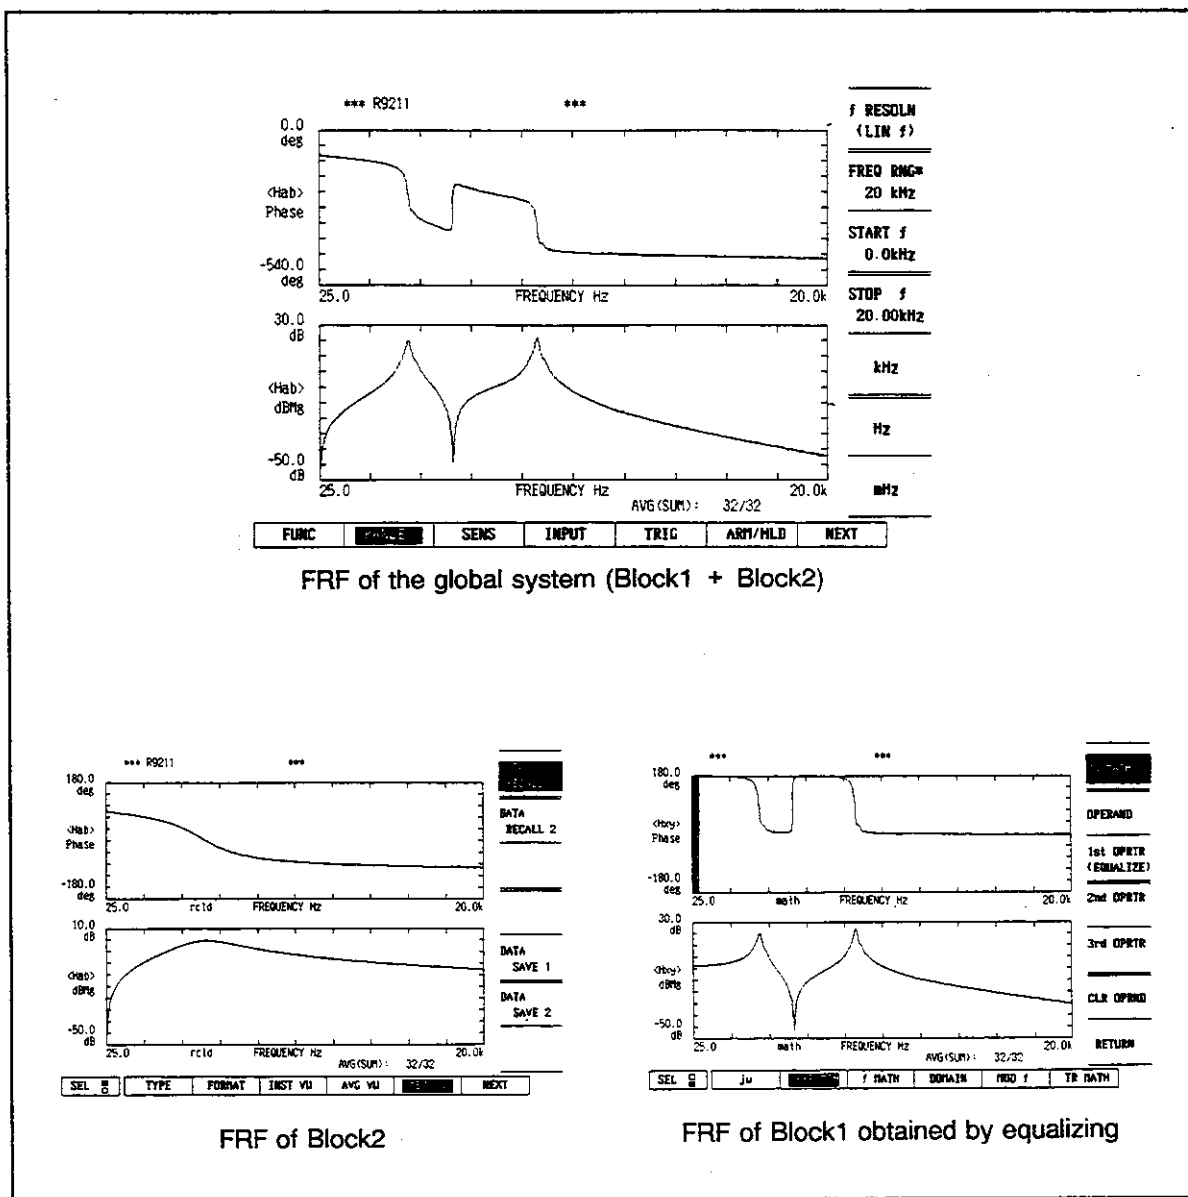


Figure 6-20 Example FRF Equalization

CHAPTER 7

SPECTRUM T-F MODE

This chapter describes the analysis procedure in the spectrum and T-F modes, provides the necessary knowledge about the conduction of a measurement in these modes, and illustrates the above mentioned items through several examples.

CONTENTS

1. Spectrum And T-F Modes	7-2
The Spectrum Mode	7-2
The T-F Mode (Extended Spectrum Mode)	7-3
2. Basic Setup Procedure	7-7
Setup Procedure for Linear Resolution	
Frequency Analysis	7-7
Setup Procedure for Octave and Logarithmic	
Resolution Frequency Analysis	7-12
3. Toward Better Measurement	7-15
Frequency Range and Number of Lines ..	7-15
Applying a Window	7-17
Audio Weighting Filter	7-19
Switching ON/OFF the Antialiasing Filter ..	7-20
Averaging	7-20
Vlt, Vrms, Engineering Unit, and PSD	7-27
Post Measurement Computations	
(Typical Examples)	7-35
Zoom (R9211A only)	7-39
4. Typical Measurement Examples	7-42
Calibration of a Noise Meter	7-42
Measurement of the Characteristics of an	
Unevenly Rotating Device	7-46
Advanced Measurement (T-F Mode)	7-50

1. Spectrum And T-F Modes

■ The Spectrum Mode

The spectrum mode is designed to analyze, in the frequency domain, signals input to channel A, channel B, or to the digital I/O. The T-F mode, the servo mode and the FRF mode are also used to analyze a signal in the frequency domain, however the spectrum mode is provided with the following features :

- (1) Linear frequency resolution analysis and zoom analysis are enabled.
- (2) Logarithmic frequency resolution analysis is enabled.
- (3) Octave analysis is enabled.
- (4) Spectrum data averaging is enabled.
- (5) The frequency resolution can be set more finely than in the other modes.

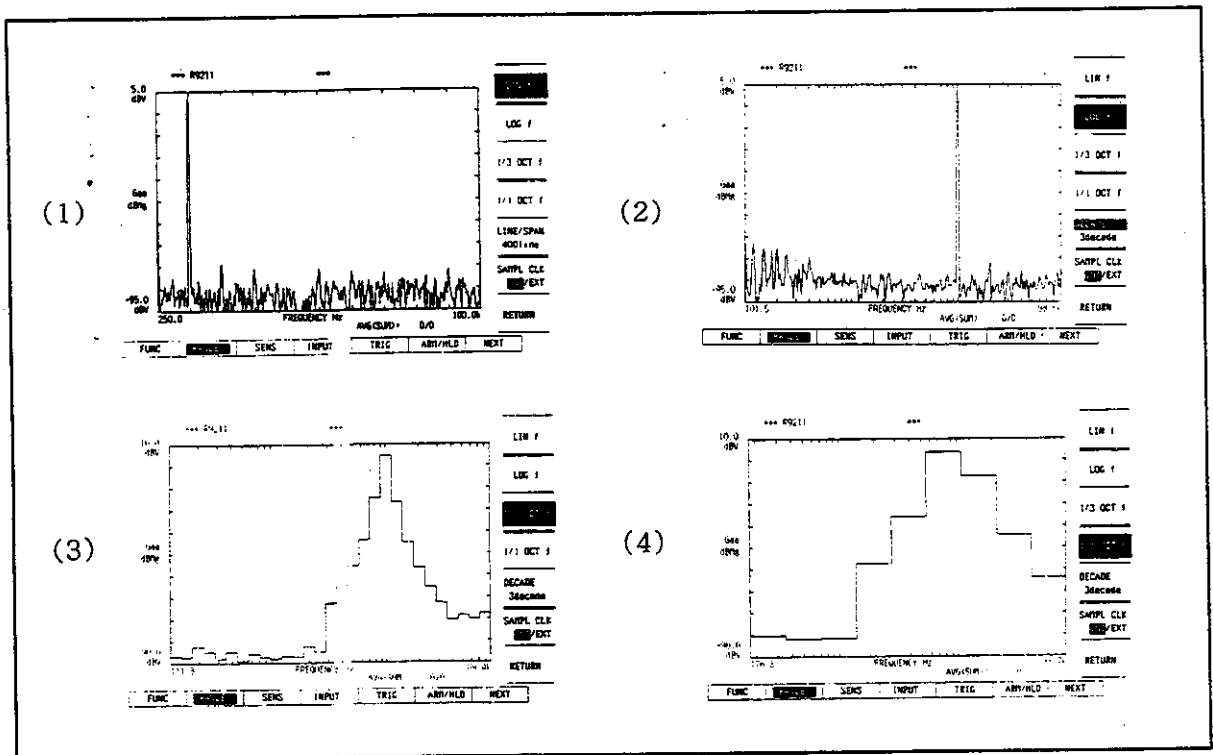


Figure 7-1 Analysis in the Spectrum Mode

The spectrum mode can also be used to study signals in the time domain. However, it does not offer the same powerful features for time domain analysis (time resolution, ...) as the waveform mode.

The spectrum mode is partitioned in 3 functions :

- Power spectrum function
- Cross spectrum function
- Complex spectrum function

1. Spectrum And T-F Modes

Two main differences between the power spectrum function and the complex spectrum function can be found :

- Firstly, they do not use the same averaging method.
- Secondly, with the power spectrum function, octave and logarithmic resolution analysis are enabled, whereas, with the complex spectrum function, they are not.

See the following table:

	Octave analysis	Logarithmic analysis	Averaging method
Power spectrum	○	○	Power averaging
Complex spectrum	×	×	Complex averaging

* : For more details about the averaging method, see "■ Averaging".

■ The T-F Mode (Extended Spectrum Mode)

The T-F mode is provided with a longer input buffer than the other modes. Thus, the input data are stored as one block in this input buffer, and the frequency analysis is performed on these data, frame by frame. The T-F mode is particularly suitable for long duration signals (vibration, noise, etc.)

The T-F mode has the five following features:

- (1) After the Fast Fourier Transform has been performed on each frame of the data stored in the input buffer, the curve representing the relationship between the amplitude of the spectrum at a fixed frequency and the time, can be plotted, for any frequency (T-F analysis).
- (2) The data stored in the input buffer can be analyzed frame by frame in the time or in the frequency domain (Data View).
- (3) Logarithmic resolution frequency analysis can be performed.
- (4) Octave analysis can be made.
- (5) The spectrum data can be averaged.

1. Spectrum And T-F Modes

This figure illustrates point (1).

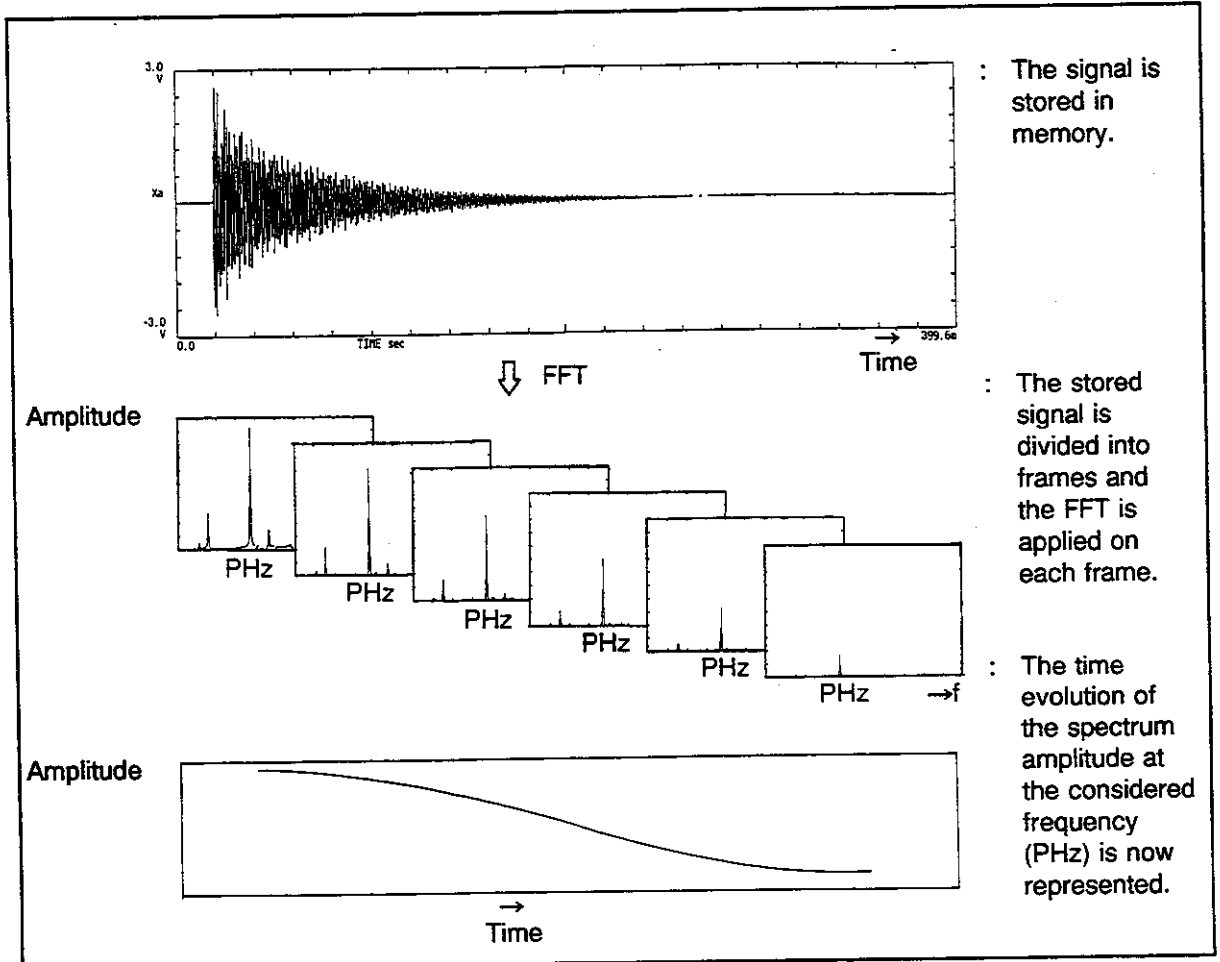


Figure 7-2 Analysis in the T-F Mode

In this example, was represented the relationship between the spectrum amplitude at a fixed frequency and the time. But it is also possible to plot the time evolution of the spectrum phase at a fixed frequency, or the time evolution of the frequency corresponding to the spectrum amplitude peak.

1. Spectrum And T-F Modes

This figure illustrates point (2).

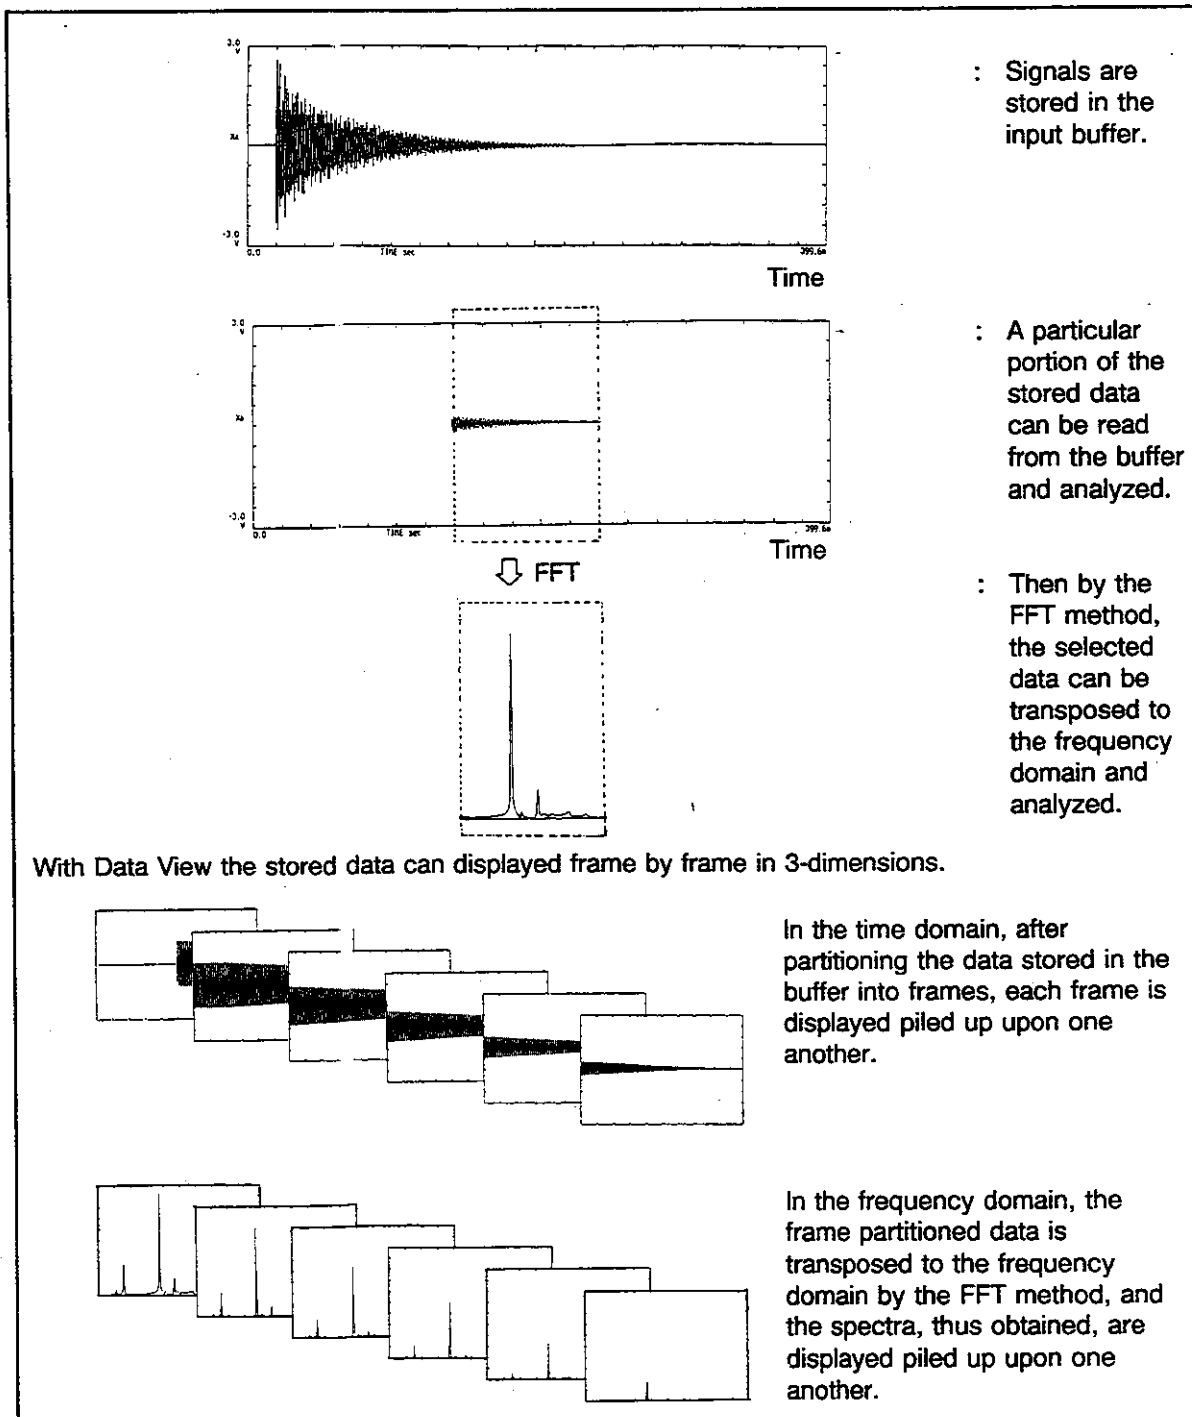


Figure 7-3 Analysis Using Data View

CAUTION !

When logarithmic resolution frequency analysis or octave analysis are performed in the T-F mode, T-F analysis and Data View functions cannot be used.

1. Spectrum And T-F Modes

T-F analysis (feature (1)) and Data View (feature (2)) have been separately described. However, the same buffer is used for both. Figure 7-4 graphically represents (block diagram) the analysis of the time evolution of a long duration signal in the T-F mode.

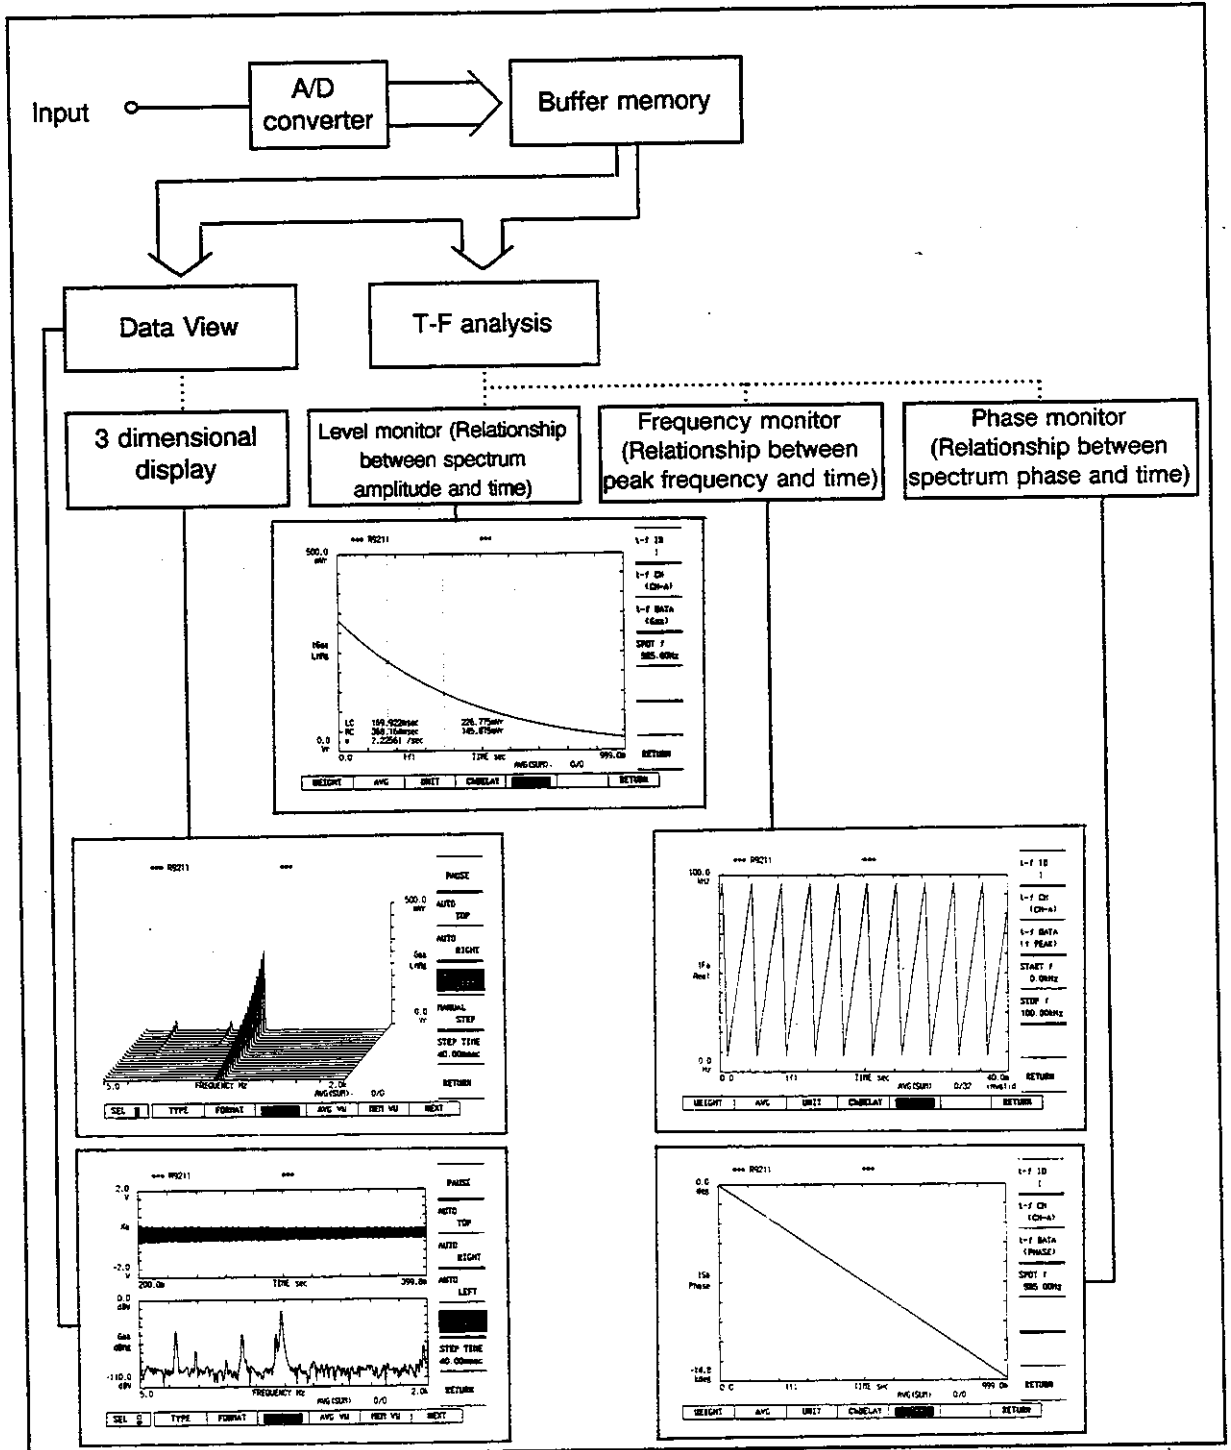



Figure 7-4 Block Diagram Representing the Analysis of a Long Duration Signal in the T-F Mode

2. Basic Setup Procedure


■ Setup Procedure for Linear Resolution Frequency Analysis

To conduct a spectrum analysis in the spectrum mode, proceed as follows :


1 Connect the input signal to channel A.

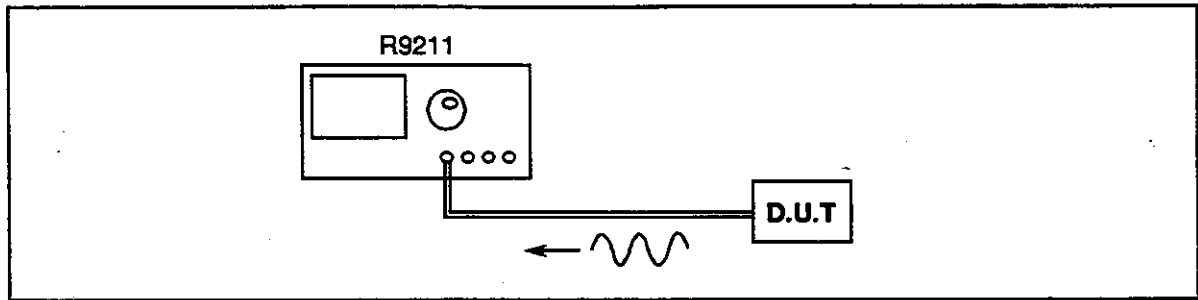


2 Select the spectrum mode.




3 Select the power spectrum function.




4 Set the frequency range and the number of lines.

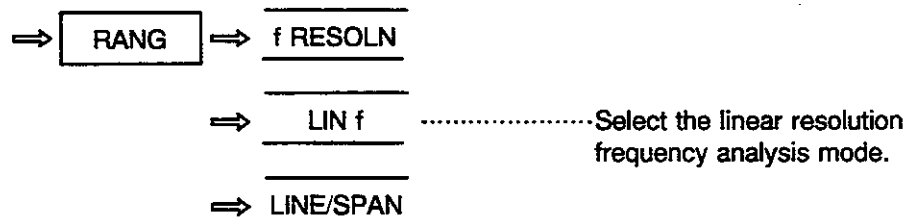


2. Basic Setup Procedure

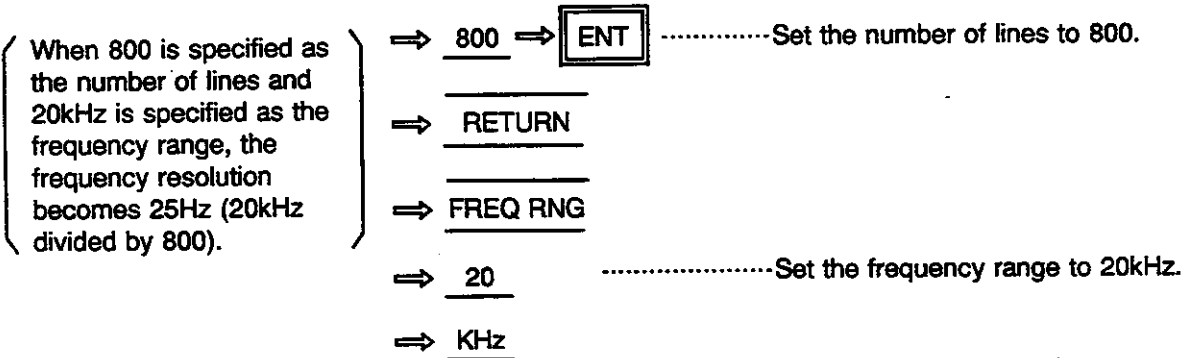


5 Set the input sensitivity.

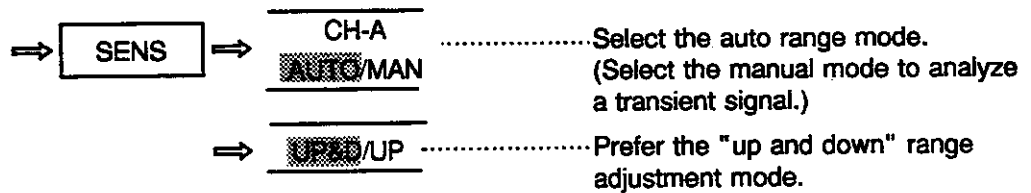

6 Set the inputs coupling conditions.

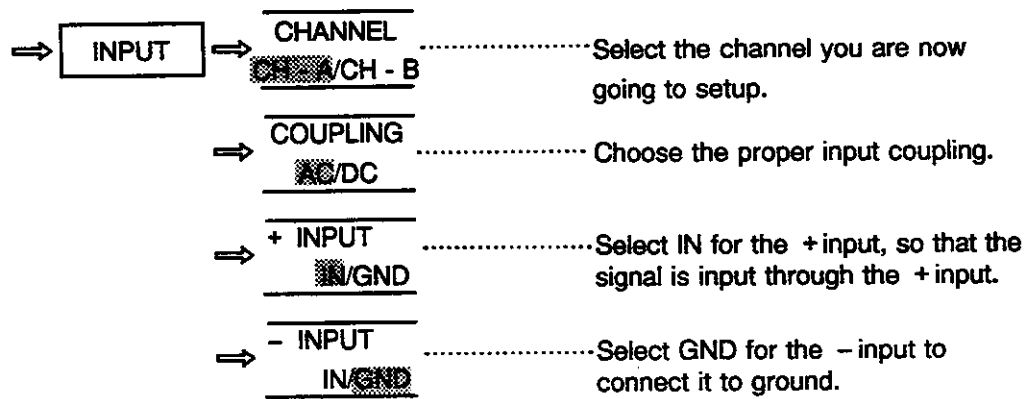

7 Choose the proper window.

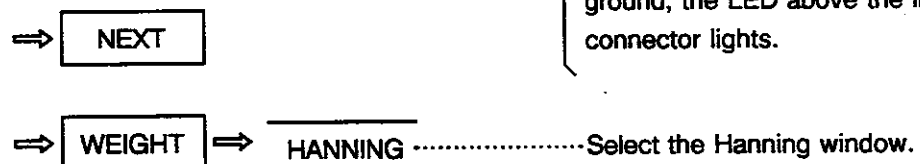


When an input is connected to ground, the LED above the input connector lights.




8

Set the averaging conditions.

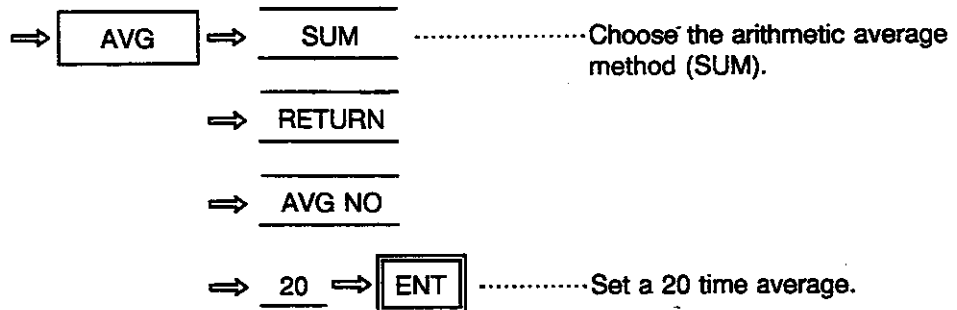

9


Start the measurement.



10

Set the display conditions.

Select the double screen configuration, and display the time waveform on the upper screen and the averaged spectrum on the lower screen.

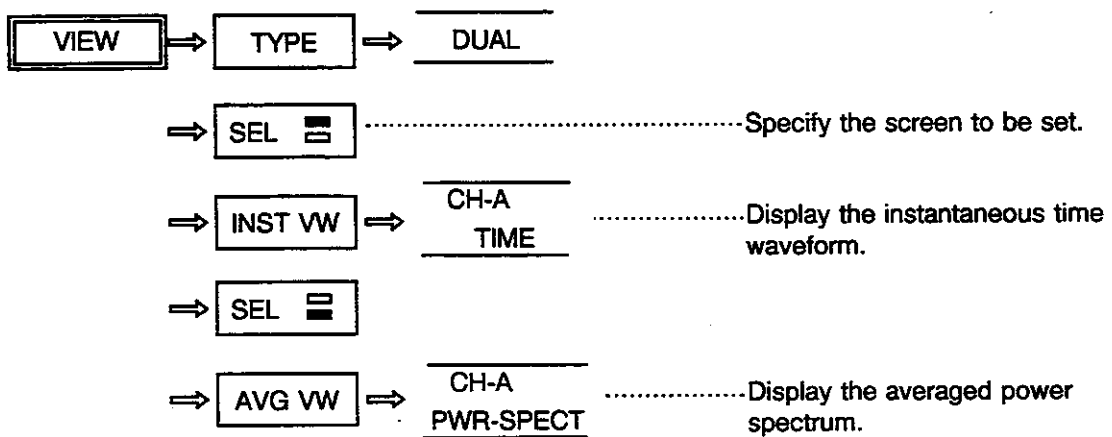


2. Basic Setup Procedure

11

Set the marker's control parameters.

Display a single cursor on the lower screen and read out the coordinates of the cursor : spectrum amplitude and frequency.

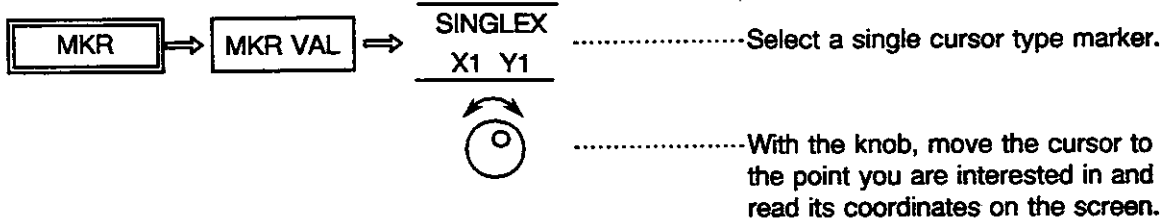

12


Set TRACEonST to OFF.

In this case, if you press the **START** key again, since the default screen of the R9211 will be automatically displayed, you will not be able to change it to the type of screen you want.



13

Start averaging.



2. Basic Setup Procedure

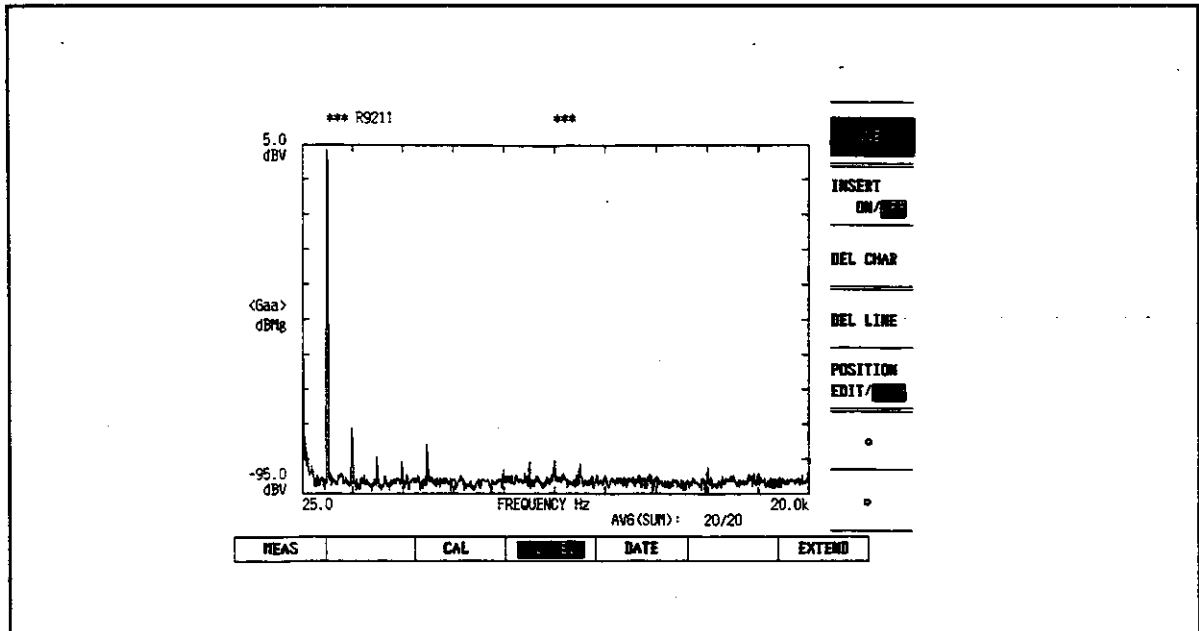


Figure 7-5 The Screen During the Measurement

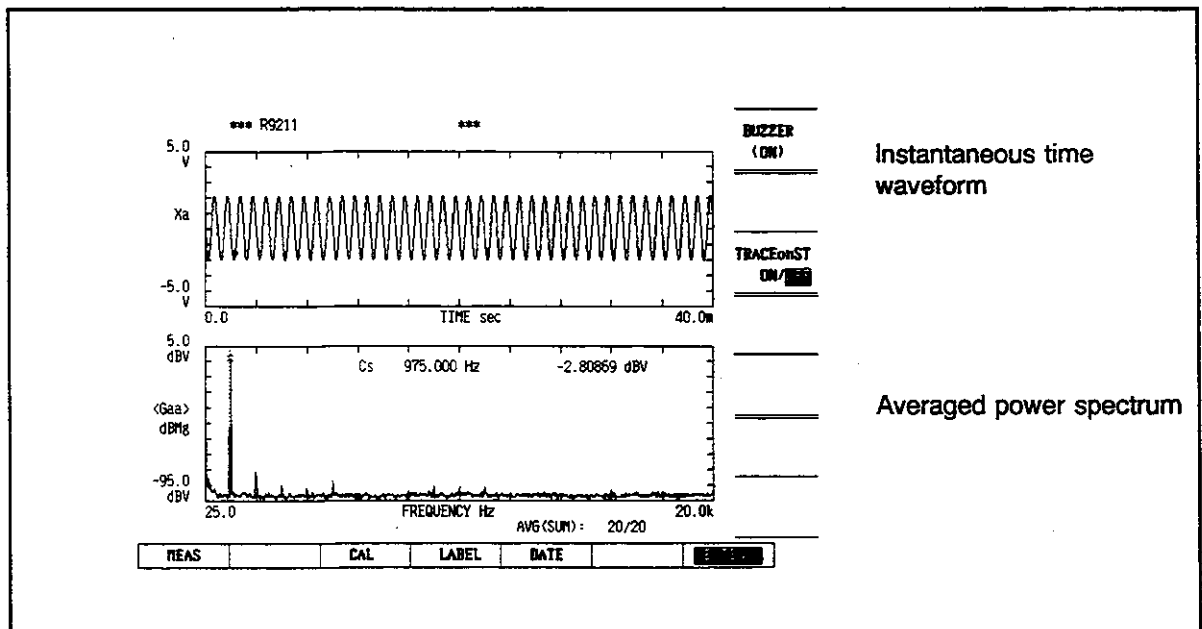


Figure 7-6 Display of the Measurement Results

2. Basic Setup Procedure


■ Setup Procedure for Octave and Logarithmic Resolution Frequency Analysis

To conduct a logarithmic resolution frequency analysis in the T-F mode, proceed as follows :

1

Connect the input signals (DUT) to channel A.

In this example, we use the differential input method, but this choice is in no way related to the logarithmic resolution analysis.

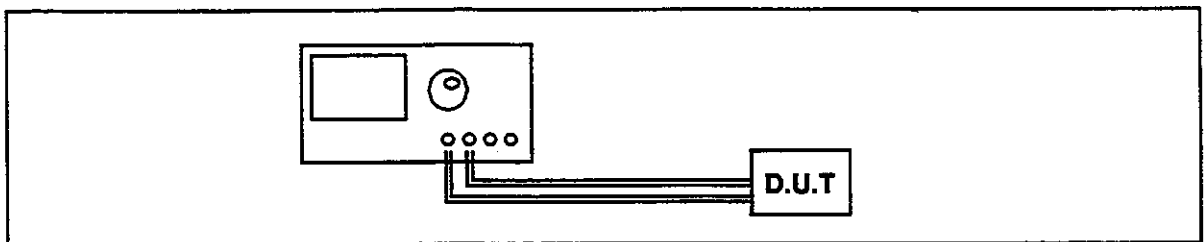

2

Select the spectrum mode.




3

Select the power spectrum function.



4

Set the frequency range and the number of lines.

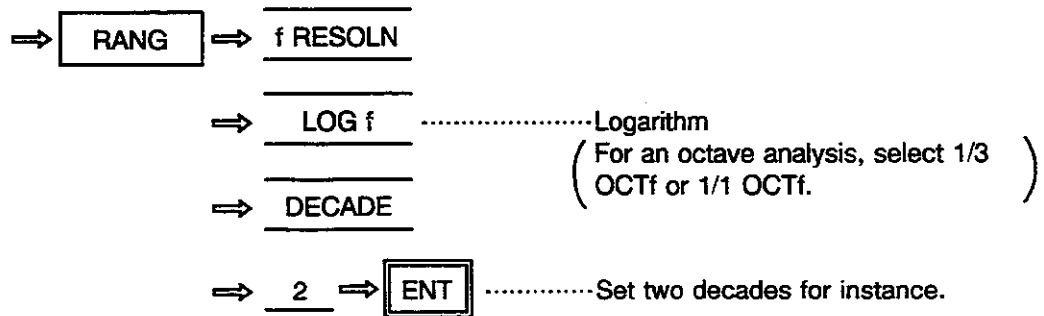

2. Basic Setup Procedure

The frequency resolution is independent of the frequency range and of the number of decades. It is always equal to 80 lines/decade.

- ⇒ RETURN
- ⇒ FREQ RNG
- ⇒ 20
- ⇒ KHz

.....Set the frequency range to 20kHz

5 Set the input sensitivity.

- ⇒ **SENS** ⇒ CH-A
- AUTO/MAN
- ⇒ SET CH-A
- ⇒ 0 ⇒ **ENT**

.....You cannot use the auto range mode when performing a logarithmic resolution frequency analysis or an octave analysis.

.....Set the input sensitivity according to the signal amplitude.

6 Set the inputs coupling conditions.

- ⇒ **INPUT** ⇒ CHANNEL
- CH-A/CH - B
- ⇒ COUPLING
- AC/DC
- ⇒ + INPUT
- IN/GND
- ⇒ - INPUT
- IN/GND


.....Since we chose the differential input method, both the + and - inputs of channel A must be set to IN.

7 Set an audio weighting filter (only if necessary).

- ⇒ **NEXT**
- ⇒ **WEIGHT** ⇒ WEIGHT(f)



2. Basic Setup Procedure

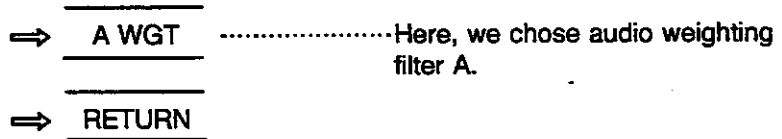

8 Select the form of display suited to your application.

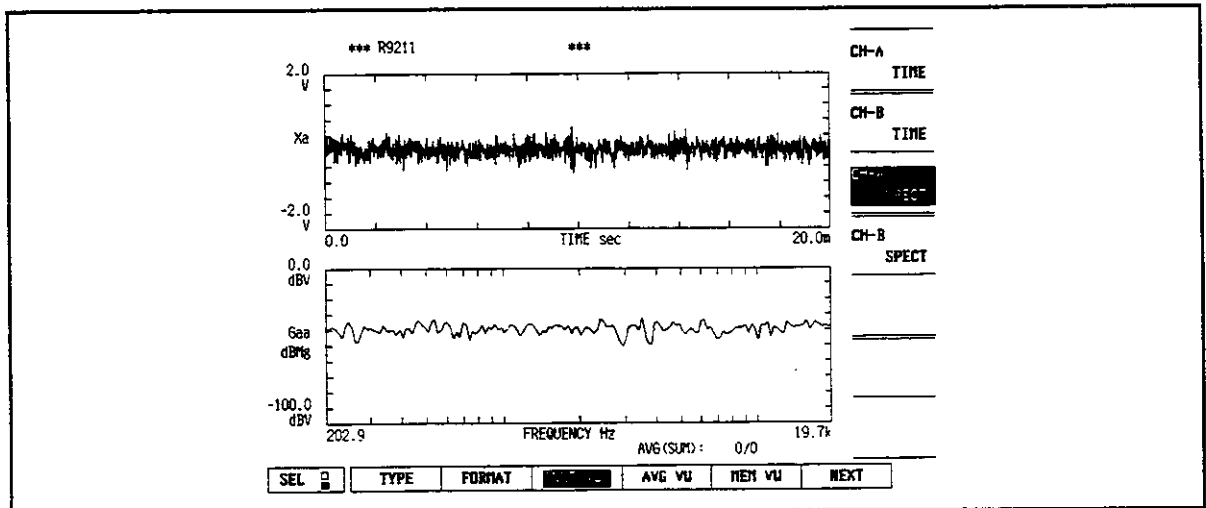
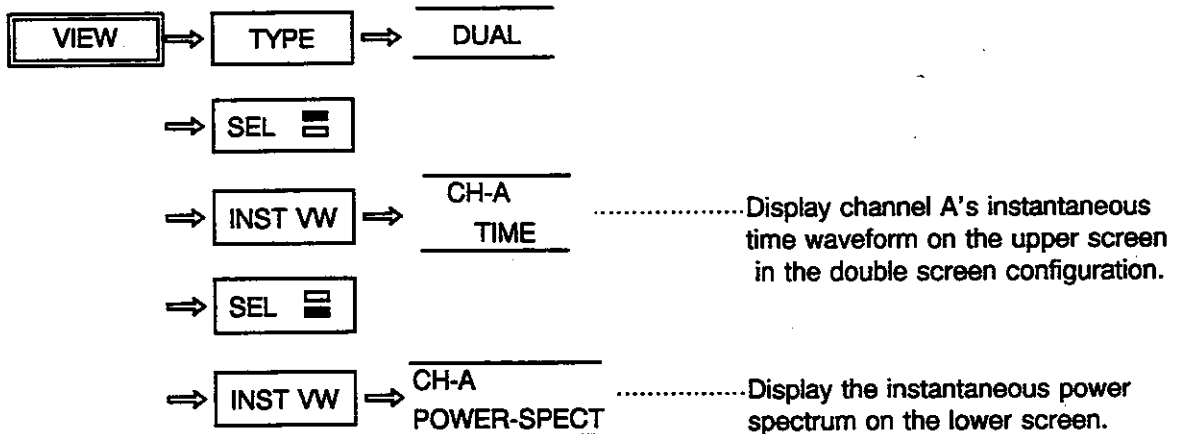


Figure 7-7 Logarithmic Resolution Frequency Analysis (lower)

CAUTION !

The linear resolution frequency analysis is best suited to the measurement of the amplitude of a signal such as a sine wave. If octave or logarithmic resolution frequency analysis is applied to such signals the measurement results are inaccurate.

3. Toward Better Measurement

■ Frequency Range and Number of Lines

● Linear Frequency Resolution

The linear frequency resolution of the FFT analyzer is calculated with the following formula :


$$\text{Linear frequency resolution} = \text{Frequency range} / \text{Number of lines}$$

Select the frequency range and the number of lines according to the frequency resolution you need for the analysis of your signal. For instance, if the frequency range is set to 100kHz and the number of analysis lines is set to 800, the frequency resolution becomes $100\text{kHz} / 800 = 125\text{Hz}$.


[How to select the linear resolution frequency analysis]



[How to change the number of lines]

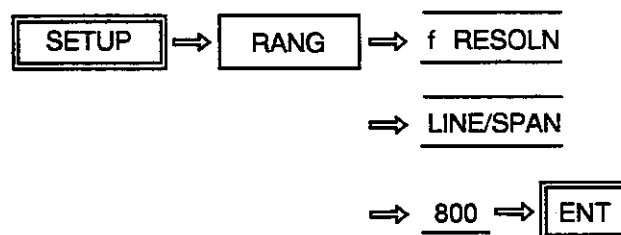

[How to change the frequency range]

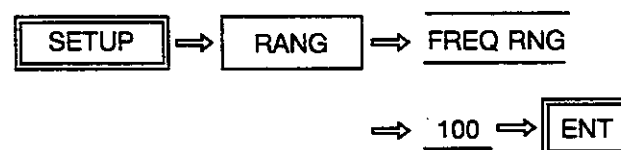


The maximum number of lines depends on the number of active channels as summarized in Table 7-1.

Table 7-1 Numbers of Lines versus Number of Active Channels

Number of active channels \ Mode	Maximum number of lines	
	Spectrum mode	T-F mode
1 channel	3200lines	800lines
2 channels	1600lines	800lines

3. Toward Better Measurement


[How to change the active channel]

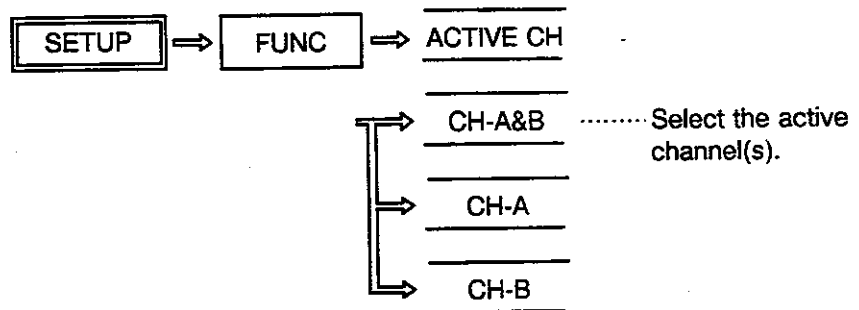


● **Logarithmic Frequency Resolution**

When a logarithmic resolution frequency analysis is conducted (only when the power spectrum function of the spectrum mode is used), the frequency resolution is 80 lines/decade.

[How to select the logarithmic frequency analysis]

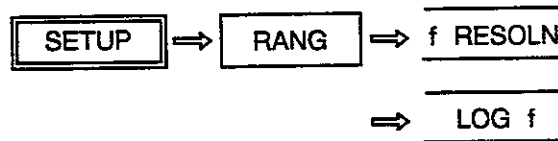

[How to set the number of decades]

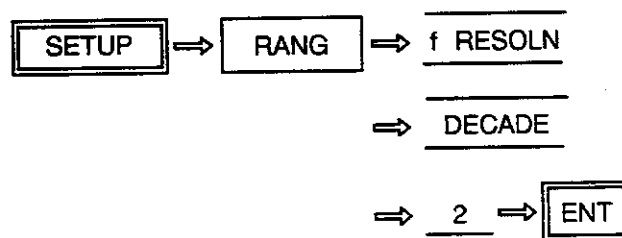

The number of decades depends on the number of active channels as summarized in Table 7-2.

Table 7-2 Number of Decades versus Number of Active Channels

Number of active channels	Maximum number of decades
1 channel	3
2 channels	2*

* For the R9211C, up to three decades may be specified.

■ Applying a Window

The FFT is processed only on a portion of the continuous input signal, portion whose length corresponds to the frame time.

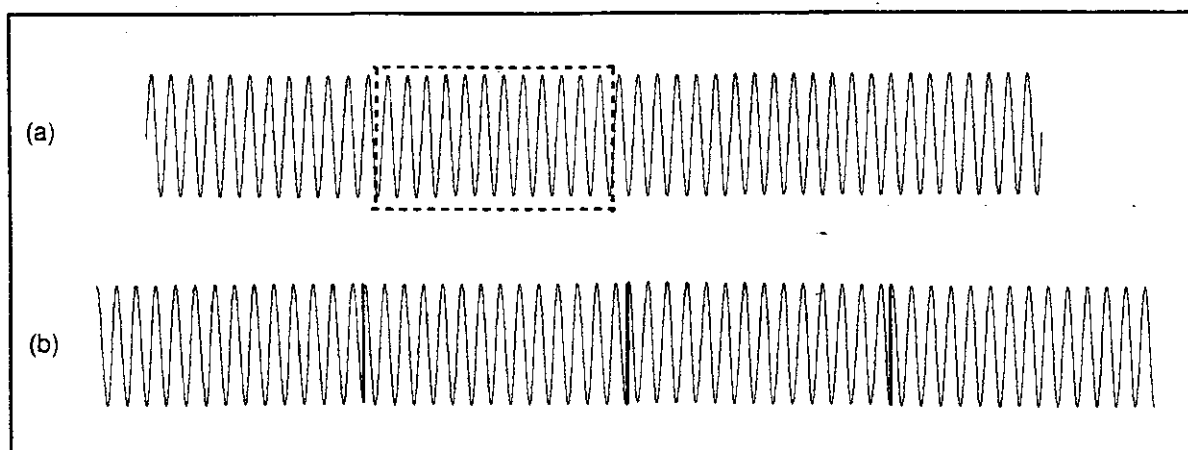


Figure 7-8 Illustrates the Effect of Time Truncation on the Signal

If the signal portion enclosed in the dotted line (cf. Figure 7-8 (a)), is extracted from the continuous input signal, and is transposed to the frequency domain by FFT, the result we actually obtain in the frequency domain corresponds to the discontinuous time signal represented on Figure 7-8 (b), instead of corresponding to the studied signal, because the Fast Fourier Transform, naturally considers the time limited signal it receives in input, as a period of a time infinite periodic signal ((b) is obtained by infinitely repeating the signal portion outlined on Figure 7-8 (a)). In order to reduce the influence of the time truncation, the truncated signal portion is multiplied by a weighting function, so that the signal input to the FFT may be considered as a period of an infinite continuous periodic signal. This weighting function is called a window.

The R9211 is provided with the minimum, Hanning, flat pass, rectangular, and force/response windows. The differences and application domains of each of these are described in Table 7-3.

3. Toward Better Measurement

Table 7-3 Selection of the Best Suited Window ("WEIGHTING")

	Advantage	Disadvantage	Application
Rectangular window	<ul style="list-style-type: none"> ○ The energy of the sampled data does not change during the frame time. ○ It offers the best frequency resolution. 	<ul style="list-style-type: none"> ○ Its amplitude accuracy is poor. ○ Generates discontinuities on continuous waveforms that do not satisfy the periodicity condition. 	<ul style="list-style-type: none"> ○ It proves optimum for the analysis of transient signals or impulse signals.
Hanning	<ul style="list-style-type: none"> ○ It does not generate discontinuities for continuous aperiodic waveforms. 	<ul style="list-style-type: none"> ○ Its frequency resolution is slightly lower than that of the rectangular window. ○ Its amplitude accuracy is relatively poor. 	<ul style="list-style-type: none"> ○ Generally used to study continuous waveforms. ○ Spectrum analysis up to 70dB.
Flat pass	<ul style="list-style-type: none"> ○ It offers the best amplitude accuracy. 	<ul style="list-style-type: none"> ○ Its frequency resolution is poor. 	<ul style="list-style-type: none"> ○ Effective for harmonics analysis
Minimum window function	<ul style="list-style-type: none"> ○ It shows the best side-band shape. ○ Its frequency resolution is higher than that of the flat pass window. ○ Its amplitude accuracy is higher than that of the Hanning window. 	<ul style="list-style-type: none"> ○ Its frequency resolution is lower than that of the Hanning window. ○ Its amplitude accuracy is lower than that of the flat pass window. 	<ul style="list-style-type: none"> ○ Effective for the study of small adjacent spectral lines(e.g., notches). ○ Spectrum analysis beyond 70dB.

CAUTION!

The force/response windows are rarely used for spectrum analysis.

ADVICE


Usually, the force/response windows are used to obtain a frequency response function with an impulse hammer in the FRF mode.

The force window is used when sampling an impulse waveform to improve the signal-to-noise ratio, while the response window is used to damp the output waveform within the frame time. In the spectrum/T-F mode, the force window is used to perform partial FFT if it is necessary. A waveform is sampled from the input time waveform by setting the values of START TIM and STOP TIM, which correspond to the start and end times of the force window. Note that the truncation error is the same as the one obtained when applying the rectangular window.

Partial FFT: One portion only (a frame) of the sampled and stored data is transposed to the frequency domain by FFT.

3. Toward Better Measurement

[How to select a window]

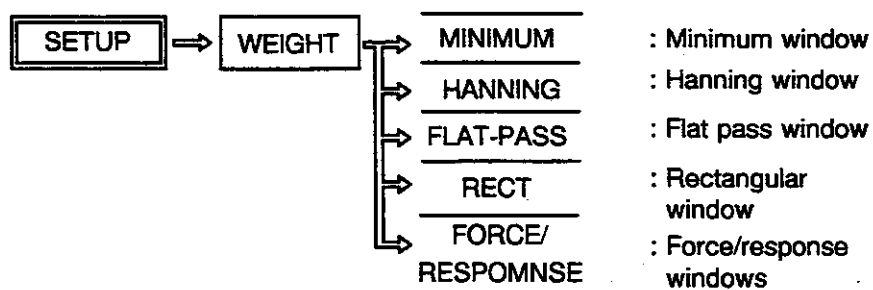

■ Audio Weighting Filter

The R9211 is provided with 3 audio weighting filters presenting characteristic A, B, and C respectively, and with a weighting filter for telephone lines named C-message weighting filter.


A-, B-, and C-characteristic filters conform to the Standard of Noise Level Measurement (IEC651).

The C-message weighting filter conforms to the Standard for Analog Devices used for Voice Propagation (IEEE std 743).

REFERENCE→

Regarding these filter characteristics, see "Audio Weights Characteristics" in Appendix 2 "Glossary" page A-19 and A-20.

[How to set an audio weighting filter]

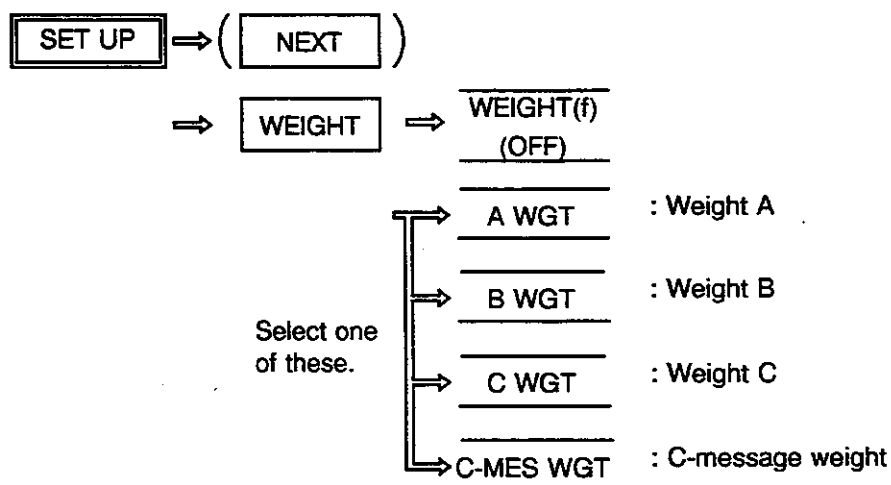

3. Toward Better Measurement

■ Switching ON/OFF the Antialiasing Filter

For a spectrum analysis, in order to prevent from spectrum aliasing (this term is used when spectrum lines whose frequency does not belong to the analysis range, appear nonetheless inside the range), you must switch the antialiasing filter on. For a time analysis, you must, of course, switch it off.



: Switches on or off the antialiasing filter.

The filter setting is common to channel A and channel B.

■ Averaging

● Power Spectrum Averaging and Complex Spectrum Averaging

To average spectrum data, you have the choice between 2 methods : the power spectrum averaging method and the complex spectrum averaging method.


○ Power Spectrum Averaging

Both target signal and noise are smoothed.

○ Complex Averaging


Synchronous averaging is performed according to a trigger signal synchronized with the target signal, thus the target signal can be extracted from the noise.

3. Toward Better Measurement

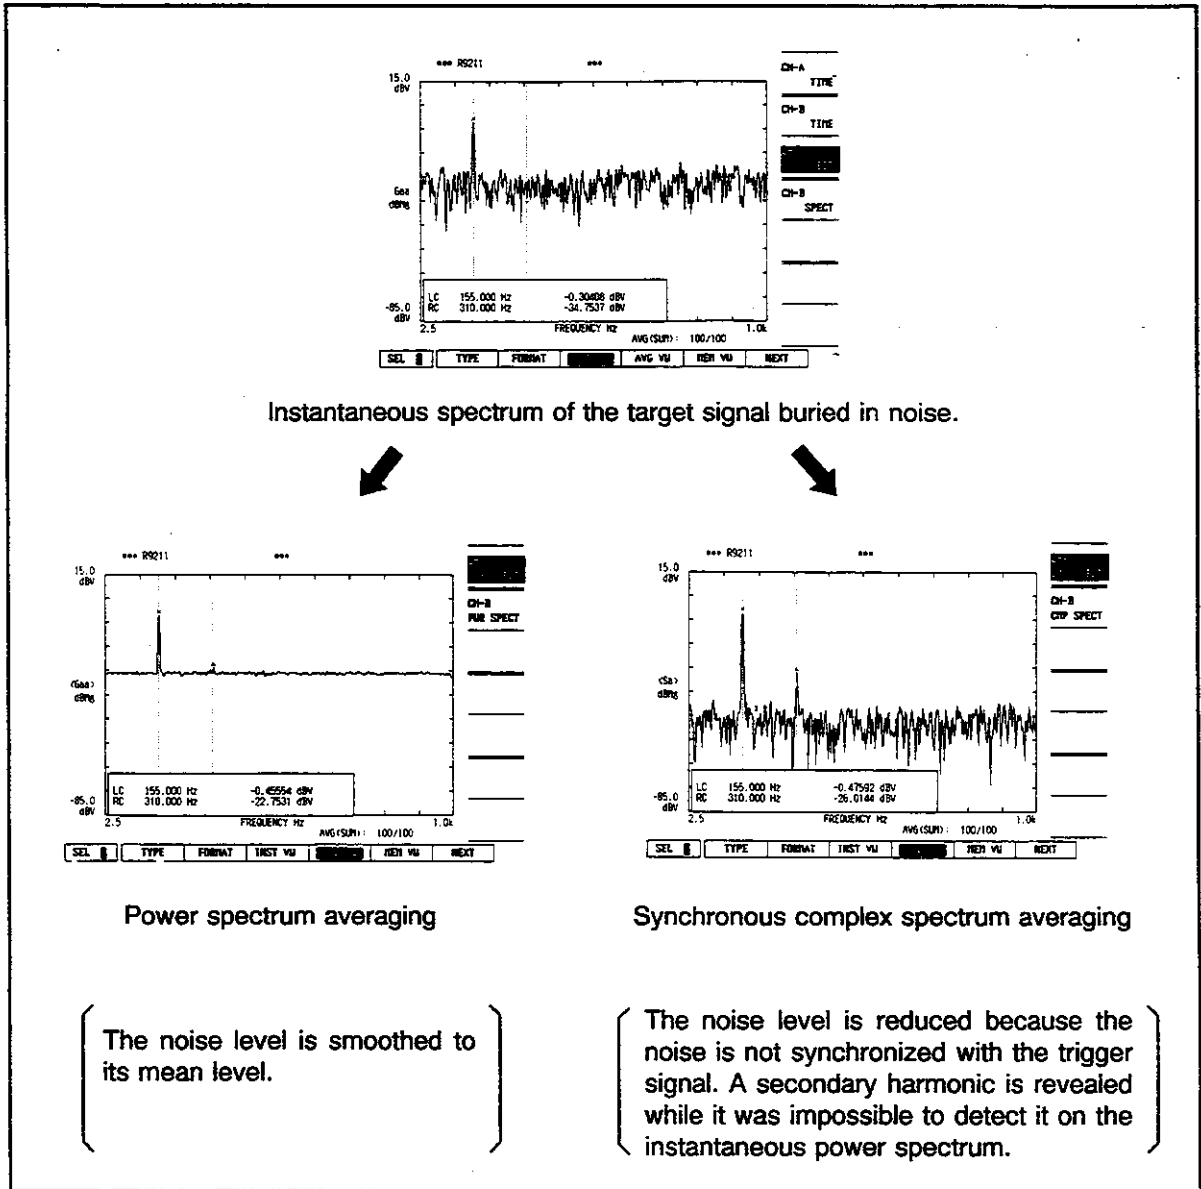

[Setup procedure]

Select the power spectrum function or the complex spectrum function in the spectrum or T-F mode.

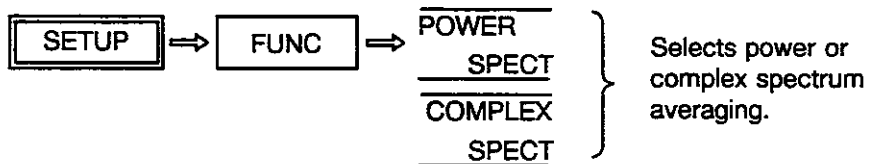

3. Toward Better Measurement

● **Averaging Mode**

Four averaging methods are available : arithmetic averaging, exponential averaging, peak hold averaging and subtraction averaging. The arithmetic and exponential averaging methods are now described.

○ **Arithmetic Averaging**

When the power spectrum function is used, arithmetic averaging is expressed as follows:

$$\langle Gaa \rangle = 1/N \{ Gaa_1 + Gaa_2 + \dots + Gaa_N \}$$

N : Number of averages
 Gaa_i : ith power spectrum point (i = 1, ..., N)

When the complex spectrum function is used, arithmetic averaging is expressed as follows:

$$\langle Sa \rangle = 1/N \{ Sa_1 + Sa_2 + \dots + Sa_N \}$$


N : Number of averages
 Sa_i : Complex spectrum

If $\langle Sa \rangle$ is expressed in Mag or in dBMs, the previous equation becomes :

$$dBMs = 10 \cdot \log \{ (\text{Real} \langle Sa \rangle)^2 + (\text{Imag} \langle Sa \rangle)^2 \}$$

$$\text{Mag} = \sqrt{ (\text{Real} \langle Sa \rangle)^2 + (\text{Imag} \langle Sa \rangle)^2 }$$

[How to set an averaging method and a number of averages]

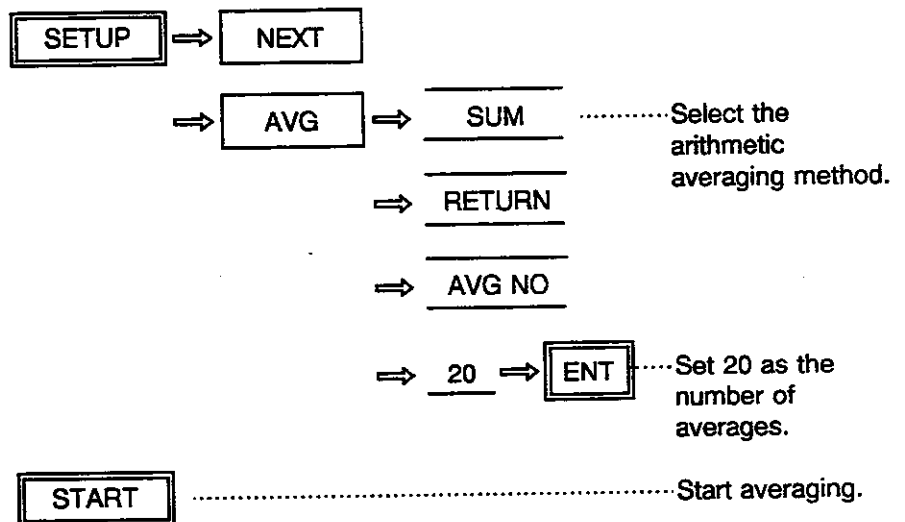

3. Toward Better Measurement

○ Exponential Averaging

Exponential averaging is expressed as follows:

$$A_j = \left(1 - \frac{1}{K}\right) A_{j-1} + \frac{1}{K} D_j$$


A_j : Average result number j (now)

A_{j-1} : Previous average result


D_j : Data fetched this time

K : Weight

When setting exponential averaging, the weight value (K) and the maximum number of averages (maximum value of j) must be specified.

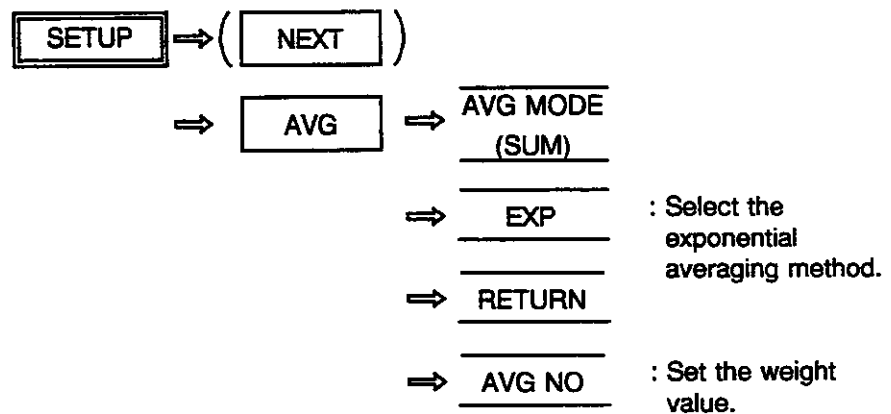**CAUTION !**

When the exponential averaging (EXP) method is selected, AVG NO is used to set weight value.

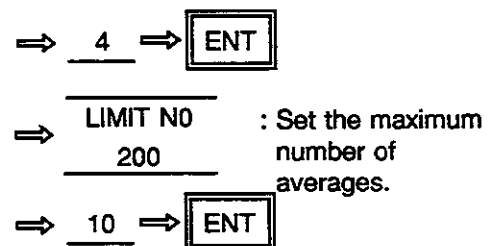

3. Toward Better Measurement

● Other Functions Related to Averaging

○ PROCESS


This function is used to specify the timing of the display of averaged data and execution of averaging.

NORMAL : Data is displayed each time averaging is performed (the intermediate results are displayed).

FAST : The averaging result is displayed only after completion of the total averaging process.

+1AVG : One averaging step is performed each time the **STOP/C** key is pressed.


- (1) Fast averaging is faster than normal averaging. Select this mode to quickly obtain the averaging result.
- (2) The +1AVG mode is suitable to the impulse hammer measurement method (for example), because you can decide after each data acquisition whether you want to take the acquired data into account for your average process.
If the +1AVG mode is selected, and you want to quit averaging in the middle of the process, press the STOP + 1 key.

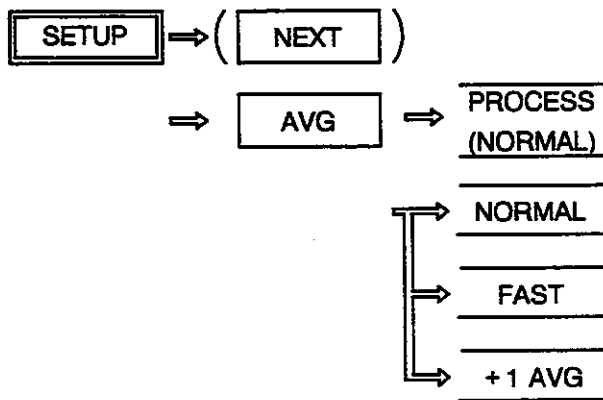

3. Toward Better Measurement

○ REJECT

By switching REJECT ON or OFF you can choose whether to take into account in the averaging process, the data which have saturated the analyzer's input block.

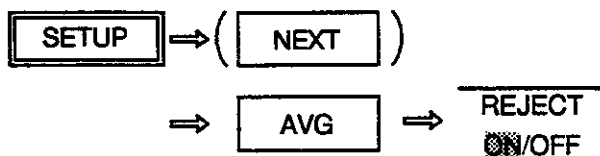

3. Toward Better Measurement

○ Overlap

If we overlap the data frames, the number of averages during a specified period of time increases, thus the difference between consecutive data frames decreases.

However at high frequencies, overlapping is sometimes impossible because of treatment constraints. The averaging operation is in no way affected. The four available overlap types are hereunder described.


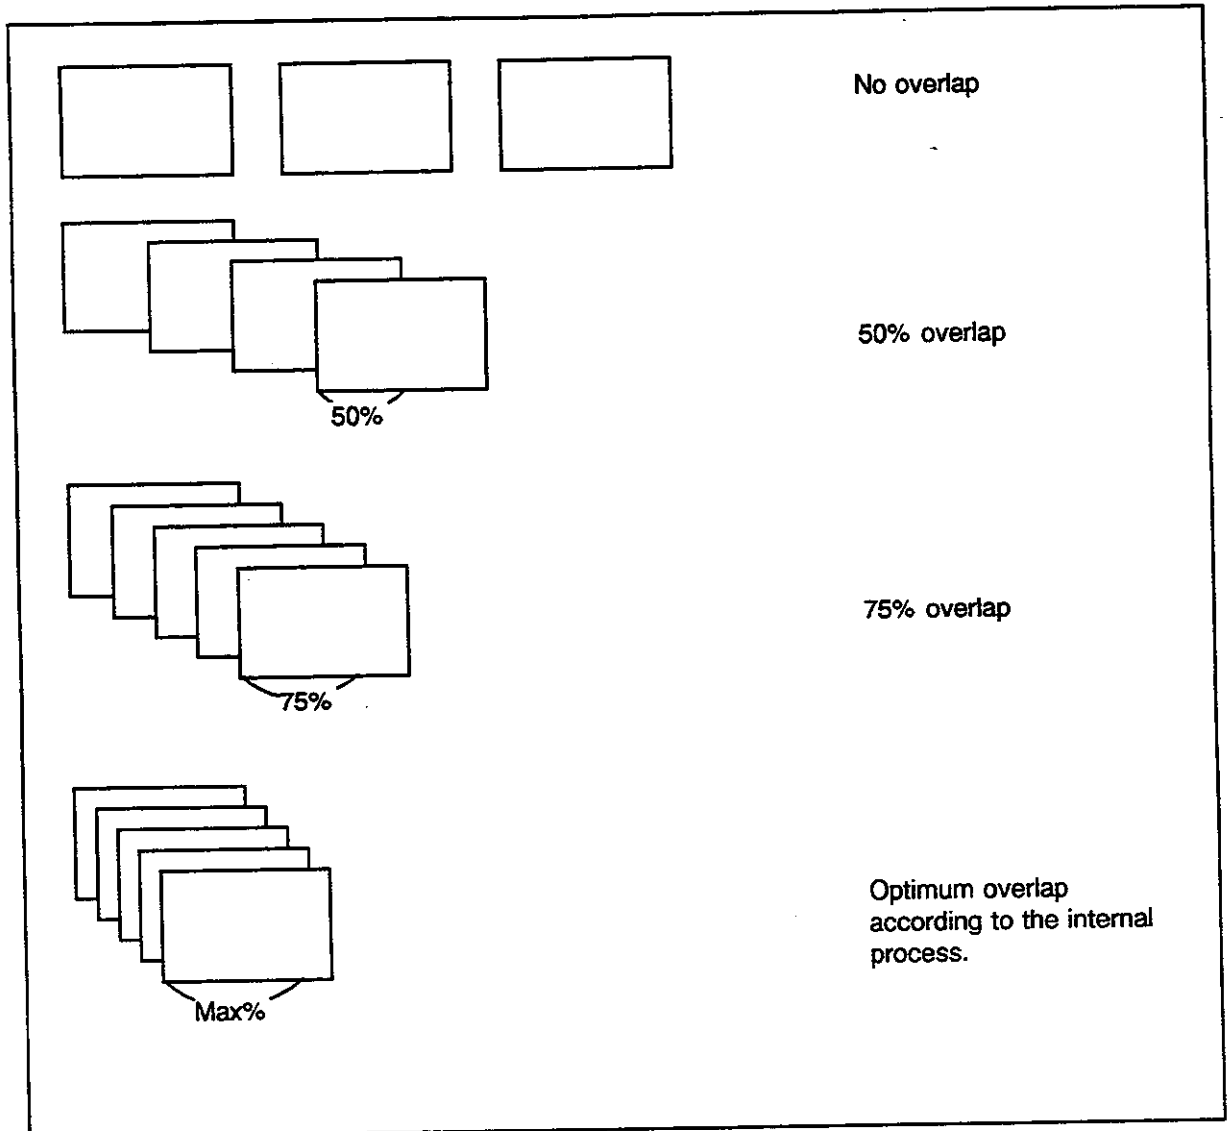


Figure 7-9 Average Data Overlap Types

3. Toward Better Measurement

[How to set the overlap]

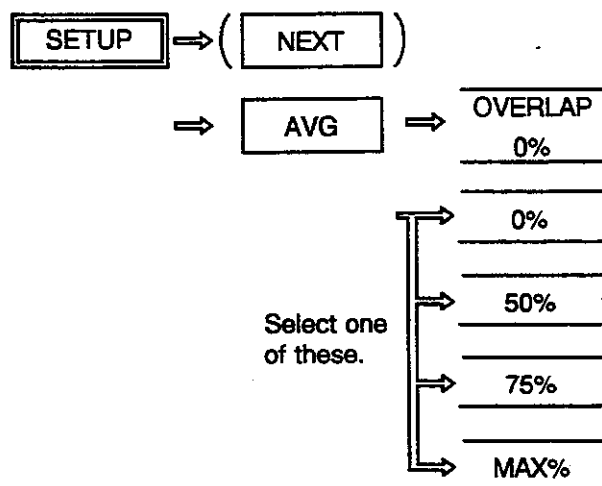

■ Vlt, Vrms, Engineering Unit, and PSD

● Vlt and Vrms

The input sensitivity setting unit is Vrms, but the display unit can be Vlt.

When a sine wave is input in the spectrum mode, the relationship between Vrms and Vlt is described by the following formulas:

Vrms	:	20log	1	Vrms	=	0	dBV
Vlt	:	20log	1.41	Vpp	=	2.98	dBV

3. Toward Better Measurement


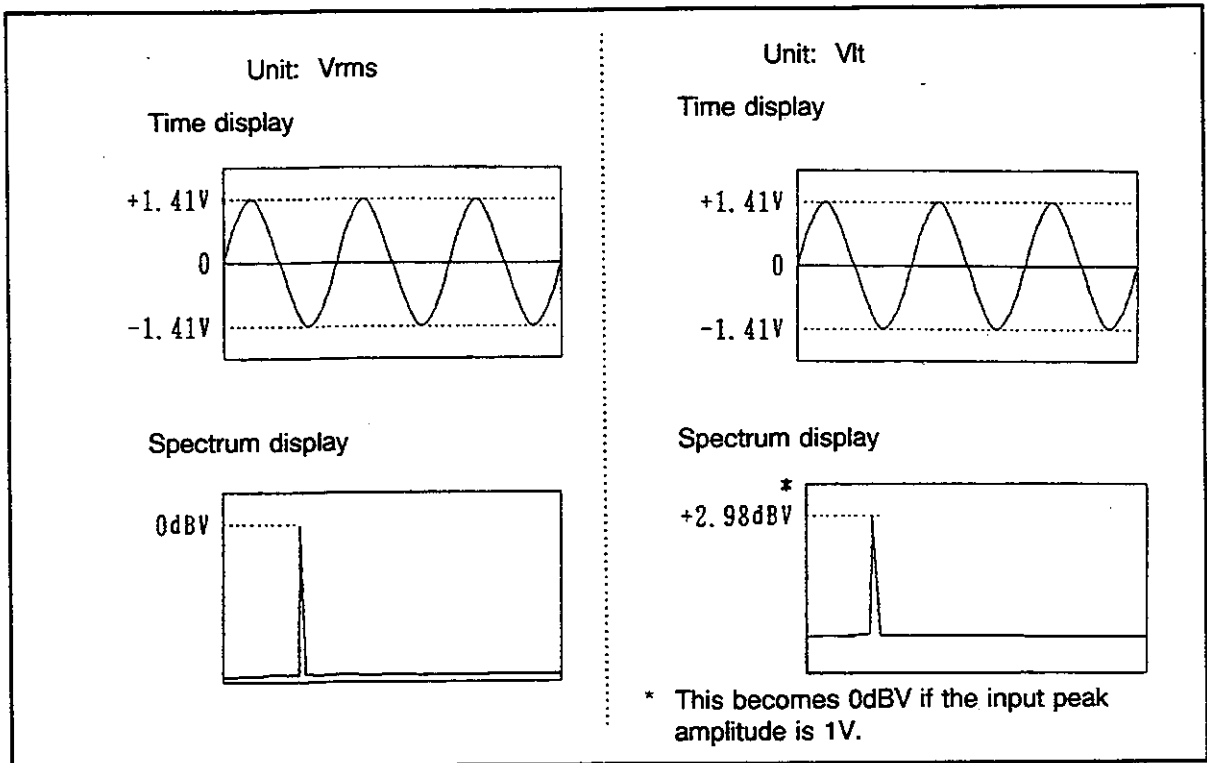


Figure 7-10 Displayed Waveforms

[How to set the unit]

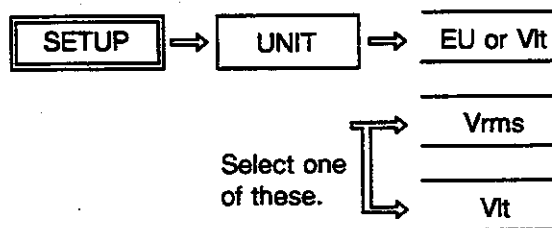

● Engineering Unit


You can define a new unit for each channel : you then define the relationship between your unit and 1 Volt (Vlt), for example, and the 2 digit maximum name of the unit. The scale setting depends on the type of display (time waveform/dB scale spectrum /linear scale spectrum).

○ For a dB Scale Spectrum

Set the scale correspondence factor (VALUE) of each channel. This factor is defined as the value in dBEU (dB Engineering Unit) corresponding to 0dBV.



3. Toward Better Measurement

When you want XdBV to correspond to YdBEU, the correspondence factor (VALUE) is :

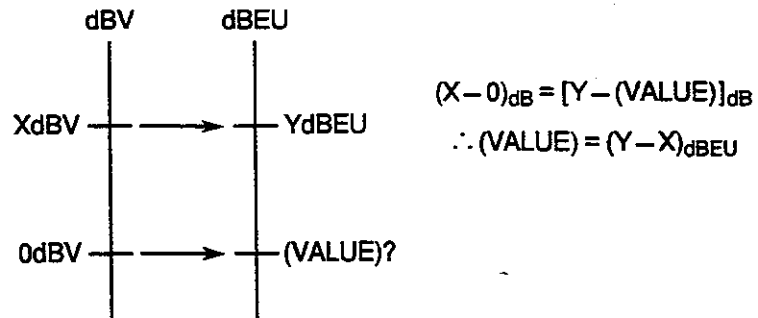

[Concrete setup procedure]

To set the engineering unit, named "A", on channel A, so that, for example, -4.2dBV corresponds to -30dBEU, the correspondence factor must be -25.80dBEU.

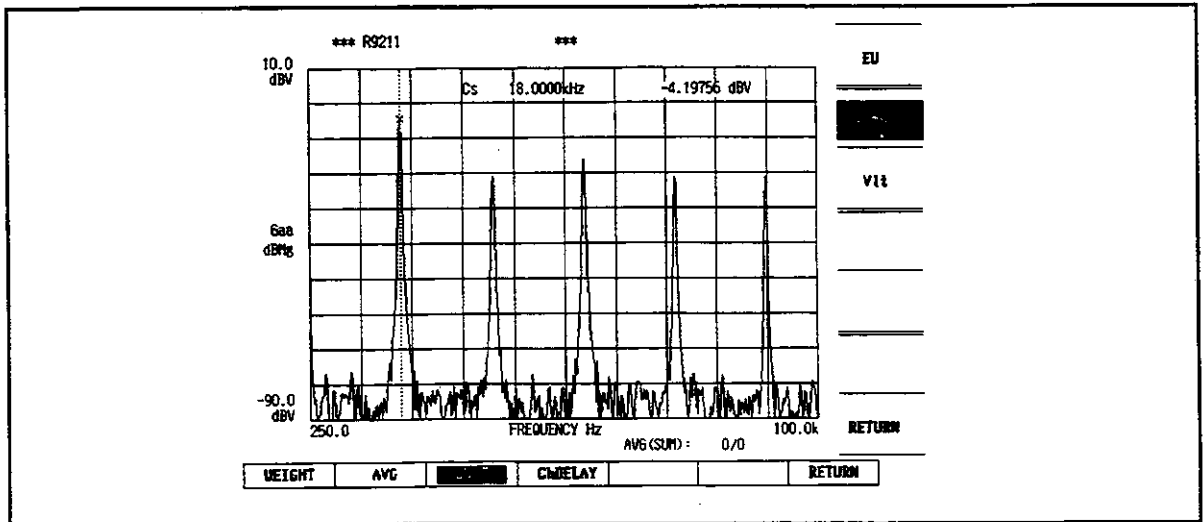

: Select channel A.

3. Toward Better Measurement


CAUTION !

When **CROSS** is selected, a unit name of 2 characters can be defined but no correspondence can be defined.

⇒ VALUE


⇒ -25.8 ⇒ **ENT**

Enter the value of the correspondence factor with the knob or with the numeric keys. The knob is graduated in steps of 1dB.

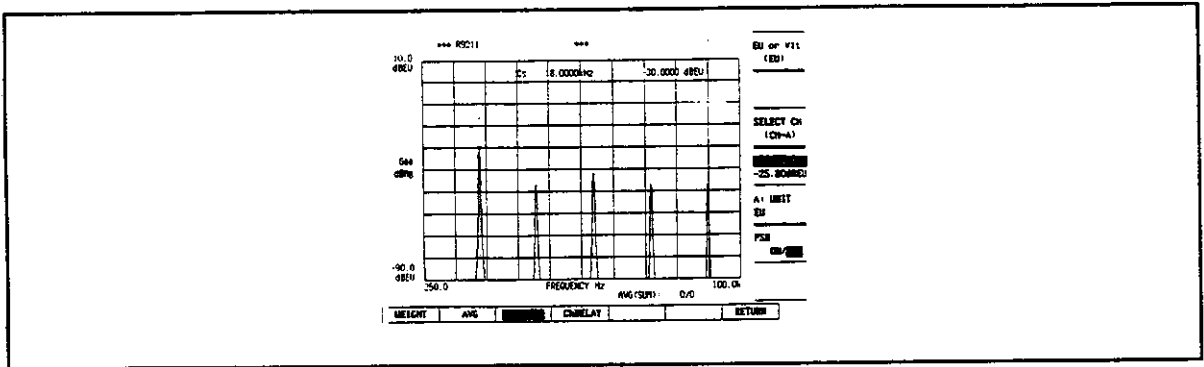

⇒ UNIT

Enables you to set the engineering unit name.

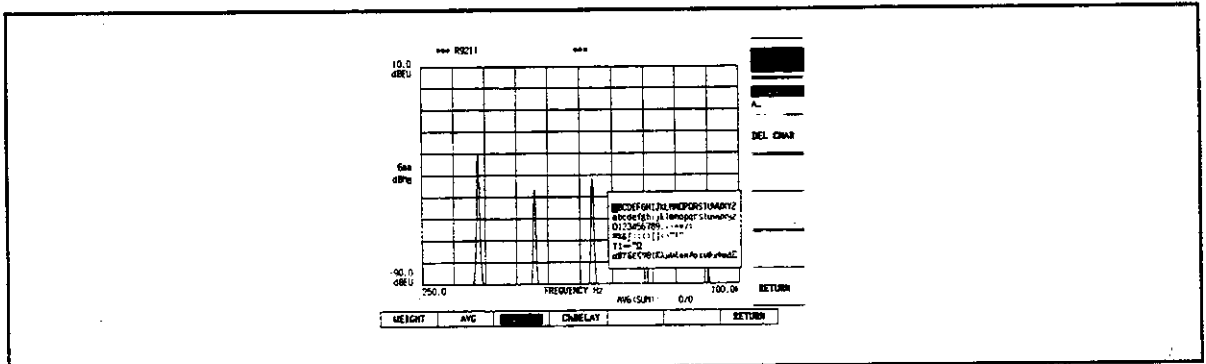

A label list is displayed on the screen. Up to two characters can be selected from it with the knob **↑** and **↓** keys.

Press the **ENT** key after selecting each character.

⇒ DONE


Validates the engineering unit setting.

3. Toward Better Measurement

○ For a Linear Scale Spectrum


Set the scale correspondence factor (VALUE) of each channel. This factor is defined as the value in EU corresponding to 1Vrms.

When you want XVrms to correspond to YEU, the correspondence factor is:


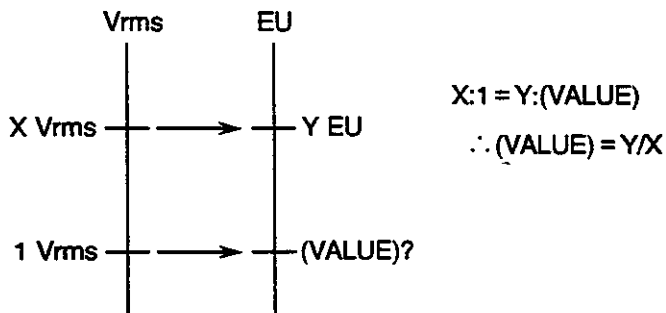


[Concrete setup procedure]

To set an engineering unit on channel A's linear data, so that 616.769mVrms corresponds to 1EU, the correspondence factor must be $1/616.769 \times 10^{-3} \approx 1.62136EU$.

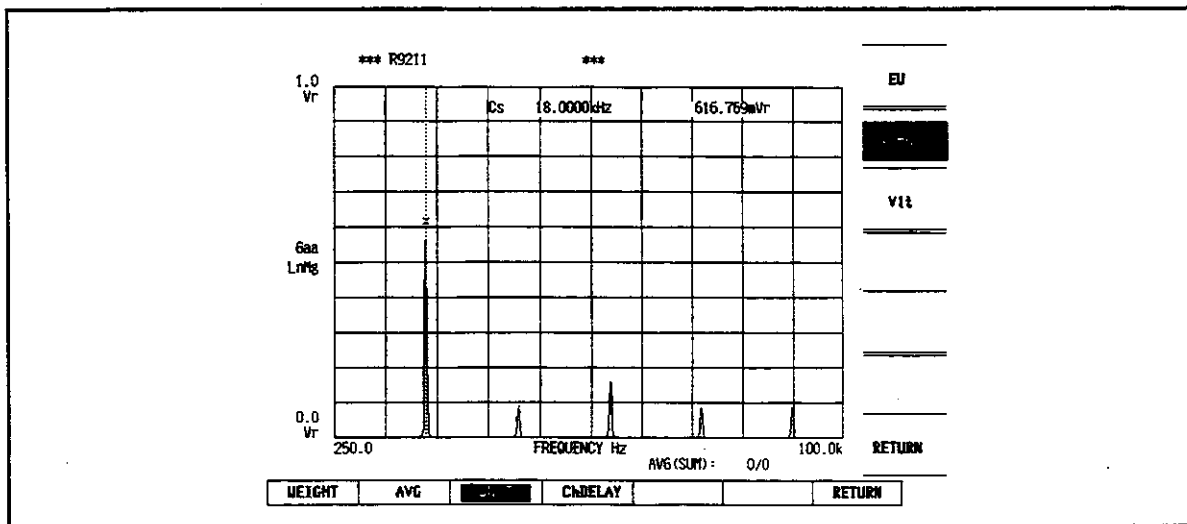


3. Toward Better Measurement

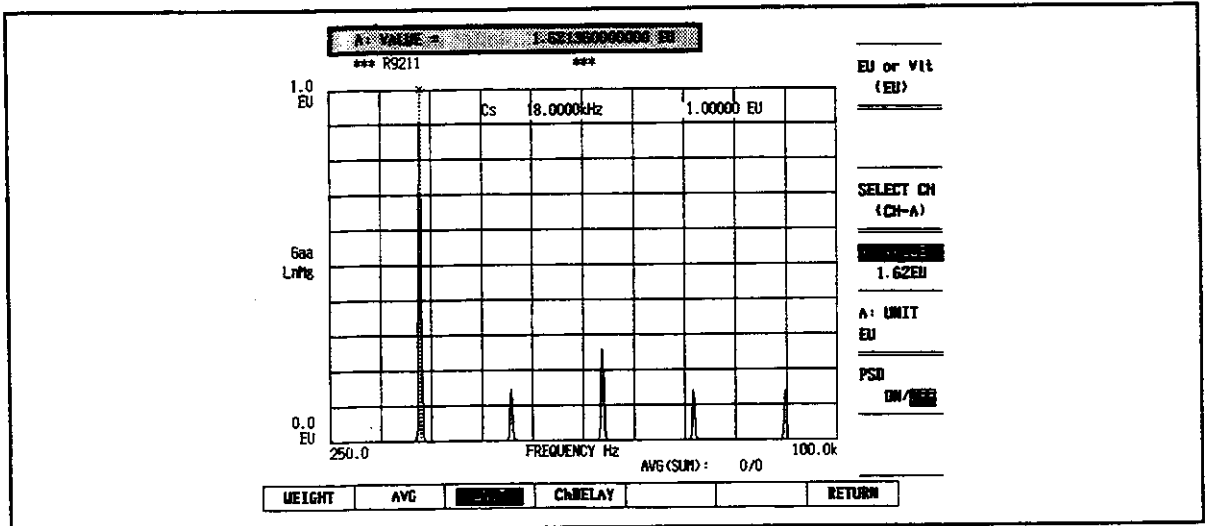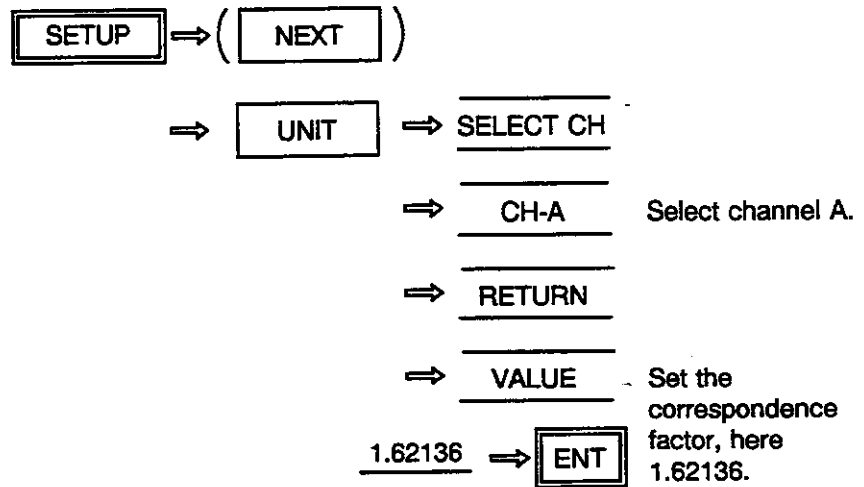

○ For a Time Waveform


Set the scale correspondence factor (VALUE) of each channel. This factor is defined as the value in EU corresponding to 1Vlt.

When you want XVlt to correspond to YEU, the correspondence factor (VALUE) is:


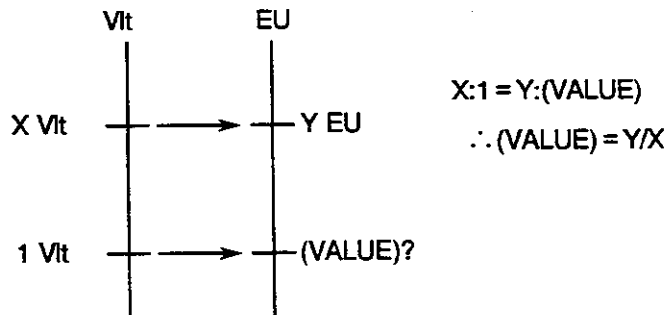


3. Toward Better Measurement

[Concrete setup procedure]
 735.97mV/t corresponds to 1EU for channel A's time waveforms.

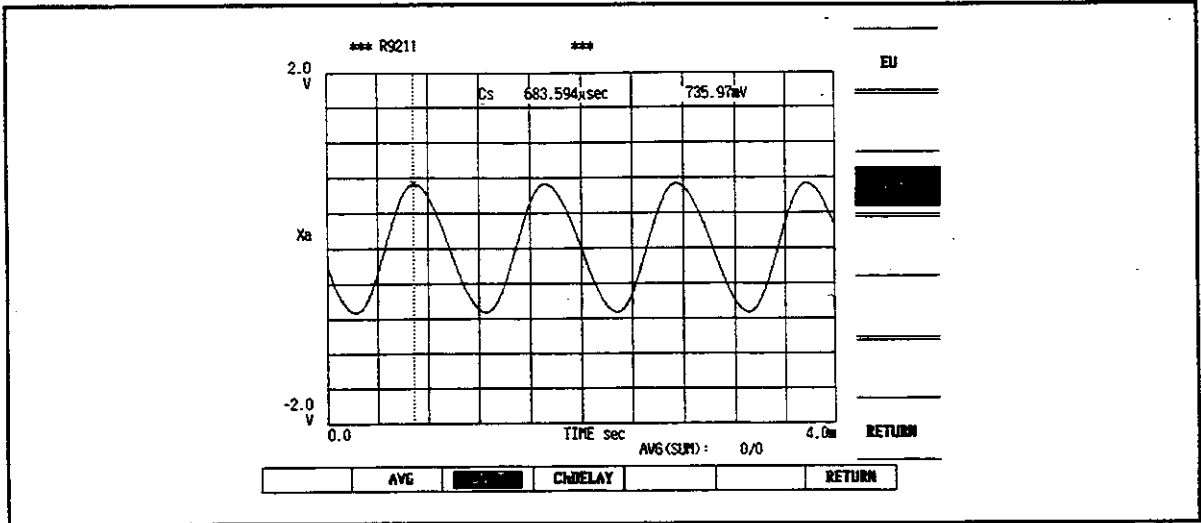


In this case, the correspondence factor becomes :
 $1/735.97 \times 10^{-3} \doteq 1.35876\text{EU}$.

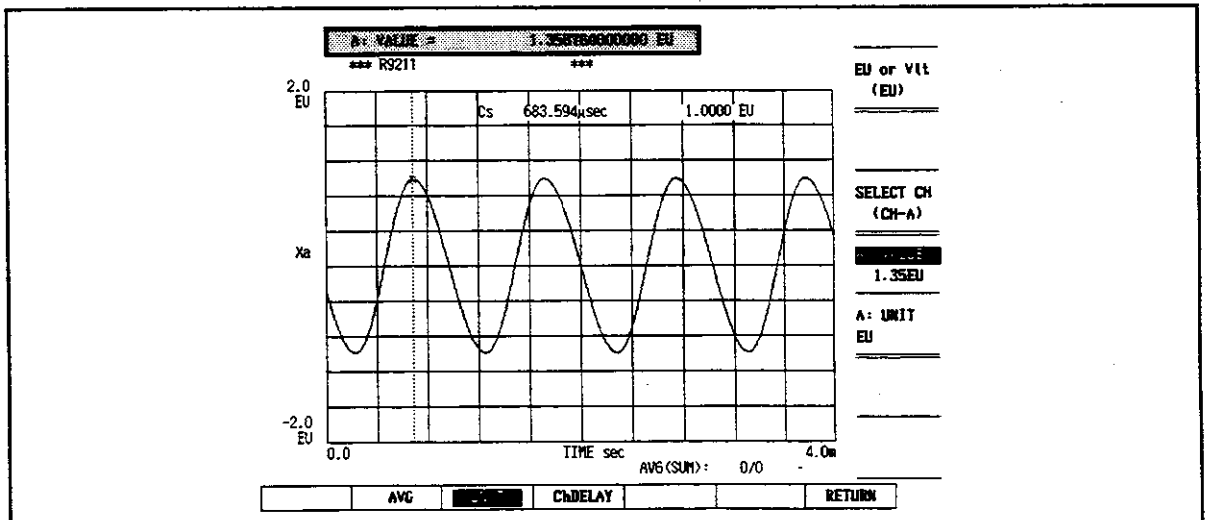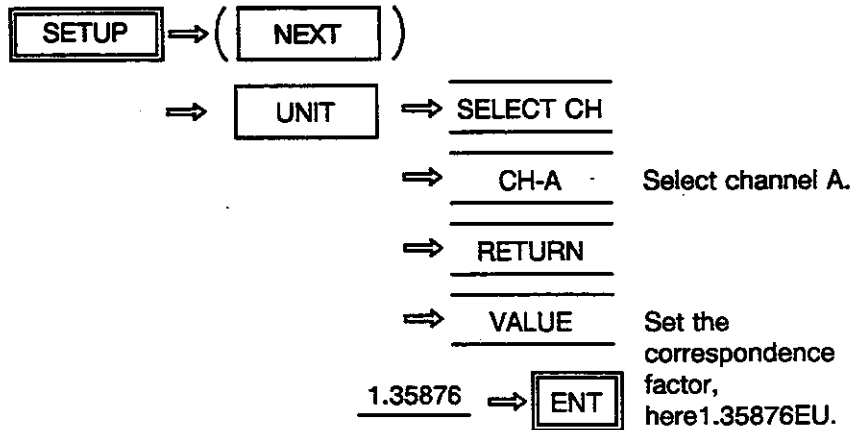

3. Toward Better Measurement

● Acceleration Sensor Scaling

When the output of an acceleration sensor is connected to an input of the R9211, you must change the scale to be able to read directly the acceleration values.

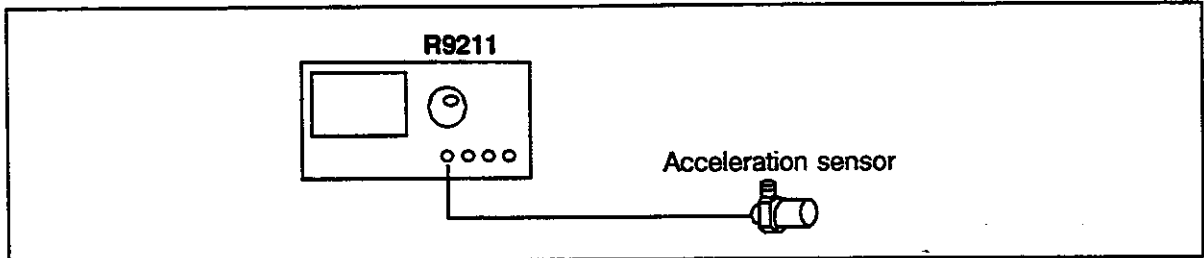

When the sensitivity of the acceleration sensor is S mV/g, it means that S mV corresponds to $1g$ (or $1EU$). Scaling can be carried out easily by displaying a linear spectrum. In this case, the correspondence factor is $1/(S \times 10^{-3})$. After scaling, the gravitational acceleration (g) can be directly read. The gravitational acceleration unit is converted to the MKS unit system as follows:

$$1g = 9.8 \text{ m/sec}^2$$

When scaling is carried out in the MKS unit system, the correspondence factor is the following one :

$$\{1/(S \times 10^{-3})\} \times 9.8 \times \sqrt{2}$$

The velocity and displacement can then be obtained by multiplying the acceleration by $1/j\omega$ and $1/(j\omega)^2$ respectively. (these operations are available in the math menu).

CAUTION !

Here displacements were expressed in meters, (MKS unit system), but practically displacements are often expressed in millimeters. In such cases the correspondence factor is $\{1/(S \times 10^{-3})\} \times 9800 \sqrt{2}$. In this case, acceleration is expressed in mm/sec^2 while velocity is expressed in mm/sec .


● PSD

When measuring the noise level generated by, for example, a semiconductor, it happens that, for the same measurement, different noise values are displayed depending on the frequency range set. This is because the frequency resolution depends on the analysis range and window type.

When measuring the PSD (power spectrum density), the measurement result is converted to the power per Hz, thus, the same result is displayed whatever the analysis range may be. Moreover, the equivalent noise band width, different for each window, is compensated. The unit as well is displayed as must be: if Mag, Mag² or dBMag is selected, then the unit displayed is V/\sqrt{Hz} , V^2/Hz and dBV/\sqrt{Hz} respectively.

3. Toward Better Measurement

[Setup Procedure]

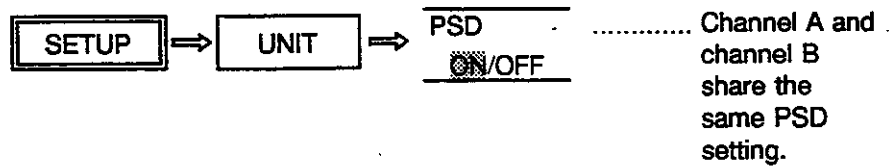


■ Post Measurement Computations (Typical Examples)

In this section, several often used post computations examples are described: Derivation and integration operations ($j\omega$ operations) through which it is possible to convert an acceleration to a velocity or to a displacement, Hilbert transform which enables to measure the envelope of a modulated signal are described below.


● $j\omega$ Operations

For example, the signal output from the acceleration sensor is a voltage proportional to the acceleration measured by the sensor. The relationships between acceleration, velocity, and displacement are the following ones:

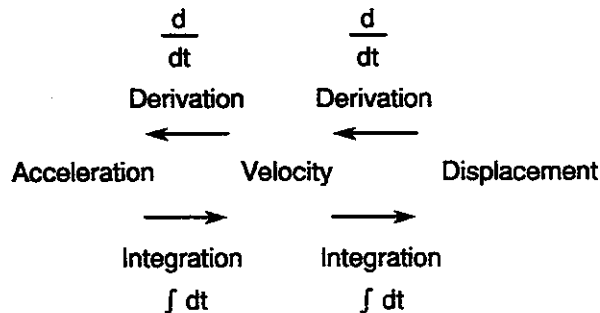

An integration in the time domain corresponds to a multiplication by $(\frac{1}{j\omega})$

in the spectrum domain. A derivation in the time domain corresponds to a multiplication by $(j\omega)$ in the spectrum domain. In the spectrum domain, the relationships between acceleration, velocity, and displacement are the following ones:

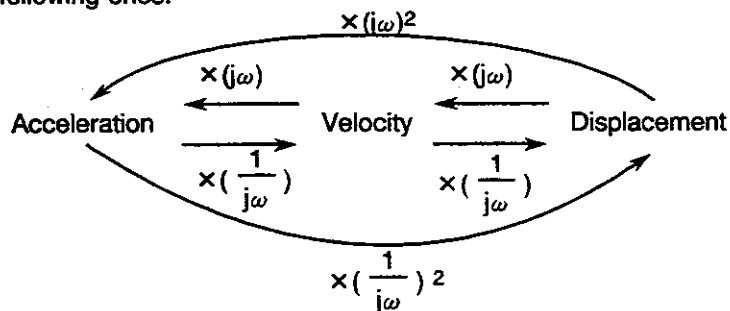


As for R9211's " $j\omega$ operations", you can set the working frequency domain's limits and an operation threshold. Data smaller than the specified threshold are not processed.

3. Toward Better Measurement


[How to multiply data by $(1/j\omega)^2$]

Display the spectrum you want to multiply by $(1/j\omega)^2$ on the R9211's screen.


In the double screen configuration, specify the waveform to be subjected to the operation by pressing the following keys:

MATH ⇒ **SEL** 

The waveform to be subjected to this operation must be frequency domain data. The time domain data cannot be specified for this operation.

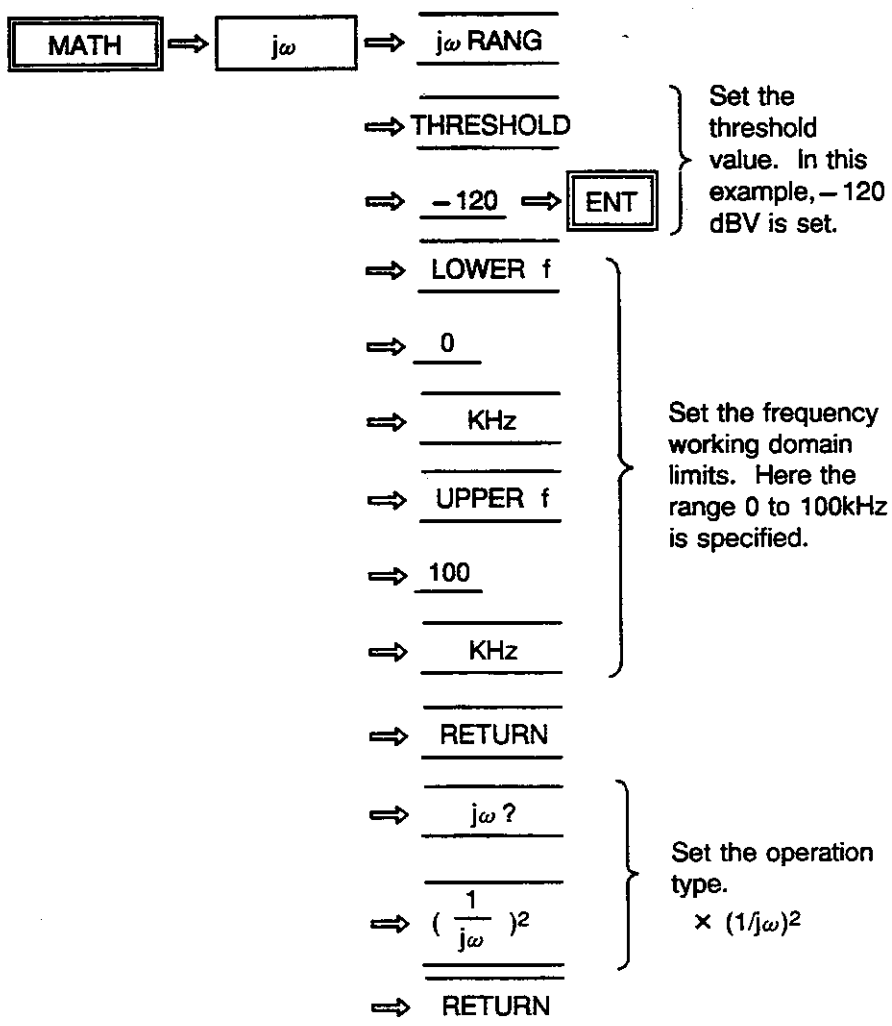

3. Toward Better Measurement

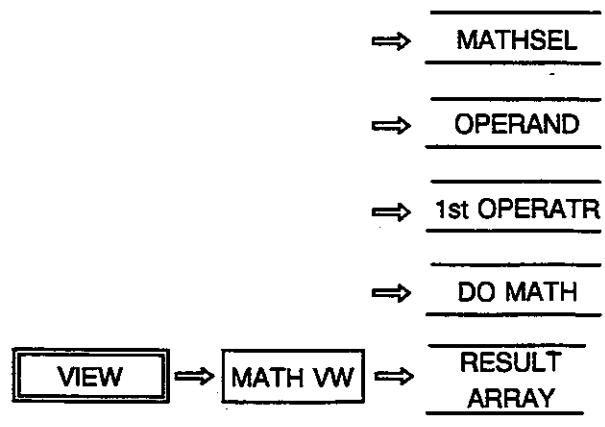

Thus, the operation result can be displayed.
 If the function subjected to this operation is the output of the acceleration sensor, the operation result is the corresponding displacement.
 Set an engineering unit in order to display the displacement expressed in millimeters (mm). For further details, see the explanation about the engineering unit (p. 7-27 to 7-33).

● Hilbert Transform

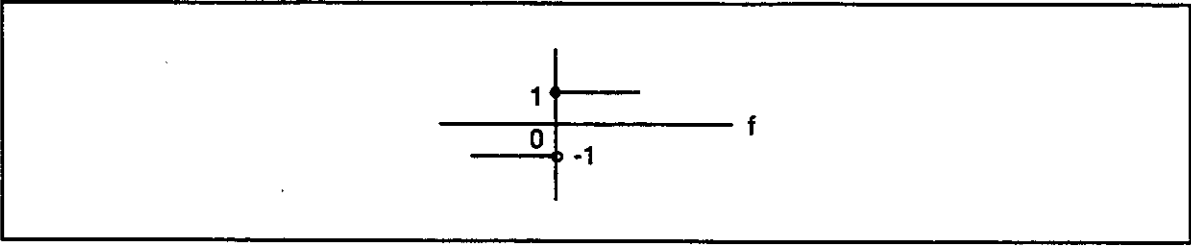


Figure 7-11 Rectangular Filter Transfer Function

Devices presenting a frequency response function such as shown in Figure 7-11 (including the negative frequencies) are called. Let $X(t)$ stand for the time series data.

If $X(t)$ is input to a rectangular filter and if we call $\hat{X}(t)$ the series output from it, then $\hat{X}(t)$ is called Hilbert transform of $X(t)$.

Suppose $Z_a(t) = X(t) + j \hat{X}(t)$,

where, $j = \sqrt{-1}$,

then, $Z_a(t)$ is called the pre-envelope of $X(t)$. And the absolute value of $Z_a(t)$, $|Z_a(t)|$, is called the envelope of $X_a(t)$. $|Z_a(t)|$ describes the envelope of the modulated signal.

3. Toward Better Measurement

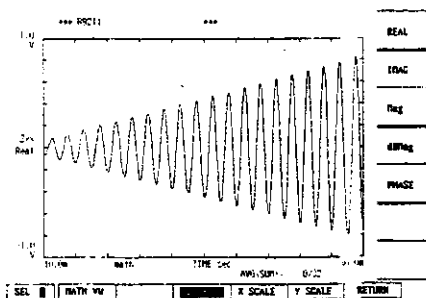


Figure 7-12 Modulated Signal

Computation of the envelope
⇒

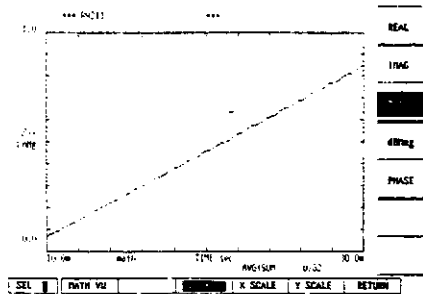


Figure 7-13 Envelope of the Modulated Signal

To compute the envelope of a signal, you must proceed as is now explained:
 Display the real part, the imaginary part, or phase of the signal's spectrum on the R9211's screen.
 If you are working with a multiple screens configuration, select the



proper data with the **VIEW** ⇒ **SEL** keys.

Specify the data to be subjected to the operation (real part, imaginary part, or phase of the spectrum).

NOTE


To display the real part, the imaginary part, or the phase of the spectrum data, execute the following procedure (select the spectrum

screen by pressing the **VIEW** ⇒ **SEL** keys in the multiple screen configuration, then execute the following procedure):

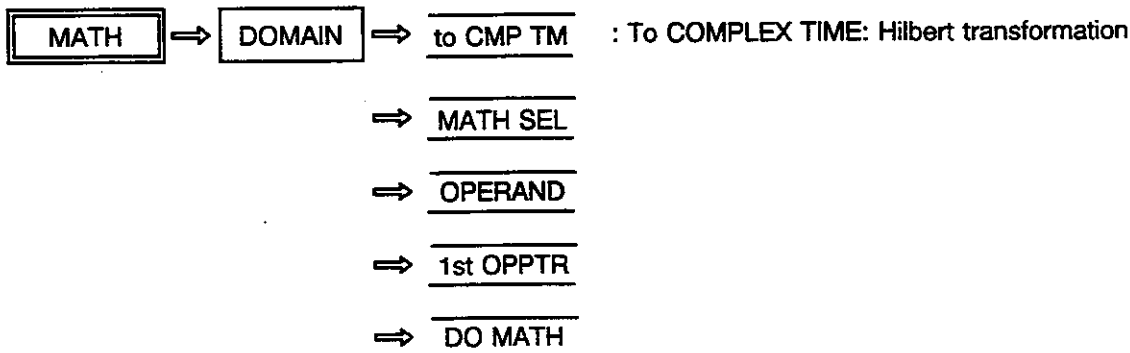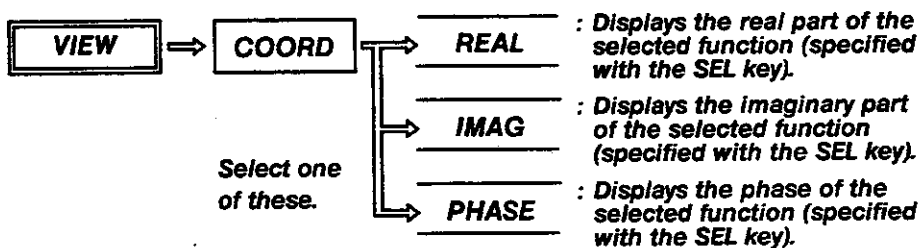

3. Toward Better Measurement

In a multiple screen configuration, press **VIEW** ⇒ **SEL** to specify the position where to display the results.

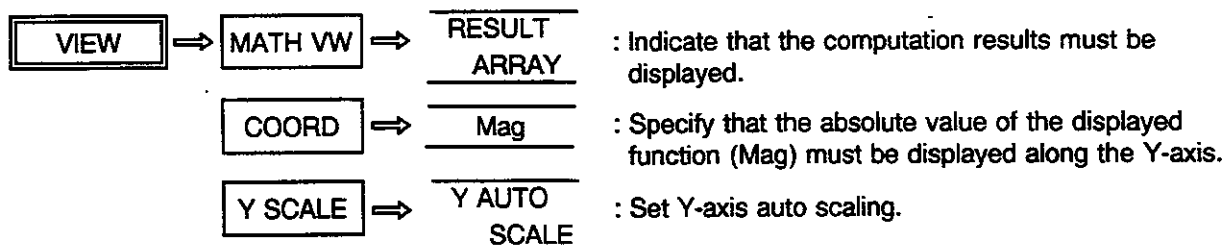

■ Zoom (R9211A only)

● Function

The zoom function is designed to zoom in a frequency domain defined by its lower (start f) and upper (stop f) limits. The zoom spectrum is computed on 800 lines, representing the smallest span among those listed in the following table, which contains the span you specified.

Zoom span
50 kHz
20 kHz
10 kHz
5 kHz
2 kHz
1 kHz
500 Hz
200 Hz
100 Hz
50 Hz
20 Hz
10 Hz
5 Hz
2 Hz
1 Hz
500mHz
200mHz
100mHz
50mHz
20mHz
10mHz

If the start frequency is set to 3kHz and the end frequency is set to 7kHz, the span is equal to 4kHz. According to the table to the left, the minimum span containing 4kHz is 5kHz. It means that a 5kHz, 800line analysis is performed.

In this case, the analysis resolution is equal to:

$$\frac{5\text{kHz}}{800\text{lines}} = 6.25\text{Hz /line}$$

The displayed domain has nonetheless 3kHz and 7kHz as limits.

3. Toward Better Measurement

● Zoom's Limitations

When the zoom function is running, there are some functions you may not use at the same time, as well as other restrictions. The table hereunder describes the zoom's limitations:

Table 7-4 Zoom's Limitations

Function	Restriction type
Zoom analysis in the waveform mode	Prohibited
Switching mode while zooming	Enabled but stops the zoom procedure
Trigger mode switching to AUTO ARM while zooming	Prohibited
Trigger mode switching to ARM while zooming	Prohibited
Zoom analysis in AUTO ARM mode	Prohibited
Zoom analysis with f-RESOLN set to LOG f	Prohibited
Zoom analysis with f-RESOLN set to 1/3 OCT f	Prohibited
Zoom analysis with f-RESOLN set to 1/1 OCT f	Prohibited
Modifying f-RESOLN while zooming	Prohibited
Switching active-channel while zooming	Prohibited
Modifying LINE/SPAN while zooming	Prohibited
DATA VIEW while zooming	Prohibited
T-F analysis while zooming	Prohibited
Changing the zoom parameters while using DATA VIEW	DATA VIEW switches from ON to OFF
Changing the zoom parameters during T-F analysis	The T-F analysis switches from ON to OFF

● General Notes

- (1) When the zoom function is used, the antialiasing filter cannot be turned off.
- (2) When the zoom function is used, select a manual mode to adjust the sensitivity range.

3. Toward Better Measurement

● Zoom Analysis Setup (R9211A only)

If you press the key sequence: **SETUP** ⇒ **RANGE**, you will obtain the following Y soft menu:

f RESOLN (LIN f)	}	Select the linear frequency resolution (LIN f) when you want to perform a zoom analysis.
FREQRNG *		
100kHz	}	Pressing the FREQRNG or STARTf key will move the * mark. FREQRNG* : Zero start analysis. START f * : Zoom analysis.
START f 0.0kHz		
STOP f 100.00kHz		
kHz		
Hz		
mHz		

SETUP ⇒ **RANGE** ⇒ **START f *** : * moves.

⇒ 10	}	Input the analysis start frequency.
⇒ Hz		
⇒ STOP f *	}	Input the analysis end frequency.
⇒ 30		
⇒ Hz		

4. Typical Measurement Examples

■ Calibration of a Noise Meter

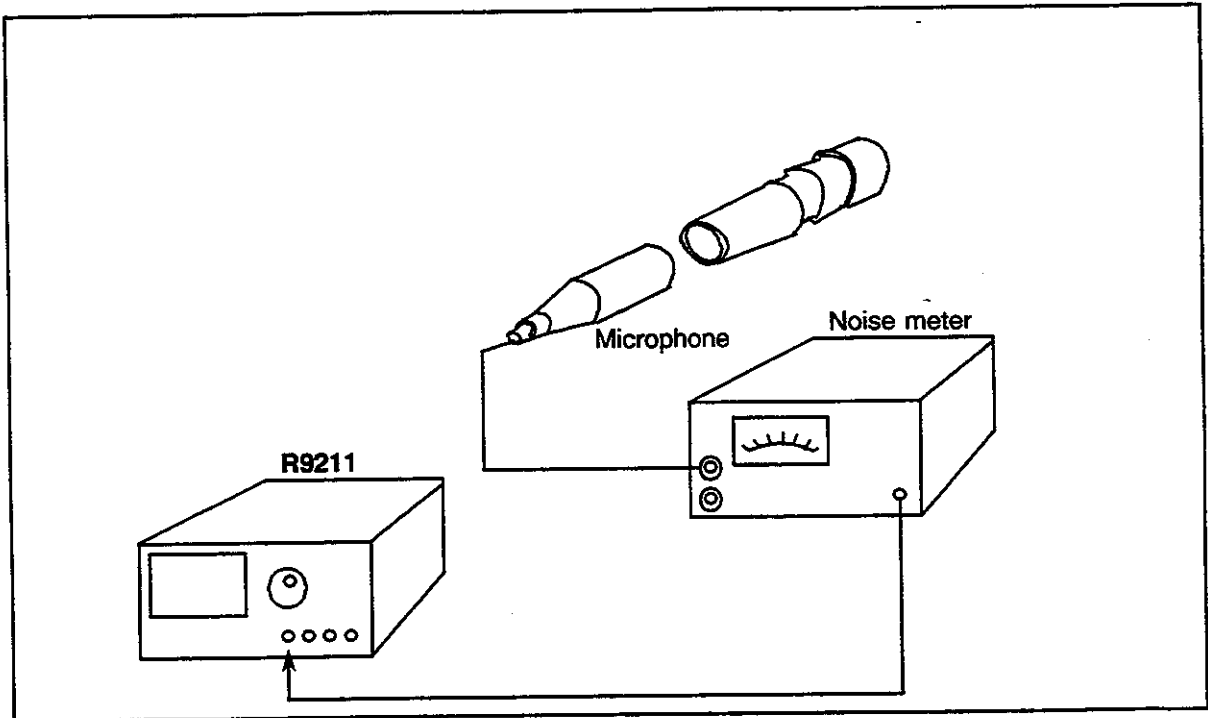


Figure 7-14 Calibration of a Noise Meter with a Pistonphone

We use a pistonphone to calibrate a noise meter. Since the calibration value of the pistonphone is 114dB, we adjust the noise meter so that the noise generated from the pistonphone becomes 114dB. We select the overall marker of the R9211 and define an engineering unit so that the marker value becomes 114dB.

4. Typical Measurement Examples

1

Connect a pistonphone as shown in Figure 7-14 and apply the calibration sound pressure to the microphone.

2


Select the SPECTRUM mode.



You may also select TIME-FREQ.

3


Set octave analysis conditions.

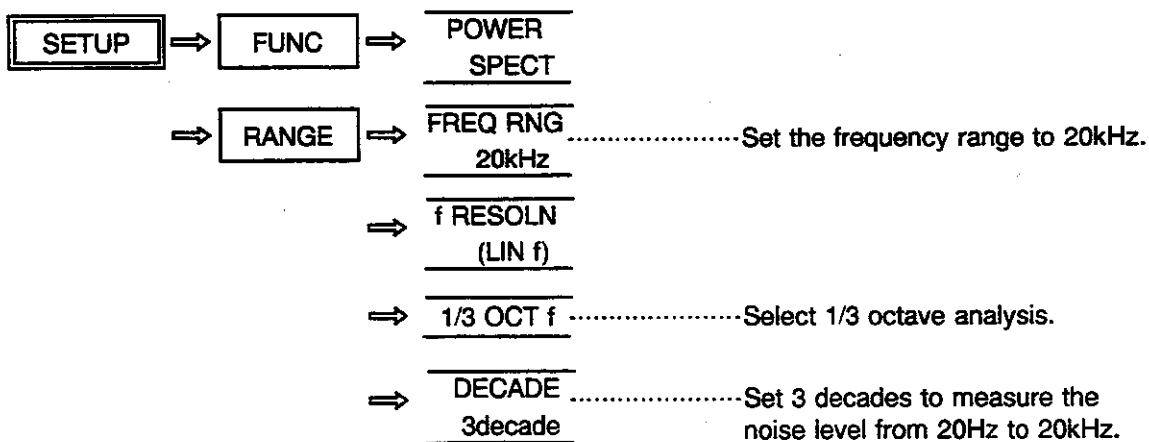

4

Set the input sensitivity.


Set the input sensitivity so that the NORM lamp (green) on the front panel lights.



4. Typical Measurement Examples

5



Set the markers.

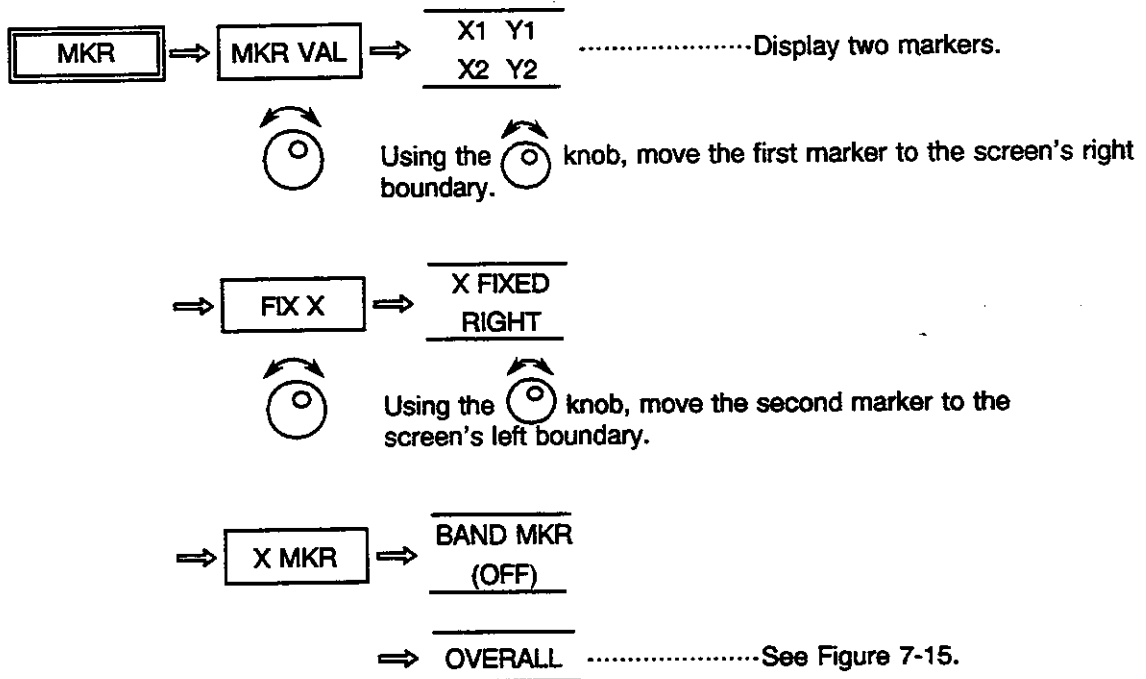

6

Define an engineering unit.

Define a new scale, so that the values displayed on the screen indicate noise levels. Since the overall marker's reading is -5.85453dBV , define the engineering unit so that this value corresponds to 114dBEU .

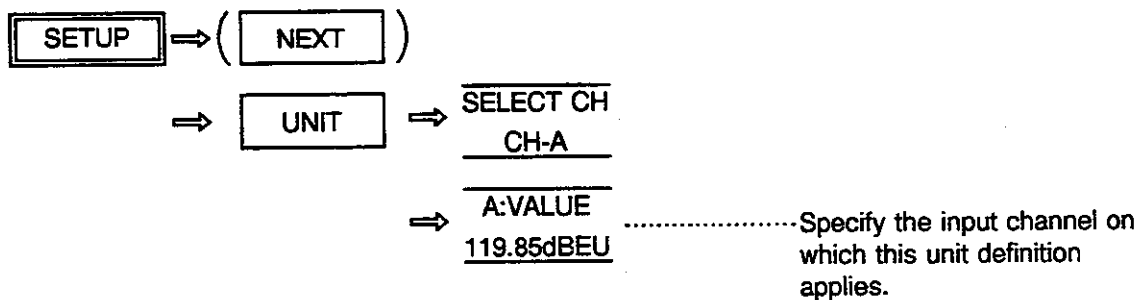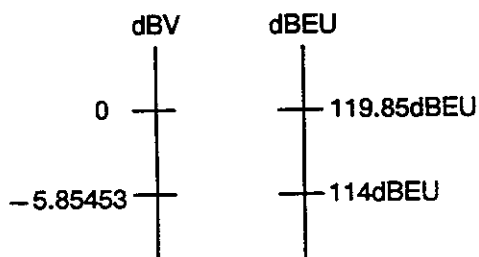

4. Typical Measurement Examples

→ A:UNITSelect 1/3 octave analysis.

Using the  knob and  key, define the name of this engineering unit.

- EU or Vlt
(Vrms)
- EU
- RETURN

} Indicate that the display is expressed with this engineering unit.

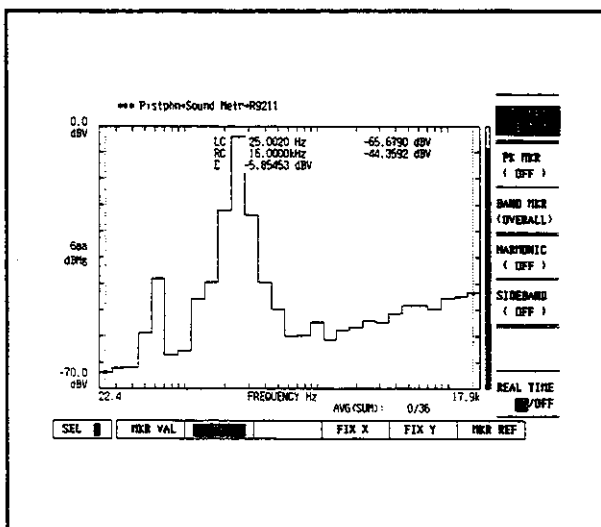


Figure 7-15 Display of the Overall Marker

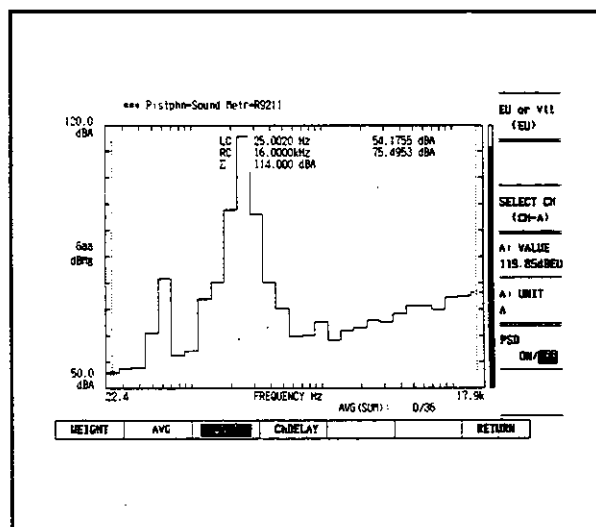


Figure 7-16 Display of the Calibration Value

4. Typical Measurement Examples

■ Measurement of the Characteristics of an Unevenly Rotating Device

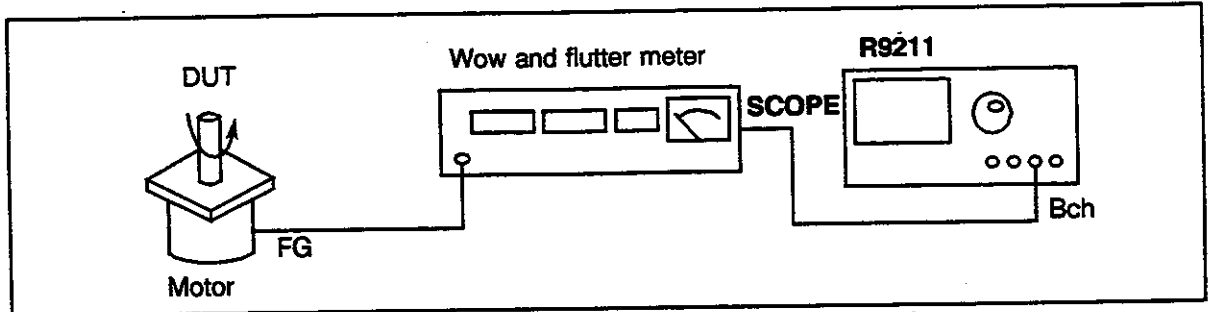


Figure 7-17 Measurement of Irregular Rotations

When the motor is rotating, frequency generator (FG) pulses are generated according to the magnetic field. To measure the motor rotation irregularities, these pulses are transmitted via the wow and flutter meter to the FFT analyzer which will analyze the frequency components of this irregular rotation.

The SCOPE socket of the wow and flutter meter outputs only the irregular elements contained in the FG pulses as an analog signal.

In this example, 240 pulses per rotation of a motor, rotating at 250rpm, are electrically picked out and sent to the wow and flutter meter's input.

● Wow and Flutter Meter's Setup

W & F	: ON
INPUT	: L.P.F
FUNCTION	: UNWEIGHTED
INDICATION	: RMS
C. FREQ	: AUTO ON
MEMORY	: OFF
REPEAT	: ON
F. FREQ	: 1/4. 3
RANGE	: f. S 3.0%

4. Typical Measurement Examples


● R9211's setup

1 Connect the DUT and the wow and flutter meter as shown in Figure 7-17.

2 Select the mode.




3 Set the frequency range.

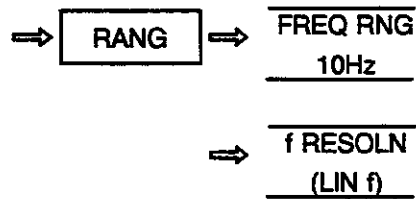

4 Set the input sensitivity.




5 Set the window.

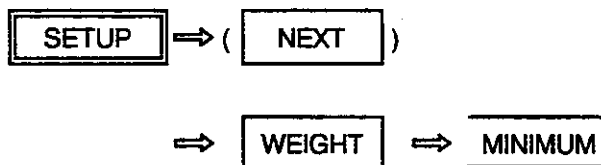


4. Typical Measurement Examples


6 Set the number of averages.



7 Start averaging.



8 Select the data to be displayed.



When you reach this point, you will visualize the same display as the one shown on the upper diagram, Figure 7-18.


9 Set the marker's type and position.



Using the knob, points the marker to the data you are interested in.

10 Set the zoom control parameters. (R9211A only)

Since the averaged results indicate that the peak frequency is located at 462.5mHz, zoom this area.



When you reach this point, you will visualize the same display as the one shown on the lower diagram, Figure 7-18.

4. Typical Measurement Examples

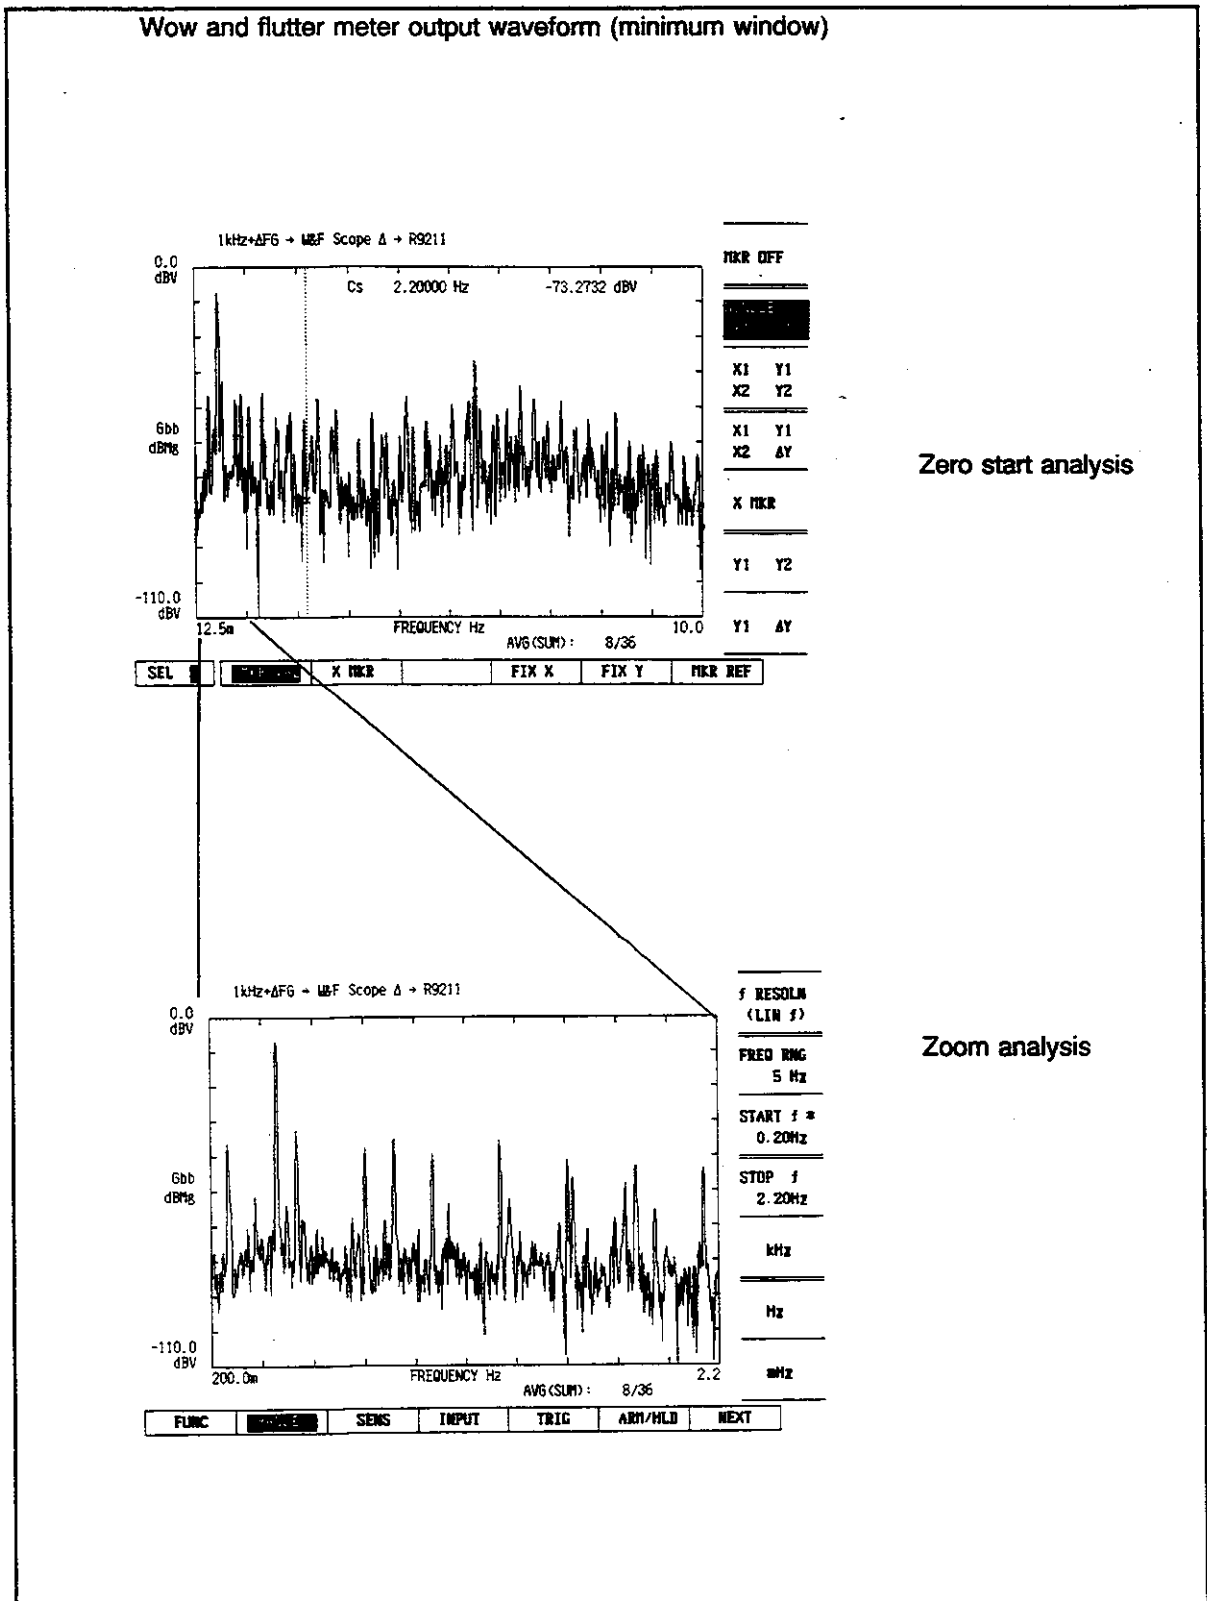


Figure 7-18 Irregular Rotation Frequency Analysis

4. Typical Measurement Examples


■ Advanced Measurement (T-F Mode)

● Measurement of the Damping Factor of a Metal Plate (Acquiring Data in T-F Mode)

We shall describe here an example of an application of the T-F mode : measurement of the damping factor of a steel plate under vibrations. An acceleration sensor is fixed on the steel plate, then vibrations are induced to the plate with a hammer, so that the damping factor of the plate can be measured. The measurement procedure up to the storage of the data in the input buffer is described here. How to display the acquired data in 3-dimensions, and how to gather the damping factor through T-F tracing, are explained in the next section.

1

Connect the metal plate as follows:

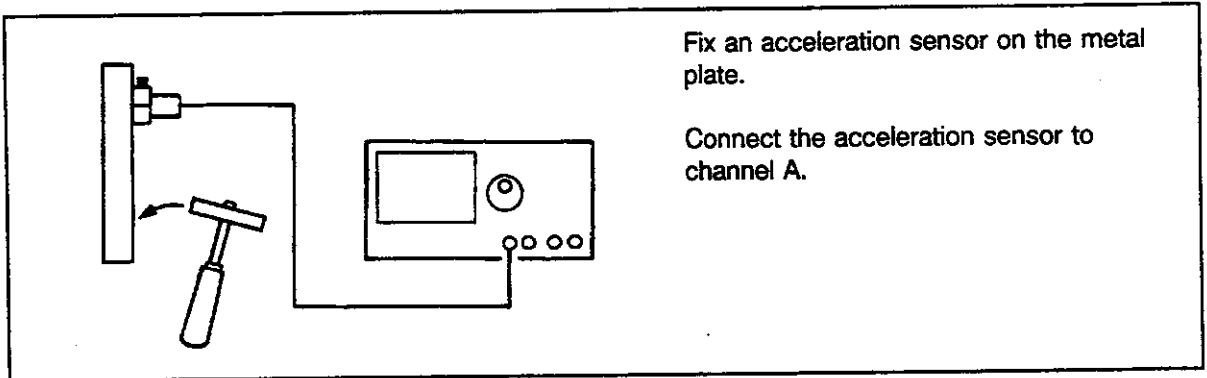


2

Select the T-F mode.




3

Set the frequency range.

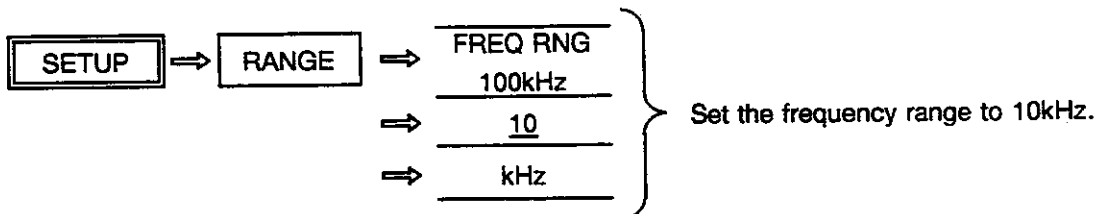


4. Typical Measurement Examples

4 Switch the acceleration sensor.

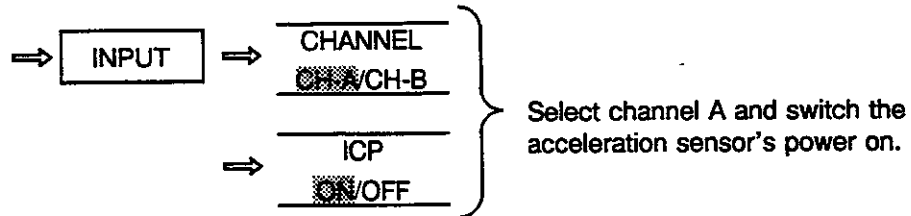


5 Set a window.

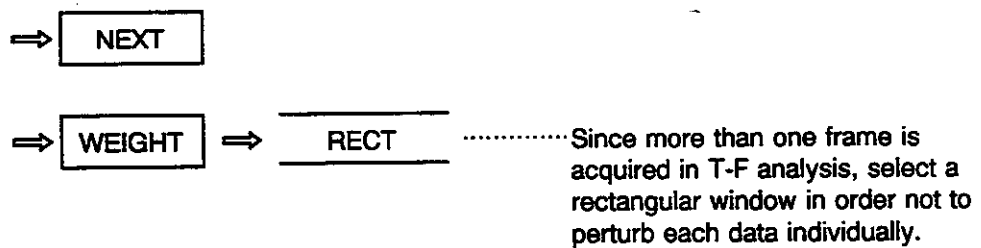


6 Set the input sensitivity.

Strike the metal plate and adjust the input sensitivity so that the NORM lamp on the front panel lights.

Always try to strike the metal plate with the same strength.

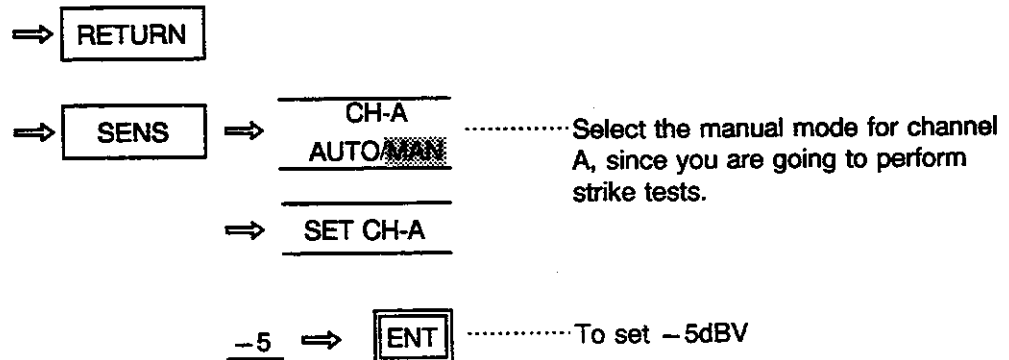

7 Set up the trigger.

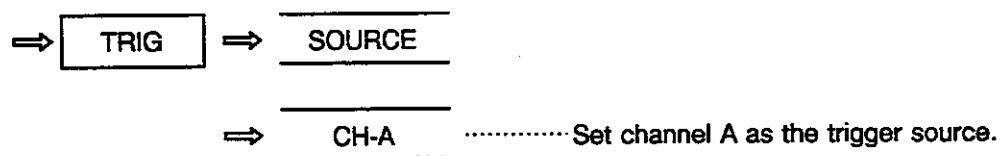

4. Typical Measurement Examples

- ⇒ RETURN
- ⇒ SLOPE Trigger along the positive slope of the signal.
- ⇒ +SLOPE
- ⇒ RETURN
- ⇒ LEVEL
- ⇒ 100 ⇒ ENT Set a trigger level (mV) so that noise will not perturb triggering. The unit is the mV.
- ⇒ HYSTERESI 3 bis Usually, this level is set to 0V. This setting is required only when the noise is very important.
- ⇒ 0 ⇒ ENT
- ⇒ DELAY A second Y menu page is displayed.
- ⇒ DELAY Press this key again.
- ⇒ -20 Set -20 ms.
Since one frame length is 40ms, and the frequency range 10kHz, triggering is done at the center of the frame.
- ⇒ msec
- ⇒ ARMLLEN Set the length of the data frame.
- ⇒ 8 ⇒ ENT By setting 8 kilowords here, 8 data frames shall be analyzed.

8 Arm.

ARM/HLD ⇒ ARM



4. Typical Measurement Examples


9

Strike the metal plate.

Strike the metal plate with the same strength as when you were performing the tests (input sensitivity).

If the NORM lamp lights, the input sensitivity is correct.

If the OVER lamp lights, press :

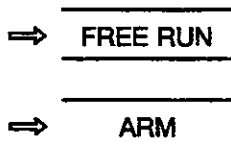

then, strike the metal plate again.

10


Data acquisition's completion.

The lighting of the front panel's HOLD lamp indicates the completion of the data acquisition process.

11

Select the appropriate form of display.

Check the data with DATA VIEW.

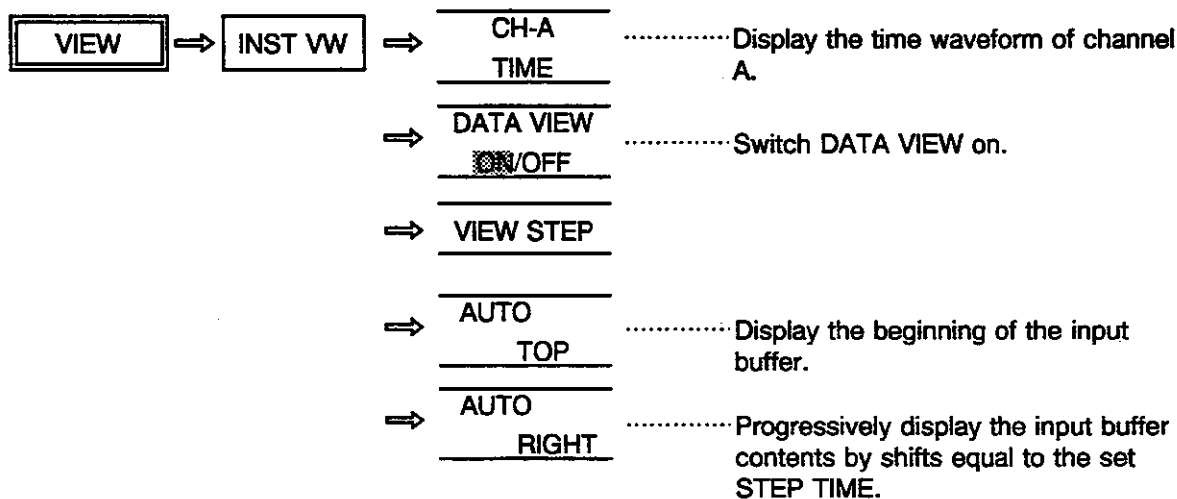

Thus, the input buffer contents are displayed gradually. How to display the input buffer contents in 3-dimensions, and how to gather the damping factor through T-F tracing, is explained in the following section.


4. Typical Measurement Examples

● Three-dimensional Display in T-F Mode

You can display the data sampled in the T-F mode on the 3-dimensional screen in the following procedure :


1

Display the spectrum data.

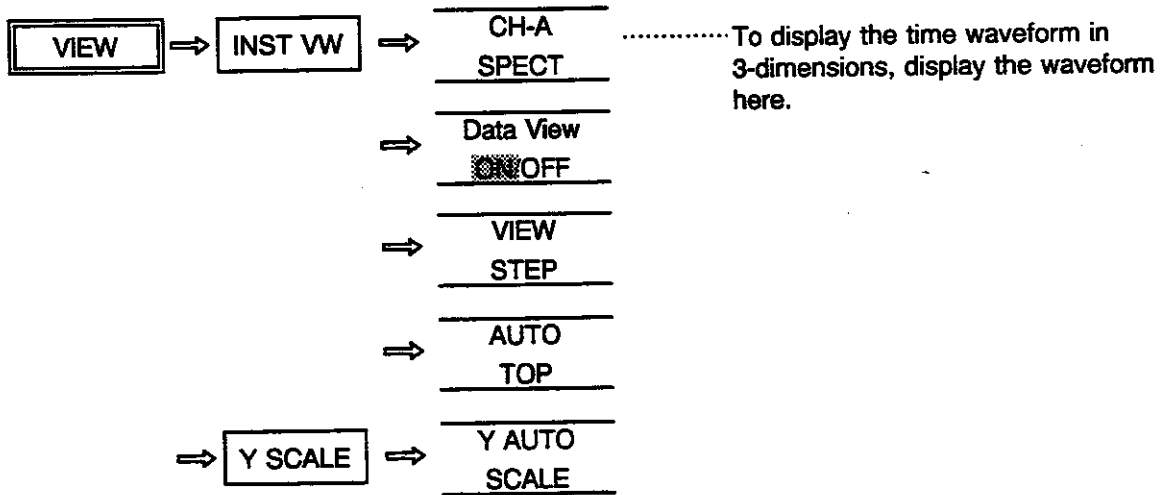

2

3-dimensional display's setup.

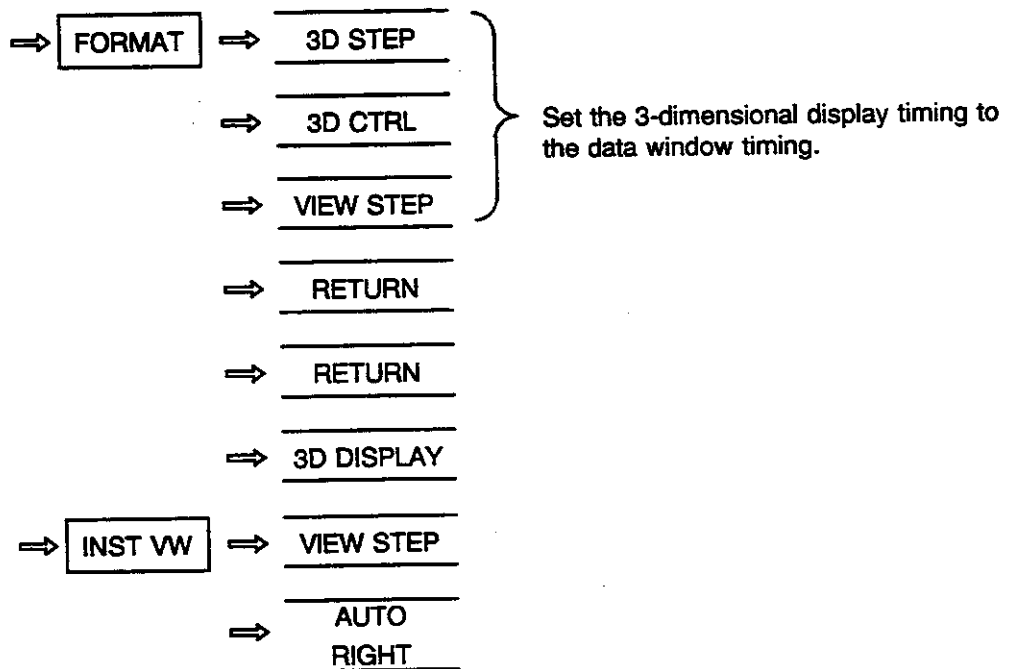

4. Typical Measurement Examples

3-dimensional display starts. However, since the amplitude of the front data is larger than that of the rear data, it is very difficult to read the graph. To improve this, first press AUTO RIGHT to display the data up to an appropriate place, then press:

⇒ AUTO
LEFT

Then, the data of smallest amplitude are displayed at the front of the screen, and the data of the beginning of the buffer are display at the back of the screen. (Figure 7-19)

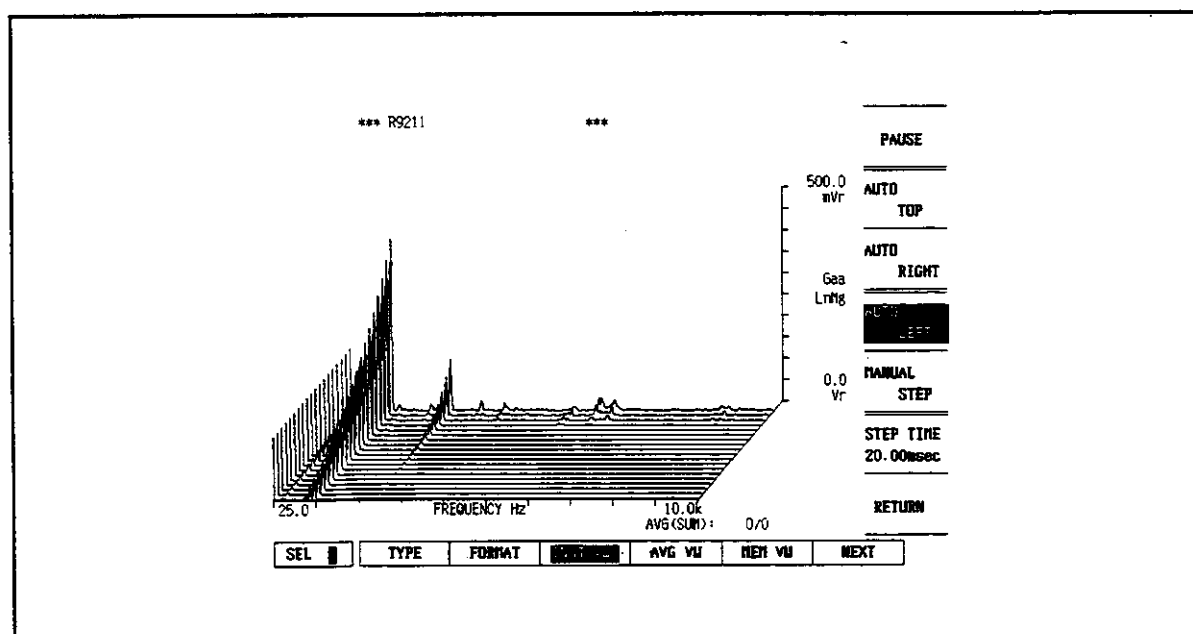



Figure 7-19 3-dimensional Display in T-F Mode

4. Typical Measurement Examples

● **Measuring a Damping Factor through T-F Tracing**

We explained in a previous section how to acquire data for the T-F mode. We shall describe now how to proceed to measure a damping factor using T-F tracing (Time-Frequency) and the marker.


1 **Looking for the resonance frequency.**

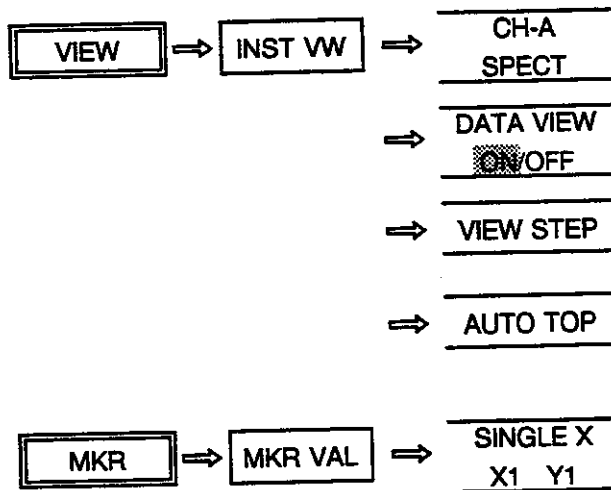


Using the  knob, move the marker to find the resonance frequency.

(Suppose that the resonance frequency is found at 1kHz.)


2 **T-F trace setup.**

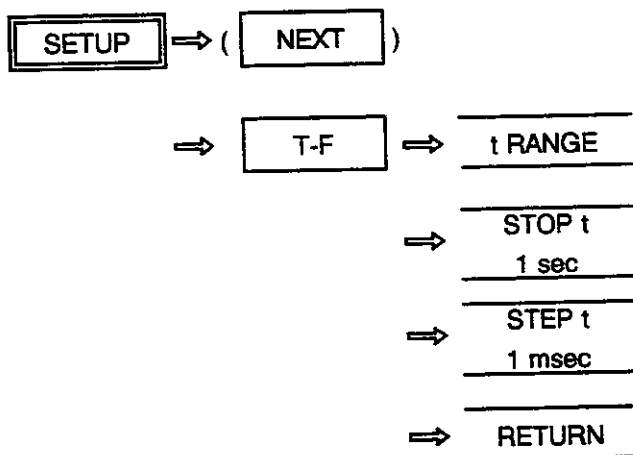


4. Typical Measurement Examples

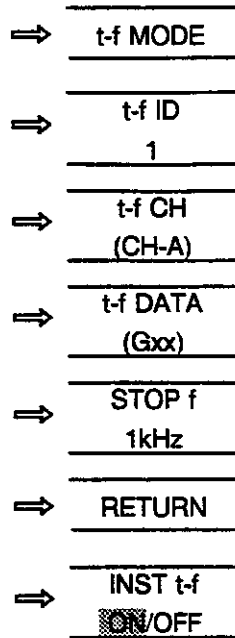

3 Start T-F tracing.



4 Select the appropriate form of display.

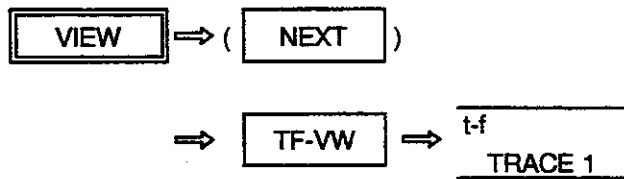

The time-frequency characteristics are drawn up.



4. Typical Measurement Examples




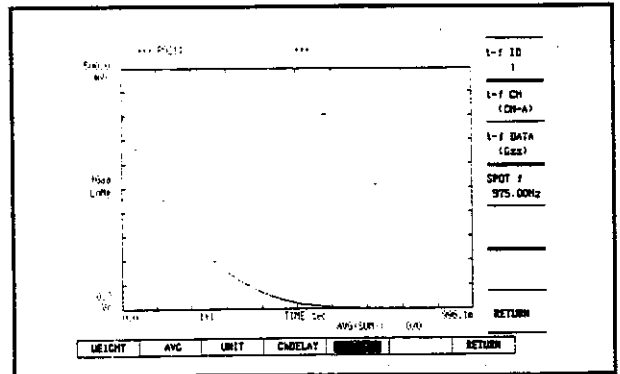


Figure 7-20 Time-frequency Characteristic

5 Set the damping markers.



Enclose the portion subject to damping factor measurement with two markers.



The damping factor is displayed.

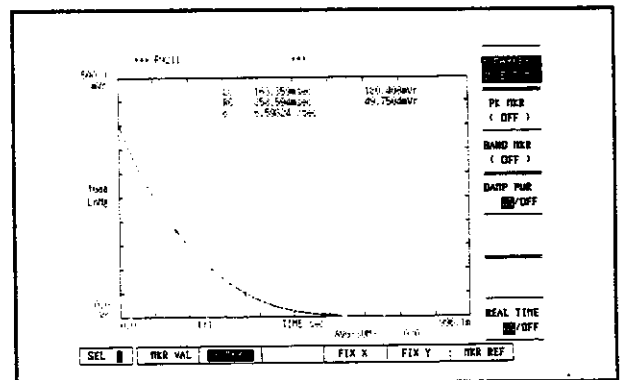


Figure 7-21 Display of the Damping Factor of a Metal Plate

CHAPTER 8

WAVEFORM MODE

This chapter describes the analysis procedure in the waveform mode, provides the necessary information about such measurements, and illustrates this mode through examples.


CONTENTS

1. An Introduction To The Waveform Mode ..	8-2
2. Basic Setup Procedure	8-3
Waveform Observation Setup Procedure ..	8-3
Histogram Measurement Setup Procedure .	8-6
Correlation Function Measurement Setup Procedure	8-7
3. Toward Better Measurement	8-9
Sampling Rate and Number of Points	8-9
Trigger	8-11
Trigger Position Marker	8-15
Lag Window	8-16
Engineering Unit	8-16
4. Typical Measurement Example	8-17
Pulse Rise Time Measurement	8-17

1. An Introduction To The Waveform Mode

The waveform mode is designed for the analysis in the time domain of signals input to channel A, channel B, or the digital I/O connector. No frequency domain analysis is possible, but the following features are provided.

- (1) High resolution observations can be made on time waveforms.
- (2) Histogram measurements are enabled.
- (3) Correlation measurements are enabled.

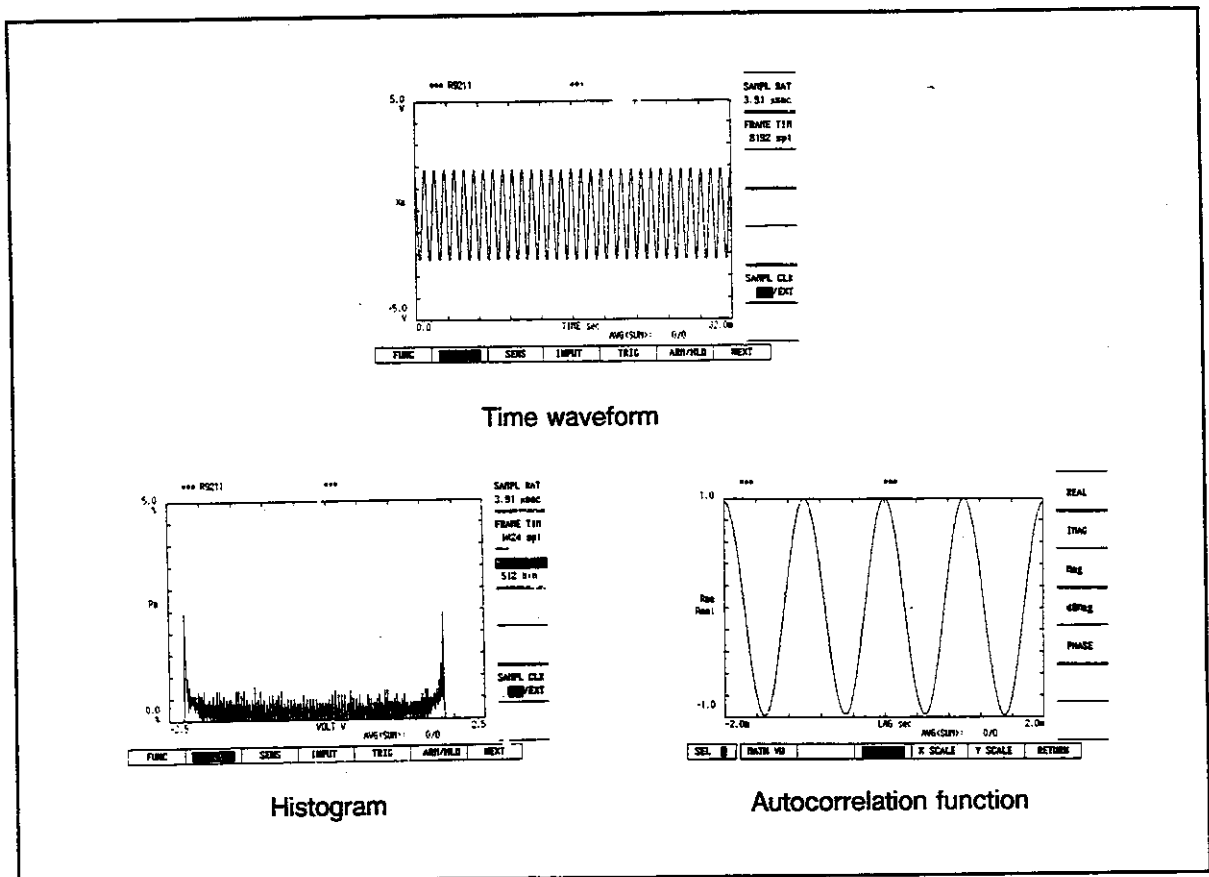

Histograms and correlation functions can be measured only in the waveform mode.


2. Basic Setup Procedure

■ Waveform Observation Setup Procedure

Hereunder, is described the setup procedure followed for studying a time waveform.

1 Input the signal to be measured to channel A or channel B.

Suppose that a 2 V_{p-p} sine wave is input from the DUT to the R9211.

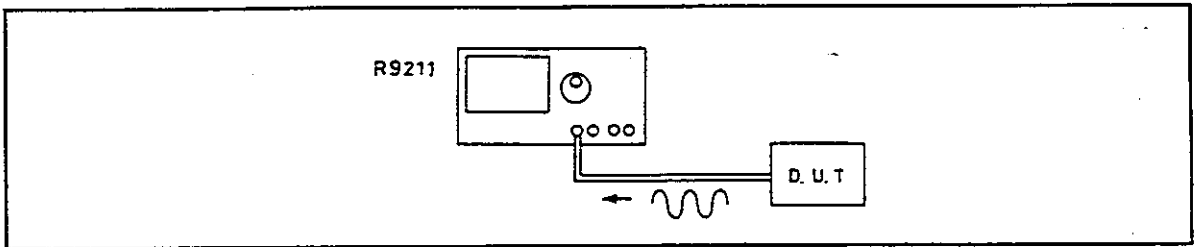



2 Select the waveform mode.

MODE ⇒ **MEAS** ⇒ WAVEFORM : Select the time domain measurement mode.

3 Select the time waveform function.

SETUP ⇒ **FUNC** ⇒ TIME : Select the time axis waveform function.

4 Set the sampling period and the number of points.

⇒ **RANGE** ⇒ SAMPL RAT
3.91 μ sec : Set with the  key or the  key.
FRAME TIME
1024spl


5 Set the input sensitivity.

⇒ **SENS** ⇒ CH-A
AUTO/MAN : Select AUTO as the input sensitivity mode.




2. Basic Setup Procedure


6 Switch off the antialiasing filter.



7 Set the trigger control parameters.

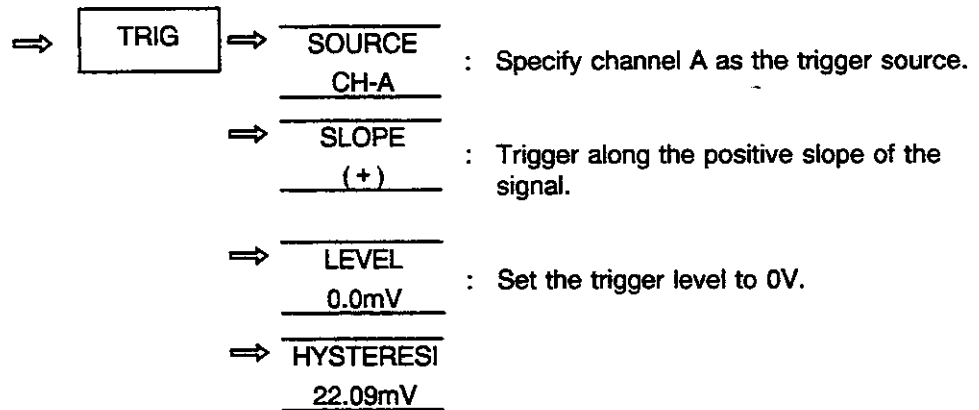

8 Set the averaging conditions.

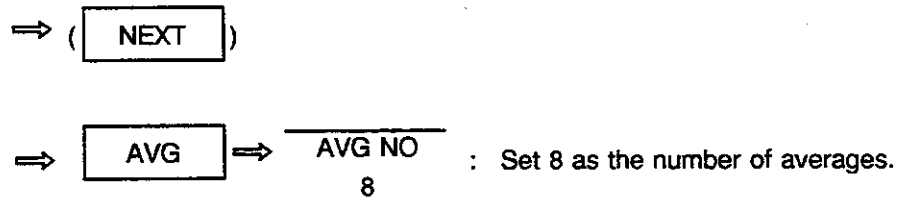

9 Select the AUTO ARM mode.



10 Start averaging.



11

Select the double screen configuration.

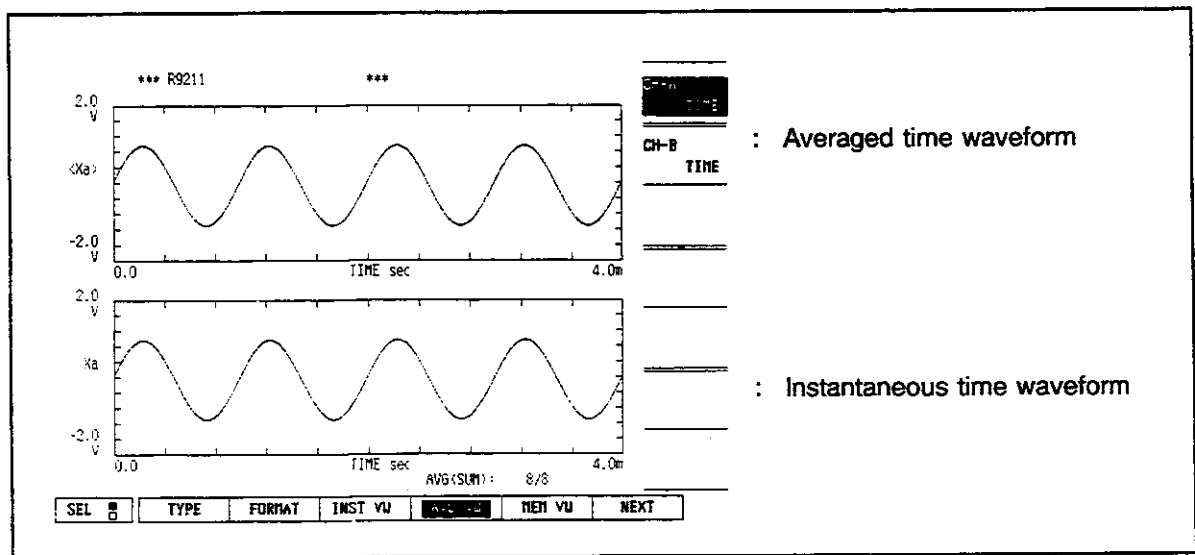
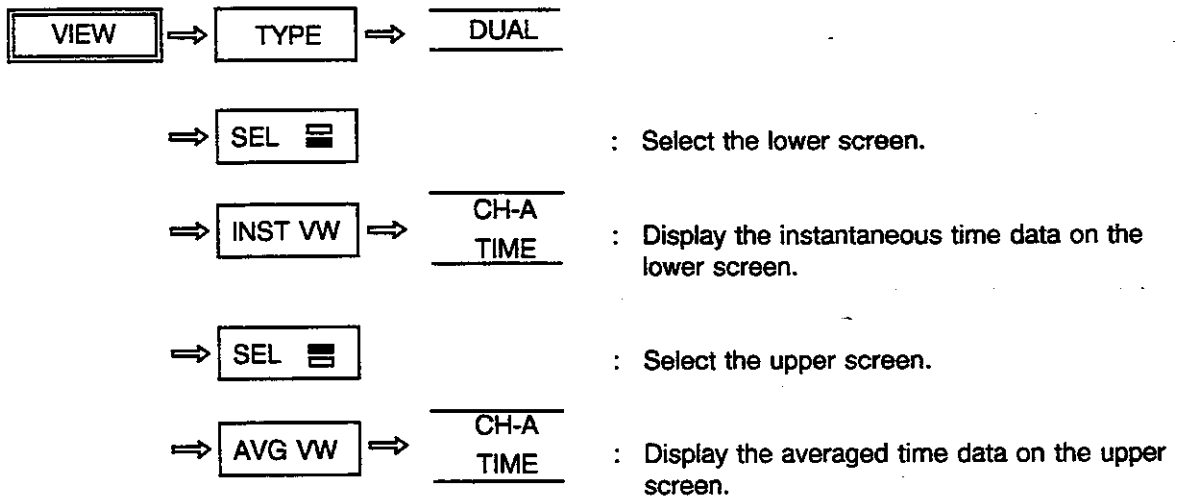


Figure 8-1 Time Waveforms Generated when a Sine Waveform is Input to the Analyzer

2. Basic Setup Procedure

■ Histogram Measurement Setup Procedure

Hereunder is described the procedure followed for the measurement of a histogram.

1

Select the waveform mode.




2

Select the histogram analysis function.



3

Set the sampling rate and the number of points.

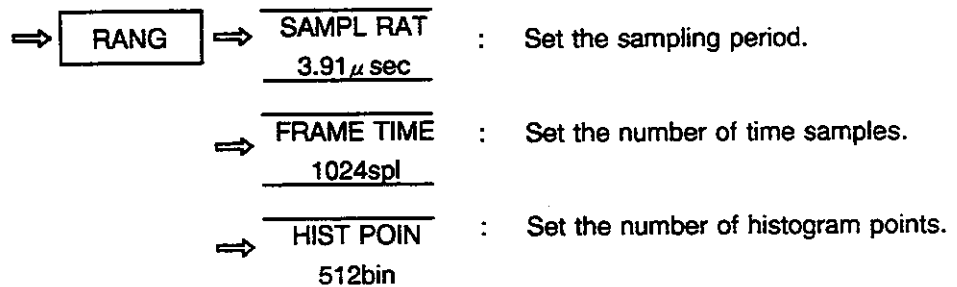

The procedure you must now follow is the same as the one used for time waveforms observations. Since this procedure has already been described, it is not described again here. You should refer to the previous section. (p.8-3, ...)

2. Basic Setup Procedure

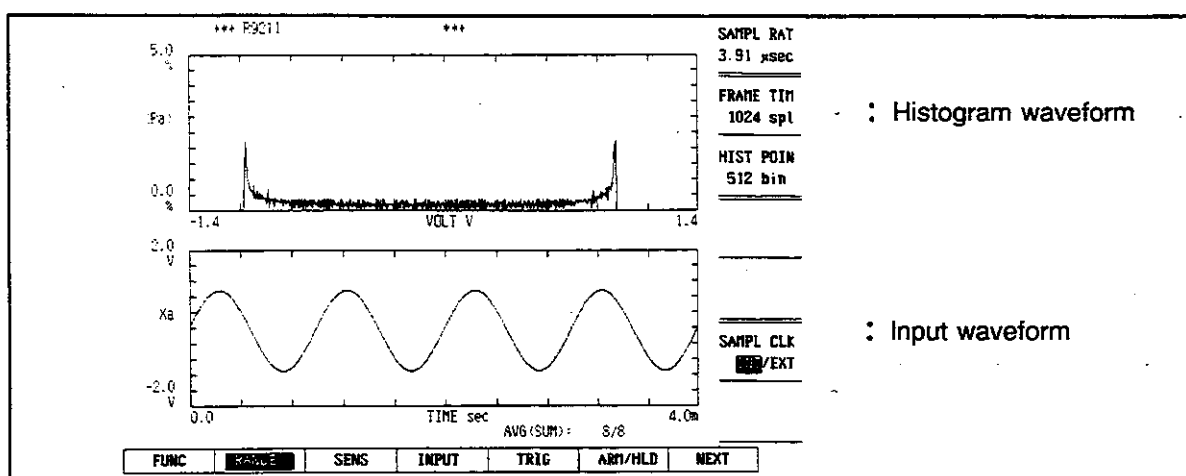


Figure 8-2 Histogram


■ Correlation Function Measurement Setup Procedure

Hereunder is described the procedure followed for the measurement of correlations functions.


1 Select the waveform mode.



2 Select the appropriate analysis function.

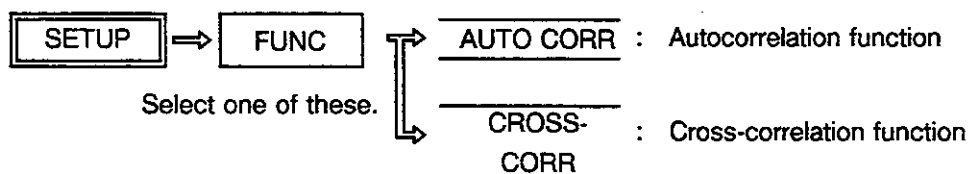


3 Set the sampling rate and the number of points.

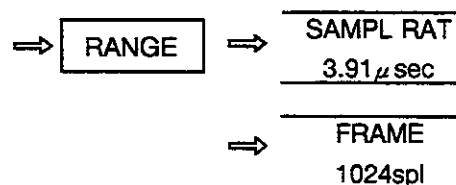

2. Basic Setup Procedure

4 Set the input sensitivity.

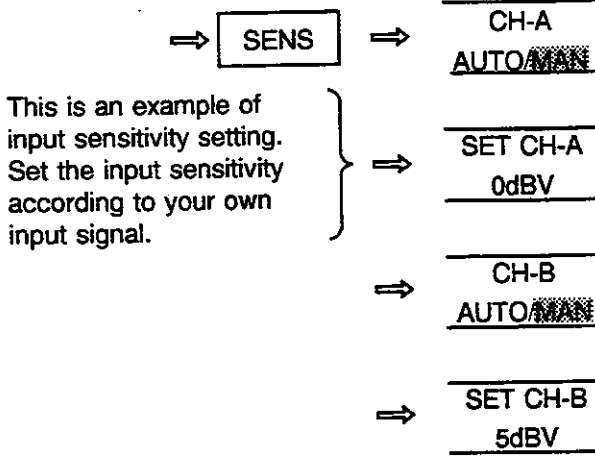

This is an example of input sensitivity setting. Set the input sensitivity according to your own input signal.

The procedure afterwards is the same as the one described from page 8-3 for the time waveform observation.

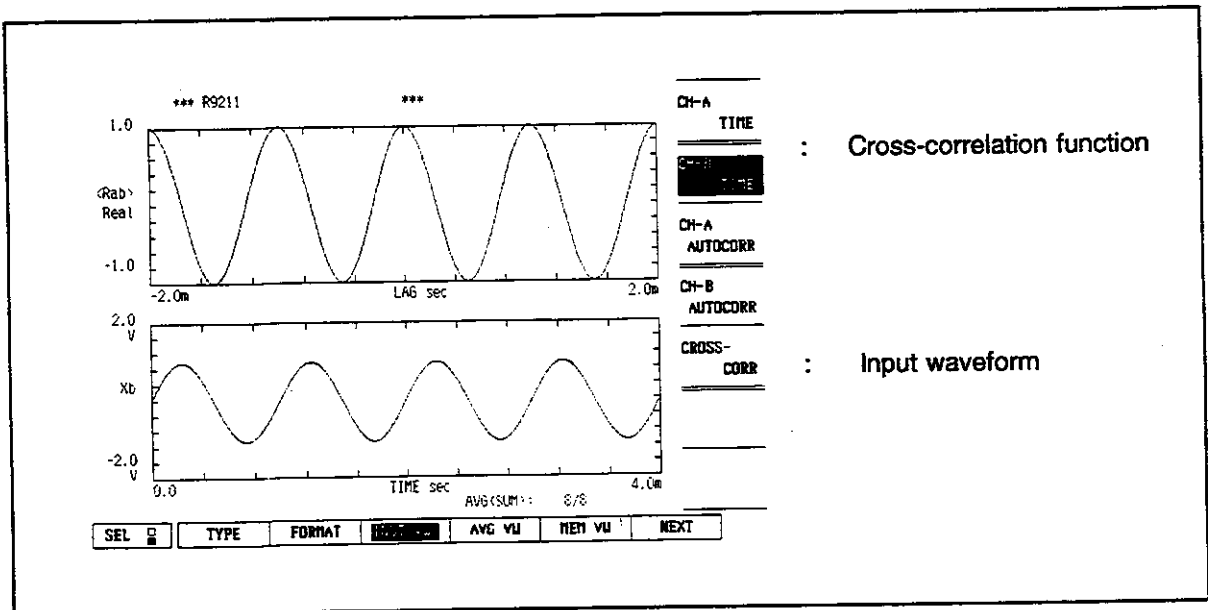


Figure 8-3 Cross-correlation Function

3. Toward Better Measurement

■ Sampling Rate and Number of Points

● Sampling Rate

You can specify the A/D conversion sampling rate. Only the sampling rates listed in Table 8-1 may be specified.

If the anti-aliasing filter is on, changing the sampling rate modifies the anti-aliasing filter's cutting frequency accordingly.

Table 8-1 Possible Sampling Rates

Possible sampling rate	Antialiasing filter's cutting frequency.
3.91 μ sec	100kHz
7.81 μ sec	50kHz
19.5 μ sec	20kHz
39.1 μ sec	10kHz
78.1 μ sec	5kHz
195 μ sec	2kHz
391 μ sec	1kHz
781 μ sec	500 Hz
1.95 msec	200 Hz
3.91 msec	100 Hz
7.81 msec	50 Hz
19.5 msec	20 Hz
39.1 msec	10 Hz
78.1 msec	5 Hz
195 msec	2 Hz
391 msec	1 Hz
781 msec	500mHz
1.95 sec	200mHz
3.91 sec	100mHz
7.81 sec	50mHz
19.5 sec	20mHz
39.1 sec	10mHz



Enter the sampling rate with the  or  keys.

3. Toward Better Measurement


● **Number of Display Points**

The number of points per frame to be displayed can be set. Table 8-2 lists the values that the parameter "number of points per frame" can take.

Table 8-2 Possible Number of Points Per Frame

Number of points per frame which can be displayed
64
128
256
513
1024
2048
4096
8192 (*)

(*) This number of points is available when one channel only is active.

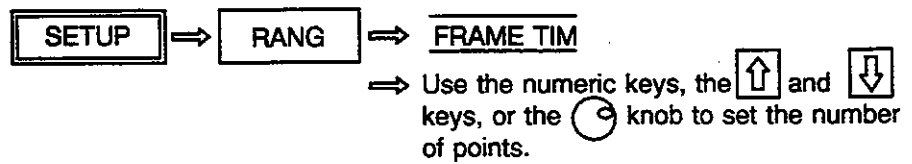

When a value is input with the numeric keys, the value closest to one of the values listed in the above table is set.

● **Histogram Voltage Amplitude**


When measuring a histogram, you define the voltage resolution by specifying the number of points which will describe the total voltage amplitude.

You can consider these points as voltage intervals, whose width is related to the number of points (bin) by the following relationship:

$$\text{Voltage resolution (or width of a voltage interval)} = \frac{2 \cdot \sqrt{2} \cdot 10^{20} \text{ dBV}}{\text{Number of points}}$$

For example, if the input sensitivity is 0 dBV and the number of histogram points is 64 bins, the voltage amplitude is:

$$\text{Voltage resolution} = \frac{2 \cdot \sqrt{2} \cdot 10^0}{64} \approx 0.44\text{V}$$



3. Toward Better Measurement

Since a histogram measurement is performed on 1 data frame (an average is calculated over each frame), you can modify the total number of histo-points by changing the number of points per frame.


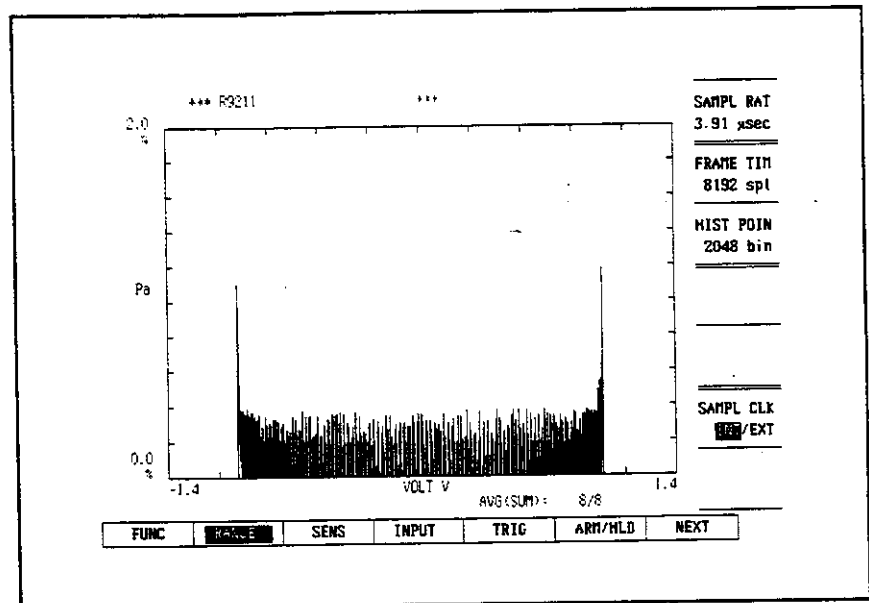


Figure 8-4 Histogram

■ Trigger

Triggering is used when you want to acquire your data at the moment when a signal reaches a certain level, or when you want to perform synchronous averaging.


The trigger setup flow is the following one :

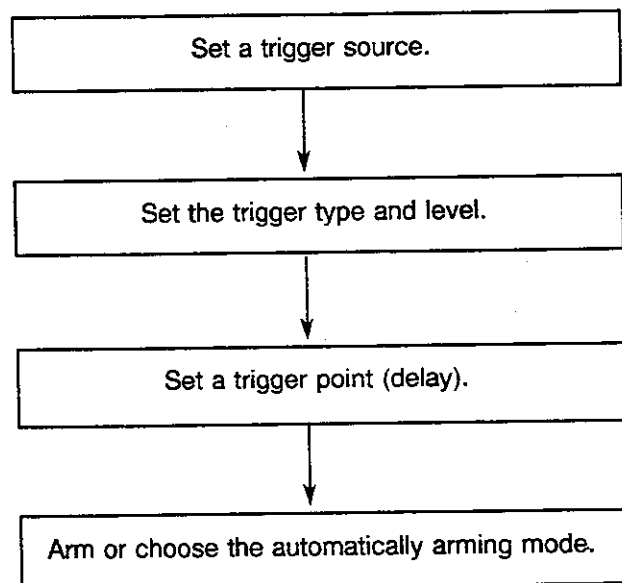

3. Toward Better Measurement


● **Trigger Types**

The R9211 has two trigger types: for the first one, called LEVEL trigger, you choose a trigger threshold value, and triggering is executed when the trigger signal becomes larger (or smaller) than this threshold; for the second one, called BI-SLOPE trigger, you choose a zone, triggering is then executed when the trigger signal enters (or exits) this zone.

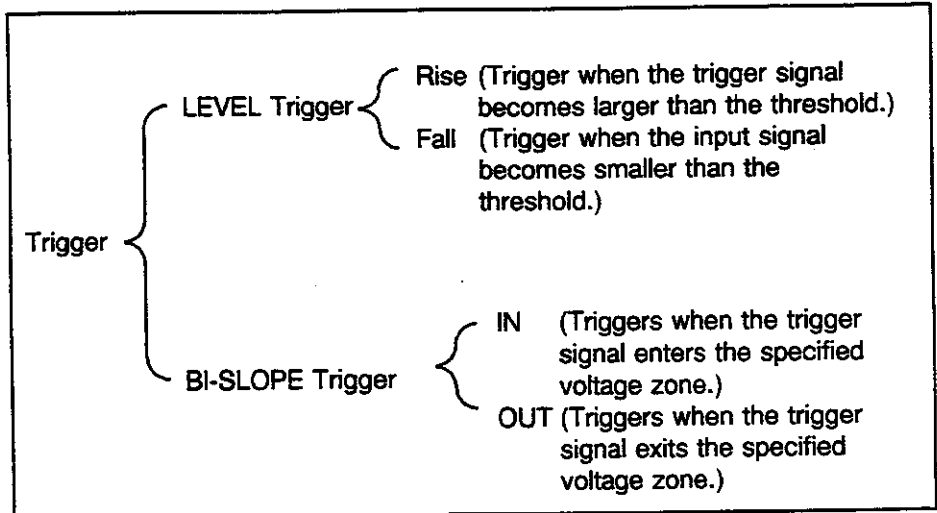

● **Selection of a Trigger Source**


When you select an external trigger signal, input the external trigger signal to the TRIG connector at the rear panel of the R9211.

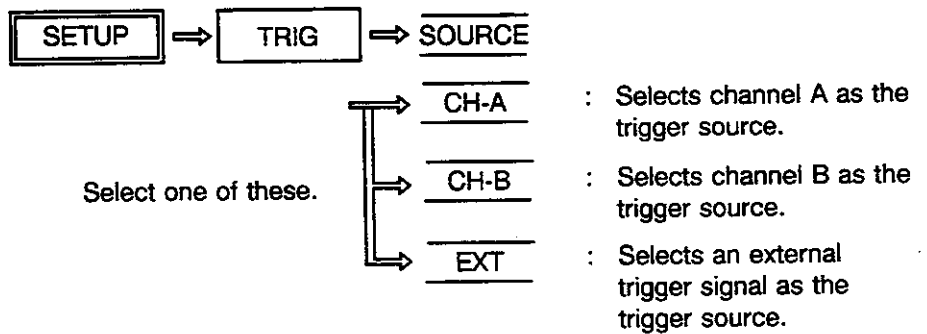


3. Toward Better Measurement

● LEVEL Trigger


First, for a LEVEL trigger, you must specify whether the triggering is to be executed along the rising edge or along the falling edge of the signal.

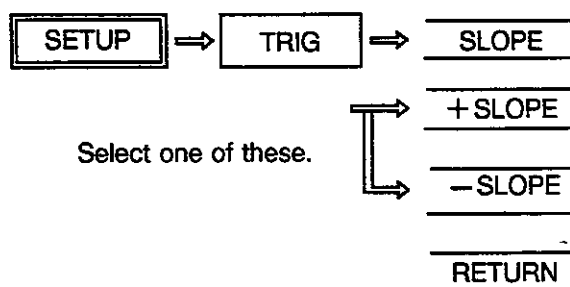

Then, choose the triggering level (threshold).

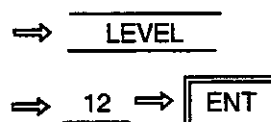


Finally, define the hysteresis.

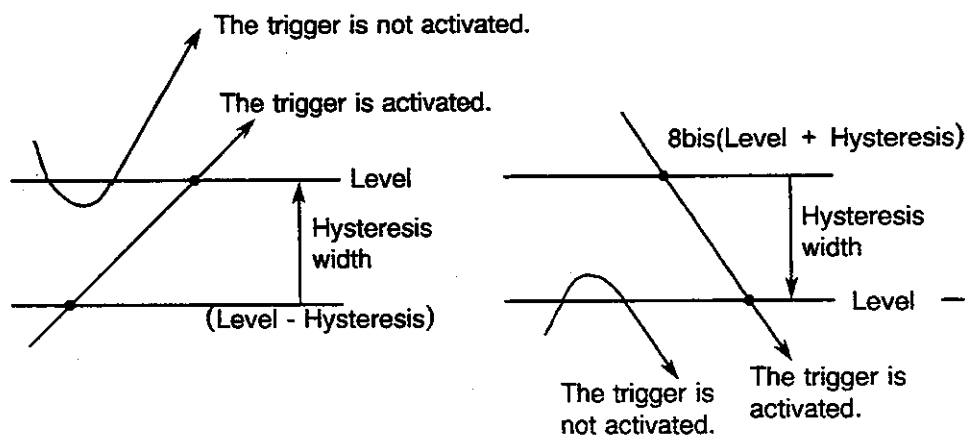

Trigger activated along a rising edge.

Trigger activated along a falling edge.


As shown on the above figure, the hysteresis direction is determined by the trigger slope (rising edge or falling edge).

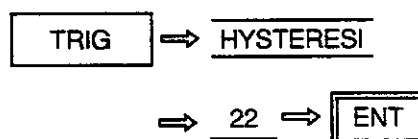


3. Toward Better Measurement

● **BI-SLOPE Trigger**

First, determine whether the trigger is to be activated when the trigger signal enters into or exists from the specified voltage zone.

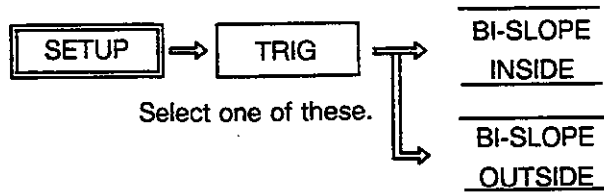


Then specify the voltage zone (upper and lower limits).

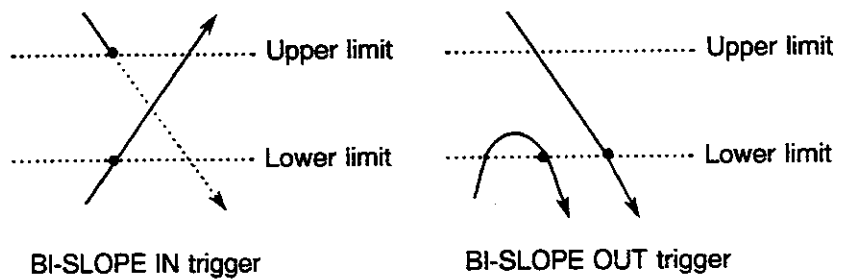


● **Trigger Delay**

The trigger delay represents the relative time between the trigger activation point and the left end of the screen.

For example, when the trigger delay is set to -2ms , the following screen is displayed :

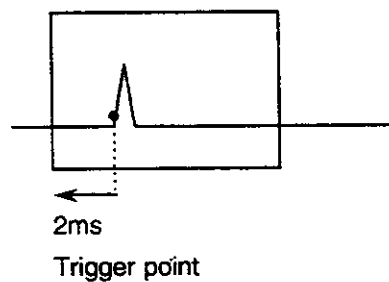


Furthermore, when the trigger delay is set to 2ms , the following screen is displayed:

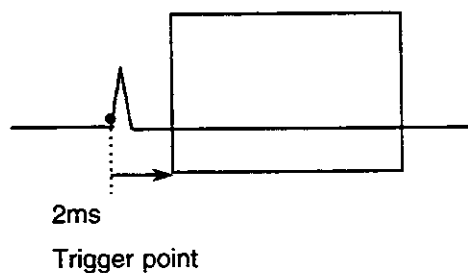

3. Toward Better Measurement

[Setup procedure]

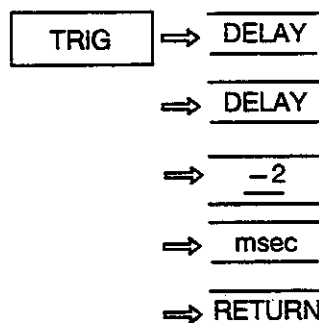


● ARM/AUTO ARM

We just described the trigger conditions setup procedure.

Now, to perform a measurement while using the trigger you must manually, or automatically arm it. In the ARM mode, the trigger is activated and the data thus acquired are held. In the AUTO ARM mode, the data are updated whenever the trigger is activated.


When, in the ARM or AUTO ARM mode, data acquisition is completed after the trigger's activation, the HOLD lamp (red) lights.

[Setup procedure]

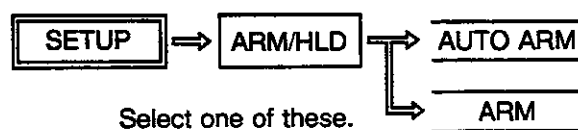

■ Trigger Position Marker

Display the marker at the point where the trigger is activated.

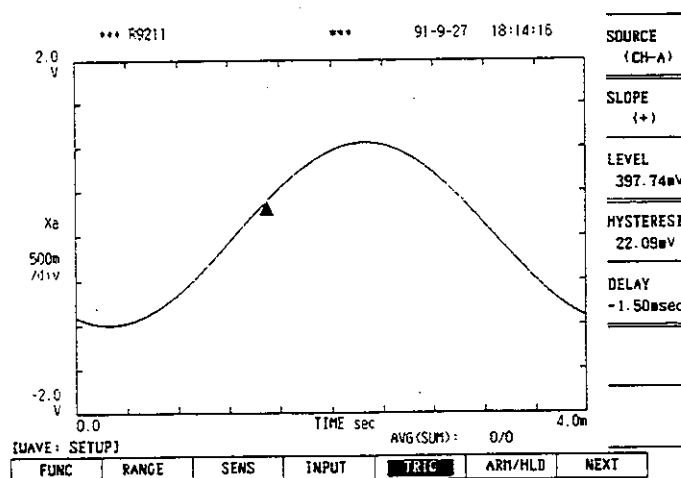**CAUTION !**

When the data held in the ARM mode operation is recorded on the floppy disk and is reproduced, the trigger position marker is not displayed.


3. Toward Better Measurement

■ Lag Window

The cross-correlation function and auto-correlation function are calculated using the FFT. To reduce the truncation error introduced then, a window function is applied. In the R9211, this window function is called a lag window.

To obtain the correlation function of a continuous signal, use a Hanning window (HANN). To obtain the correlation function of a transient signal, use a Rectangular (RECT) window.

[Setup procedure]


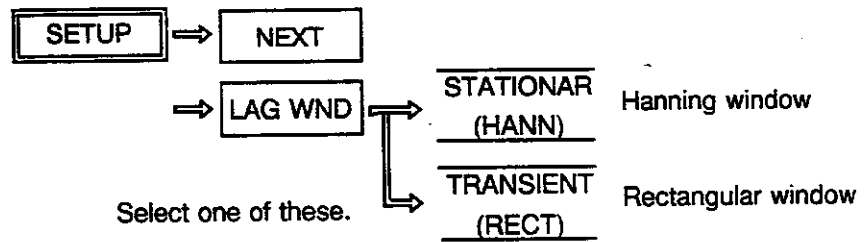




■ Engineering Unit


You can define an engineering unit to change the scale, displayed on the screen of the R9211.

For example, if you connect to the R9211 a sensor which outputs 2V when it measures 1G, by defining an appropriate engineering unit, you can directly read on the screen, the measurement results in unit "G".

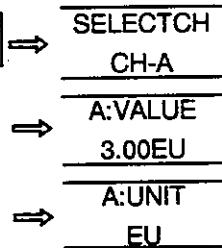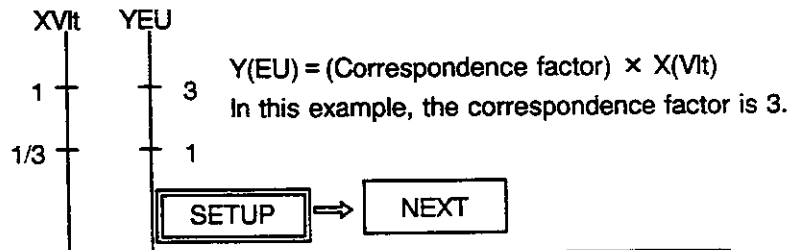For instance, to make 1VIt corresponds to 3EU, proceed as follows :



Using the  knob and  key, enter the characters (maximum 2) of the engineering unit's name.



4. Typical Measurement Examples

■ Pulse Rise Time Measurement (Using a Pulse Marker)

The procedure followed for the measurement of a pulse rise time, a pulse fall time, and a pulse width using a pulse marker is described below.

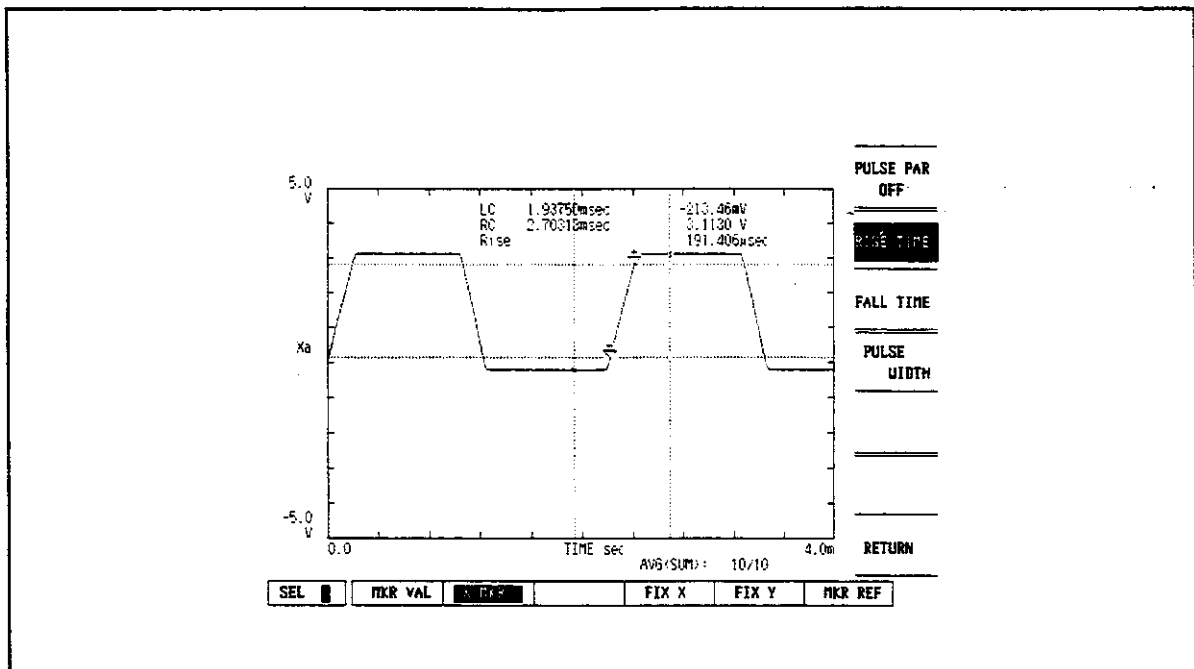


Figure 8-5 Pulse Rise Time Measurement

4. Typical Measurement Examples


1

Input the pulses to channel A.


2

Select the waveform mode.

3


Select the time waveform measurement function.

4

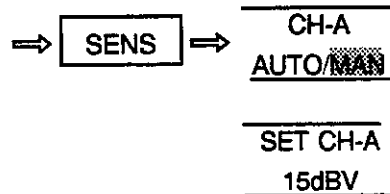
Set the Input sensitivity.


4. Typical Measurement Examples


5 Set up the trigger.

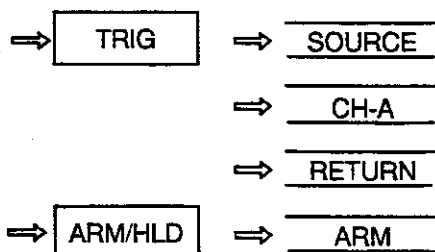


6 Set up the marker.

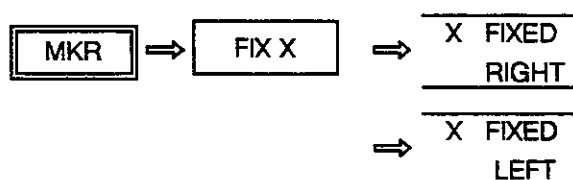


Using the  knob, enclose the rising portion of the pulse.

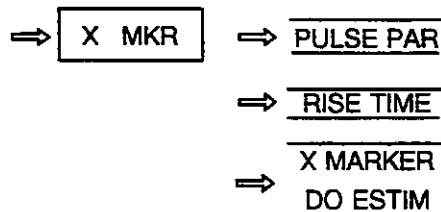

In the same way, the pulse fall time and pulse width can be measured with the marker.

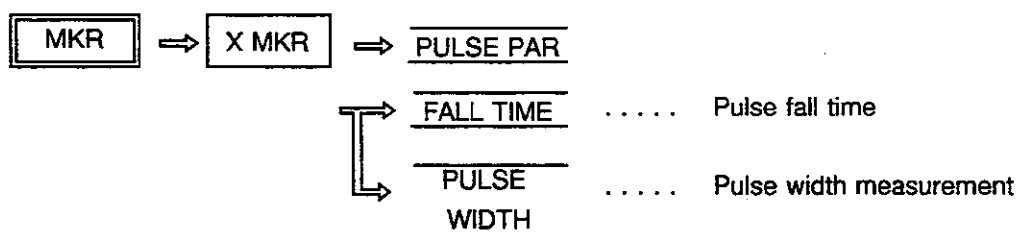

Enclose with the marker, the falling portion of the signal or the portion where the signal is high.



4. Typical Measurement Examples

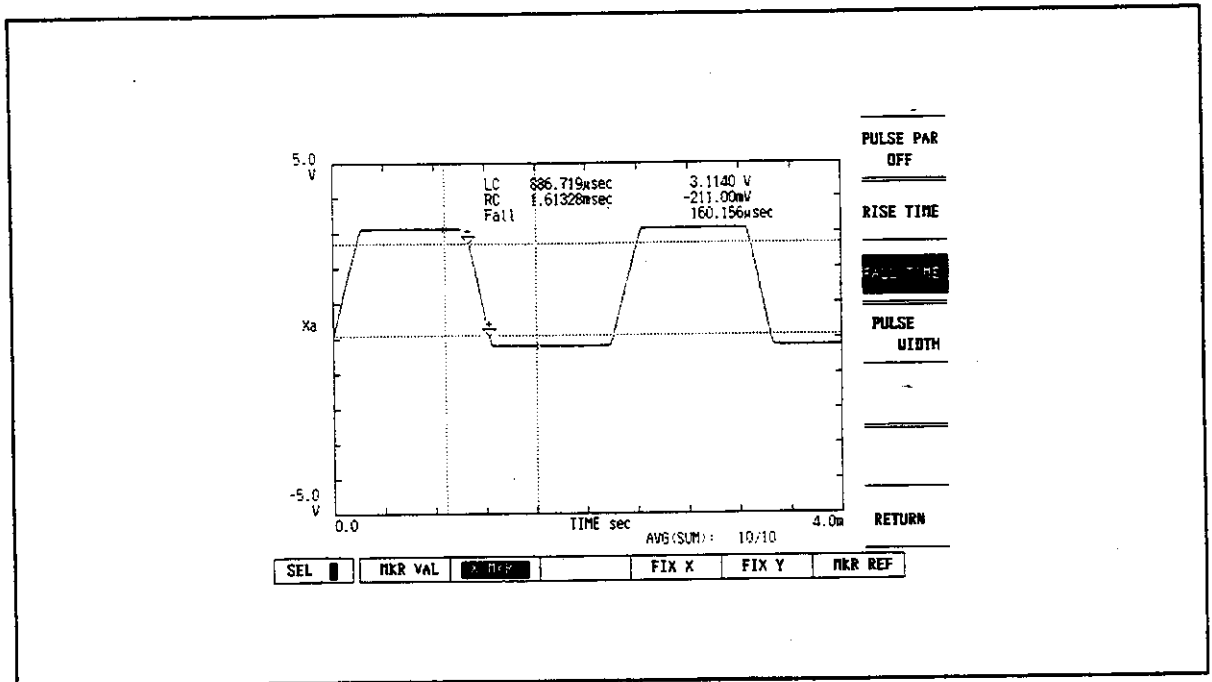


Figure 8-6 Pulse Fall Time Measurement

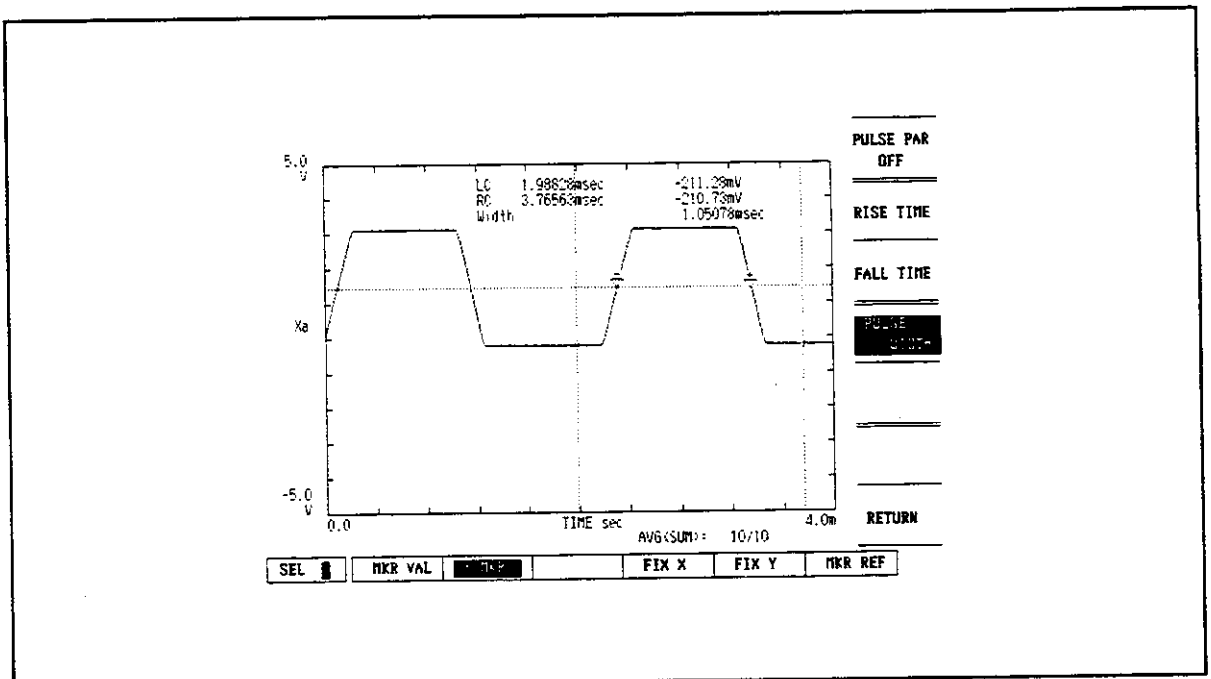


Figure 8-7 Pulse Width Measurement

CHAPTER 9

BASIC PANEL KEYS

This chapter describes the functions and setup procedure of the **PRESET**, **MODE**, **SETUP** and **VIEW** keys.

CONTENTS

1.	PRESET	KEY OPERATION	9-2
2.	MODE	KEY OPERATION	9-3
3.	SETUP	KEY OPERATION	9-9
4.	VIEW	KEY OPERATION	9-46

1. **PRESET** KEY OPERATION

The **PRESET** key is used to allocate MATH functions' menus.

The MATH functions are classified into the 4 following categories:


- **Ordinary operations**

An arithmetic operation is performed on the measured waveform.

For further details, see Chapter 11.

■ Allocation of MATH Functions

A MATH functions allocation is done as is now described:



The specification of one of these Y softmenus, defines the MATH functions menu, so that, when the **MATH** key is pressed, the displayed menu is changed.

NOTE


*If you press the **PRESET** key during the execution of the self-diagnosis, after the power is switched, the R9211 is initialized, and processings start from the initial status. For details about the initialization, see " ■ Initialization" in Chapter 3.*

2. **MODE** KEY OPERATION

The different items set with the **MODE** panel key (measurement mode, calibration, label, date, and extended function) are described below.


■ Selection of the Measurement Mode

To select a measurement mode for the R9211, proceed as follows:

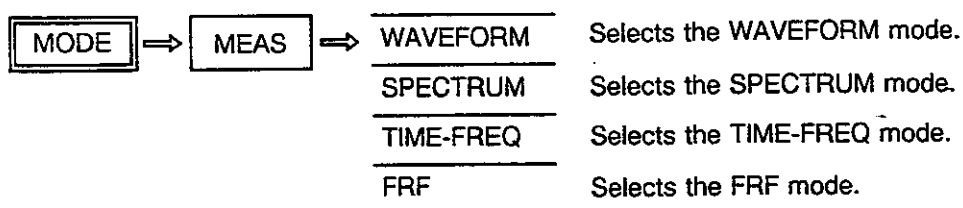

■ Calibration

The DC level of the analog input circuit may change with the temperature. For such situations, the R9211 is equipped with a calibration function.





During calibration, the message "SINGLE DC CAL" is displayed on the CRT. When the calibration is completed, the message "SINGLE DC CAL ... end" is displayed.

After switching the R9211 on, or before using the auto range function in the servo mode, be sure to perform a calibration.

2. **MODE** KEY OPERATION

■ **Label**

The R9211 can display one label on its CRT. You can enter up to 40 characters per line. Each character you must enter by choosing one of those belonging to the alphabet window.

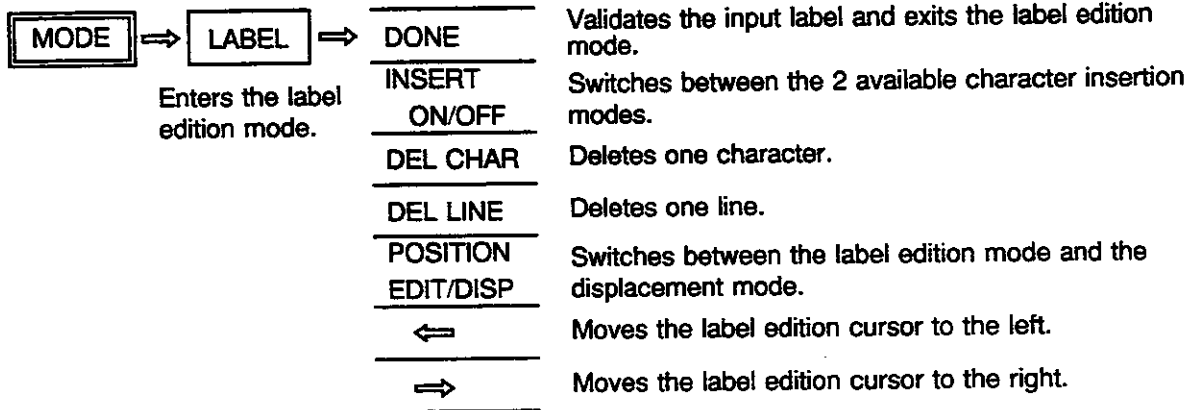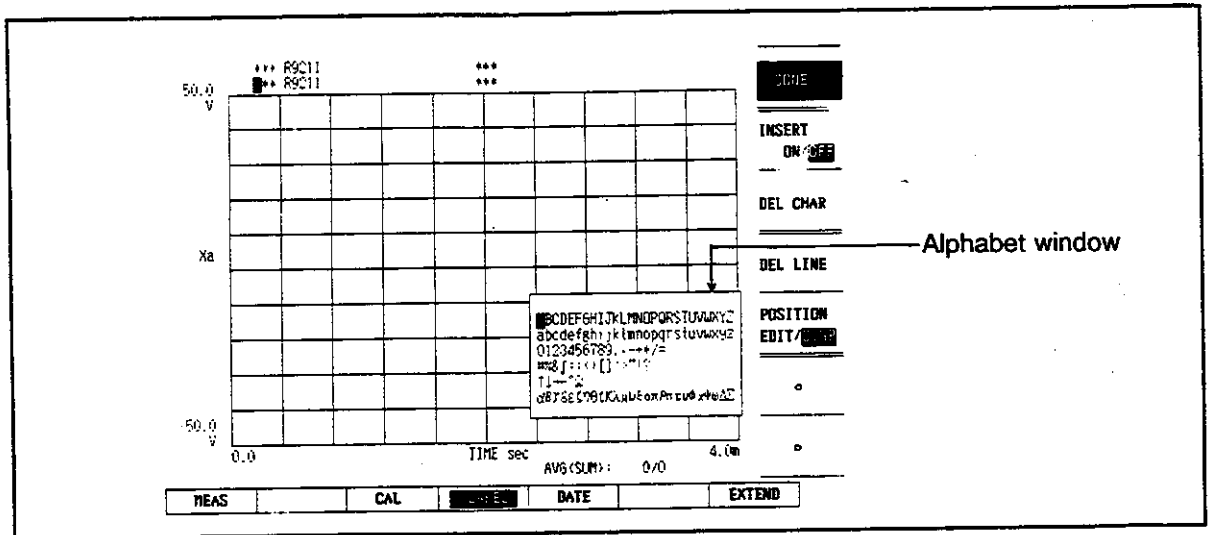

NOTE
Use the step keys and , the knob, and the **ENT** key to select a character in the alphabet window.

2. **MODE** KEY OPERATION

● **Label Setting procedure**

- (1) When you press the **LABEL** key of the X softmenu, you enter the label edition mode.

The label previously edited is then displayed, and under it the label being currently edited is displayed.




- (2) You must now enter the label characters.

- Select "EDIT" with the "POSITION" key of the Y softmenu.




- If a label contains unnecessary characters or lines, move the cursor with the "→" and "←" Y softkeys and press "DEL CHAR" or "DEL LINE" to delete the unwanted character or line.

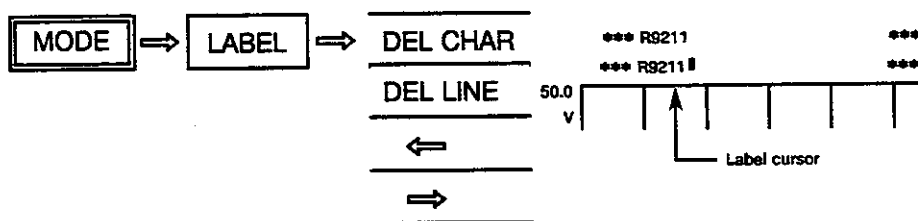

- Select the character input mode by toggling the "INSERT ON/OFF" Y softkey.






- Move the cursor to the character insertion position with the "→" and "←" Y softkeys.



- (3) You can change the label display position.

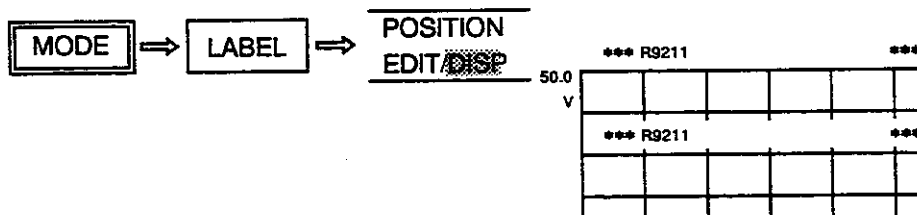- Select "DISP" with the "POSITION" Y softkey.



- Change the label position with the step keys ( and ).

2. **MODE** KEY OPERATION

(4) Label Validation


- You validate a label with the "DONE" Y softkey.



You cannot exit from the label edition mode before pressing this key.

Calendar's Setting

You can set the calendar provided in the R9211.

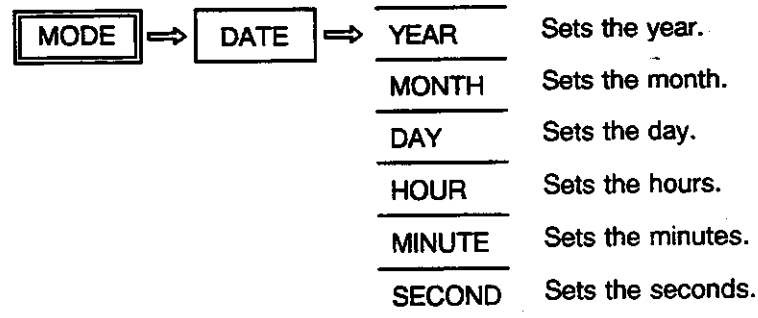


To set any of these you must use the numeric keys and the **ENT** key.

The provided calendar is displayed at the right area of the label.

Extended Functions' Setting

Buzzer's Control

You can control whether and when the buzzer should sound.

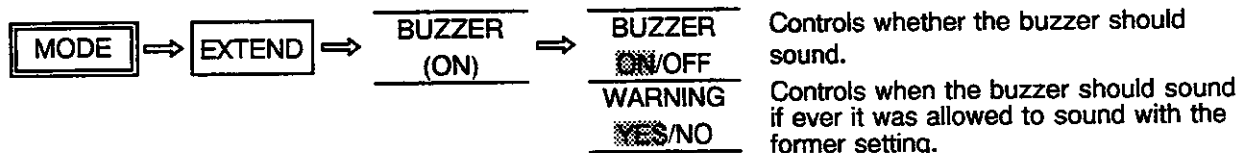

- When the BUZZER is set to ON, both "setting" sound and "warning" sound are allowed. (the "setting" sound means the sound issued after each key is pressed, the "warning" sound is the sound issued when some error occurs).
- When the BUZZER is set to OFF, neither "setting" sound nor "warning" sound is allowed.

— When BUZZER is set to ON —

- When WARNING is set to YES, only the "warning" sound is allowed.
- When WARNING is set to NO, both "setting" and "warning" sounds are allowed.

The name in parentheses on the BUZZER Y softkey indicates the buzzer state.

(ON) is displayed when BUZZER is set to ON. (OFF) is displayed when BUZZER is set to OFF. (WARNING) is displayed when WARNING is set to YES.

2. **MODE** KEY OPERATION

● **Automatic setting of the display (Trace-on-start function)**

When an analysis process such as averaging is performed, the R9211 can automatically change the display format to a format decided in the advance. You can control this "trace-on-start" function.



- When the "START" key is pressed to start an analysis process, while "trace-on-start" is on, the display format automatically becomes the predetermined display format. Table 9-1 lists the predetermined display formats.
- When TRACEonST is set to OFF, the display format is not automatically modified when the "START" key is pressed to start an analysis.

Table 9-1 Predetermined Display Formats (Only Set when TRACEonST is Set to ON)

		Automatically set display formats	
MODE	FUNC	First screen	Second screen (multiscreen)
WAVEFORM	TIME AUTOCORR CROSS-CORR HISTOGRAM	Average time waveform of CH-A Average auto-correlation function of CH-A Average cross-correlation function Average amplitude probability density of CH-A	Average time waveform of CH-B Average auto-correlation function of CH-B — Average amplitude probability density of CH-B
SPECTRUM/ TIME-FREQ	POWER SPECT CROSS SPECT COMPLEX SPECT	Average power spectrum of CH-A Average cross spectrum Average complex spectrum of CH-A	Average power spectrum of CH-B — Average complex spectrum of CH-B
FRF	FRF	FRF (always in the dual mode)	Coherence function (always in the dual mode)

● **Instantaneous data automatically set display format (monitor X function)**

NOTE

The monitor X function is only available in the FRF modes.

The R9211 can monitor the instantaneous input data during FRF measurement (in the FRF mode). When a FRF is measured, the + MONITOR function (display function) is used to change the first or second screen display to the display of the instantaneous input data. Specify whether the time data or the frequency data are to be displayed on this instantaneous data screen.

(cf. the explanation of the "VIEW" menu.)



2. **MODE** KEY OPERATION

- When MONITOR is set to TIM, instantaneous time data are displayed on the instantaneous data screen.
- When MONITOR is set to FREQ, instantaneous frequency data are displayed on the instantaneous data screen.

As for the relationship between the position of the instantaneous data screen, and the number of screens, see "■ Monitor Function" in Chapter 5.

■ A Look at the MODE Menu

R9211 Series Menu List (MODE)					
MODE					
MEAS	CAL	LABEL	DATE	EXTEND	
WAVEFORM		DONE	YEAR 90	BUZZER (ON)	
SPECTRUM	SINGLE DC CAL	INSERT ON/OFF	MONTH 6		BUZZER ON/OFF
TIME-FREQ		DEL CHAR	DAY 24	TRACEonST ON/OFF	WARNING *2 YES/NO
FRF		DEL LINE	HOUR 17	MONITOR X.*1 TIM/FREQ	
		POSITION EDIT/DISP	MINUTE 16		
		←	SECOND 53		
		→			RETURN

*1 This key is displayed in the FRF mode.
*2 This key is displayed when BUZZER is set to ON.

3. **SETUP** KEY OPERATION

This section explains the functions (parameters set for a measurement) of the **SETUP** panel key.

■ Measurement Functions and Active Channel Selections

X softkey "FUNC" enables to select a measurement function and to specify which channels) will be active.

● Selection of a measurement function

In the R9211, according to the measurement mode, you can choose several measurement functions:

Mode	Selectable functions
WAVEFORM	TIME (Time) AUTOCORR (Autocorrelation function) CROSS-CORR (Cross-correlation function) HISTOGRAM (Histogram)
SPECTRUM TIME-FREQ	POWER SPECT (Power spectrum) CROSS SPECT (Cross spectrum) COMPLEX SPECT (Complex spectrum)
FRF	FRF (Frequency Response Function)

After the selection of a measurement mode, to select a measurement function, proceed as is now described:




Example : Menu displayed in the SPECTRUM mode

```


    POWER
    SPECT
    -----
    CROSS
    SPECT
    -----
    COMPLEX
    SPECT
    -----
  
```

3. **SETUP** KEY OPERATION● **Specification of the active channel(s)**

In the R9211, you can specify that 1 channel only is active or that both channels are active.

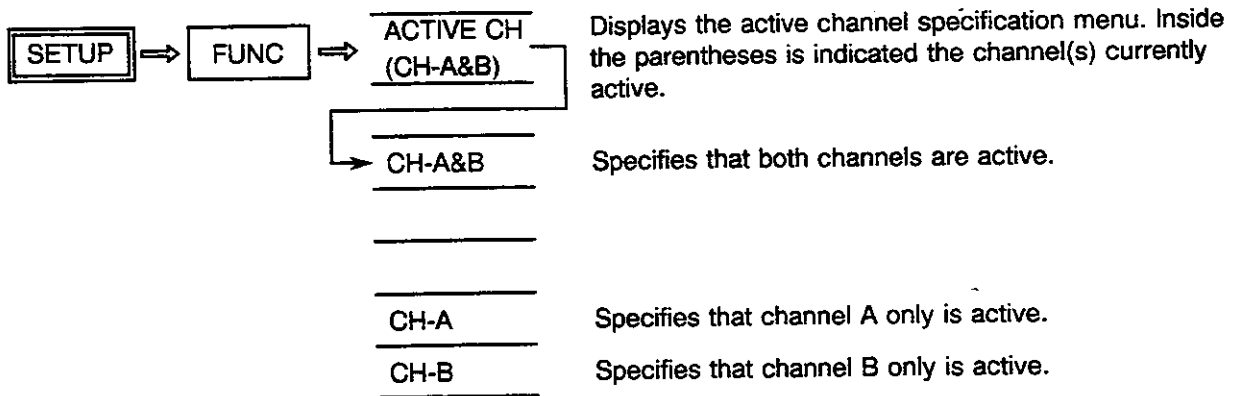● **Choosing the digital input mode**

If your analyzer is equipped with option 11 (implemented in all R9211C), 16-bit digital input are possible, however only through channel A.



For details about digital inputs, see Chapter 14.

■ **Setting of the Numbers of Samples and Lines**

X softkey RANGE, enables to set the sampling frequency and the number of data to be acquired.

● **Setting of the sampling interval**


Data sampling is performed according to the R9211 internal clock. The setting of the sampling interval differs from one mode to another: in the waveform you must specify a "sampling rate", while in every other mode you must specify a "sampling frequency". The sampling frequency can be chosen between 10mHz and 100kHz (6y steps of 1, 2 or 5). The sampling rate corresponds to $1/(\text{sampling frequency} \times 2.56)$, and must be set accordingly.

The antialiasing filter is set according to the sampling interval.


Table 9-2 Correspondence Between the Sampling Frequency and the Sampling Rate

Sampling frequency	Sampling rate	Sampling frequency	Sampling rate
10mHz	39.1 sec	50 Hz	7.81msec
20mHz	19.5 sec	100 Hz	3.91msec
50mHz	7.81 sec	200 Hz	1.95msec
100mHz	3.91 sec	500 Hz	781 μ sec
200mHz	1.95 sec	1kHz	391 μ sec
500mHz	781msec	2kHz	195 μ sec
1 Hz	391msec	5kHz	78.1 μ sec
2 Hz	195msec	10kHz	39.1 μ sec
5 Hz	78.1msec	20kHz	19.5 μ sec
10 Hz	39.1msec	50kHz	7.81 μ sec
20 Hz	19.5msec	100kHz	3.91 μ sec

○ **Setting of the sampling rate (in the WAVEFORM mode)**



○ **Setting of the sampling frequency (in the SPECTRUM/TIME-FREQ/FRF modes)**



NOTE

*The * mark is displayed while an analysis starting at frequency 0 is being performed. It is not displayed during a zoom analysis. (See the explanations about the starting and ending frequencies specification.)*

About the numeric keys

- If a value not listed in Table 9-2 is input with the numeric keys, the closest value listed in this table is set instead.
- Specify the unit of a value input with the numeric keys with the unit Y softkeys.

kHz kHz the unit becomes kiloHertz.

Hz Hz the unit becomes Hertz.

mHz mHz the unit becomes milliHertz.

3. **SETUP** KEY OPERATION

If the **ENT** key is pressed immediately after a value is input, the unit by default kHz.

Zero start analysis : The analysis is executed from 0Hz to the specified maximum frequency.

Zoom analysis : The analysis is executed from a specified starting frequency to a specified ending frequency, thus enhancing the frequency resolution.


● **Selection of the sampling clock source**

With the R9211, either the internal clock or an external clock can act as sampling clocks.

○ **WAVEFORM mode**



○ **SPECTRUM/TIME-FREQ/FRF mode**

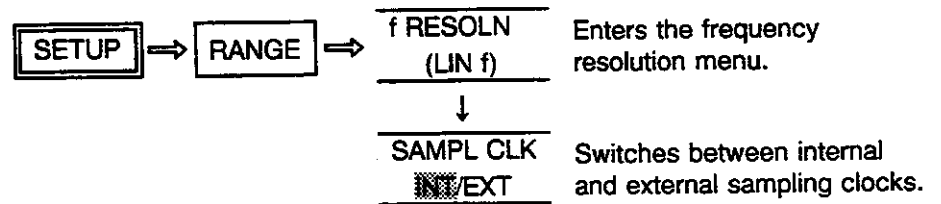

When you select an external clock, you must input this external clock signal to the analyzer through the BNC connector, named "INPUT SMPLG CLK", at the rear panel of the analyzer.

NOTE

If an external clock is selected, the antialiasing filter and display annotations are set according to the sampling interval.

● **Setting of the numbers of analysis lines and samples**


Table 9-3 lists the relationship between the frequency data and time data. (The number of frequency lines is effective only in the linear resolution analysis mode.)

3. **SETUP** KEY OPERATION**Table 9-3 Relationship Between the Frequency Data and the Time Data**

Number of time samples	Number of frequency lines
8192	3200
4096	1600
2048	800
1024	400
512	200
256	100
128	50
64	25

○ **WAVEFORM mode**

The number of samples is specified by setting the value of FRAME TIM (frame time).




Use the step keys for this setting.

The maximum number of samples is 4096. (When only one channel is active, the maximum number of samples is 8192.)

○ **SPECTRUM/TIME-FREQ/FRF mode**

The number of lines is specified by setting the value of "LINE/SPN" (Line per span).

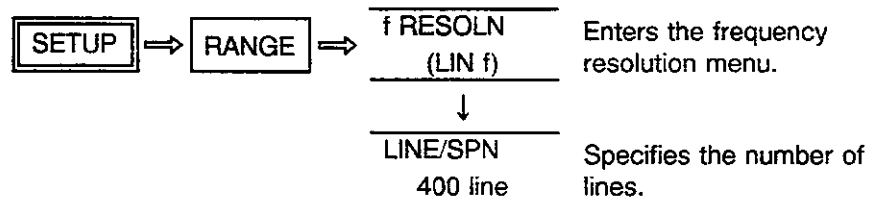

Use the step keys, the knob, or the numeric keys for this setting.

The maximum number of lines which can be specified depends on the selected mode (Table 9-4).


3. **SETUP** KEY OPERATION

Table 9-4 Maximum Numbers of Lines (linear resolution)

Mode	1 active channel	2 active channels
SPECTRUM	3200 line	1600 line
TIME-FREQ	800 line	800 line
FRF	—	800 line


● **Setting of the analysis resolution (linear resolution, logarithmic, or octave analysis)**

The R9211 can perform three types of analysis: linear resolution, logarithmic resolution, and octave analysis (only when the POWER SPECT function is selected).

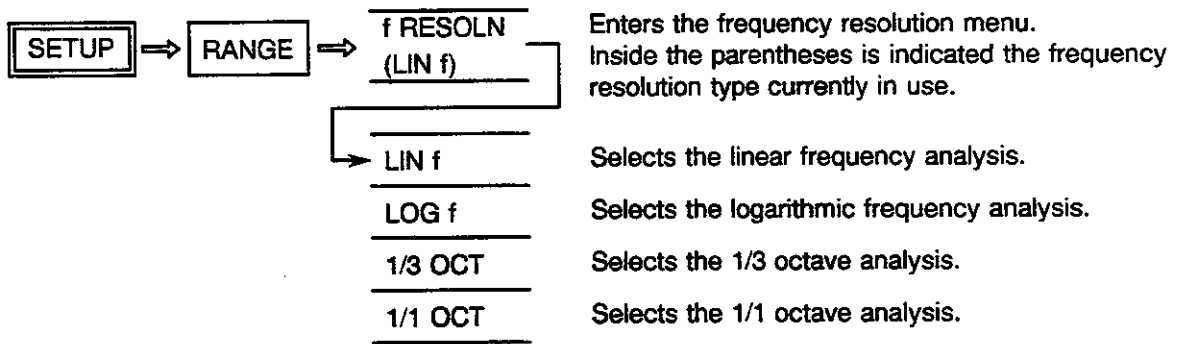

○ **Setting the number of decades for the logarithmic or the octave analysis**

For a logarithmic analysis, or an octave analysis, the frequency range for the analysis is determined by the number of decades.

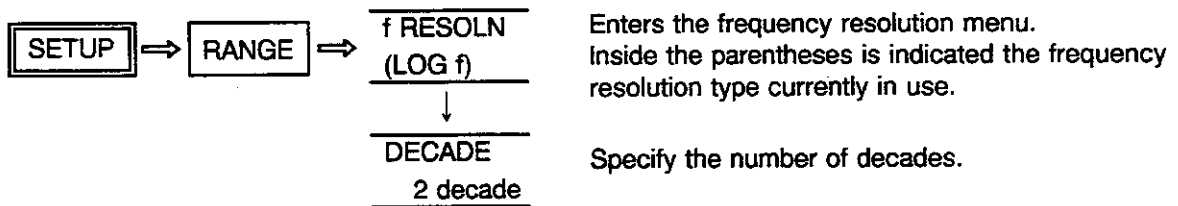

Use the numeric keys or the step keys to enter the number of decades. Table 9-5 summarizes the relationships between the analyzer types and the maximum number of decades.

Table 9-5 Maximum Number of Decades

R9211A/E	R9211A + OPT10 or 11
2 decades (3 decades when only 1 channel is active.)	3 decades

● **Setting of the number of histogram points (only when the HISTOGRAM function is used)**


Set the resolution (number of histogram points) of the histogram (probability density function).

The number of histogram points is specified, using the step keys, the knob, or the numeric keys. It is defined as a nth power of 2, and cannot exceed 2048 bin.



● **Setting of the start and the stop frequencies (when the zoom analysis function is used) (R9211A)**

When a zoom analysis is performed, a start frequency and a stop frequency must be specified to define the domain over which the zoom analysis will be performed.

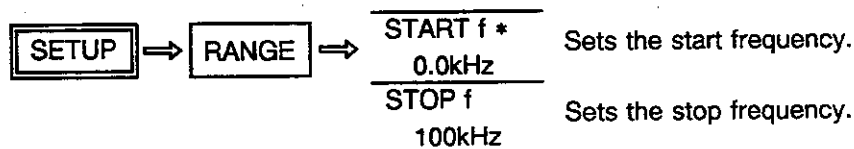

The starting and ending frequencies are set as the maximum frequency of the frequency range (zero start analysis) is set : with the numeric keys, the knob or with the step keys. (cf.frequency range's setting)

NOTE

*The * mark is displayed for a zoom analysis. (It is not displayed for a zero start analysis.)*

If the START f key is pressed in a mode other than the servo mode, the zoom function is selected. If you press the START f key by mistake, press the FREQ RNG key to select the zero start analysis mode again.


3. **SETUP** KEY OPERATION

■ **Setting of the Input Sensitivity**

X softkey SENS is used to set the input sensitivity.


● **Manual setting of the input sensitivity range**

In this case, you directly set the measurement sensitivity range. The sensitivity takes its value between -60dBV and +30dBV (1dBV/step). This parameter is set with ten keys/knob/step key.

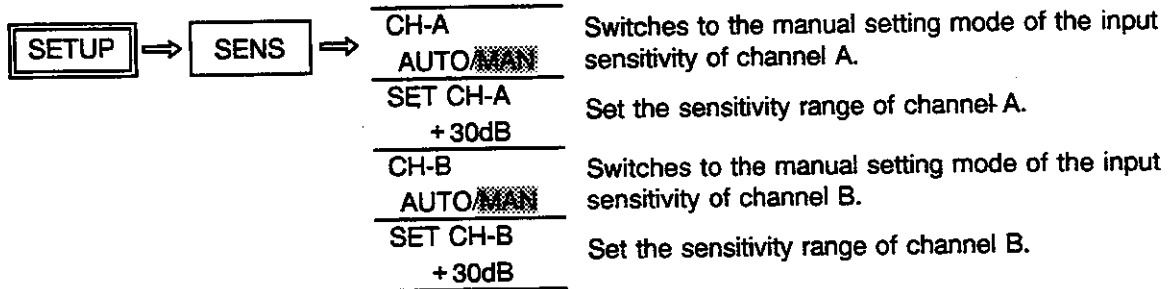

● **Automatic setting of the input sensitivity range**

By automatic setting of the input sensitivity range, we mean that the input sensitivity range is automatically evaluated and set according to the input signal. The R9211 analyzer is provided with two automatic setting methods for the input sensitivity range: with the UP & D (up and down) method, the sensitivity range follows the variations of the signal amplitude, that is to say that when the signal amplitude increases, the input sensitivity range also increases, and when the signal amplitude decreases, the input sensitivity also decreases. With the UP method, only the increases of amplitude are followed by the input sensitivity range: when the signal amplitude decreases, the sensitivity range is not modified.

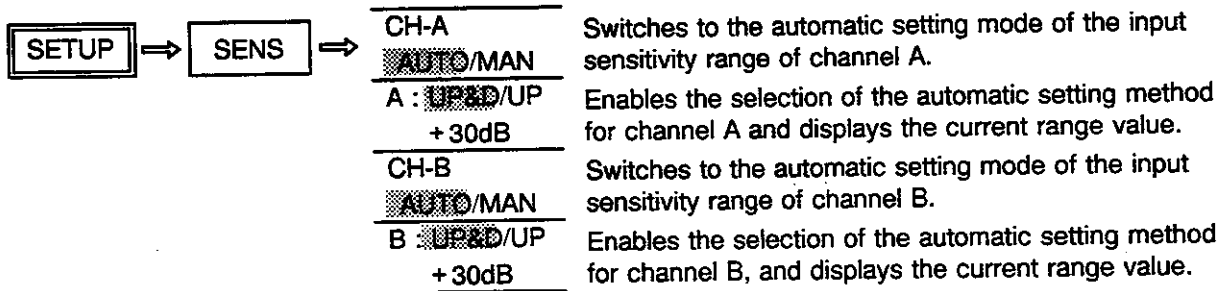

NOTE

Before using the automatic range setting function, be sure to calibrate the analyzer.

(See section 2. **MODE** key in this chapter.)

■ Setting of the Signal Input Block

X softkey "input" enables the setting of the input block.


You must select one of the channel, and once this has been done you will be able to set up the selected channel input block.

Channel selection method




● Setting of the input coupling

In for the R9211, either AC or DC input coupling can be set.




● Setting of the input connectors status

In order to enable differential inputs, both channels of the R9211 are equipped with a positive and a negative input connectors. Both of these connectors can independently set to the ground (GND) or set to receive a signal (IN).

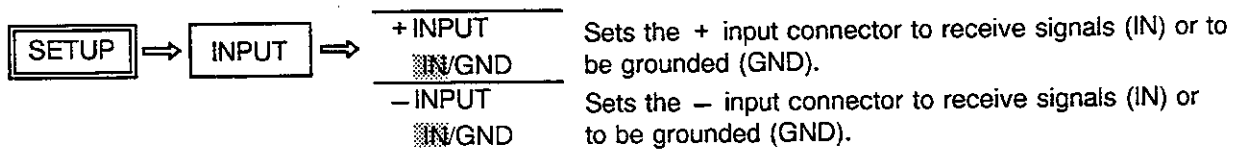

● Setting of the antialiasing filter

In the R9211, an antialiasing filter is automatically set according to the frequency range to prevent spectrum aliasing. You can also cancel this setting.



NOTE


Be sure to switch this filter on before spectrum analysis.

3. **SETUP** KEY OPERATION

● **Setting of the power supply for accelerometers provided with an internal amplifier**

The R9211 has a power supply unit for accelerometers provided with an internal amplifier.

You can switch on(/off) this power supply unit.

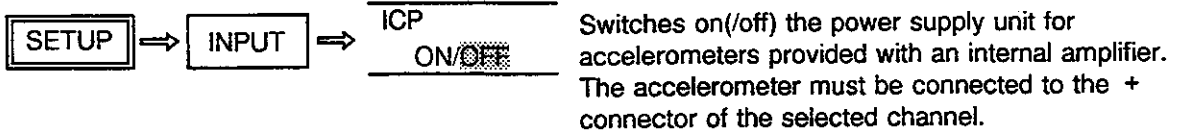

● **Generation of a test signal**

The R9211 can generate a test signal to test itself.



The test signal is a 8% rectangular wave.

Example : In the range of 20kHz, the test signal value can be calculated as the following format.

$$20 \times 10^3 \times 0.08 = 1.6\text{kHz}$$


└── 8%
└── frequency range (20kHz)

■ Setting of the Trigger

X softkey "TRIG" enables the setting of the conditions of synchronized inputs. The actual execution and start of triggering operation are controlled in X softmenu "ARM/HLD".

● Selection of the trigger signal

In the R9211, the trigger signal (that is to say the synchronization signal) may be either the signal input to channel A, or that input to channel B, or even an external TTL signal.

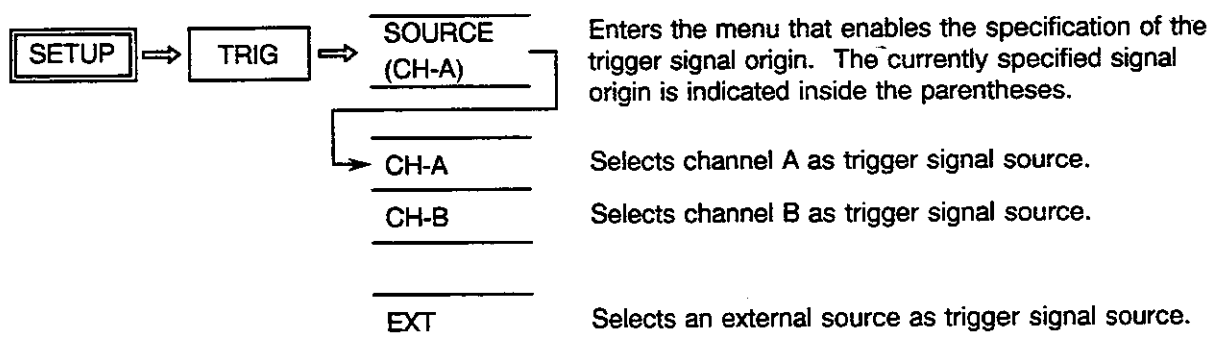


When the trigger signal source is external, the trigger signal is a TTL-level signal and the trigger and the rising edge of the signal.

● Setting of the triggering conditions


In the R9211, there are four trigger types (plus the external trigger).

- (1) **+SLOPE trigger**
The trigger event corresponds to the rising edge of the trigger signal.
(+) is displayed on the menu.
- (2) **-SLOPE trigger**
The trigger event corresponds to the falling edge of the trigger signal.
(-) is displayed on the menu.
- (3) **BI-SLOPE INSIDE trigger**
The trigger event corresponds to the enter of the trigger signal into a determined domain.
(BI, IN) is displayed on the menu.
- (4) **BI-SLOPE OUTSIDE trigger**
The trigger event corresponds to the exit of the trigger signal from a determined domain.
(BI, OUT) is displayed on the menu.

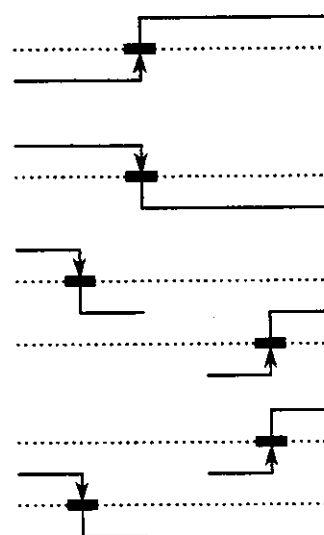

3. **SETUP** KEY OPERATION

The trigger setting procedure is the following one:

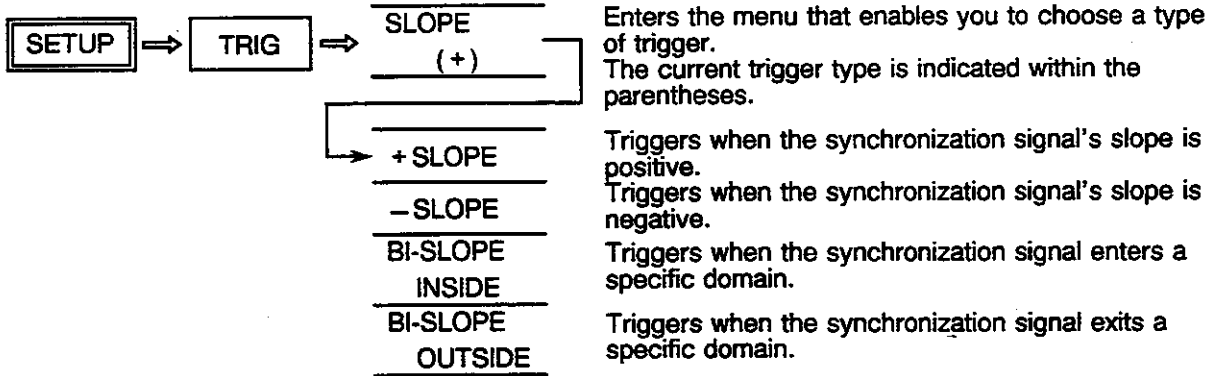

● **Specification of a trigger level (\pm SLOPE types)**


The trigger level can be set with a resolution of 1/256 of the maximum input voltage for the input sensitivity range (Table 4-4).




● **Specification of the hysteresis width (\pm SLOPE types)**

The hysteresis width is the margin defined to prevent triggering errors caused by very low noise. It can be set with the numeric keys with a resolution of 1/256 of the maximum input voltage in the input sensitivity range (Table 4-4).

In the case of a +SLOPE trigger

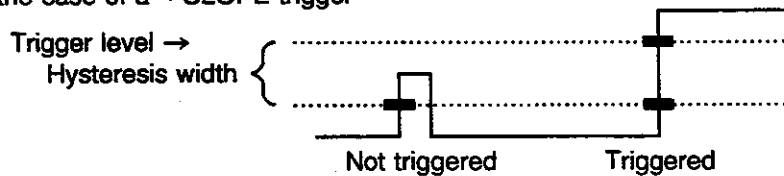

In the case of a -SLOPE trigger

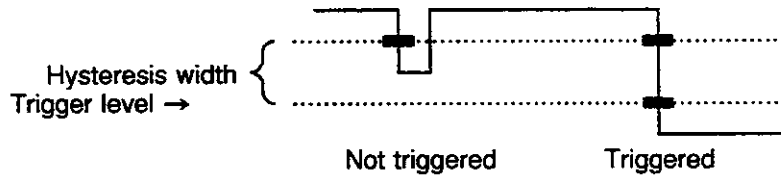


3. **SETUP** KEY OPERATION



● **Specification of a BI-SLOPE domain (BI-SLOPE types)**

A BI-SLOPE domain is defined by its upper and lower limits these limits can be set with a resolution of 1/256 of the maximum input voltage for the input sensitivity range.

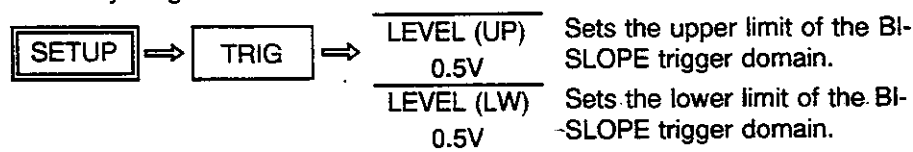

Use the numeric keys for the above setting.


CAUTION !

When an external trigger is used, the above level settings are ignored. The external trigger level is fixed.

● **Setting of the trigger delay**

It corresponds the time delay from the trigger to the data acquisition time. The trigger delay is represented by a positive or a negative value. When you are interested in data taking place before the trigger event, the trigger delay must be negative.

Example : When the analysis frequency range is equal to 100kHz, the resolution is equal to 400 lines, and the trigger delay is equal to 16ms

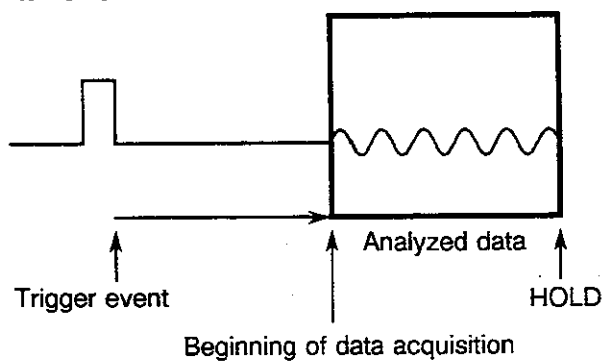


Time lapsed after the trigger event	Trigger delay time	Frame time
0	(16msec) 16msec	(4msec) 20msec


3. **SETUP** KEY OPERATION

If you want the trigger event time to appear at the middle of the screen then the value you will specify as trigger delay must be equal to $-1/2$ frame time.

Example : If the analysis frequency range is equal to 100Hz and the frequency resolution is 400lines (frame time = 4 ms) is equal to 400lines, set -2 ms as the trigger delay.

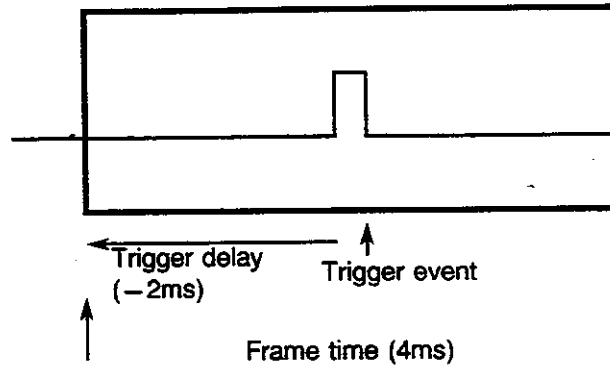

The setting procedure of the trigger delay is the following one :

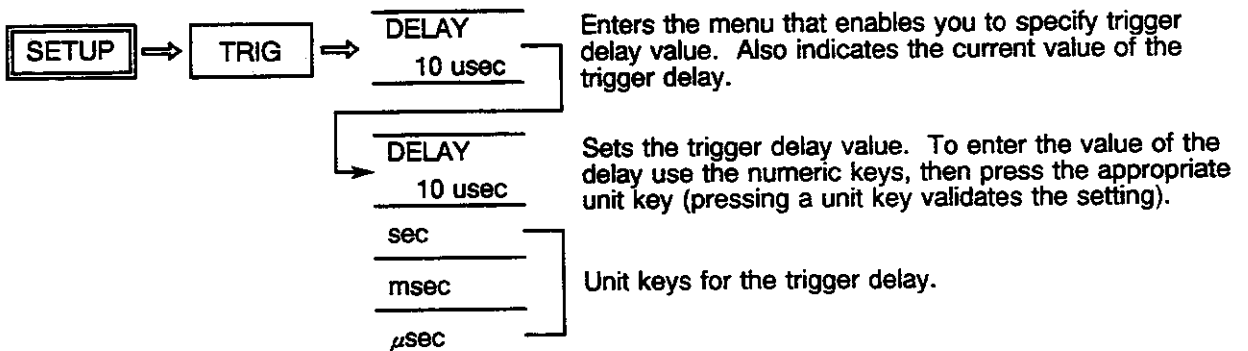


● **Trigger Position Marker**

The point at which the arm trigger use a trigger is displayed with the Marker(▲).

Therefore, the following case is not displayed.


- When the trigger point before fetching data is used. (out of arm length)
- When input data from the floppy disk.

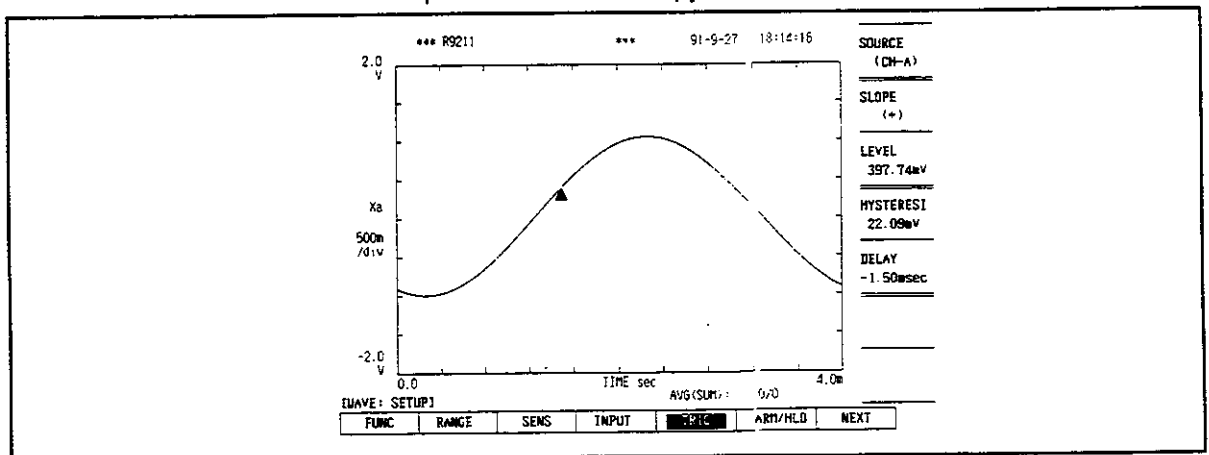

3. **SETUP** KEY OPERATION● **Setting of the arm length (in the TIME-FREQ mode)**

In any other modes than the TIME-FREQ mode, the size of the data you can synchronously acquire is limited to the frame. In the TIME-FREQ mode, you can define the size of the data you want to synchronously acquire. Specify this size of data (8K) with as a nth power of 2 minimum. (For further details, see Table 9-6.)

Using the step keys, the knob, or the numeric keys, set the arm length in the following way:

○ **Data displayed after triggering**

After triggering (hold state), the last frame of the input data buffer is displayed. To display all acquired data (arm length), use the DATA VIEW functions. (About the DATA VIEW functions, see "● VIEW STEP" in "■ How to Display Various Data" in Chapter 9.)

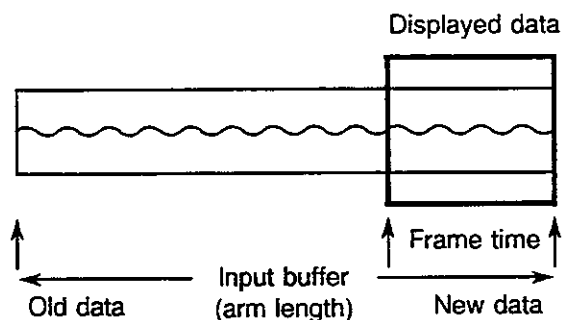


Table 9-6 Arm Length Range


Model	Optional memory	Minimum arm length	Maximum arm length
R9211A/E	None (standard)	8K samples/CH	64K samples/CH (128K samples/CH if one channel only is active)
	Option 10 or 11		512K samples/CH (1M samples/CH if one channel only is active)
	Option 10 + Option 11 (R9211A only)		1M samples/CH (2M samples/CH if one channel only is active)

3. **SETUP** KEY OPERATION

■ **Setting of a Data Acquisition Mode**

The R9211 is provided with four data input modes.

- (1) **FREE RUN**
The data are all the time input at the specified sampling interval.
- (2) **ARM**
The data acquisition stops when the acquired data satisfy the specified trigger conditions. The data do not change until this mode is canceled.
- (3) **AUTO ARM**
The operations of the ARM mode are automatically repeated when ever the trigger is activated.
- (4) **HOLD**
The data acquisition stops.

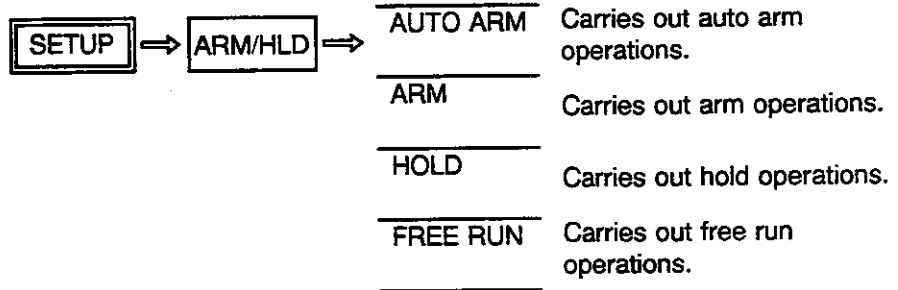

■ **Selection of a Window**

X softkeys **WEIGHT** and **LAG WND** enable the selection of a window which can be multiplied with the data. For this purpose, you have access to the **LAG WND** menu in the "WAVEFORM" mode, and to the "WEIGHT" menu in any other modes. Besides, the **WEIGHT** menu, enables the selection of frequency data weights.

● **Windows' types**

The R9211 is provided with the windows listed in Table 9-7.

3. **SETUP** KEY OPERATION


Table 9-7 Windows' Types

Window	Advantages	Drawbacks	Application domain
Rectangular window (RECT)	<ul style="list-style-type: none"> Does not modify the energy of the sampled data during the frame time. Presents the frequency resolution. 	<ul style="list-style-type: none"> Presents a poor level accuracy. Generates discontinuities on a periodic continuous. 	<ul style="list-style-type: none"> Is optimum for the analysis of transient signal and of impulse signals.
HANNING	<ul style="list-style-type: none"> Does not generate any discontinuities on a periodic continuous signals. 	<ul style="list-style-type: none"> Presents a frequency resolution lower than that of the rectangular waveform window. Presents a relatively poor level accuracy. 	<ul style="list-style-type: none"> Is generally used for observing continuous waveforms. Enables spectrum analysis up to 70dB.
FLAT-PASS	<ul style="list-style-type: none"> Presents the best amplitude accuracy. 	<ul style="list-style-type: none"> Presents a poor frequency resolution. 	<ul style="list-style-type: none"> Is effective for harmonics analyses.
MINIMUM	<ul style="list-style-type: none"> Presents an excellent side band shape. Presents a better frequency resolution than the FLAT-PASS window. Presents a higher amplitude accuracy than the HANNING window. 	<ul style="list-style-type: none"> Presents not as good a frequency resolution as the HANNING window. Presents a lower amplitude accuracy than the FLAT-PASS window. 	<ul style="list-style-type: none"> Is effective for observing small adjacent spectrum lines (e.g., notches). Enables spectrum analysis beyond 70dB.
FORCE/RESPONSE	<ul style="list-style-type: none"> For input signals such as an impulse waveform, a time dependent weight is applied. Perturbations Influence outside the specified time range are ignored. (FORC) 	<ul style="list-style-type: none"> Since the weight is time dependent, this weight is not suitable for analyses of continuous waveforms. 	<ul style="list-style-type: none"> Used to analyze signals damped with the time.

● **Setting of a window**


The window setting procedure is the following one:

○ **In a mode other than the WAVEFORM mode.**

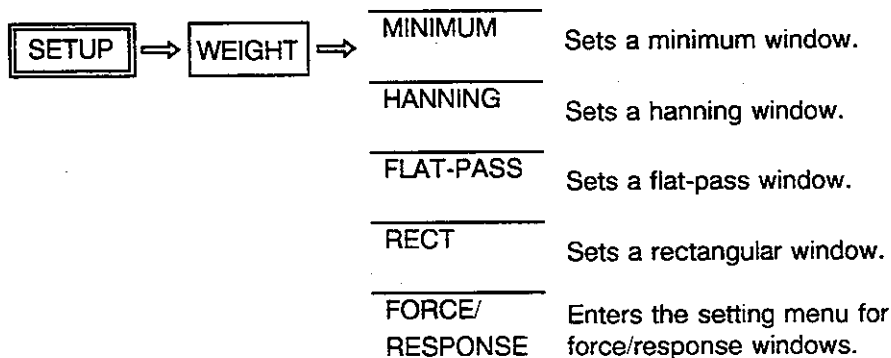

3. **SETUP** KEY OPERATION

○ In the Waveform mode

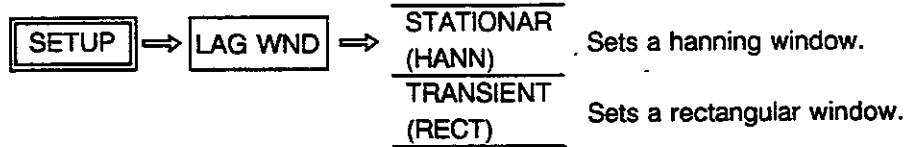


● **Setting of the force/response windows**

To use the FORCE/RESPONSE windows, the following procedure must be followed:

- (1) The data upon which the force/response windows are to be applied must be selected.
- (2) Either the FORCE or the RESPONSE window must be selected.
- (3) START TIM : The starting time of the FORCE(RESPONSE) windows is specified.
- (4) STOP TIM : The ending time of the FORCE window is specified.
- (5) DAMPING : The damping value of the RESPONSE window is specified.
- (6) Weight view : Determine whether the time data are to be displayed after or before the application of the FORCE/RESPONSE windows.

All of these are set through the following menu:

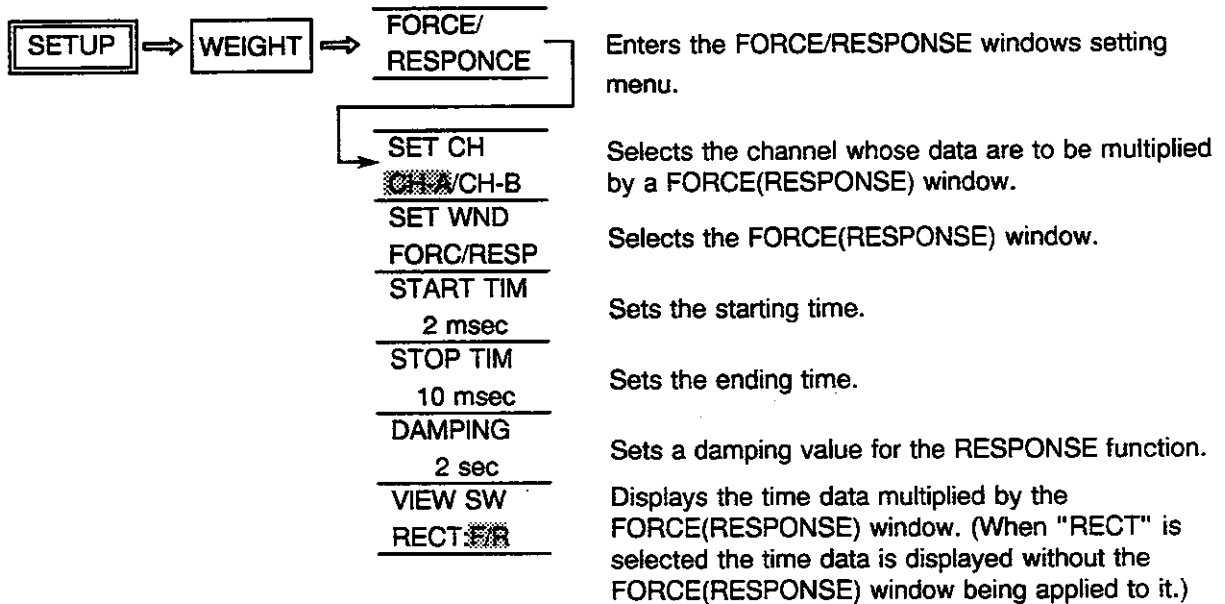

To enter those value, use the numeric keys, the knob, or the step key.


ADVICE

The response window is defined, from the starting time, as the following function of time t : $e^{-(t/\text{damping factor})}$.

3. **SETUP** KEY OPERATION

● **Weighting of the frequency domain data**

In the R9211, the frequency domain data (power spectrum) can be multiplied by a weighted (except in the WAVEFORM modes).

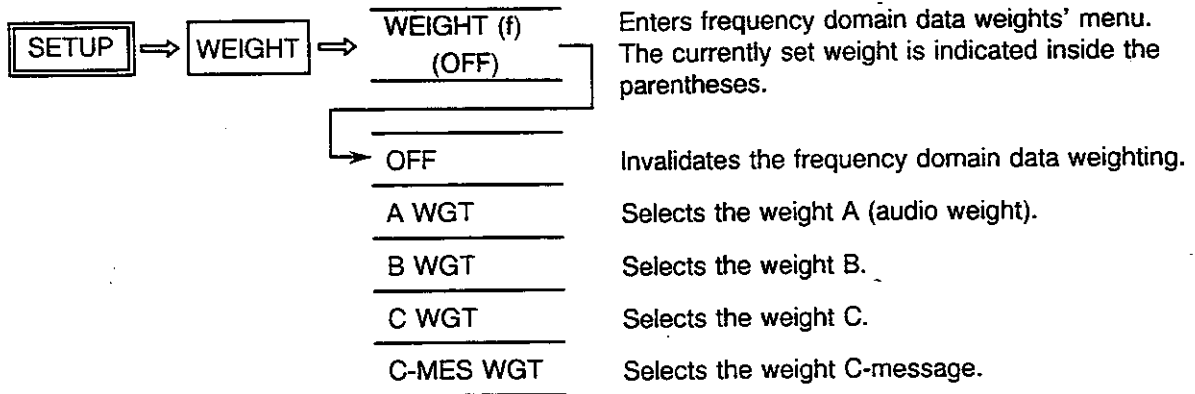

REFERENCE

Regarding these weights characteristics, see "■ Audio Weights Characteristics" in Appendix "2. Glossary" page A-19 & A-20.

■ **Setup of an Averaging Process**

With X softkey "AVG" you setup an averaging process. You control the execution of such a process with panel keys **START** and **STOP**.

● **Averaged Data**

What data will be averaged depends on the measurement function you have selected.


Table 9-8 Measurement Functions and Averaged Data

FUNCTION	Averaged data	FUNCTION	Averaged data
TIME	Time data	POWER SPECTRUM	Power spectrum
AUTOCORR	Autocorrelation function	CROSS-SPECTRUM	Cross-spectrum
CROSS-CORR	Cross-correlation function	COMPLEX SPECTRUM	Complex spectrum
HISTOGRAM	Probability density function	FRF	Power spectrum Cross spectrum FRF, COH Impulse response

3. **SETUP** KEY OPERATION

● **Selection of an averaging method**

Use the following menu to select the averaging method:

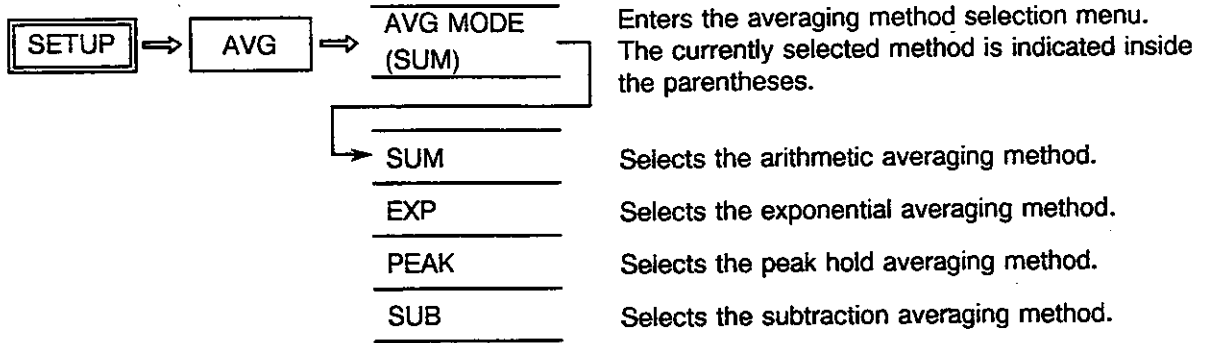

○ **Relationships between averaging methods and measurement functions**

Some averaging methods cannot be used depending on the selected measurement function.

Table 9-9 indicates which averaging methods you can use for each measurement function.

Table 9-9 Available Averaging Method for Each Measurement Functions

Measurement function	TIME	AUTOCORR CROSS-CORR	HIST	POWER SPECTRUM CROSS-SPECTRUM COMPLEX SPECTRUM	FRF	FRF
Average method	SUM	SUM, EXP	SUM	SUM, EXP, PEAK, SUB	SUM, EXP, PEAK	SUM

○ **Mathematical definition of each averaging methods:**
 (j : number of averages, X_i : ith instantaneous value,
 A_j : jth average)

(1) SUM

$$A_j = (\sum_{i=1}^j X_i) / j$$

(2) EXP

$$A_j = (1 - 1/k) \times A_{j-1} + X_j / k$$

k: Weighting factor
 (You specify it by setting the number of averages)

(3) PEAK

$$A_j = \text{MAX} (A_{j-1}, X_j)$$

(4) SUB


$$A_j = A_{j-1} - X_j / k$$

k: Is the specified number of averages

3. **SETUP** KEY OPERATION

● **Setting of the number of averages**


The number of averages can be chosen between 1 and 32767.



You can use the numeric keys or the knob or the step keys for this setting.


● **Setting of the weighting factor of the exponential averaging method**

You must use the "AVG NO" key to set the weighting factor of the exponential averaging method.



● **Setting of the maximum number of averages of the exponential averaging method.**

You must set a maximum number of averages which must not be exceeded in the exponential averaging method.



● **Selecting an averaging process**

There are three types of averaging processes:


NORMAL : Each data frame is averaged and displayed (Intermediate results display).

FAST : The first data and the last data (result data) only are displayed.

+1 AVG : Averaging is performed each time the **STOP/C** key is

pressed. To abort this process execution, press the **STOP + 1** key.


To select an averaging process proceed as follows:

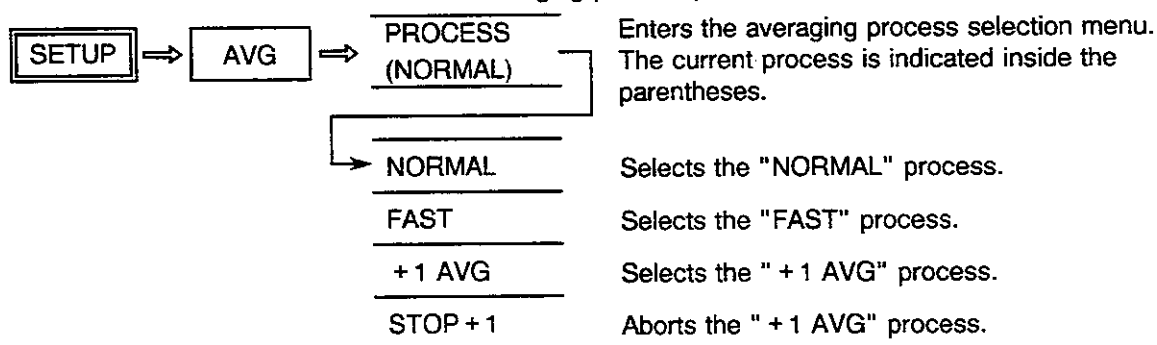

3. **SETUP** KEY OPERATION

● **Averaging of overloaded data**


When the acquired data overloads the input block of the analyzer, if these data are used for the averaging process, the result may prove incorrect. With the R9211, you can decide not to take into account these over loading data, for the averaging process.




When REJECT is set to ON, the overloading input data are not averaged. When REJECT is set to OFF, the overloading input data are averaged.

● **Control of the averaging of overlapped data**

Data are acquired each time the R9211 performs an internal process. If the internal between 2 time series acquisition is shorter than the frame time, the input data can overlap.

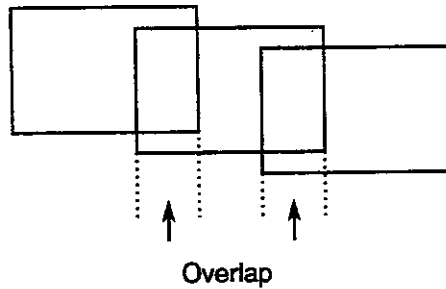

For the R9211, you can specify an overlap ratio as follows:

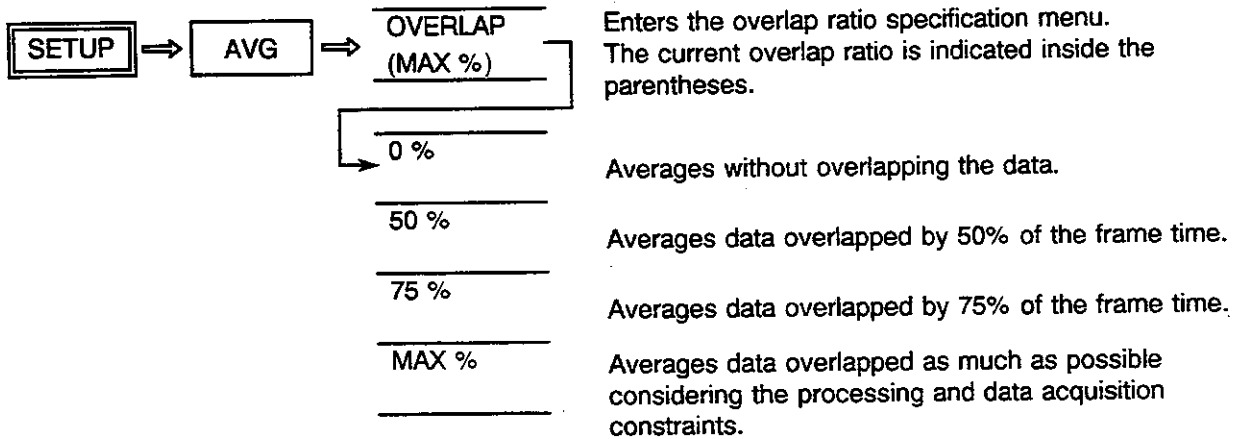

■ Setting of the Unit

With the R9211, you can choose either Vlt, Vrms, or EU, as unit, depending on the data.

● How to express the data in EU (Engineering Unit)

An Engineering Unit setting takes effect on one channel.

[Time waveform]

$$1V = x' \text{ EU or } 0\text{dBV} = y \text{ dBEU}$$


[Spectrum waveform]

$$1V_{\text{rms}} = x' \text{ EU or } 0\text{dBV}_{\text{rms}} = y' \text{ dBEU}$$

Besides you can assign a name to an Engineering Unit. This name is "EU" by default. It must be composed of at most 2 characters.

The setting procedure is the following one:

- (1) First you must select the channel on which the EU is to be effective.

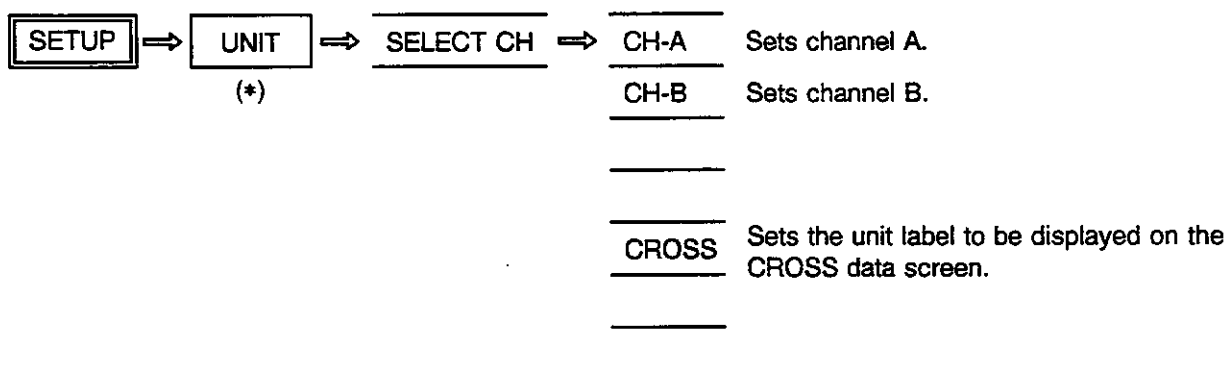

NOTE

(*) indicates that the **next** key must be pressed if this menu is not displayed.

- (2) Setting of the scaling correspondence factor (i.e. a number to be multiplied to the internal data). However, you cannot define a correspondence factor when you have selected "CROSS" in (1).


You will consider either one of the following equations depending on the type of data displayed along the Y-axis currently selected with the **SEL** key.

$$\text{Logarithmic data (dB Mag)} : 0 \text{ dBV (rms)} = y \text{ dBEU} \text{ ———(a)}$$

$$\text{Linear data (Mag)} : 1V \text{ (rms)} = x \text{ EU} \text{ ———(b)}$$


3. **SETUP** KEY OPERATION

(a) Engineering Unit definition procedure when the data displayed along the Y-axis are logarithmic data expressed in dBMag:

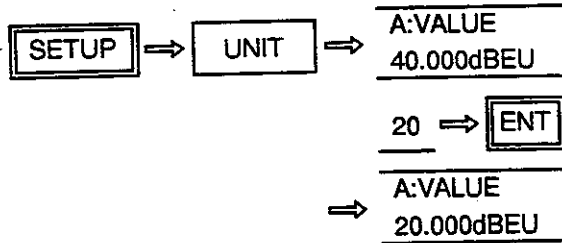

In this case, 0dBVrms corresponds to 20dBEU on channel A.

(b) Procedure for transforming logarithmic data (dBMag) into linear data (Mag):

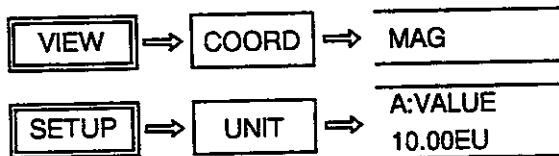

Transforms dBMag into Mag.

Switches dBEU display to EU display.

(3) Definition Procedure for a unit label. Note that you must use a single screen configuration.



A table of characters to be used for the unit name edition is displayed on the screen.

*** R9211 ***

0.0 dBV

60.0 dBm

-100.0 dBV

125.0 50.0k

FREQUENCY Hz

AVG (SUM): 0/0

RETURN

WEIGHT AVG CNDELAY RETURN

ABCDEF GHIJKL MNOPQRS TUVWXYZ
 abcdefghijklmnopqrstuvwxyz
 0123456789 .-+*/=
 !@#%&'()*+,-./:;<>[]{}~?`
 ~?`

Select the first character with the knob or or key, then press the key.

Select the second character in the same manner, then press the key.



3. **SETUP** KEY OPERATION

- ⇒ DEL CHAR Press this key to delete a character you entered by mistake.
- ⇒ DONE Validates the Engineering-unit setting.

NOTE

The Engineering Unit label can be composed of two characters maximum. If 3 or more characters were input, only the first two characters would be taken into account.

(4) Selection of the engineering unit.

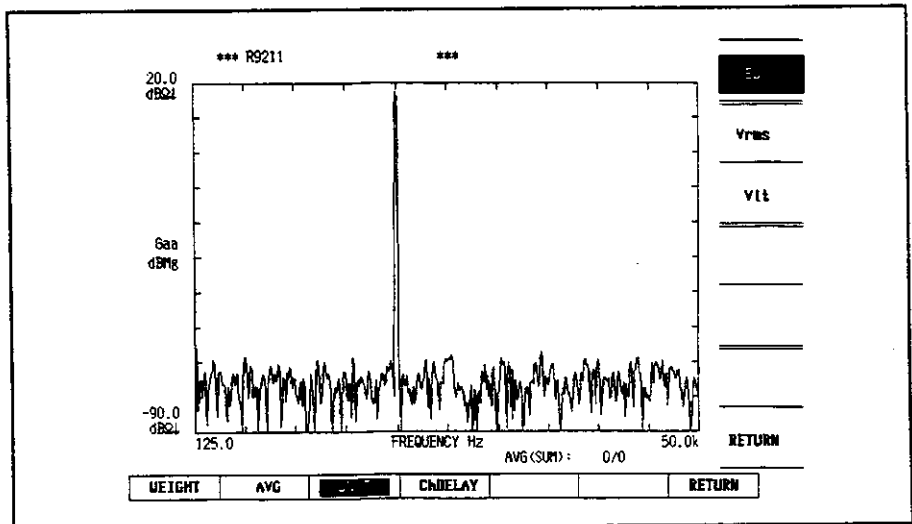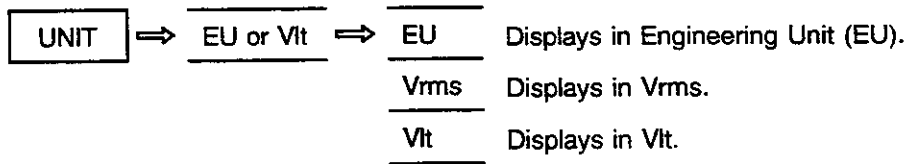

(5) Complementary information

Table 9-10 explains through examples, depending on each data, which channel's correspondence factor will be used and which channel's unit label will be displayed.

3. **SETUP** KEY OPERATION

Table 9-10 Data and Unit Labels

Data	Scaling factor	Unit label
Xa	A	Label for channel A
Sb	B	Label for channel B
Gaa	A*A	Label for channel A
Gab	A*B	Label for "CROSS channel"
Hab	B/A	Label for "CROSS channel"

..... (*1)

*1 Since a power spectrum is considered, the scaling factor is squared.

A: Scaling factor set for channel A
 B: Scaling factor set for channel B

NOTE

In the case of MATH's results, the channel whose Engineering Unit is used is the channel of the data specified as operand, while in the case of T-F analysis results, it is the channel of the trace data.

● **Displaying power spectrum density**

The procedure for displaying power spectrum density is as follows:







NOTE

(*) indicates that the **NEXT** key is to be pressed if this menu is not displayed.

■ Setting of the Interchannel Delay

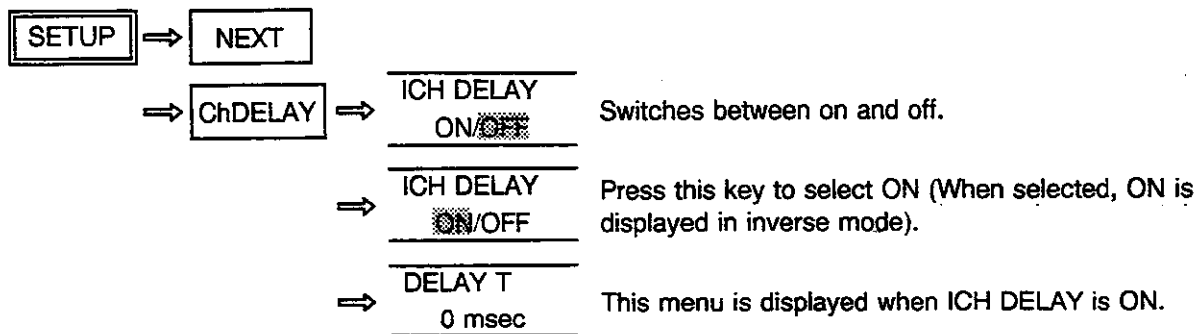You can define the time delay between the input channels (taking channel B as the reference)



Use the  knob, the  and  keys, or the numeric keys and the **ENT** key for the above setting.

NOTE

1. The unit of the time delay depends on the time range.
2. The following restriction is placed on the time delay:
If $X = \text{Input buffer size} / \text{One frame size} * \text{Frame time} - \text{Frame time}$ then, the specified delay must belong to the interval $[-X; X]$.
3. An interchannel delay cannot be defined in the arm or hold state. Only when the T-F mode is selected, can it be defined in the arm state. In this case, the input buffer size is equivalent to the arm length (see "● Setting of the arm length" in "■ Setting of the Trigger" in chapter 9).

3. **SETUP** KEY OPERATION

Table 9-11 Frequency Ranges and Time Delay

Frequency range (Hz)	Maximum time delay according to the spectrum size (msec)						
	25 lines	50 lines	100 lines	200 lines	400 lines	800 lines	1600 lines
10 m	20477e5	20475e6	2047e7	2046e7	2044e7	2040e7	2032e7
20 m	1023875e4	102375e5	10235e6	1023e7	1022e7	1020e7	1016e7
50 m	40955e5	4095e6	4094e6	4092e6	4088e6	4083e6	4064e6
100 m	204775e4	20475e5	2047e6	2046e6	2044e6	2040e6	2032e6
200 m	1023875e3	102375e4	10235e5	1023e6	1022e6	1020e6	1016e6
500 m	40955e4	409500e3	40940e4	4092e5	4088e5	4083e5	4064e5
1	204775000	204750e3	20470e4	2046e5	2044e5	2040e5	2032e5
2	102387500	102375e3	10235e4	1023e5	1022e5	1020e5	1016e5
5	40955000	40950000	40940000	4092e4	4088e4	4083e4	4064e4
10	20477500	20475000	20470000	2046e4	2044e4	2040e4	2032e4
20	10238750	10237500	10235000	1023e4	1022e4	1020e4	1016e4
50	4095500	4095000	4094000	4092e3	4088e3	4080e3	4064e3
100	2047750	2047500	2047000	2046e3	2044e3	2040e3	2032e3
200	1023875	1023750	1023500	1023e3	1022e3	1020e3	1016e3
500	409550	409500	409400	409200	408800	408000	406400
1 k	204775	204750	204700	204600	204400	204000	203200
2 k	102387.5	102375	102350	102300	102200	101600	100800
5 k	40955	40950	40940	40920	40880	40800	40640
10 k	20477.5	20475	20470	20460	20440	20400	20320
20 k	10238.75	10237.5	10235	10230	10220	10200	10160
50 k	4095.5	4095	4094	4092	4088	4080	4064
100 k	2047.75	2047.5	2047	2046	2044	2040	2032

In this table, we indicated the maximum possible value that the time delay can take depending on the frequency range and the member of lines.

For instance if the frequency range is 100kHz and the spectrum size is 400 lines, the time delay must be defined between -2044ms and 2044ms.

204775e5 means 204775×10^5 .

■ T-F Analysis Setup

To execute T-F analysis, the following parameters must be set:

- (1) T-F analysis time domain
- (2) Data subjected to T-F analysis
 - Identification number (1 to 4)
 - Channel whose signal is to be analyzed
 - Type of the trace data to be analyzed
 - Frequency of the trace data to be analyzed


The R9211 can analyze up to four types of data simultaneously (they must correspond to the same time domain). Identification numbers are used to differentiate these four types of data.

NOTE

If the **INST t-f** key in the Y softmenu is ON, the above settings cannot be changed. Set it to OFF, and then make the changes.

● Setting a time domain

The time domain setting procedure is described below. If the set value does not match the sampling clock, immediately after the T-F analysis starts, it is automatically changed to fit the sampling clock requirements.

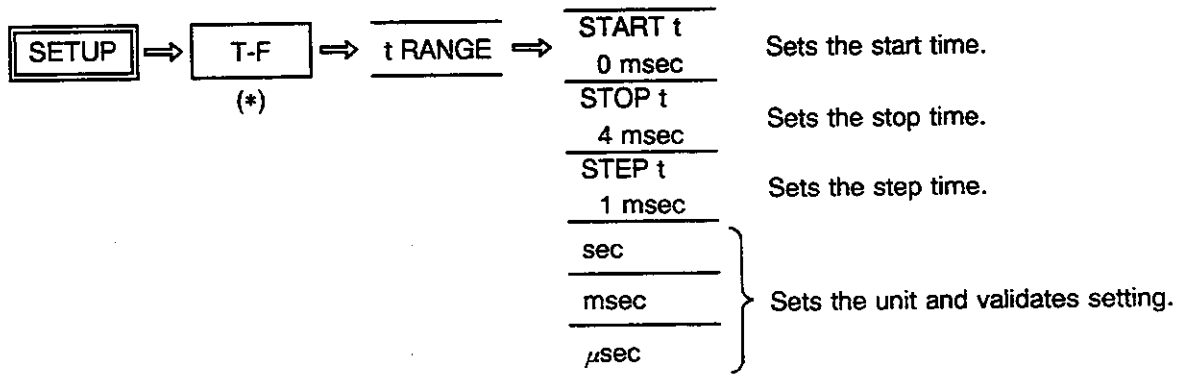

NOTE

(*) indicates that the **NEXT** key is to be pressed if this menu is not displayed.


There are some restrictions on the start time, stop time and step time according to the maximum size of the data subject to T-F analysis (1K) and to the input buffer size.

3. **SETUP** KEY OPERATION

● **Setting of the T-F analysis data**

You must set the T-F analysis data setting menu (which is the menu displayed when you press the t-f MODE key) top down.


(1) Setting of an identification number



Thus, 2 is registered as the identification number.

(2) Selection of a channel


You can select channel A or channel B as the channel to be submitted to T-F analysis.



(*1) Spectra Gaa and Sa of channel A are displayed as trace data.

(*2) Spectra Gbb and Sb of channel B are displayed as trace data.

(3) Setting of a trace data type

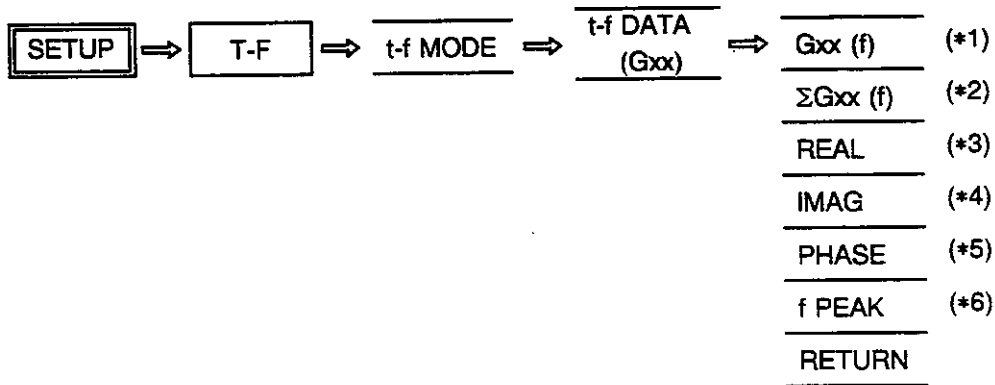

3. **SETUP** KEY OPERATION

If (*1), (*3), (*4), or (*5) is selected, by pressing the RETURN key you come back to the previous menu, which has become:

```

t-f ID
  2
t-f CH
(CH-A)
t-f DATA
(***)
SPOT f
***kHz

```

If (*2) or (*6) is selected, the previous menu has become:


```

t-f ID
  2
t-f CH
(CH-A)
t-f DATA
(***)
START f
***kHz
STOP f
***kHz

```

(4) Setting of a tracing frequency

Since a single frequency is traced when Gxx, REAL, IMAG, or PHASE is selected as trace data type, a spot frequency must be specified, which is done as follows:

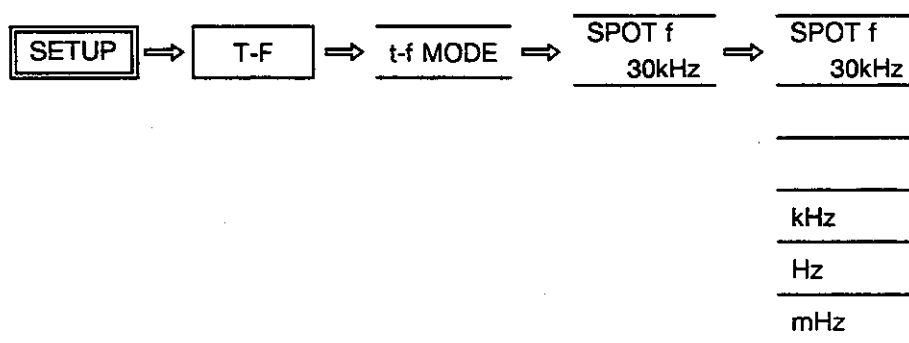


3. **SETUP** KEY OPERATION

If ΣG_{xx} or f PEAK is selected as trace data type, START f and STOP f are displayed instead of the SPOT f.

Set a trace frequency range in the same way as you would set a single frequency.


● Execution of a T-F analysis



In this state, T-F analysis starts when you press the **START** key.


● Display of T-F analysis results

The procedure for displaying T-F analysis results is the following one:

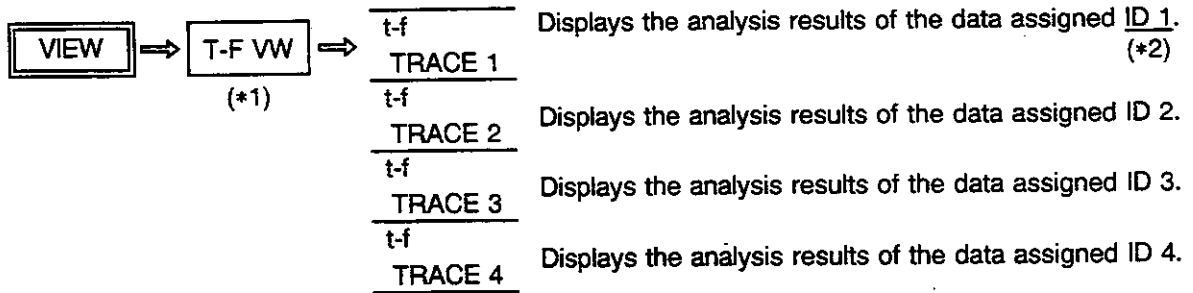

(*1) Press the **NEXT** key if this menu is not displayed.

(*2) This ID is the ID set with the following procedure:



In the trace-on-start ON mode, when data other than the T-F analysis data are displayed, the T-F analysis results of the data whose ID was set last is displayed automatically, immediately after pressing the **START** key.

For details on the TRACEonST function, see "● Automatic setting of the display" in "■ Extended Functions' Setting" in chapter 9.

3. **SETUP** KEY OPERATION

● Example of T-F analysis results

An example of T-F analysis is given below.

The T-F analysis conditions are listed in the following table:

START t	Start time	0msec
STOP t	Stop time	20msec
STEP t	Step time	78.12 μ sec
t-f ID	Identification number	2
t-f CH	Channel	CH-A
t-f DATA	Trace data	Gxx
SPOT f	Spot frequency	8kHz

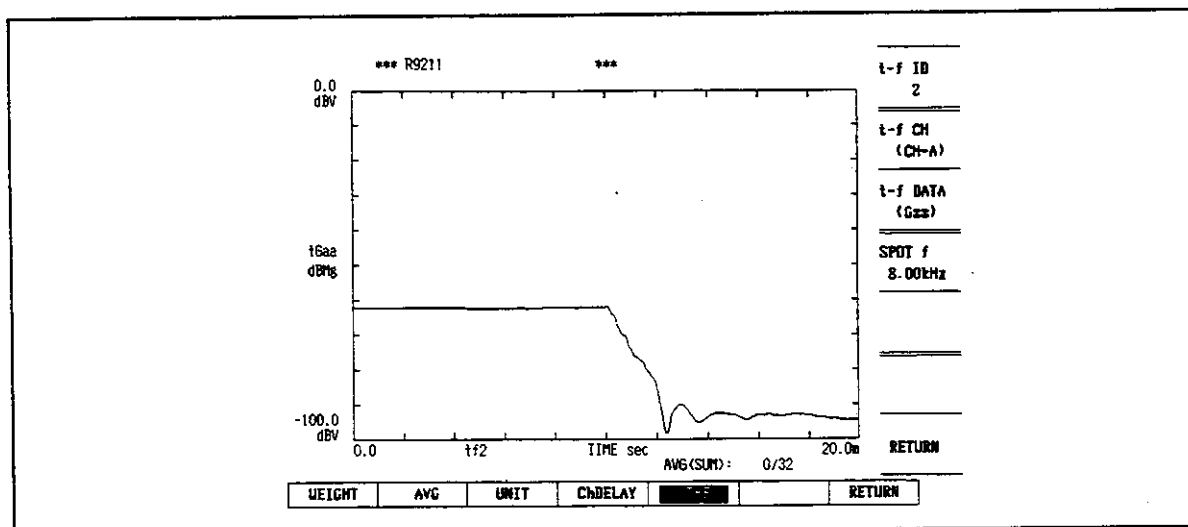


Figure 9-1 Example of T-F Analysis Results

3. [SETUP] KEY OPERATION


SETUP Menu List

R9211 Series Menu List (SETUP in the WAVEFORM mode)

- MODE [MEAS] WAVEFORM
- SETUP
- FUNC [SENS]
- TIME [RANGE] When SENS is set to MANUAL
- AUTOCORR [SENS]
- CROSS-CORR [CH-A] CH-A / CH-B
- HISTOGRAM [AUTO/MAN] AUTO/MAN
- DIGITAL Sd. [SMPLE CLK] SMPLE CLK
- CAR/CLF [IN/EXT] IN/EXT
- AUTO/AVG [CH-ABBT] CH-ABBT
- CH-A [CH-A] CH-A
- CH-B [CH-B] CH-B
- RETURN
- MEAS [MEAS]
- WAVEFORM [WAVEFORM]
- TRIG [TRIG] TRIG
- ARM/HOLD [ARM/HOLD] ARM/HOLD
- ARM [ARM]
- HOLD [HOLD]
- FREE RUN [FREE RUN]
- SOURCE [CH-A] CH-A
- SLOPE [SLOPE] SLOPE
- LEVEL [LEVEL] LEVEL
- HYSTERESIS [HYSTERESIS] HYSTERESIS
- DELAY [DELAY] DELAY
- FILTER [FILTER] FILTER
- TCP [TCP] TCP
- TEST [TEST] TEST
- DELAY [DELAY] DELAY
- sec [sec]
- ms [ms]
- μsec [μsec]
- RETURN [RETURN]
- CH-A [CH-A] CH-A
- CH-B [CH-B] CH-B
- EXT [EXT]
- RETURN [RETURN]
- When BI-SLOPE is selected
- LEVEL (UP) [LEVEL (UP)] LEVEL (UP)
- LEVEL (DN) [LEVEL (DN)] LEVEL (DN)
- 0.3kV [0.3kV]
- 0.3kV [0.3kV]
- CH-A [CH-A] CH-A
- CH-B [CH-B] CH-B
- EXT [EXT]
- RETURN [RETURN]
- When FUNC is set to AUTO
- HISTOGRAM [HISTOGRAM] HISTOGRAM
- CH-A [CH-A] CH-A
- AUTO/MAN [AUTO/MAN] AUTO/MAN
- A: UP&D/UP [A: UP&D/UP] A: UP&D/UP
- 0.0kV [0.0kV]
- CH-B [CH-B] CH-B
- AUTO/MAN [AUTO/MAN] AUTO/MAN
- B: UP&D/UP [B: UP&D/UP] B: UP&D/UP
- 0.0kV [0.0kV]
- Displayed when CH-A is set to ACTIVE and a digital I/O port is allocated
- CH-A [CH-A] CH-A
- CH-B [CH-B] CH-B
- CROSS [CROSS]
- RETURN [RETURN]
- When SENS is set to MANUAL
- INPUT [INPUT] INPUT
- CHANNEL [CH-A/CH-B] CH-A/CH-B
- COUPLING [AC/DC] AC/DC
- +INPUT [+INPUT] +INPUT
- INPUT [-INPUT] -INPUT
- IN/GND [IN/GND] IN/GND
- IN/GND [IN/GND] IN/GND
- FILTER [FILTER] FILTER
- TCP [TCP] TCP
- ON/OFF [ON/OFF] ON/OFF
- TEST [TEST] TEST
- ON/OFF [ON/OFF] ON/OFF
- ARM [ARM]
- HOLD [HOLD]
- FREE RUN [FREE RUN]
- LAG WND [LAG WND] LAG WND
- STATIONARY [STATIONARY] STATIONARY
- (HANN) [(HANN)]
- TRANSIENT [TRANSIENT] TRANSIENT
- (RECT) [(RECT)]
- AUG MODE [AUG MODE] AUG MODE
- (SUM) [(SUM)]
- AVG NO [AVG NO] AVG NO
- LIMIT NO [LIMIT NO] LIMIT NO
- 2000 [2000]
- PROCESS [PROCESS] PROCESS
- (NORMAL) [(NORMAL)]
- RESOLVE [RESOLVE] RESOLVE
- ON/OFF [ON/OFF] ON/OFF
- UNIT [UNIT] UNIT
- EU of VIt [EU of VIt] EU of VIt
- (VIt) [(VIt)]
- SELECT CH [SELECT CH] SELECT CH
- (CH-A) [(CH-A)]
- A: VALUE [A: VALUE] A: VALUE
- 100.0k [100.0k]
- EU [EU]
- A: UNIT [A: UNIT] A: UNIT
- EU [EU]
- CH-A [CH-A] CH-A
- CH-B [CH-B] CH-B
- VIt [VIt]
- CROSS [CROSS]
- RETURN [RETURN]
- RETURN [RETURN]
- When FUNC is set to AUTOCORR or CROSS-CORR
- ICR DELAY [ICR DELAY] ICR DELAY
- ON/OFF [ON/OFF] ON/OFF
- DELAY T [DELAY T] DELAY T
- 0.0ms [0.0ms]
- Displayed when ICH DELAY is set to ON
- UNIT [UNIT] UNIT
- CORRECT [CORRECT]
- RETURN [RETURN]
- When FUNC is set to TIME
- CORRECT [CORRECT]
- RETURN [RETURN]
- When FUNC is set to AUTOCORR or CROSS-CORR
- EXT [EXT] EXT
- number of sampling points
- SAMPL CLK [SAMPL CLK] SAMPL CLK
- No unit is displayed when SAMPL CLK is set to
- EXT [EXT] EXT
- number of sampling points
- SAMPL RAT : 3.91 μsec to 39.1 μsec
- FRAME TIM : 64/128/256/612/1824/4096sp (Up to 6192 if 1 channel)
- SENS : 30 to 60dBV (10dB STEP)
- TRIG LEVEL : 1/256 of amplitude range
- HYSTERESIS : 1/256 of amplitude range
- TRIG DELAY : -128k to +1M samples (1 channel)
- 64k to +1M samples (2 channels)
- AVG NO : 1 to 32767
- HIST NO : 64/128/256/512/1024/2048 bin
- LIMIT NO : 1 to 32767

3. **SETUP**


KEY OPERATION

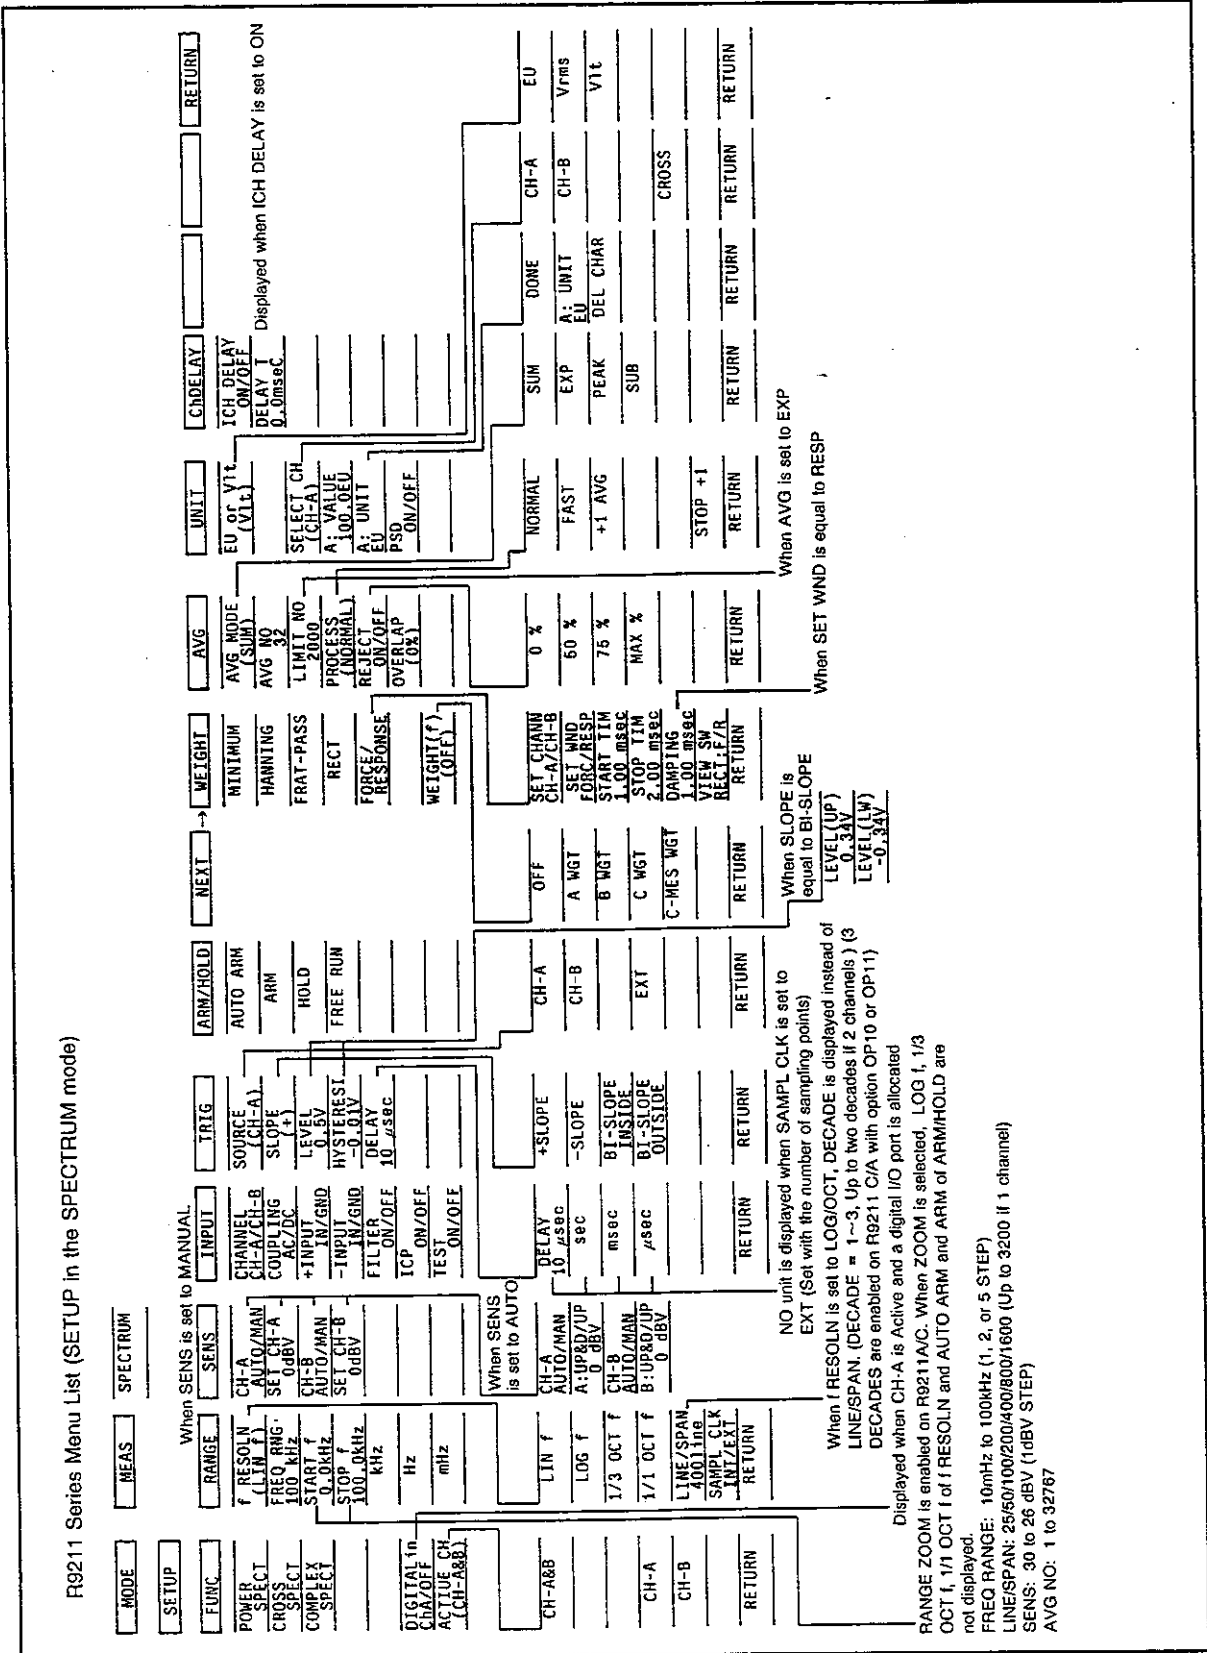

3.

SETUP

KEY OPERATION

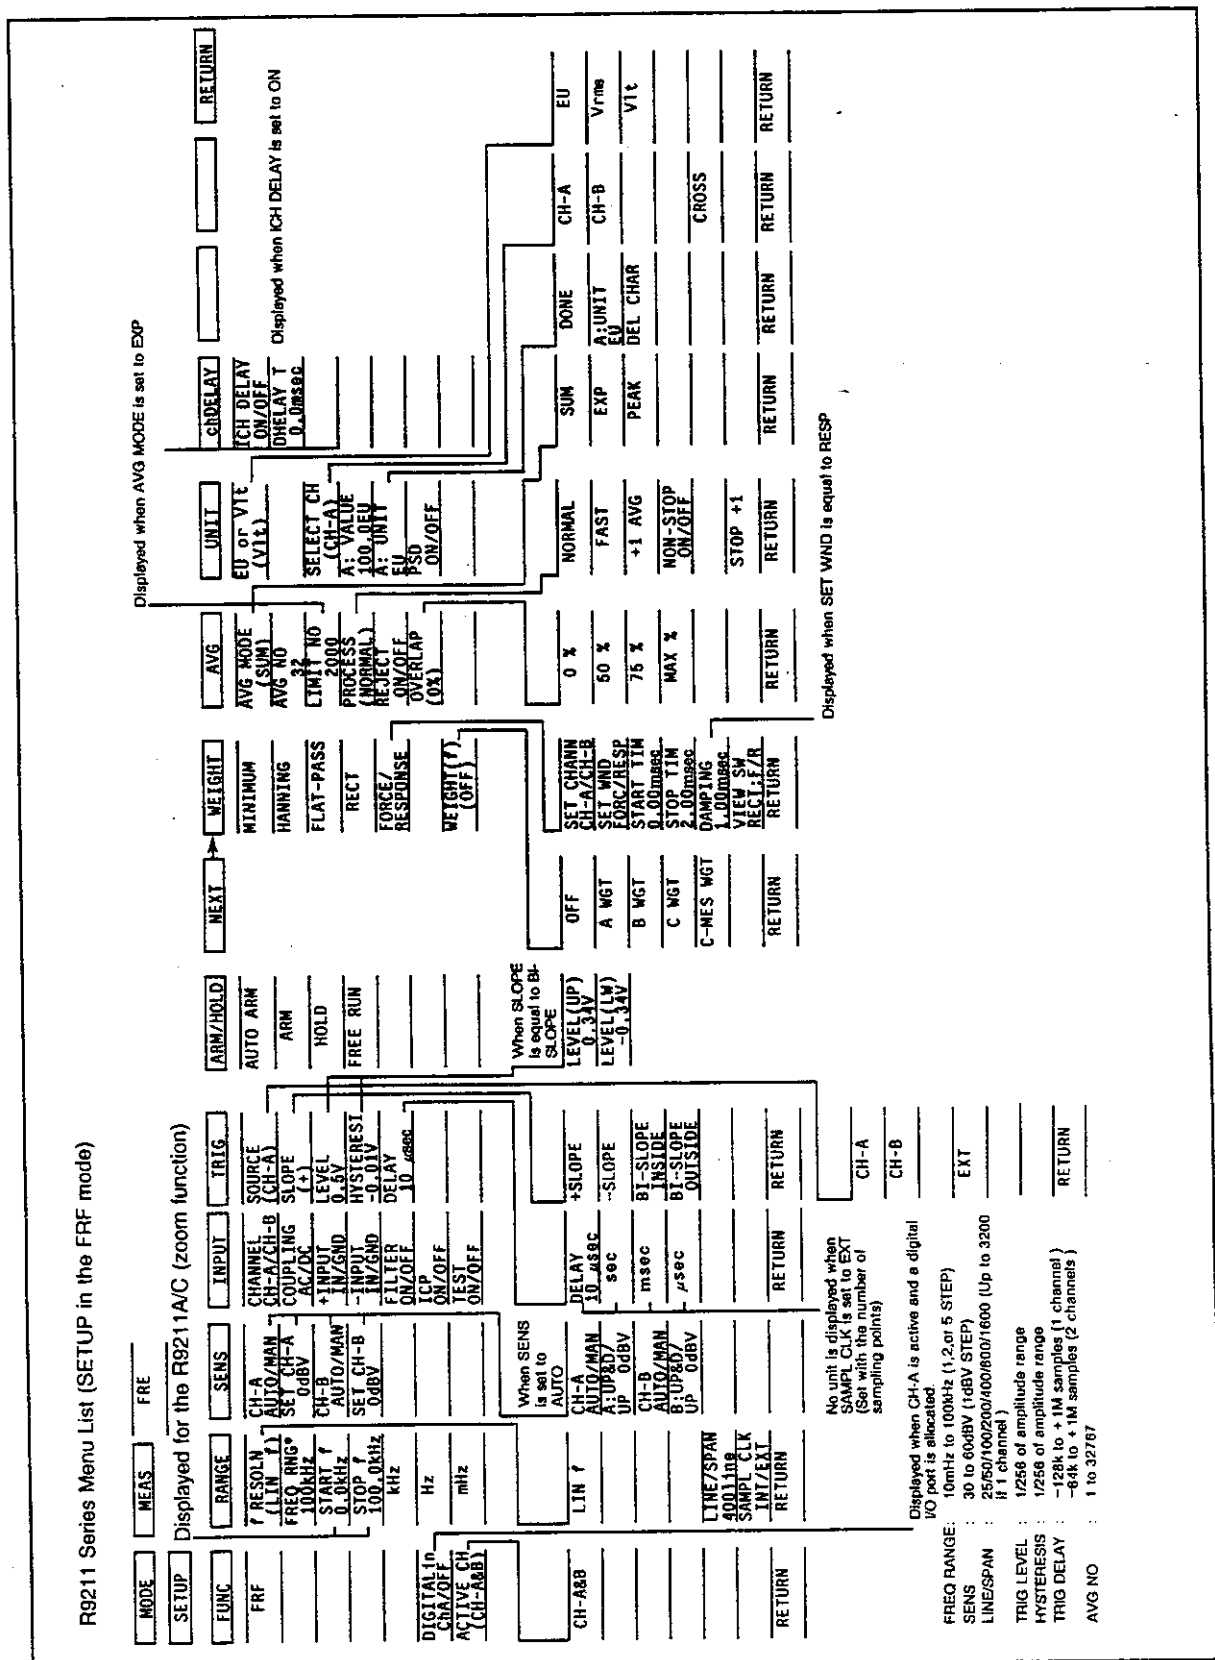

4. **VIEW** KEY OPERATION


This section explains how to use the **VIEW** panel key.

■ Selection of a Screen in the Multi-Screen Configuration



Press the above key sequence to select a screen (waveform) according to the number of displayed screens. When a screen is selected, the Y menu corresponding to the data displayed on this selected (active) screen is displayed.

Pressing the following key sequences yields the same result:




The black square (■) indicates the position of the current selected screen (active).

- When the screen configuration is set to SINGLE (1 screen):



- When the screen configuration is set to DUAL (2 screens):

Each time the **SEL** □ key is pressed, the active screen position switches:




- When the screen configuration is set to TRIPL (3 screens):

Each time the **SEL** □ key is pressed, the active screen position switches:



- When the screen configuration is set to QUAD (4 screens):

Each time the **SEL** □ key is pressed, the active screen position switches:




4. **VIEW** KEY OPERATION

■ **Display Related Modifications**

● **Changing the number of screens**

You change the number of screens as follows:

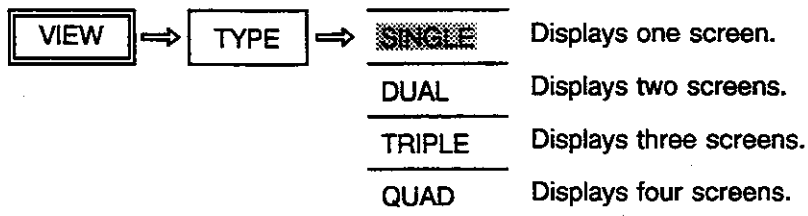

NOTE

1. The number of screens that can be displayed depends on the waveform type (polar coordinates or others) and number of lines.

2. The **SEL** X softkey changes according to the number of screens.

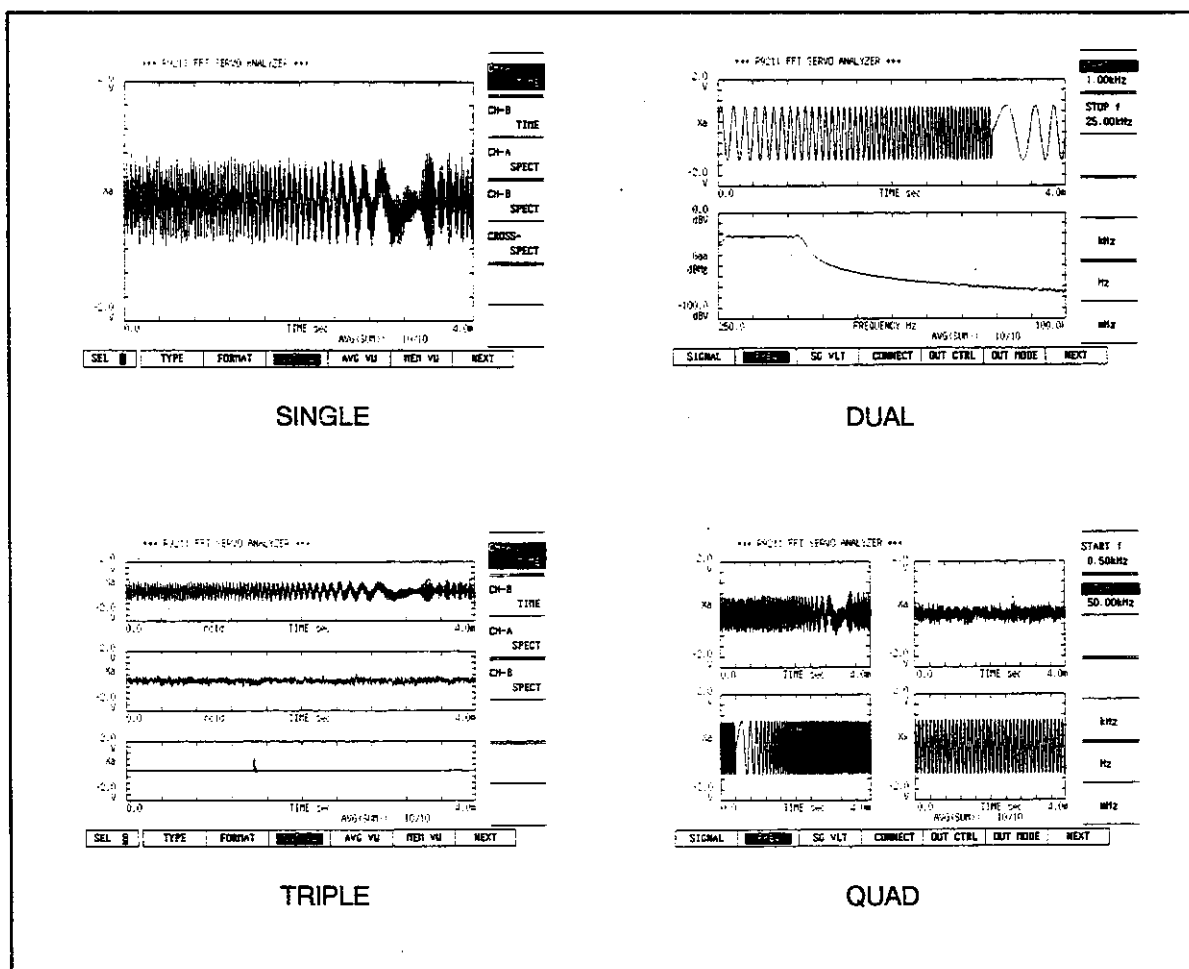


Figure 9-2 Multi-screen Display

4. **VIEW** KEY OPERATION

● **Instantaneous data monitor (only in the FRF mode)**




Table 9-12 Data Monitored when DO is Selected

Number of screens	Monitored data
SINGLE	First screen : Time waveform or spectrum of CH-B
DUAL	Second screen: Time waveform or spectrum of CH-B
TRIPLE	Second screen: Time waveform or spectrum of CH-B Third screen : Time waveform or spectrum of CH-A
QUAD	Third screen : Time waveform or spectrum of CH-A Fourth screen : Time waveform or spectrum of CH-B

The number of screens does not change.


To select either time waveform or spectrum, see the explanation of the following key sequence:



● **Read-out window (Visible or Invisible) for marker results**

You can determine whether the marker results are to be displayed in a readout window.

This setting is effective on all screens using a marker.



4. **VIEW** KEY OPERATION

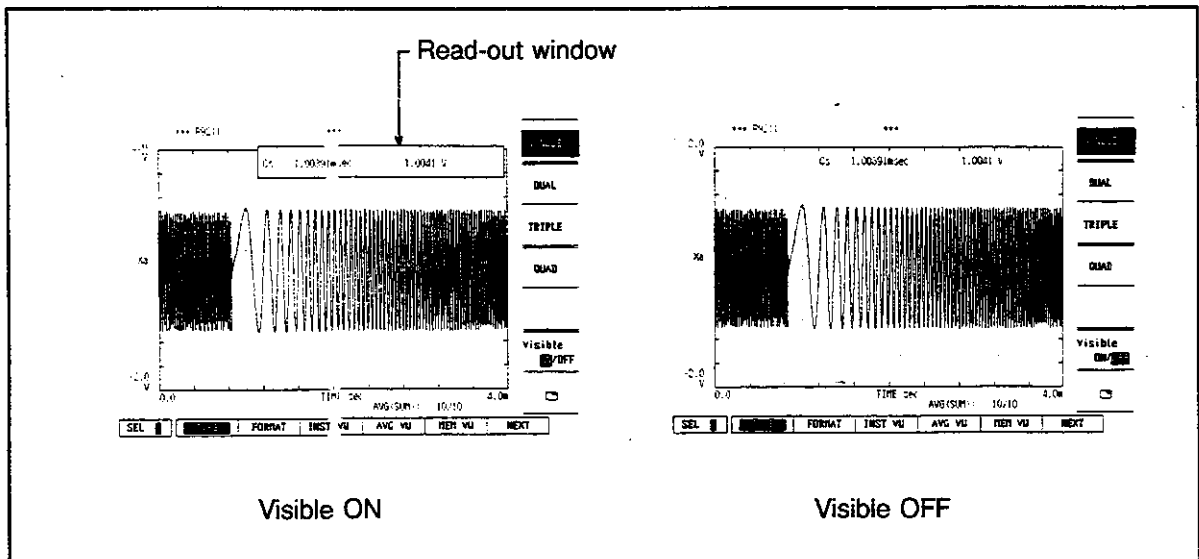


Figure 9-3 Read-out Window for Marker Results

● **Position of the readout window**

You can specify where to display the readout window for marker results. This setting is effective on all screens where a marker is used.

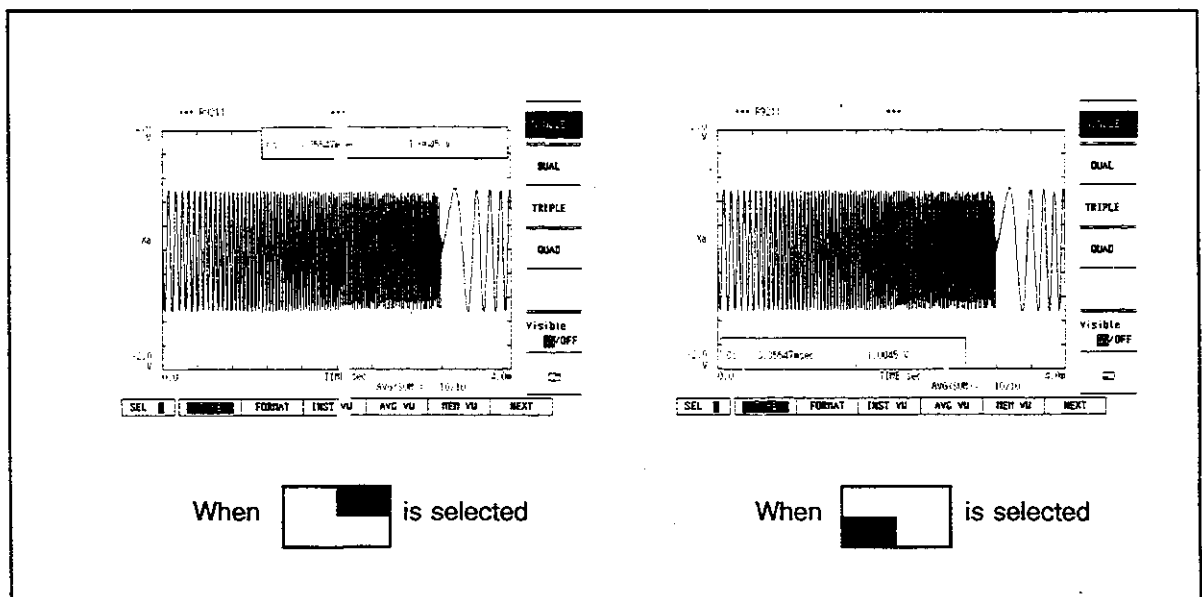
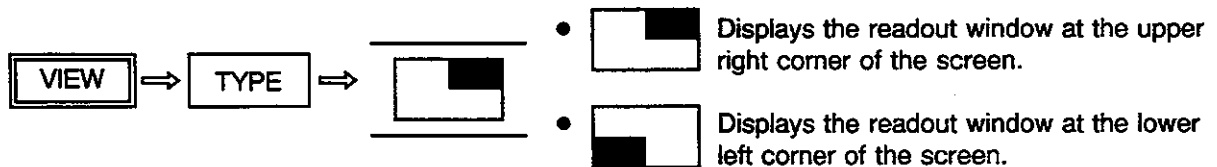
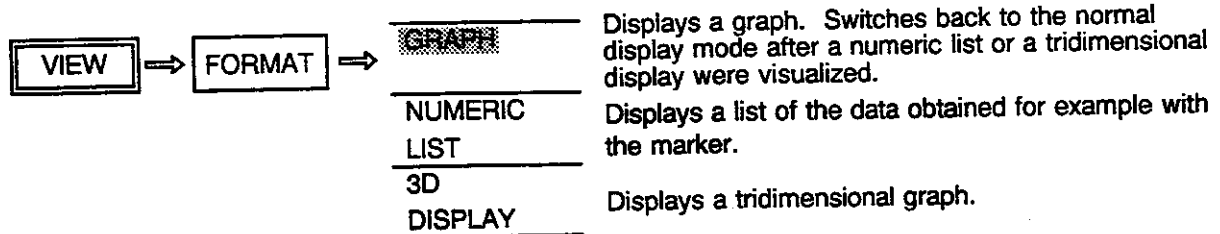


Figure 9-4 Read-out Window Display Position

4. **VIEW** KEY OPERATION■ **Display Format**● **Changing the display format****CAUTION !**

Depending on the number of screens or display type, you cannot select certain display formats.

○ **NUMERIC LIST**

- You cannot display a numeric list if you have earlier selected the triple or the quadruple screen configuration.
- When a list is being displayed, some keys cannot be used.
- This format is associated with the marker.
(A harmonic list, side band list, or reference points list may be displayed.)

NOTE

To return to your original display, press the GRAPH key.

○ **3D DISPLAY**

- A tridimensional display can always be chosen if the first screen (SEL1) is selected.
- A tridimensional display cannot be chosen if any screen other than the first screen (SEL1) is selected.
- When a tridimensional display is being visualized, some keys cannot be used.

NOTE

To return to your original display, press the GRAPH key.

4. **VIEW** KEY OPERATION

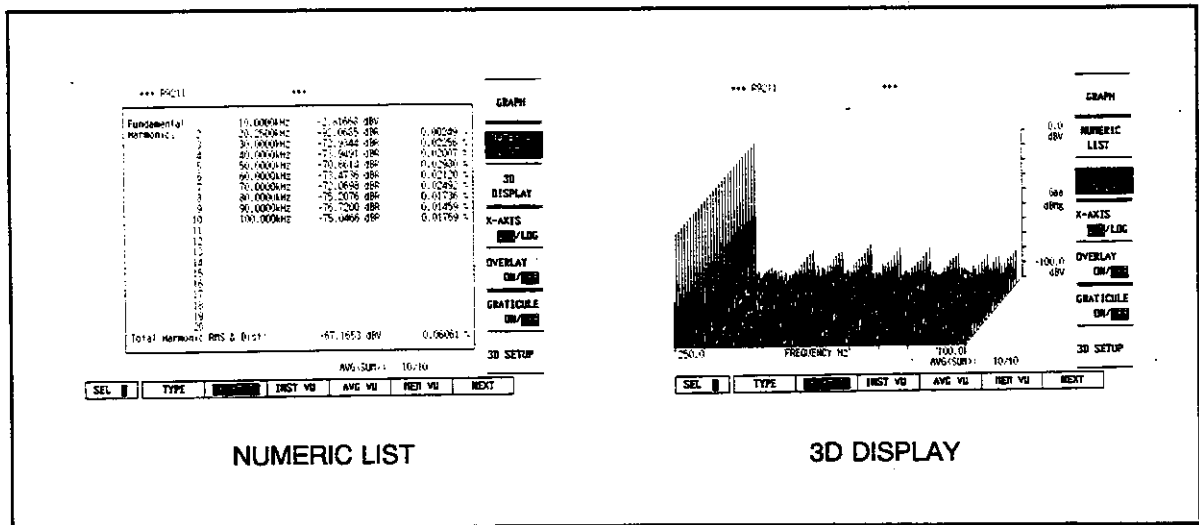


Figure 9-5 Numeric List and Tridimensional Display

● **Changing the display method (linear/logarithmic)**

The X axis of the displayed data can be either linear or logarithmic.



Specifies either a linear or a logarithmic X axis for the waveform being displayed.

X-AXIS LIN : Linear display

X-AXIS LOG : Logarithmic display

CAUTION !

Data acquired in the linear mode can be displayed with the logarithmic frequency display method; however, the data acquired in the logarithmic or octave mode cannot be displayed with the linear frequency method.

● **Changing the display mode (OVERLAY)**

You can superpose 2 or more screen's data: in a multiple screen configuration the waveforms of the other screens are superposed on the active (selected with the **SEL** key) screen.



"OVERLAY ON" : superposition of the screens.

"OVERLAY OFF" : each screen is independently displayed.

CAUTION !

"OVERLAY ON" cannot be specified in the following cases:

- When the X axis units differ between the screens
- When the frequency resolution differs between the screens

4. **VIEW** KEY OPERATION


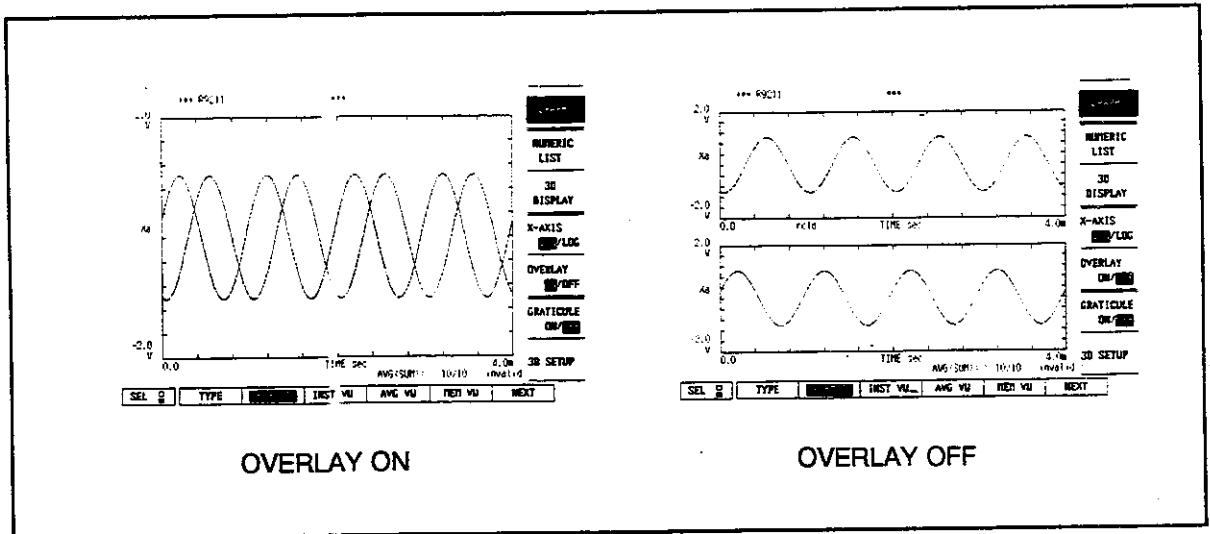


Figure 9-6 Display of Superposed Waveforms (OVERLAY ON/OFF)

● **Changing the display mode (graticule)**

This function is used to set or not a graticule over all displayed screens.



This setting is effective on all screens at the same time.

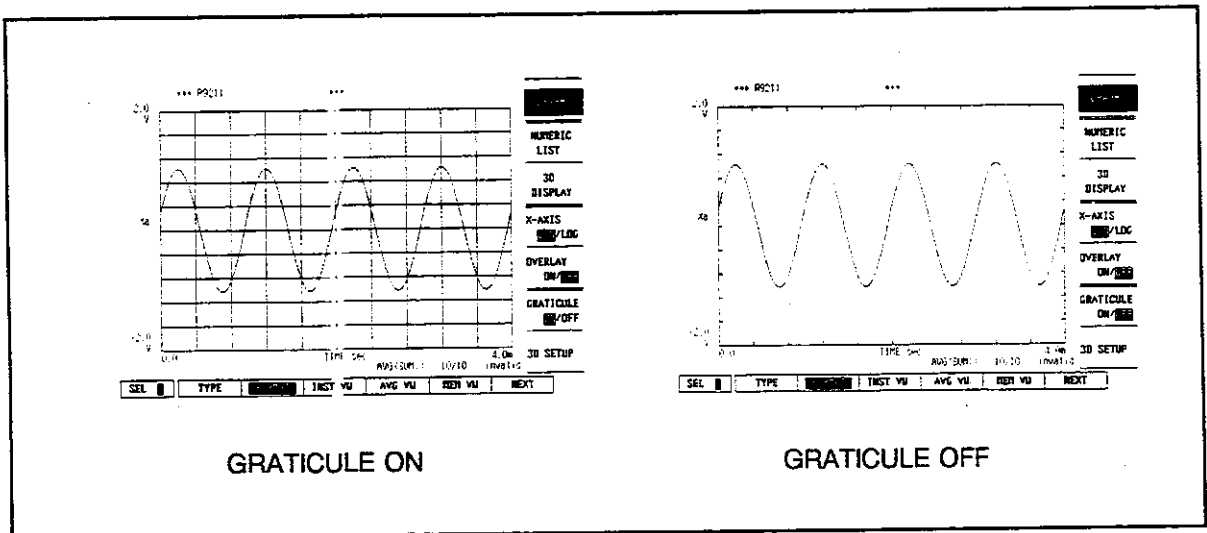

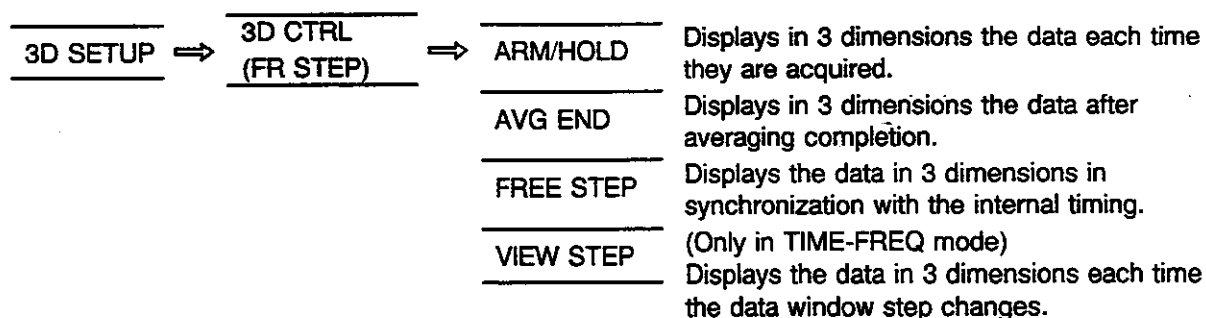



Figure 9-7 Graticule Display (GRATICULE ON/OFF)

4. VIEW KEY OPERATION● **Tridimensional display conditions setup**○ **Tridimensional display execution control**

Tridimensional display conditions setup menu (third page).

○ **Number of waveforms to appear on a tridimensional display**

Tridimensional display conditions setup menu (second page) .




Use the numeric keys (followed by the ENT key), the knob, or the ↑ and ↓ keys for the above setting.

From four to fifty waveforms may be specified.

○ **Axis angle of a tridimensional display**

Tridimensional display conditions setup menu (second page).



Use the numeric keys (followed by the ENT key), the knob, or the ↑ and ↓ keys for the above setting.

Select an angle equal either to 15°, 30°, 45°, 60°, 75° and 90°.

4. **VIEW** KEY OPERATION

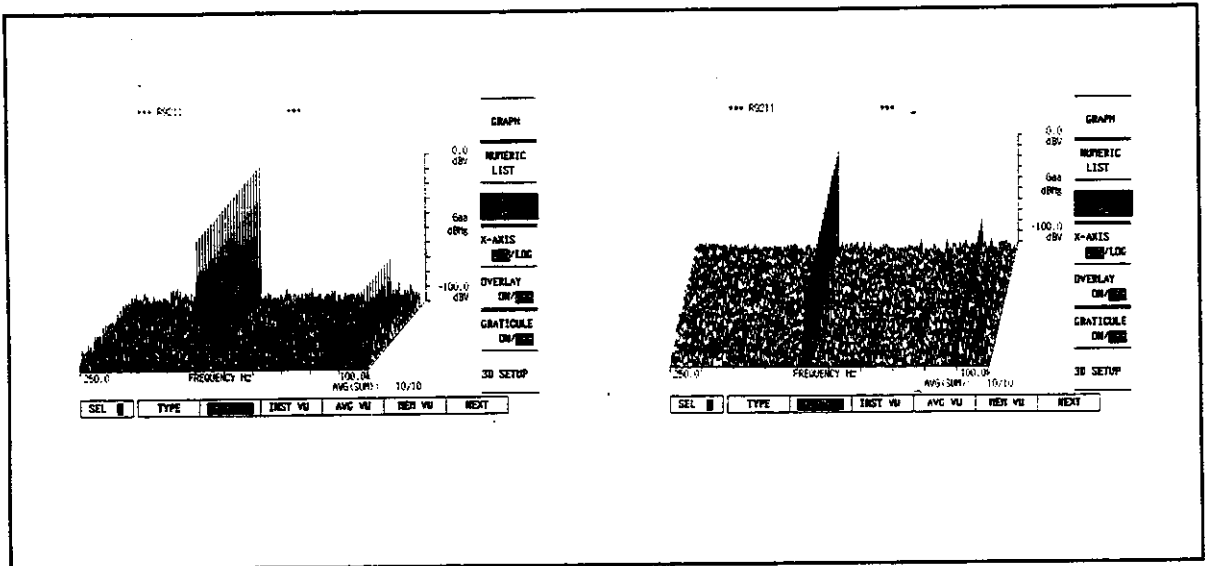


Figure 9-8 Tridimensional Display Y Axis Angle Examples

■ How to Display Various Data

The R9211 can display the following data (the tables 9-13 and 9-14 list the data which may be displayed in each measurement mode).

- Instantaneous data : Time data, autocorrelation function, cross-correlation function, probability density function, power spectrum, cross-spectrum, and complex spectrum
- Averaged data : Time data, autocorrelation function, cross-correlation function, probability density function, power spectrum, cross-spectrum, complex spectrum, frequency response function, coherence function, and impulse response function
- Saved data
- Arithmetic operation results
- T-F (TIME-FREQ) data


The display operations are valid for the screen selected with the SEL key (active screen).

NOTE

Either a power spectrum or a complex spectrum can be displayed for each channel through the specification of the parameter COORDINATE.

● Instantaneous data display

On the R9211, the instantaneous data you can display depend on the measurement mode and function you have specified, as table 9-13 shows. The instantaneous data display procedure is the following one (example in the SPECTRUM mode):

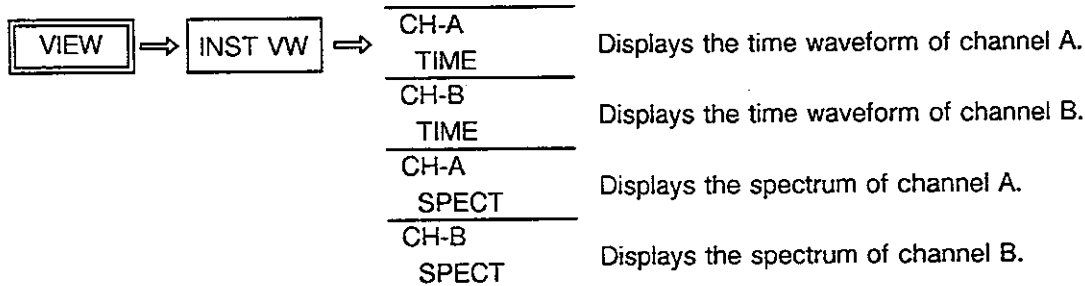

4. **VIEW** KEY OPERATION

Table 9-13 Instantaneous Data which can be Displayed

Mode	Function	Data which can be displayed (Menu Symbol)
WAVEFORM	TIME	Time data (TIME)
	AUTOCORR	Time data (TIME) and autocorrelation function (AUTOCORR)
	CROSS-CORR	Time data (TIME), cross-correlation function (CROSS-CORR), and autocorrelation function (AUTOCORR)
	HIST	Time data (TIME) and probability density function (HIST)
SPECTRUM TIME-FREQ	POWER SPECTRUM	Time data (TIME) and spectrum (SPECT)
	CROSS-SPECTRUM	
	COMPLEX SPECTRUM	
FRF	FRF	Time data (TIME) and spectrum (SPECT)

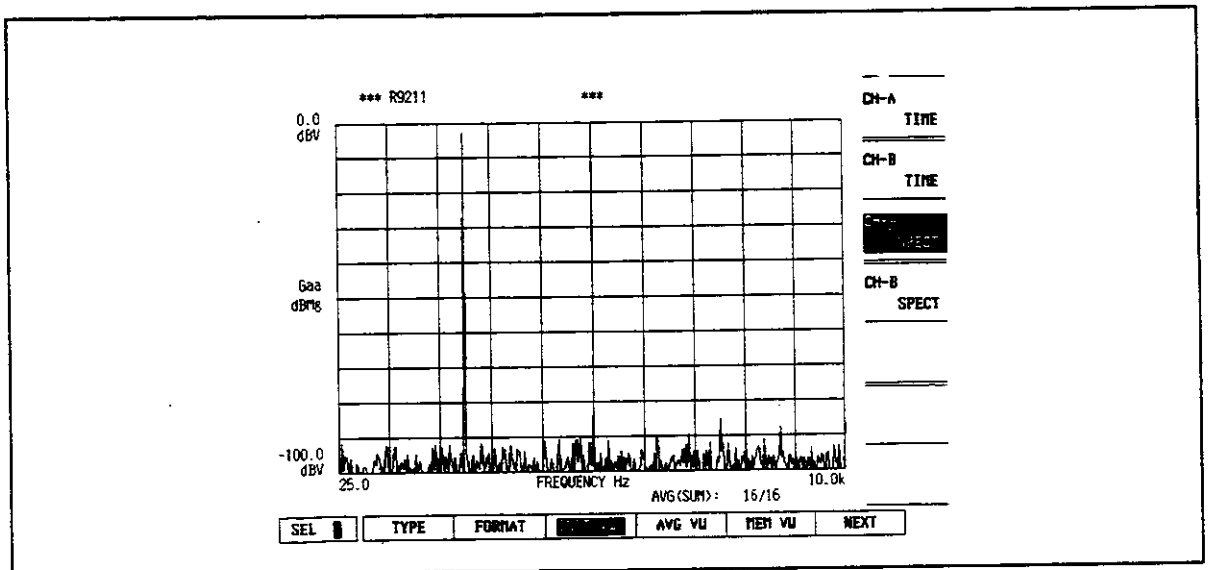


Figure 9-9 Spectrum Display

4. **VIEW** KEY OPERATION● **Averaged data display**

On the R9211, the averaged data you can display depend on the measurement mode and function you have selected as table 9-14 shows.

The averaged data display procedure is the following one (example of the spectrum mode with the power spectrum function):

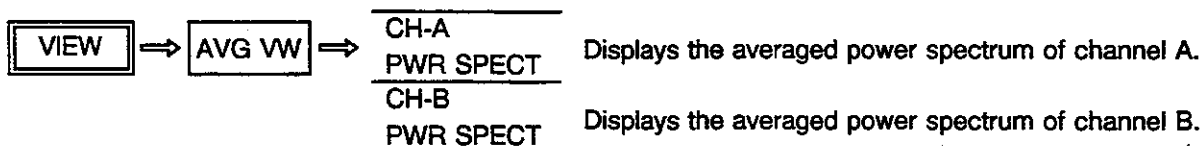


Table 9-14 Averaged Data which can be Displayed


Mode	Function	Data which can be displayed (Menu Symbol)
WAVEFORM	TIME	Time data (TIME)
	AUTOCORR	Autocorrelation function (AUTOCORR)
	CROSS-CORR	Cross-correlation function (CROSS-CORR)
	HIST	Probability density function (HIST)
SPECTRUM TIME-FREQ	POWER SPECTRUM	Power spectrum (PWR SPECT)
	CROSS-SPECTRUM	Cross spectrum (CROSS-SPECT)
	COMPLEX SPECTRUM	Complex spectrum (CMP SPECT)
FRF	FRF	Frequency response function (FRF), coherence function (COHERENCE), impulse response function (IMPULSE RESPONSE), power spectrum (PWR SPECT), and cross-spectrum (CROSS-SPECT)

4. **VIEW** KEY OPERATION

● **Saving and retrieving data**

The R9211 can save (retrieve) the displayed data in (from) its internal memory.

Data saving (retrieving) procedure is the following one:

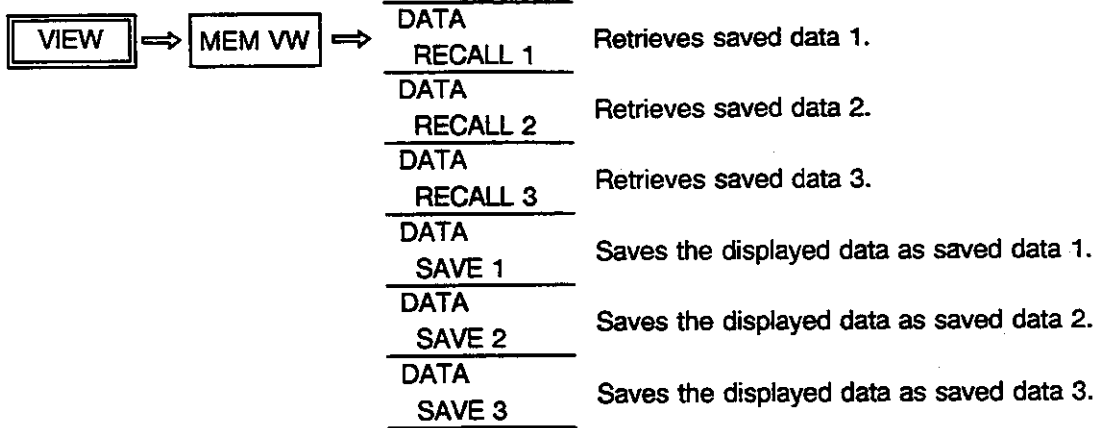

NOTE

The data saving and recalling is performed for the screen selected with the **SEL** key (active screen).

When some saved data are retrieved, the display identifier "rcld" is displayed at the lower left corner of the screen.

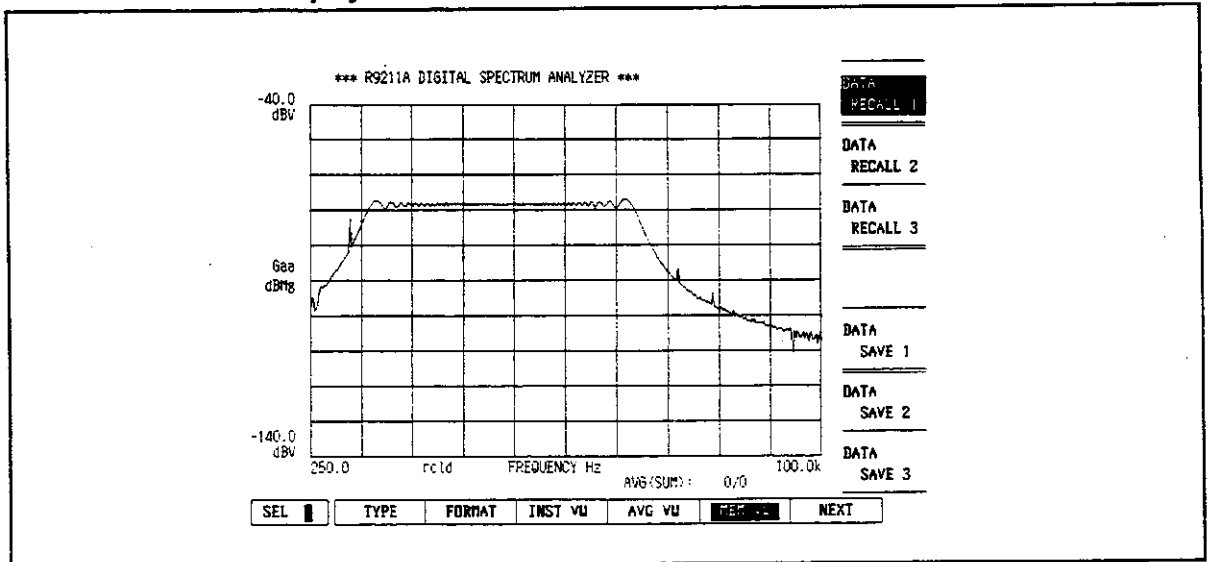


Figure 9-10 Display of Saved and Retrieved Data


4. **VIEW** KEY OPERATION**● Mathematical operation results display**

Below is described how to display the results of post measurement computations (i.e. mathematical operations) you have executed with the

MATH key. (If no arithmetic operation was performed, display of arithmetic operation results is inhibited.)

There are two types of mathematical operation results: results of ordinary arithmetic operations and results of curve fitting and synthesis.

You will display the results of mathematical operations in the following way:



4. **VIEW** KEY OPERATION


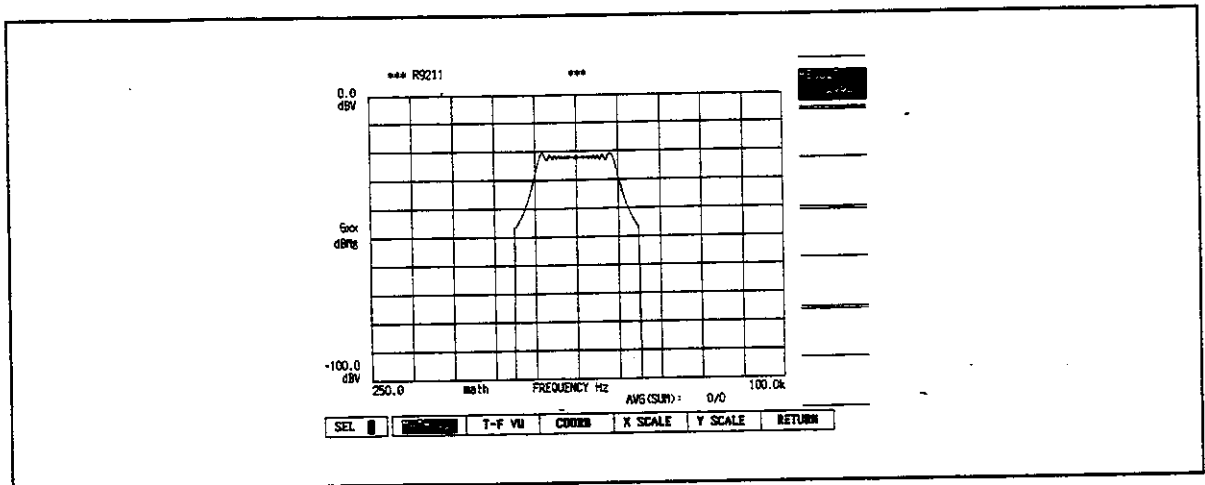


Figure 9-11 Display of Arithmetic Operation Results

4. **VIEW** KEY OPERATION

● **T-F data display**

T-F data are displayed when T-F analysis is executed in the TIME-FREQ mode.

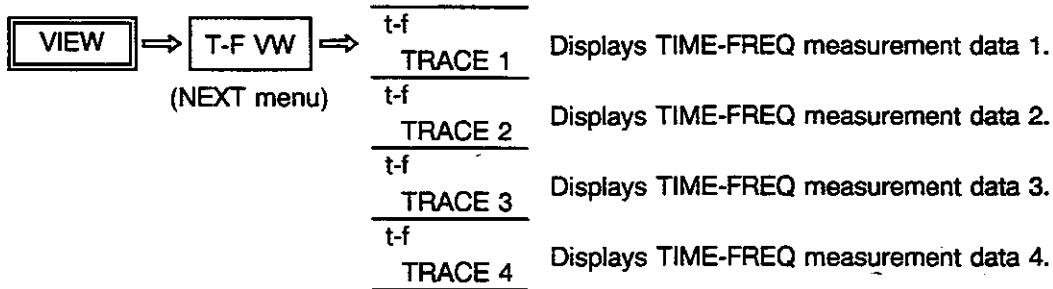

NOTE

This menu is displayed only in the TIME-FREQ mode.

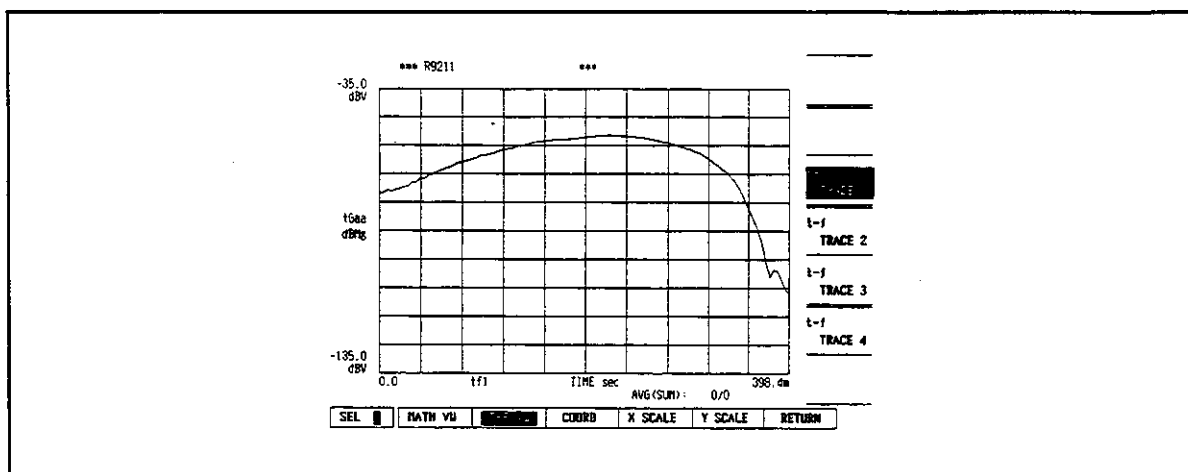


Figure 9-12 Display of TIME-FREQ Data

4. **VIEW** KEY OPERATION

● **VIEW STEP (data view function)**

In the TIME-FREQ measurement mode, time data are acquired during a long period of time, stored in the input buffer, and analyzed. VIEW STEP is used to perform the Data View function.

The VIEW STEP execution procedure is explained below:

1 Input the data.

Acquire the data with the ARM function.


2 Set DATA VIEW to ON.





When DATA VIEW is set to ON, the DATA VIEW setting menu is displayed.


3 Set the step time.

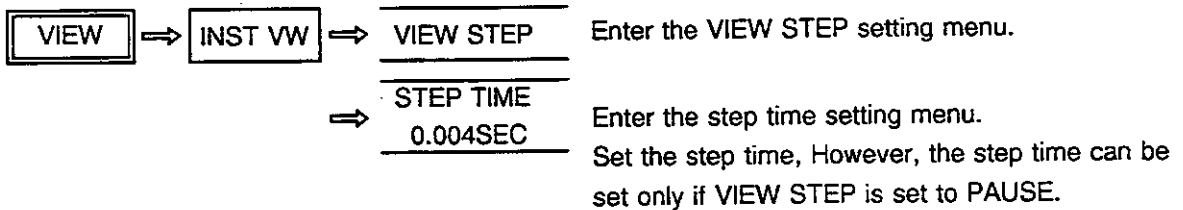The step time is the time shift between two displayed frames.




Input the step time with the numeric keys (followed by a unit key), the knob, or the  and  keys.

4 Position yourself at the head of the input buffer.

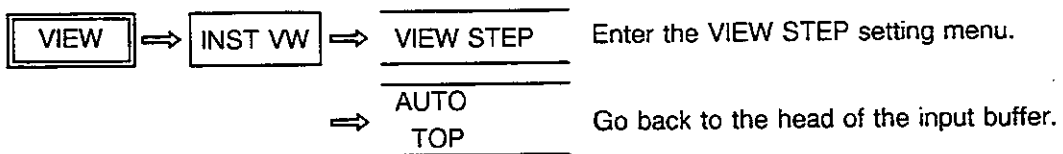

5 Display sequentially the buffer's content.

The data in the buffer are analyzed/displayed.

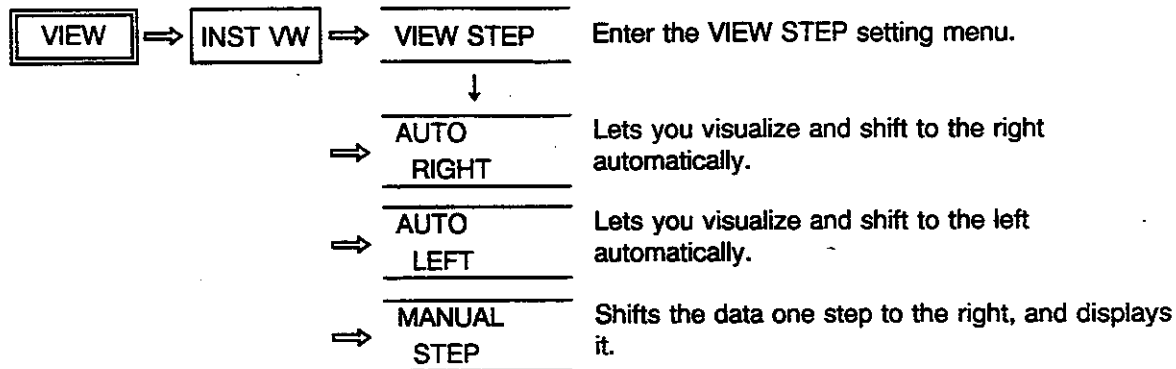

When the display ends, if the buffer was displayed from left to right, the last displayed data are the buffer's head data, whereas, if the buffer was displayed from right to left, the last displayed data are the buffer's end data.

4. **VIEW** KEY OPERATION

■ Selection of the Various Data Display Formats

The R9211 can display data in various formats. (The relationships between the data types and the formats, are summarized in Table 9-15.)

The display formats are the following ones:

Real part, imaginary part, magnitude, square magnitude, logarithmic magnitude, phase, inverse phase (multiplied by -1)

The combination of the number of screens and the ordinates and abscissa axes enables display the following diagrams:

Nyquist diagram, Bode diagram, CO-QUAD diagram, Cole-cole diagram, and Nichols diagram

A data display format selection is effective on the screen selected with the **SEL** key (active screen).

The display format menu lists only the formats that may be selected considering the specified screen data.

● **Real part display**

Display real data (in the case of a time series for example) or the real part of complex data (in the case of a complex spectrum for example).



● **Imaginary part display**

Displays the imaginary part of complex data (complex spectrum, etc.).

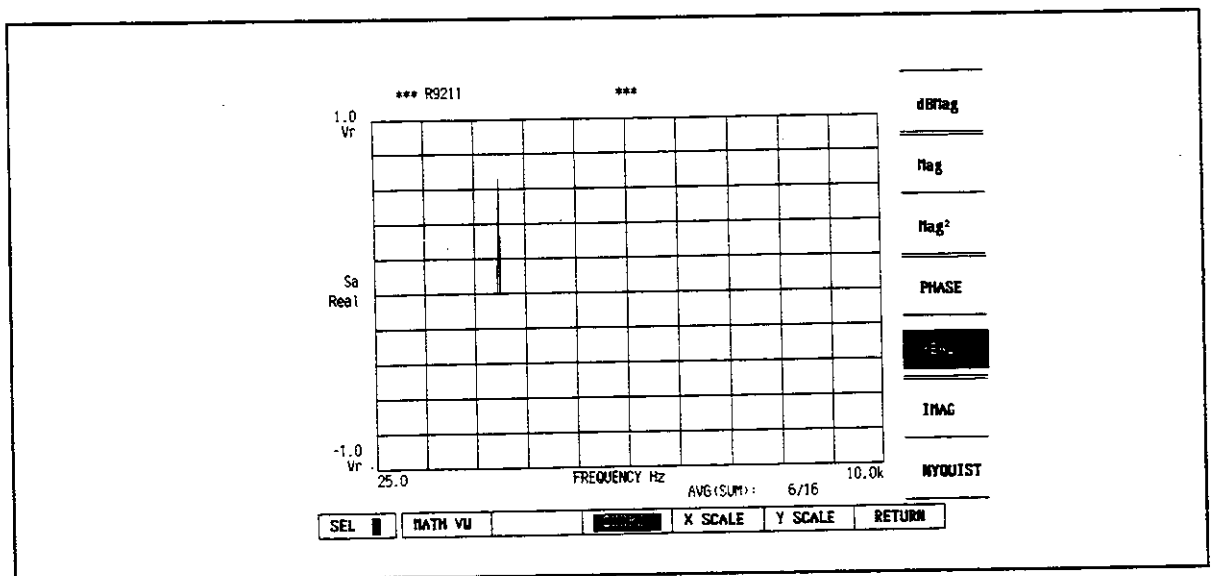



Figure 9-13 Real Data Display

4. VIEW KEY OPERATION

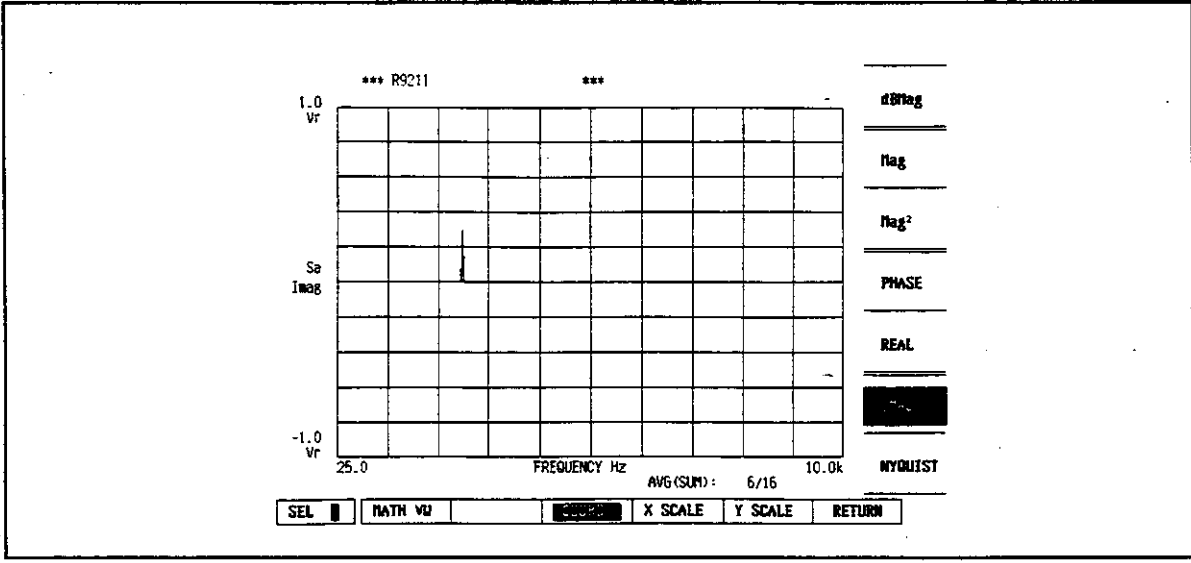


Figure 9-14 Imaginary Data Display

Table 9-15 Coordinates and Displayed Waveforms

Displayed Waveforms / Coordinates	Time histogram, coherence, or f peak of t-f	Autocorr Cross-Corr HILBERT	Spectrum	Cross-spectrum, cepstrum, or complex spectrum of t-f	Power Spectrum of t-f SNR, COP, In COP Littered Spectrum	FRF	Impulse REsponse Step Response
dBMag		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MAG		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MAG ²			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
PHASE		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
REAL	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
IMAG		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>
NYQUIST			<input type="radio"/>				
-PHASE						<input type="radio"/>	
GROUP DELAY						<input type="radio"/>	

4. **VIEW** KEY OPERATION

● **Logarithmic magnitude display**

Displays the logarithmic magnitude of real data (power spectrum, etc.) or complex data (complex spectrum, etc.).



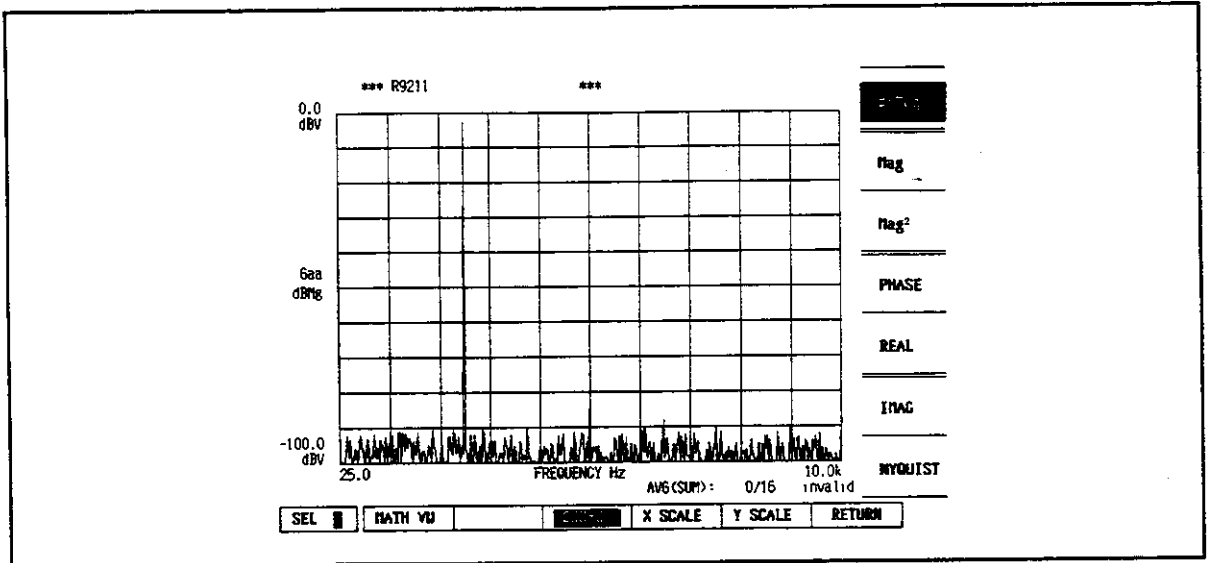


Figure 9-15 Logarithmic Magnitude Display

● **Magnitude display**

Displays the magnitude of real data (power spectrum, etc.) or complex data (complex spectrum).



● **Linear square magnitude display**

Display the square magnitude of real data (power spectrum, etc.) or complex data (complex spectrum, etc.).



4. **VIEW** KEY OPERATION

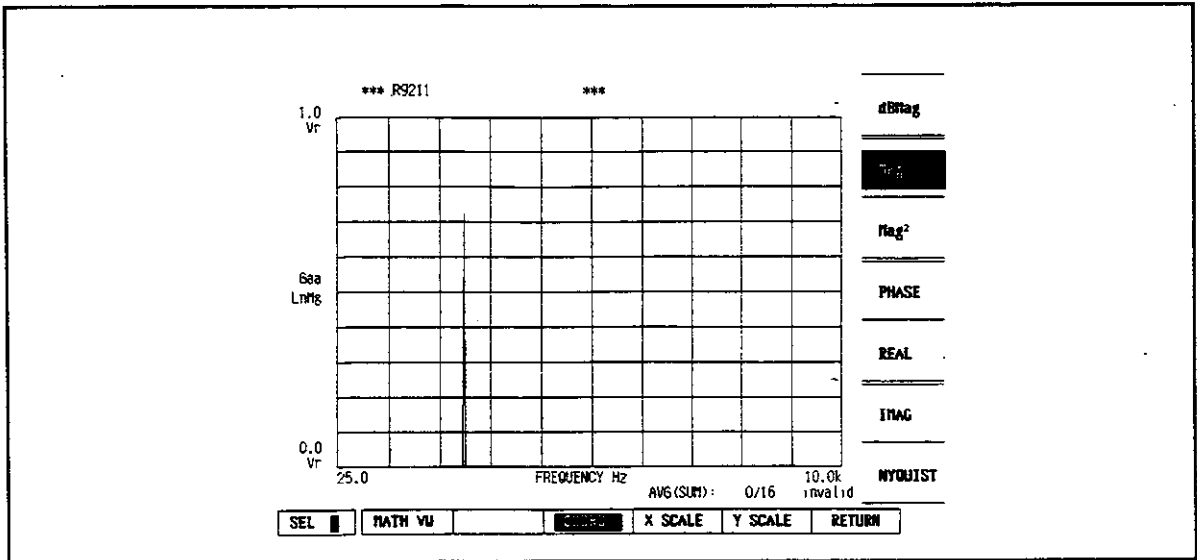


Figure 9-16 Magnitude Display

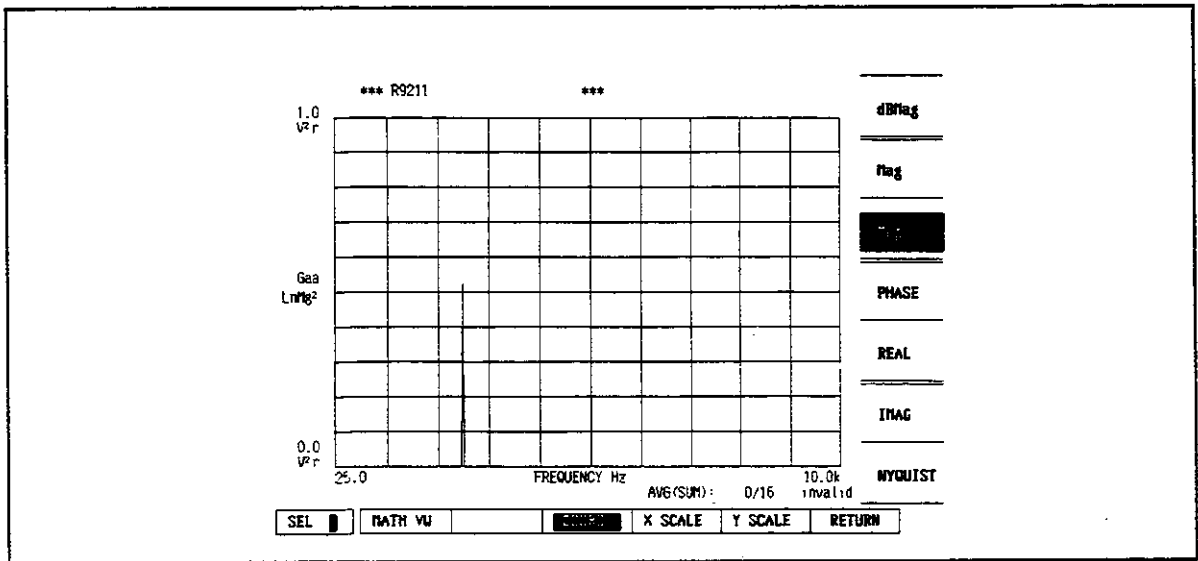


Figure 9-17 Square Magnitude Display

● **Phase display**

Displays the phase of complex data (complex spectrum, etc.).



● **Inverse phase display (only for FRF data)**

Displays the inverse phase of FRF data.



4. **VIEW** KEY OPERATION

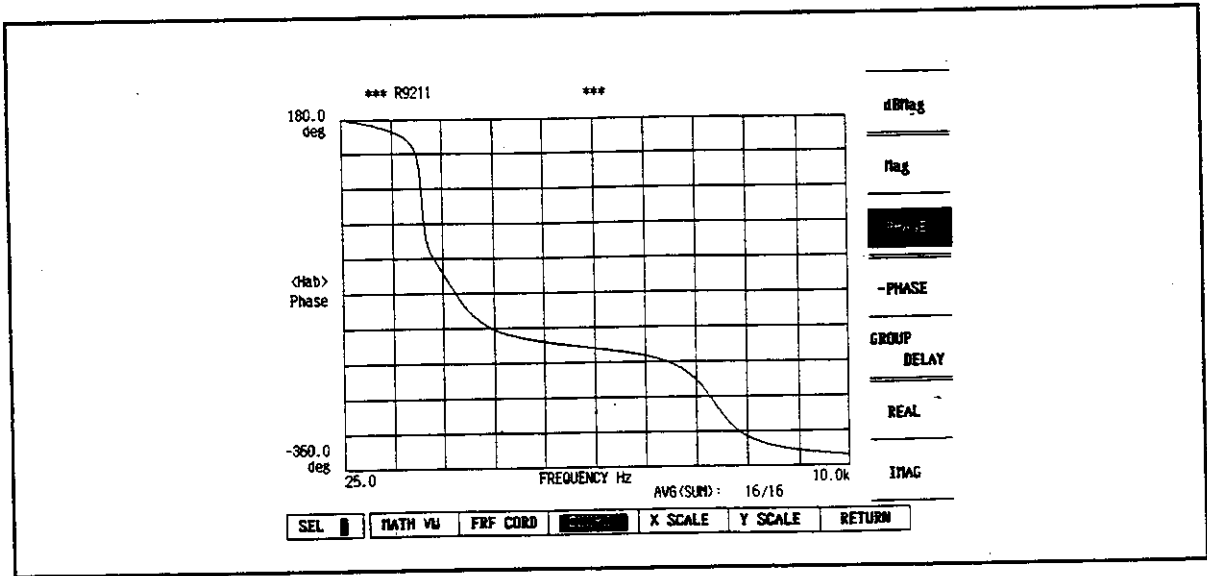


Figure 9-18 Phase Display

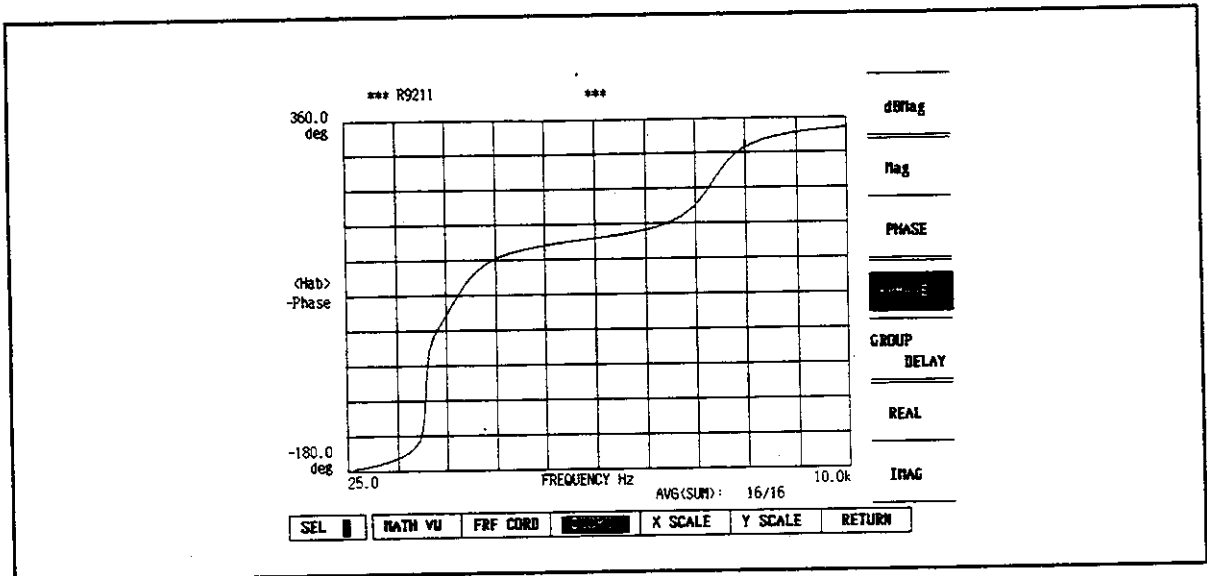


Figure 9-19 Inverse Phase Display

- **Group delay display (only for FRF data)**
Displays the group delay of FRF data.



4. **VIEW** KEY OPERATION

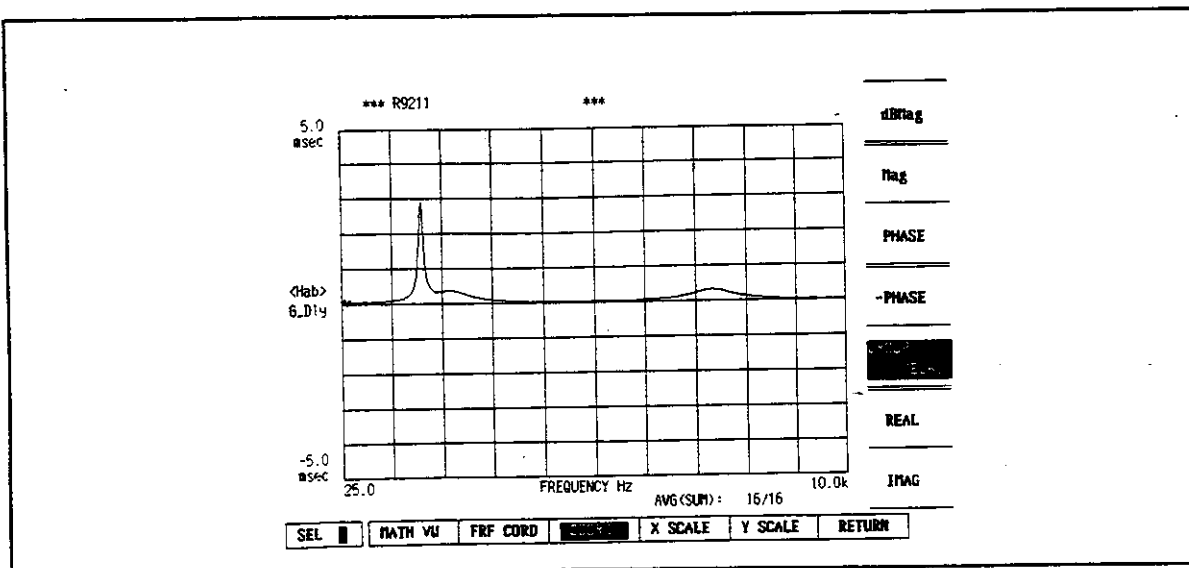


Figure 9-20 Group Delay Display

● **Nyquist diagram display**

Display a Nyquist diagram in the complex coordinate system where the ordinates axis represents the imaginary part and the abscissa axis represents the imaginary part.

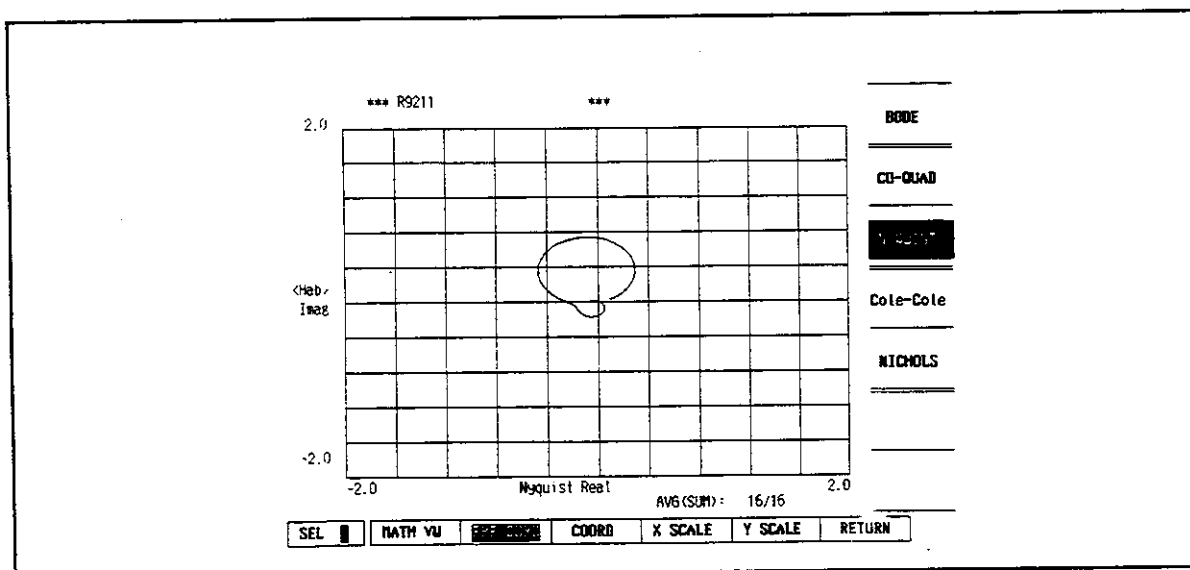
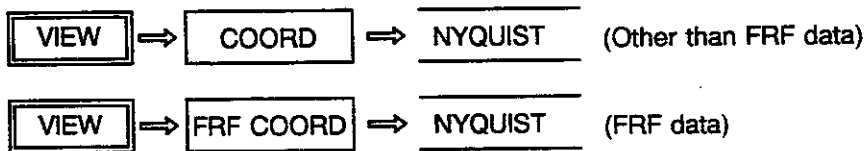


Figure 9-21 Nyquist Diagram Display

4. **VIEW** KEY OPERATION

● **Bode diagram display (only in the FRF modes)**

Displays the magnitude on the lower screen and the phase on the upper screen, with a double screen configuration.

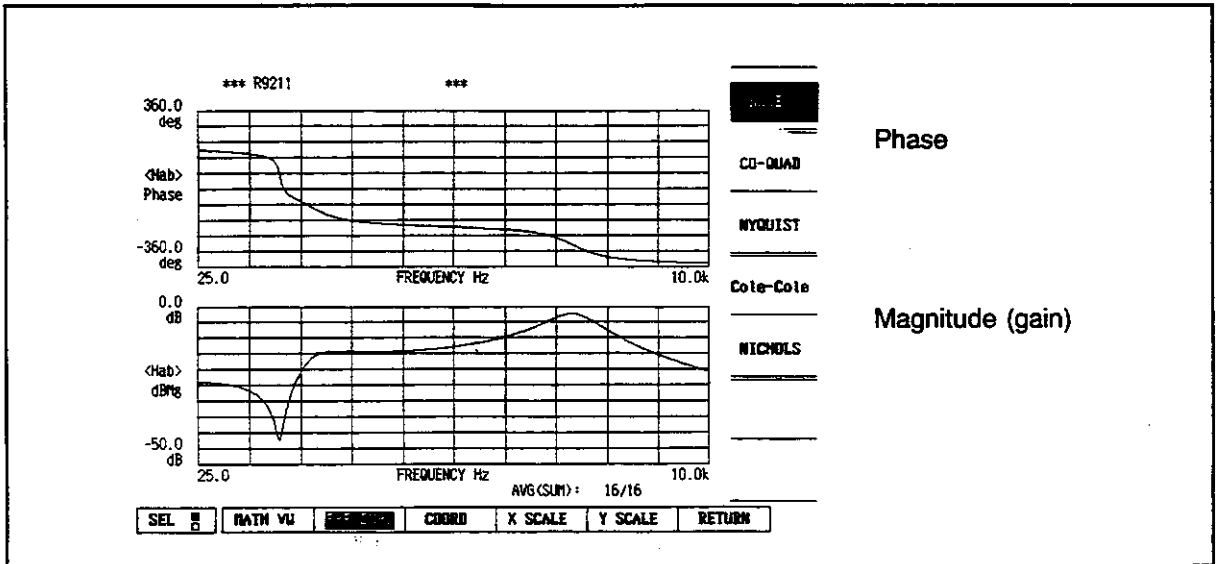


Figure 9-22 Bode Diagram Display

● **Co-quad diagram display (only in the FRF modes)**

Displays the real part on the lower screen and the imaginary part on the upper screen, with a double screen configuration.

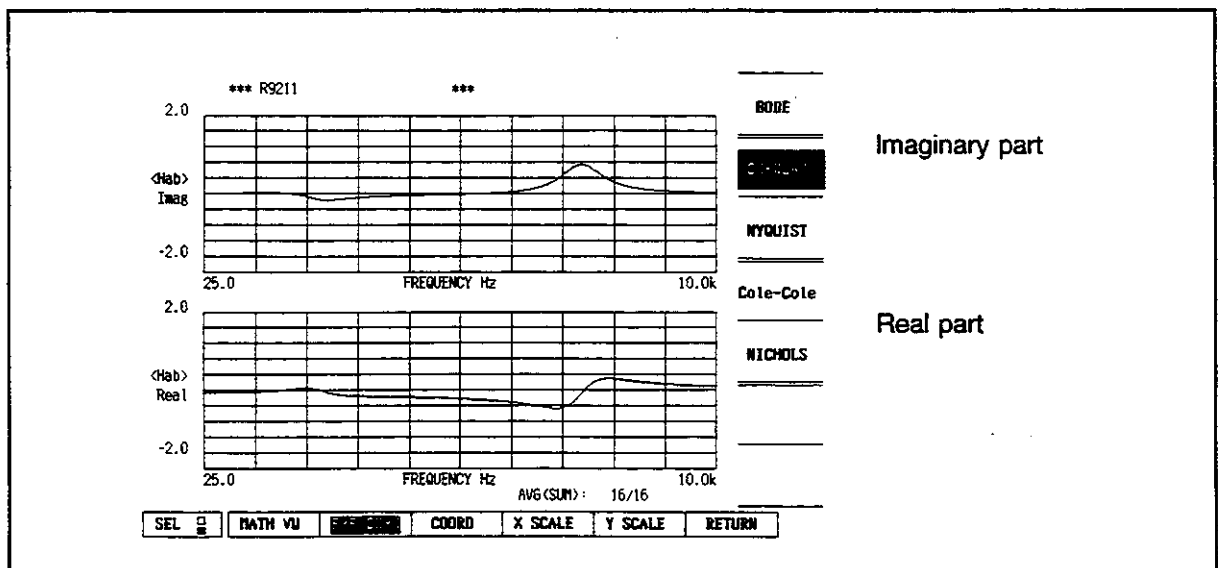


Figure 9-23 Co-quad Diagram Display

4. **VIEW** KEY OPERATION

● **Cole-cole diagram display (only in the FRF mode)**

Display the imaginary part inverse along the ordinates axis and the real part along the abscissa axis.

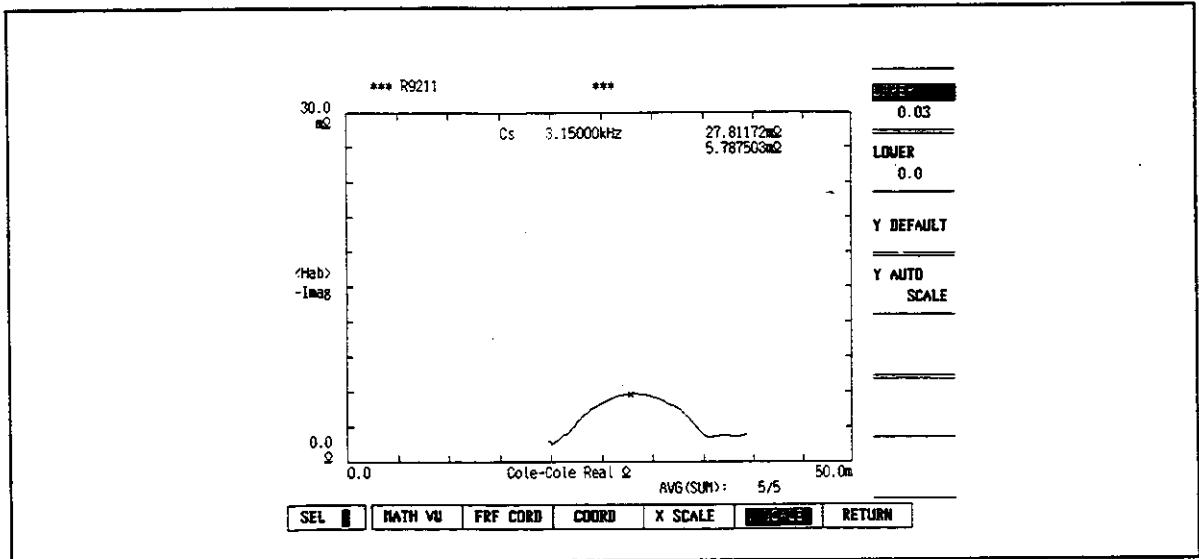


Figure 9-24 Cole-cole Diagram Display

● **Nichols diagram display (only in the FRF mode)**

Display the magnitude along the abscissa axis and the phase along the ordinates axis.



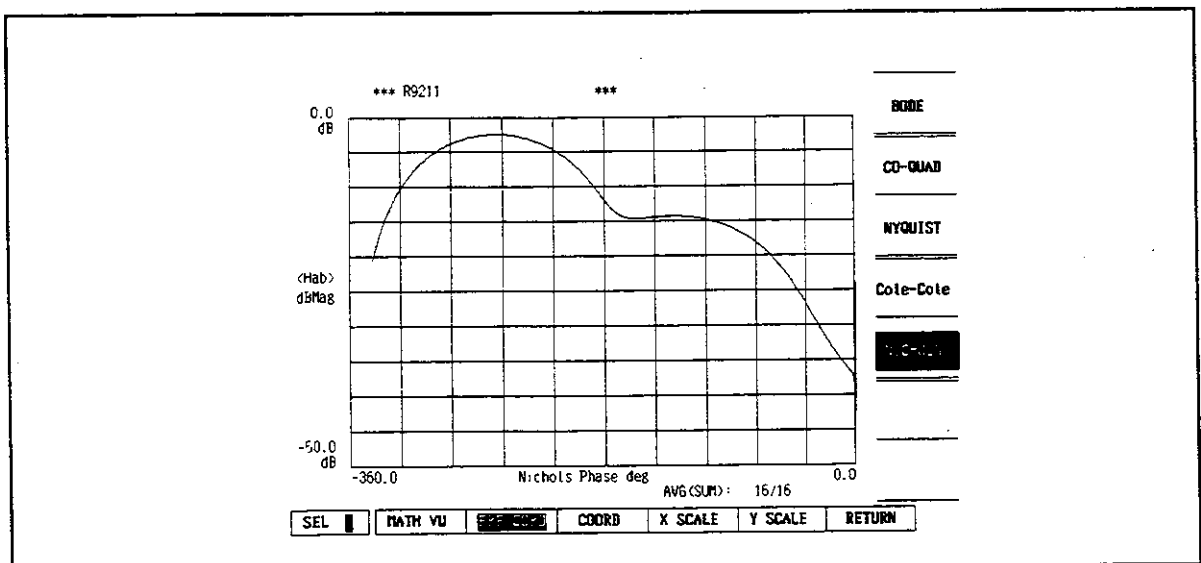


Figure 9-25 Nichols Diagram Display

4. **VIEW** KEY OPERATION

■ **Displaying and Setting the X Axis Scale**

● **Setting the X axis scale and referencing values**

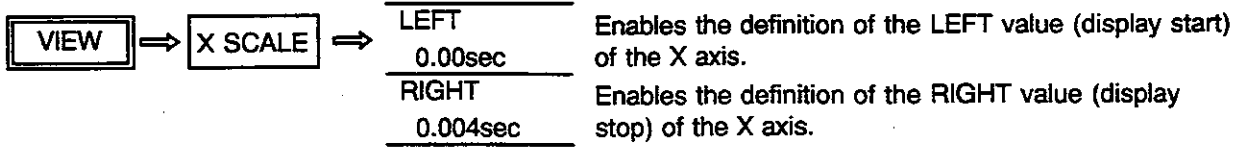

Use the numeric keys and the **ENT** key or the numeric keys and a unit key (Y menu) for the above settings.

The values and units displayed on the Y menu correspond to the type of the selected waveform.

Table 9-16 summarizes the relationships between units displayed on the Y menu and the waveforms.


Table 9-16 X Scale Unit and Y Menu

Displayed data	Annotations	X axis Unit
TIME LAG T-F analysis	Xa, Xb, <Xa>, <Xb> Raa, Rbb, Rab, <Raa>, <Rbb>, <Rab>, <IMP> tSa, tSb, tFa, tFb	sec
ORBITAL HISTOGRAM NYQUIST (SPECT)	(Xa, Xb) Pa, Pb, <Pa>, <Pb> Sa, Sb	V
FREQUENCY	Gaa, Gbb, Gab, <Gaa>, <Gbb>, <Gab>, <Hab>, <Coh>	Hz
NYQUIST (FRF) Cole-Cole (FRF)	<Hab> <Hab>	None
NICHOLS (FRF)	<Hab>	deg

4. **VIEW** KEY OPERATION

● **Setting the X axis scale (default/auto scaling)**

We shall explain here the X axis default setting and the X axis automatic setting (polar coordinates only).

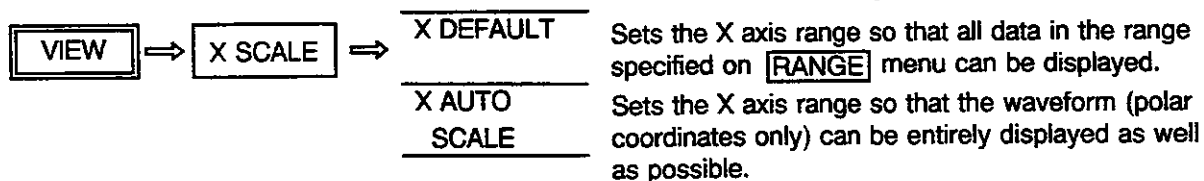


New values are displayed on the Y menu and the X-axis range of the selected screen is changed simply by pressing one of the above keys.

● **Setting the X axis scale (unit key)**

Use a unit key to set the X axis display range manually.

Use a unit key suitable for the type of the waveform to be displayed.

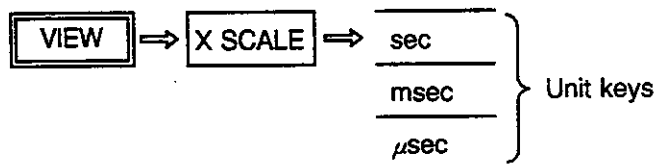


For further details, see Table 9-16 in "● Setting the X axis scale and referencing values".

4. **VIEW** KEY OPERATION

■ **Displaying and Setting the Y Axis Scale**

● **Setting the Y axis scale and referencing values**

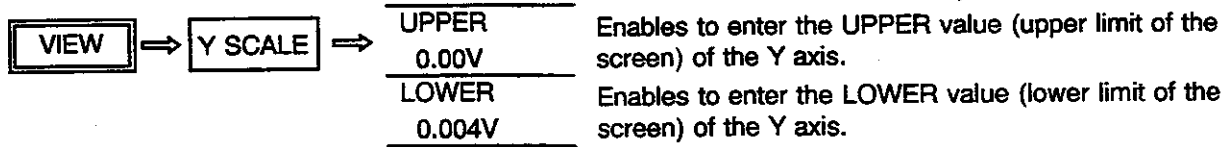

Use the numeric keys and the **ENT** key or the numeric keys and a unit key (Y menu) for the above settings. The values and unit displayed on the Y menu correspond to the type of the selected waveform. Tables 9-17 and 9-18 summarize the relationships between the units displayed on the Y menu and the waveforms.

Table 9-17 Y Scale Unit and Y Menu Display (1)

Displayed data	Y axis unit
TIME	V
ORBITAL	V
NYQUIST (SPECT)	V
NYQUIST (FRF)	None (no unit)
HISTOGRAM	%
NICHOLS	dB
GROUP-DELAY	sec


Table 9-18 Y Scale Unit and Y Menu Display (2)

		Display type				
		LAG	SPECT	CROSS	T-F analysis	FRF
Data display format	dBMag	dB	dBV	dBV	dBV	dB
	Mag	None (no unit)	V	V ²	V	None (no unit)
	Mag ²		V ²	V ⁴	V ²	
	PHASE	deg	deg	deg	deg	deg
	REAL	None (no unit)	V	V ²	V	None (no unit)
					Hz	
	IMAG	None (no unit)	V	V ²	V	None (no unit)

4. VIEW KEY OPERATION

● **Setting the Y axis scale (default/auto scaling)**


We shall explain here the Y axis default setting and the Y axis automatic setting (not available for the real data of a T-F analysis).

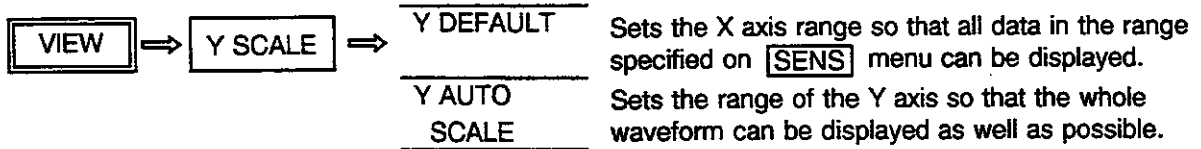

The new values are displayed in the Y menu and the Y-axis display range of the selected screen are modified simply by pressing one of the above keys.

● **Setting the Y axis scale (unit key)**


When you set the Y axis manually, you must specify the unit with a unit key. The available unit keys differ according to the type of the displayed data.

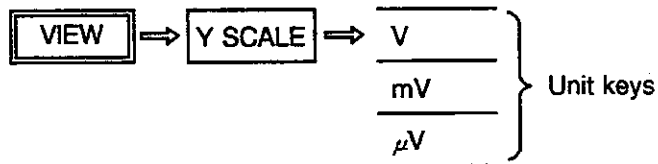

For further details, see Tables 9-17, 9-18 in "● Setting the Y axis scale and referencing values".

4. VIEW KEY OPERATION

R9211 Series Menu List (VIEW Key when used in the SPECTRUM Mode)

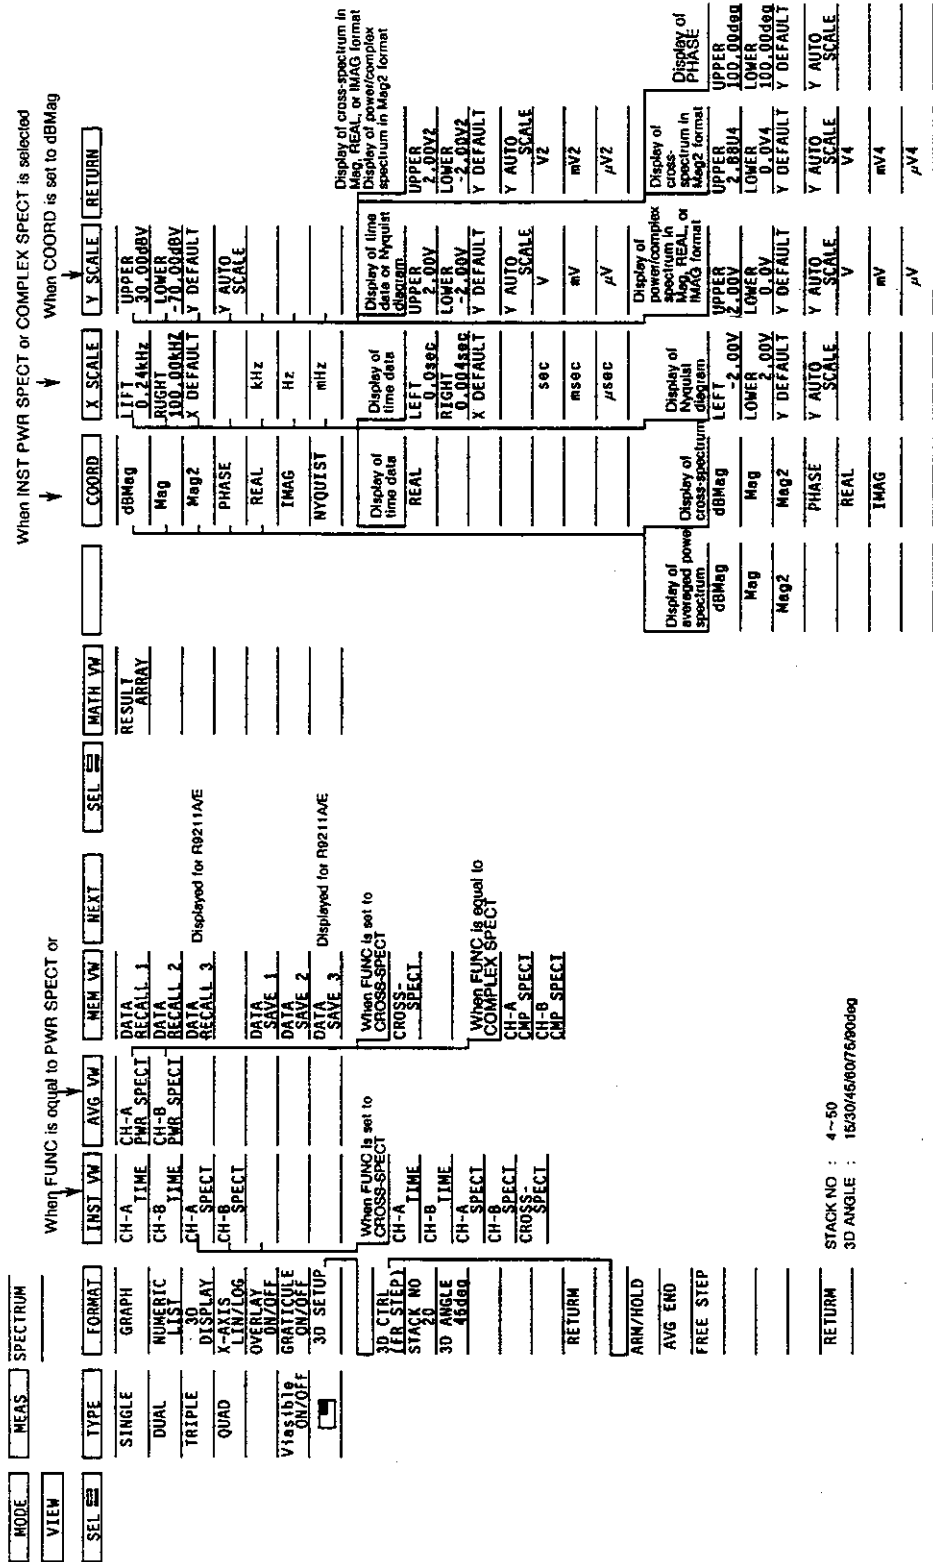

4. **VIEW** KEY OPERATION

R9211 Series Menu List (VIEW Key when used in the FRF Mode)

MODE	MEAS	FRF	COORD	X SCALE	Y SCALE	RETURN
VIEW	SEL	NEXT	MEM VW	AVG VW	INST VW	FORMAT
SELECTION	DATA RECALL 1 DATA RECALL 2 DATA RECALL 3	DATA RECALL 1 DATA RECALL 2 DATA RECALL 3	FRF COHERENCE IMPULSE RESPONSES CH-A PWR SPECT CH-B PWR SPECT CROSS SPECT DATA SAVE 1 DATA SAVE 2 DATA SAVE 3	FRF COHERENCE IMPULSE RESPONSES CH-A PWR SPECT CH-B PWR SPECT CROSS SPECT DATA SAVE 1 DATA SAVE 2 DATA SAVE 3	CH-A TIME CH-B TIME CH-A SPECT CH-B SPECT CROSS SPECT 3D SETUP	GRAPH NUMERIC LIST DISP. 3D X-Axis OVERLAY ON/OFF GRATICULE ON/OFF 3D SETUP
MEASUREMENT	CO-QUAD NYQUIST COLO-COLO NICHOLS	CO-QUAD NYQUIST COLO-COLO NICHOLS	CO-QUAD NYQUIST COLO-COLO NICHOLS	CO-QUAD NYQUIST COLO-COLO NICHOLS	CO-QUAD NYQUIST COLO-COLO NICHOLS	CO-QUAD NYQUIST COLO-COLO NICHOLS
DISPLAY	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG
FUNCTION	LIST UPPER LOWER X DEFAULT Y AUTO SCALE	LIST UPPER LOWER X DEFAULT Y AUTO SCALE	LIST UPPER LOWER X DEFAULT Y AUTO SCALE	LIST UPPER LOWER X DEFAULT Y AUTO SCALE	LIST UPPER LOWER X DEFAULT Y AUTO SCALE	LIST UPPER LOWER X DEFAULT Y AUTO SCALE
PARAMETER	0.24kHz 100.00kHz kHz Hz mHz	0.24kHz 100.00kHz kHz Hz mHz	0.24kHz 100.00kHz kHz Hz mHz	0.24kHz 100.00kHz kHz Hz mHz	0.24kHz 100.00kHz kHz Hz mHz	0.24kHz 100.00kHz kHz Hz mHz
UNIT	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG
FUNCTION	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE
PARAMETER	0.00dBV -70.00dBV 0.00V 100.0deg 0.002sec	0.00dBV -70.00dBV 0.00V 100.0deg 0.002sec	0.00dBV -70.00dBV 0.00V 100.0deg 0.002sec	0.00dBV -70.00dBV 0.00V 100.0deg 0.002sec	0.00dBV -70.00dBV 0.00V 100.0deg 0.002sec	0.00dBV -70.00dBV 0.00V 100.0deg 0.002sec
UNIT	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG	dBmag Mag PHASE -PHASE GROUP DELAY REAL IMAG
FUNCTION	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE
PARAMETER	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec
UNIT	V mV μ V	V mV μ V	V mV μ V	V mV μ V	V mV μ V	V mV μ V
FUNCTION	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE
PARAMETER	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec
UNIT	V mV μ V	V mV μ V	V mV μ V	V mV μ V	V mV μ V	V mV μ V
FUNCTION	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE	UPPER LOWER X DEFAULT Y AUTO SCALE
PARAMETER	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec	0.00V -100.0dB 0.00V 100.0deg 0.002sec
UNIT	V mV μ V	V mV μ V	V mV μ V	V mV μ V	V mV μ V	V mV μ V

Display of FRF in Mag, REAL, or IMAG format. Display of impulse response in REAL, IMAG, or NYQUIST format. Display of cross-spectrum in Mag2 format. Display of simultaneous spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format.

Display of TIME data or coherence in REAL format. Display of TIME data or coherence in REAL format. Display of TIME data or coherence in REAL format. Display of TIME data or coherence in REAL format.

Display of cross-spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of cross-spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of cross-spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format.

Display of simultaneous spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of simultaneous spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of simultaneous spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format.

Display of power spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of power spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of power spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format.

Display of TIME data or coherence in REAL format. Display of TIME data or coherence in REAL format. Display of TIME data or coherence in REAL format. Display of TIME data or coherence in REAL format.

Display of cross-spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of cross-spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of cross-spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format.

Display of simultaneous spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of simultaneous spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format. Display of simultaneous spectrum in dBMag, Mag, Mag2, PHASE, REAL, IMAG, NYQUIST format.

Not displayed in the SERVO mode

STACK NO : 4-50

3D ANGLE : 15/30/45/60/75/90deg

3D CTRL
PER STEP
STACK NO
20
3D ANGLE
15deg

RETURN

ARM/HOLD

AVG END

FREE STEP

RETURN

CHAPTER 10

HOW TO USE MARKERS

This chapter gives explanations about the two types of markers:

- Cursor marker : used to read measurement data
- Search marker : used to find some characteristics of the data (peak, harmonics ...)

CONTENTS


1. CURSOR MARKERS	10-2
How to Use X Axis Cursor Markers	10-2
How to Use Y Axis Cursor Markers	10-4
How to Move Cursor Markers	
Simultaneously on Different Screens	10-6
How to Set the Position of the Cursor Marker	
Simultaneously on Different Screens	10-8
2. SEARCH MARKERS	10-10
Relationships between Search Markers and	
Waveform Types	10-10
What the Search Markers do	10-11
Operating the Search Markers	10-12
Search Markers Display Timing	10-19
3. DISPLAYING LISTS OF MARKERS	10-20
Reference Markers	10-20
Displaying Lists of Search Markers	10-22
4. MAJOR EXAMPLES OF SEARCH	
MARKER SETTING	10-23
How to Use Search Markers	10-23

1. CURSOR MARKERS


How to Use X Axis Cursor Markers

Types of X Axis Cursor Markers

Before using X axis cursor markers, select the active screen.



Selects a screen.

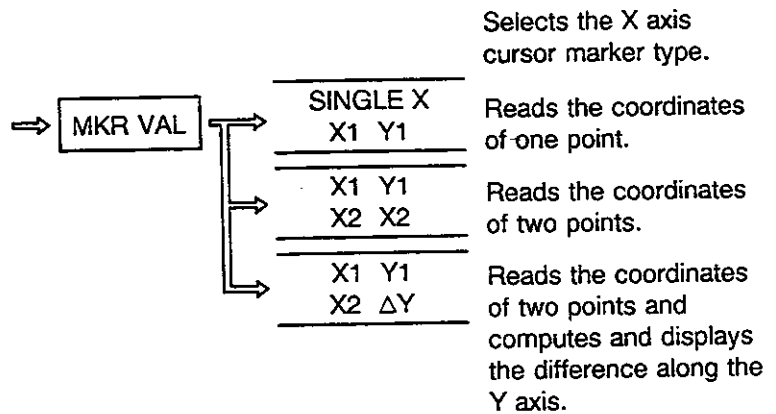

Selects the X axis cursor marker type.

Reads the coordinates of one point.

Reads the coordinates of two points.

Reads the coordinates of two points and computes and displays the difference along the Y axis.


NOTE

You can select cursor markers for each screen.

Moving X axis cursor markers

When X axis cursor markers are selected, their read-out values are displayed. Use the rotary knob to move the X axis cursor markers.

In case of 2 markers, first select the cursor moving method by pressing **FIX X**.

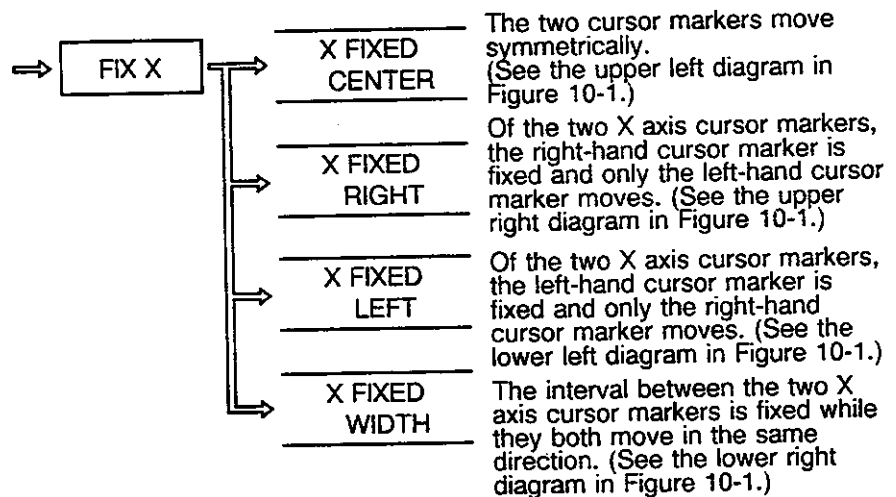

The two cursor markers move symmetrically. (See the upper left diagram in Figure 10-1.)

Of the two X axis cursor markers, the right-hand cursor marker is fixed and only the left-hand cursor marker moves. (See the upper right diagram in Figure 10-1.)

Of the two X axis cursor markers, the left-hand cursor marker is fixed and only the right-hand cursor marker moves. (See the lower left diagram in Figure 10-1.)

The interval between the two X axis cursor markers is fixed while they both move in the same direction. (See the lower right diagram in Figure 10-1.)

1. CURSOR MARKERS

Note

Select the cursor moving method by pressing **FIX X**. This will determine either how the cursors respectively move, or which cursor remains fixed.

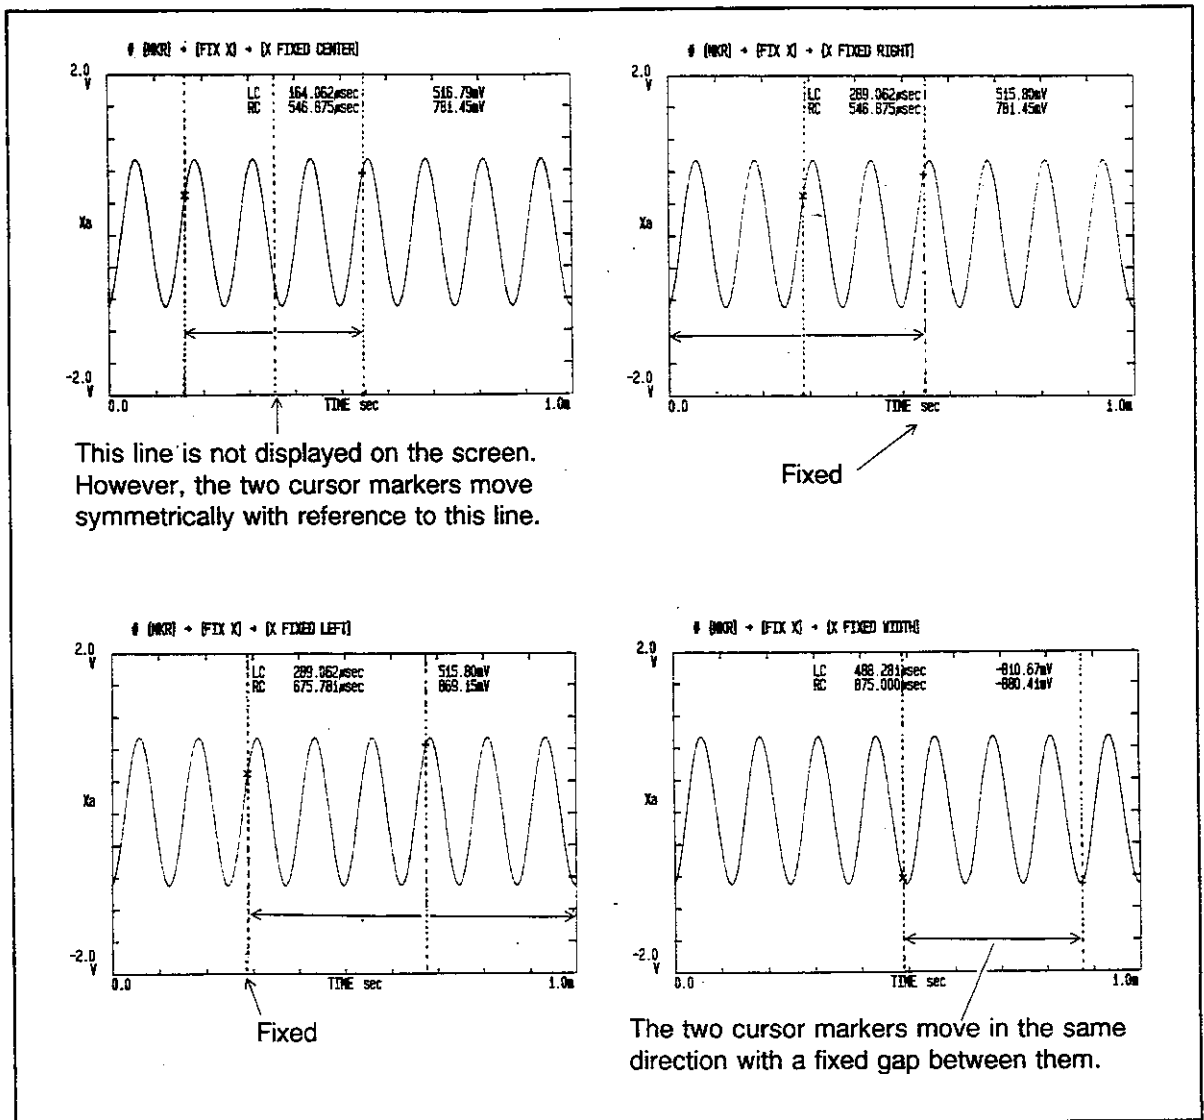



Figure 10-1 X Axis Cursor Markers

1. CURSOR MARKERS


■ How to Use Y Axis Cursor Markers

● Types of Y Axis Cursor Markers

Before using Y axis cursor markers, select the active screen.



Selects a screen.
Selects the Y axis cursor marker type.

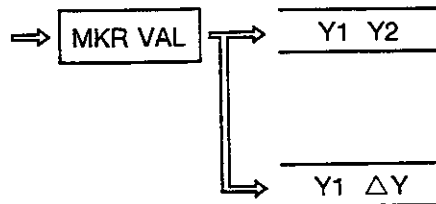

Reads the coordinates of the 2 points selected by two Y axis cursor markers.


Reads the value of the cursor difference between the upper and the lower in two Y-axis cursors.

NOTE

You can select cursor markers for each screen.

● Moving Y axis cursor markers

When Y axis cursor markers are selected, their read-out values are displayed. Use the rotary knob to move Y axis cursor markers. Select the cursor moving method by pressing **FIX Y**.

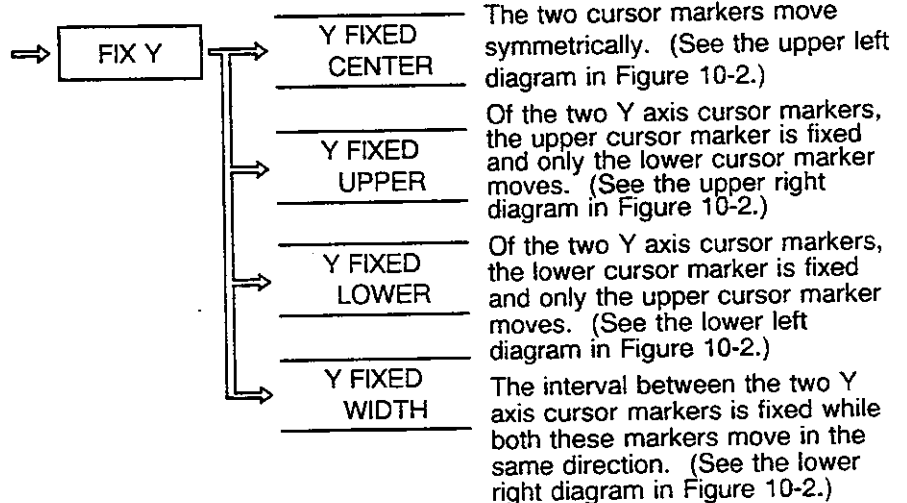

The two cursor markers move symmetrically. (See the upper left diagram in Figure 10-2.)

Of the two Y axis cursor markers, the upper cursor marker is fixed and only the lower cursor marker moves. (See the upper right diagram in Figure 10-2.)

Of the two Y axis cursor markers, the lower cursor marker is fixed and only the upper cursor marker moves. (See the lower left diagram in Figure 10-2.)


The interval between the two Y axis cursor markers is fixed while both these markers move in the same direction. (See the lower right diagram in Figure 10-2.)

NOTE

Select the cursor moving method by pressing **FIX Y**.

This will determine either how the cursors respectively move, or which cursor remains fixed.

1. CURSOR MARKERS

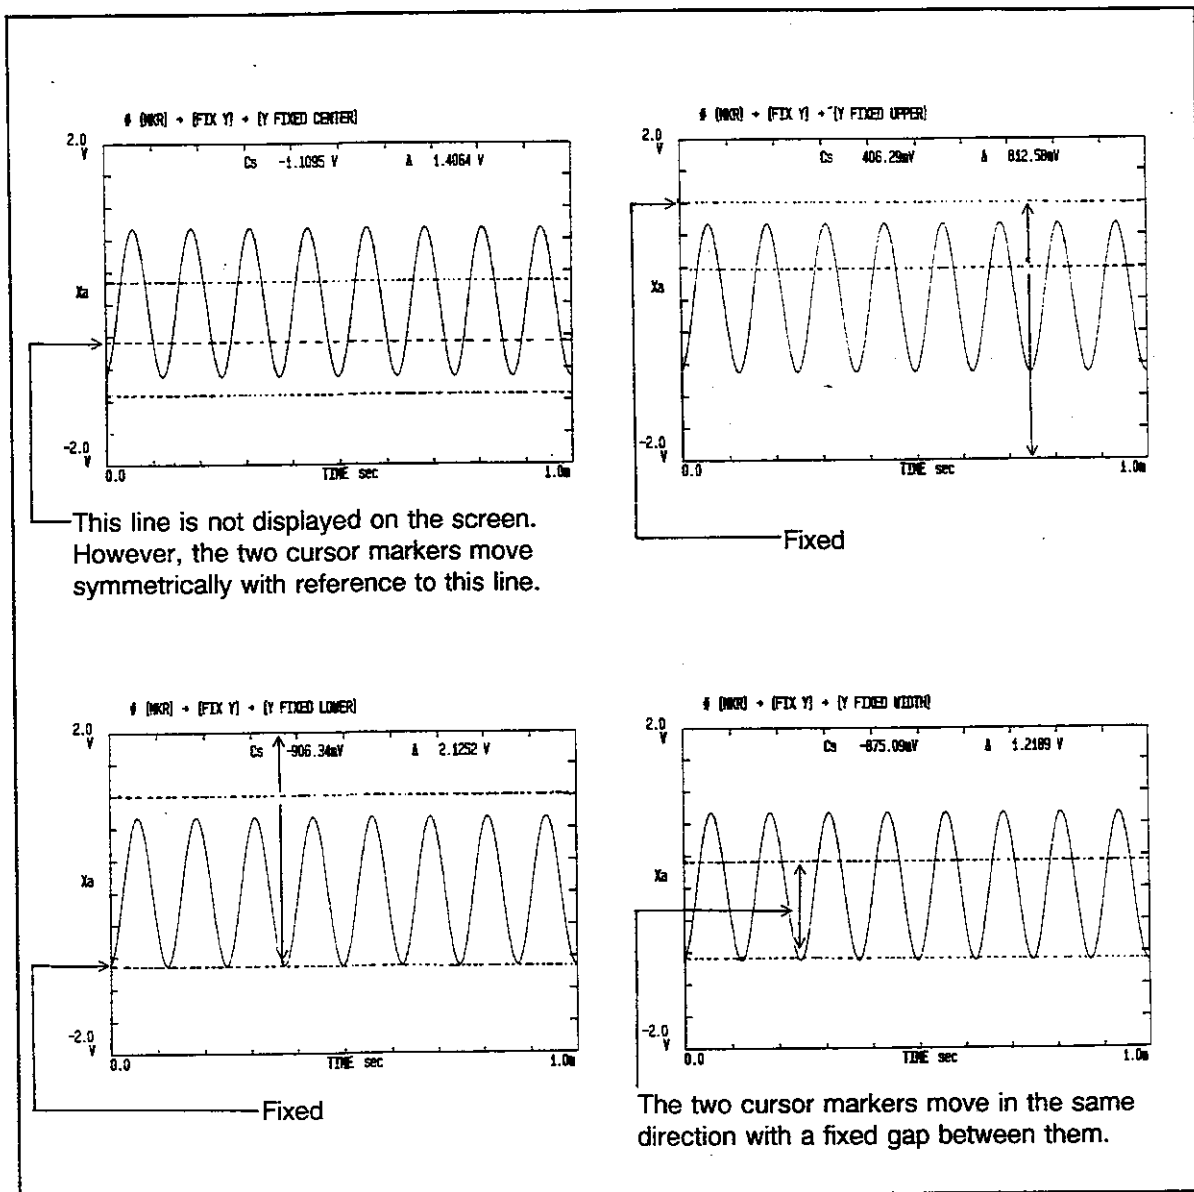

This line is not displayed on the screen. However, the two cursor markers move symmetrically with reference to this line.

Fixed

Fixed

The two cursor markers move in the same direction with a fixed gap between them.

Figure 10-2 Y Axis Cursor Markers

1. CURSOR MARKERS

■ How to Move Cursor Markers Simultaneously on Different Screens

In multi-screen mode, you can decide whether the cursor marker of the selected screen (active screen) is to be moved together with the cursor marker of an unselected screen.



This sequence enables you to determine whether cursor markers are to be moved simultaneously on all screens, or only on the active screen.

- CURSOR ~~SEL~~/ALL: The cursor marker moves only on the active screen. (Upper screens in Figure 10-3)
- CURSOR SEL/~~ALL~~: The cursor marker moves on all screens. (Lower screens in Figure 10-3)

1. CURSOR MARKERS

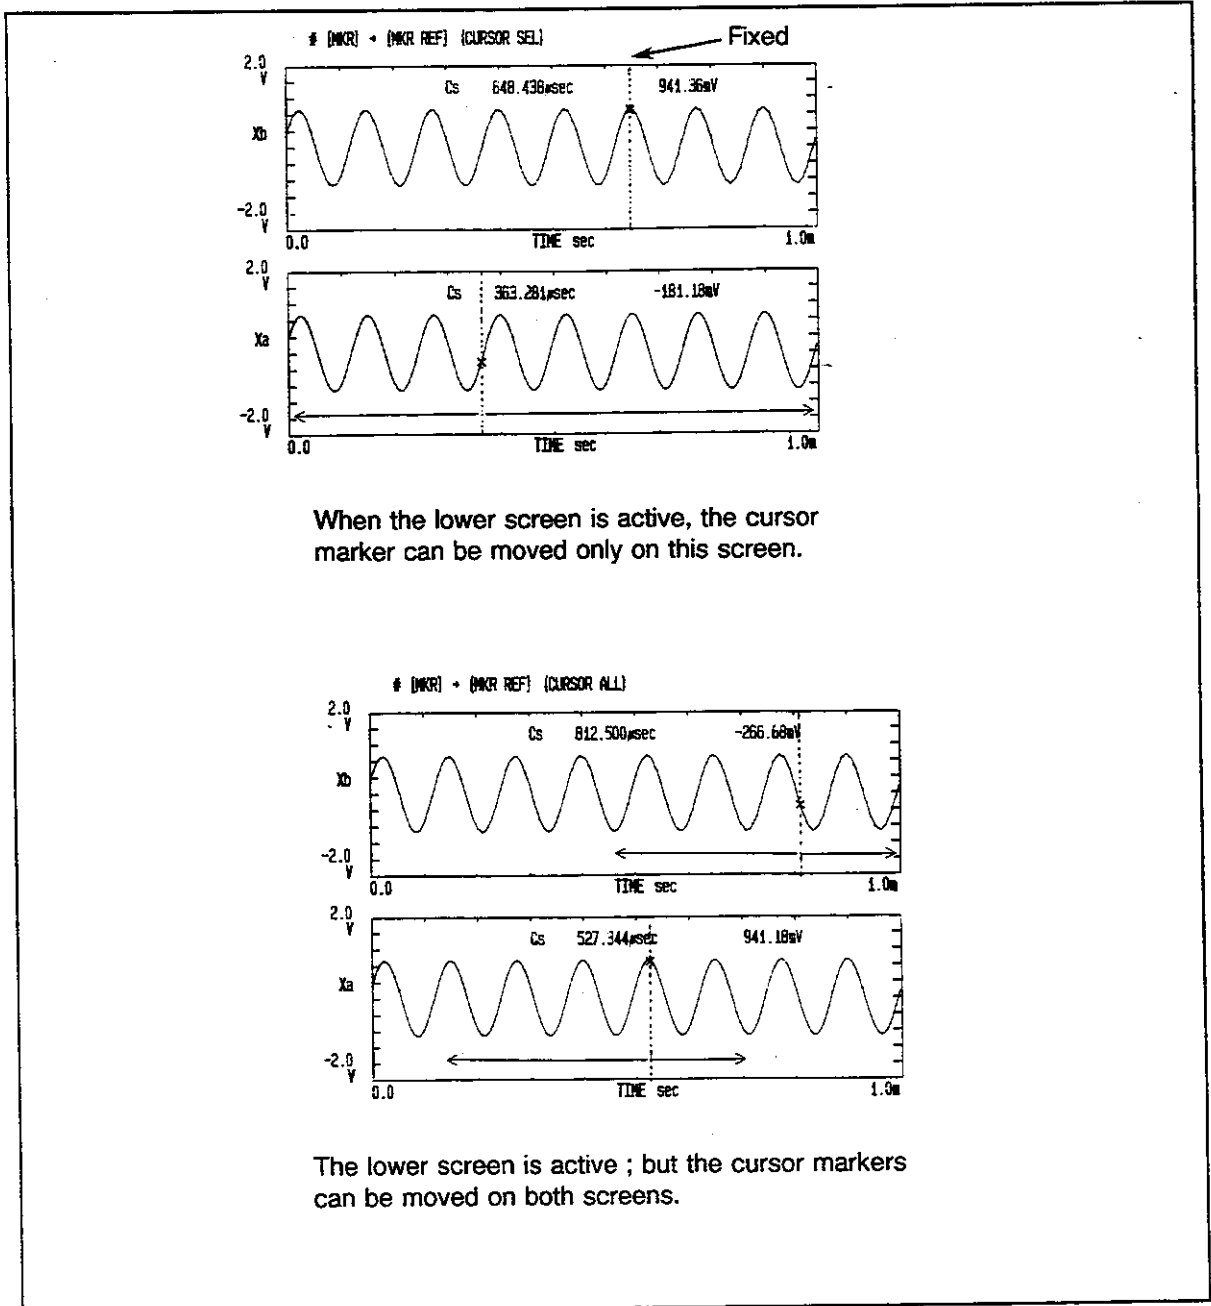


Figure 10-3 Moving Cursor Markers Simultaneously

1. CURSOR MARKERS

■ How to set the position of the Cursor Marker simultaneously on different screens

The cursor marker of the unselected screen can be moved to the same position as that of the cursor marker of the selected (active) screen.



The X axis coordinate of the cursor marker of the unselected screen is changed into the one of the cursor marker of the selected screen. (In other words, the cursor marker on the active screen is copied onto the other screens.)

Using "SEL to OTHER" effectively

- (1) Is the (X axis cursor) marker displayed on the selected screen?
(If not, it must be displayed.)
- (2) Is the (X axis cursor) marker displayed on the unselected screen?
(If not, it must be displayed.)

1. CURSOR MARKERS

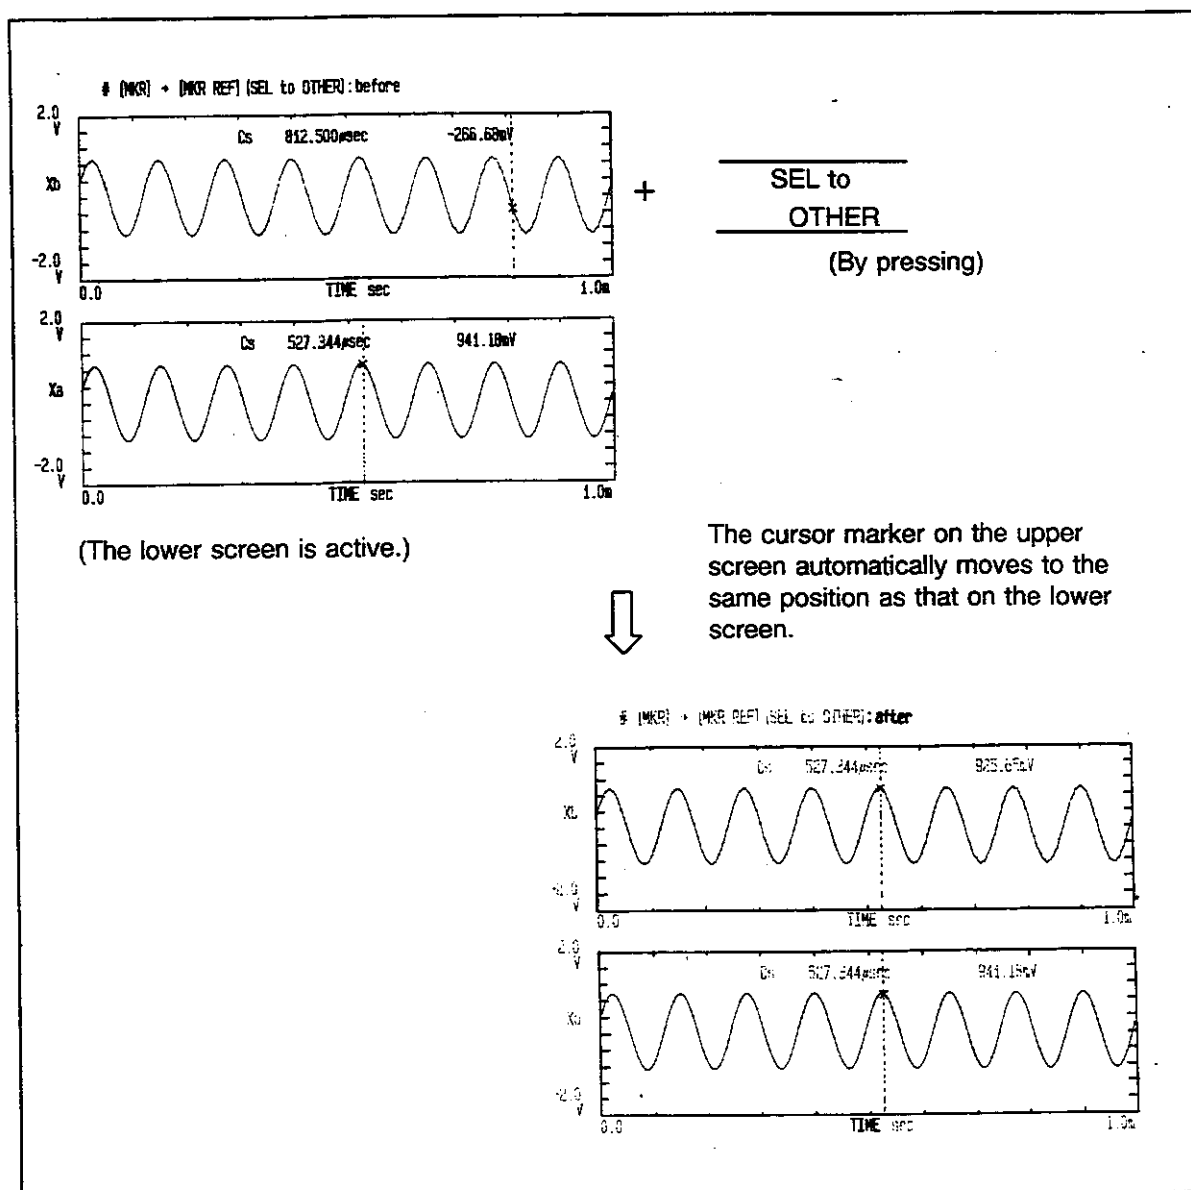


Figure 10-4 Setting the Cursor Marker on the Unselected Screen at the Same Position as that on the Selected Screen

2. SEARCH MARKERS

■ Relationships between Search Markers and Waveform Types

The types of search markers that can be used depend on the type of waveform displayed on the selected screen.

Table 10-1 summarizes the relationships between search markers and waveform types.

Table 10-1 Possibly Display Search Markers

Maker type		Type of computation performed on the data						
Group	Search marker	Time waveform	Correlation function	Histogram	Spectrum	t-f analysis	Frequency response function	Impulse response function
PK	'PKPK'	○	○	○	○	○	○	○
	'SINGLE PK'	○	○	○	○	○	○	○
	'NEXT RIGHT PK'	○	○	○	○	○	○	○
	'NEXT LEFT PK'	○	○	○	○	○	○	○
	'NEXT RIGHT MIN'	○	○					○
	'NEXT LEFT MIN'	○	○					○
	'+ PK'						○	
	'- PK'						○	
BAND	'PKPK'	○						
	'RMS'	○						
	'PK'		○		○	○		○
	'OVERALL'		○		○	○		○
	'MEAN'		○		○	○		○
	'VARIANCE'		○		○	○		○
PULSE PAR	'RISE TIME'	○						
	'FALL TIME'	○						
	'PULSE WIDTH'	○						
DAMP PWR	'DAMP PWR'		○			○		
	'DAMP PWR' (IMP)							○
	'HARMONIC'				○			
	'SIDE BAND'				○			
	'X dB BWD'						○	
	'SHAPE'						○	
	'RIPPLE'						○	
For servo analysis	'BODE'						☆	
	'CLOSE LOP'						☆	

○ indicates the search marker that can be displayed with X MKR.

☆ indicates the search marker that can be displayed with CTRL SYS.

NOTE

Be careful, because, even if a marker can be used for a certain type of analyzed data (cf. above table), it might be impossible to use it for this type of data, if the representation of these data (selected COORD) is not suitable because of compatibility reasons between a marker and the data format. For example, you cannot use a BAND marker or a DAMP PWR marker for a correlation function or an impulse response function, if you are displaying only the real part of the data.

2. SEARCH MARKERS

■ What the Search Markers do

Table 10-2 lists search markers according to what group they belong to and to what they do. Select the appropriate search marker according to this table.

Table 10-2 Search Marker Name and Action

Maker type		Action
Group (X menu)	Search marker name (Y menu)	
PK	'PKPK' 'SINGLE PK' 'NEXT RIGHT PK' 'NEXT LEFT PK' 'NEXT RIGHT MIN' 'NEXT LEFT MIN' '+ PK' '- PK'	Searches for the maximum and minimum values. Searches for the maximum value. Searches for the next peak value at the right of the current X axis cursor. Searches for the next peak value at the left of the current X axis cursor. Searches for the next minimum value at the right of the current X axis cursor. Searches for the next minimum value at the left of the current X axis cursor. Searches for the peak value (higher than the specified level) on both sides of the center. Searches for the minimum value (lower than the specified level) on both sides of the center.
BAND	'PKPK' 'RMS' 'PK' 'OVERALL' 'MEAN' 'VARIANCE'	Searches for the maximum and minimum values between two X axis cursors. Displays the root mean square value between two X axis cursors. Searches for the maximum value between two X axis cursors. Adds the signal amplitudes of the points within the interval, delimited by 2 X axis cursors, and displays the results in the "bar" format. Computes the average of the data between two X axis cursors and displays it in the bar format. Computes the variance and the normalized standard error of the whole data between two X axis cursors and displays them in the bar format.
PULSE PAR	'RISE TIME' 'FALL TIME' 'PULSE WIDTH'	Computes the rise time of the waveform between two X axis cursors. Computes the fall time of the waveform between two X axis cursors. Computes the pulse width of the waveform between two X axis cursors.
DAMP PWR	'DAMP PWR' 'DAMP PWR' (IMP)	Displays the damping coefficient of the waveform between two X axis cursors. Displays the damping coefficient and damping ratio of the waveform between two X axis cursors.
'HARMONIC'		Searches for the harmonics corresponding to the specified frequency or peak.
'SIDE BAND'		Searches for the sideband corresponding to the specified frequency.
'X dB BWD'		Points out (and computes) the parameters of the band, over which the signal level stands between the specified level, and the level computed from the specified level and the specified level difference.
'SHAPE'		Estimates the ratio of the band width of the band described above.
'RIPPLE'		Estimates the difference between the maximum value (peak) and the minimum value (trough).
For servo analysis	'BODE' 'CLOSE LOP'	Displays the phase margin and gain margin. Displays the frequency, gain, and bandwidth of the maximum value (peak).
Cursor	① 'SINGLE X X1 Y1' ② 'X1 Y1 X2 X2' ③ 'X1 Y1 X2 ΔY' ④ 'Y1 Y2' ⑤ 'Y1 ΔY'	Evaluates the coordinates (position & level) of the X axis cursor. Evaluates the levels of two X axis cursors at the same time. Evaluates the levels and the difference (ΔY) between two X axis cursors at the same time. Evaluates the levels of and the difference (ΔY) between two cursors. * Cursor markers are used to specify the bandwidth, points, and level for X MKR. They can also be used independently.

2. SEARCH MARKERS

■ Operating the Search Markers

Table 10-3 lists the procedures (①→②→③→④) for operating and displaying search markers.

Table 10-3 Search Marker Operations and Display Procedures

		Marker display procedure(①→②→③→④)			
		① Condition setting	② Marker selection method	③ Action	④ Marker symbol
PK	'PKPK' 'SINGLE PK' 'NEXT RIGHT PK' 'NEXT LEFT PK' 'NEXT RIGHT MIN' 'NEXT LEFT MIN'	None None Specify the reference level with marker IV. Specify the reference level with marker IV. Specify the reference level with marker IV. Specify the reference level with marker IV.	Selective	○ ○ DO DO DO DO	▽ △ ▽ ▽ ▽ ▽ ▽
	'+ PK' '- PK'	1. Specify the reference level with marker IV. 2. Specify the reference point and level with marker I.		Selective	○ ○
BAND	'PKPK' 'RMS' 'PK' 'OVERALL' 'MEAN' 'VARIANCE'	With marker II, specify the start (left) and stop (right) points of the X axis band to be searched.	Selective	○ ○ ○ ○ ○	▽ △ Rms Bar ▽ Σ Bar Mean Bar Var Bar
PULSE PAR	'RISE TIME'	Specify the start and stop points and levels with marker II. (It is assumed that the level of the left cursor is 0% and that of the right one is 100%.)	Selective	DO	▽ ▽
	'FALL TIME'	Specify the start and stop points and levels with marker II. (It is assumed that the level of the left cursor is 100% and that of the right one is 0%.)	Selective	DO	▽ ▽
	'PULSE WIDTH'	Specify the start and stop points and levels with marker II. (It is assumed that the minimum level of the X cursor marker is 0% and maximum one between 2 points is 100%.)	Selective	DO	▽ ▽

(Settings before Execution) Marker I : Cursor marker for one point along the X axis ([MKR VAL][SINGLE X])
 Marker II : Cursor markers for two points along the X axis ([MKR VAL][X1 Y1 X2 Y2])
 Marker IV : Cursor markers for two points along the Y axis ([MKR VAL][Y1 Y2])

(Selection Method) Toggle: [ON/OFF] → [ON/OFF]: to change from inactive to active
 Selective: Selection of one condition among several.

(Execution) ○ : The marker is displayed automatically, simply by specifying the selection method.
 DO: Select the type of the marker to be displayed, then press the X MARKER key.
DO ESTIM

2. SEARCH MARKERS

Table 10-3 Search Marker Operations and Display Procedures (cont'd)

		Marker display procedure(①→②→③→④)			
		① Condition setting	② Marker selection method	③ Action	④ Marker symbol
DAMP PWR	'DAMP PWR'	Specify the start and stop points with marker II.	Toggle	DO	σ Value
	'DAMP PWR'(IMP)	1. Specify the start and stop points with marker II. 2. Enter the frequency whose damping coefficient is to be obtained. (Enter a value for FREQUENCY.)	Toggle	DO	$\sigma\zeta$ Value
'HARMONIC'		Select the fundamental frequency. Enter the fundamental frequency. (Enter a value for FUND FREQ.) Specify the maximum point to search.	Toggle	<input type="radio"/>	∇ ∇ ∇
'SIDE BAND'		1. Carrier (Enter a value for CARRIER.) 2. Enter the modulation frequency. (Enter a value for MOD FREQ.)	Toggle	<input type="radio"/>	∇ $\nabla\sim\nabla$ $\nabla\sim\nabla$
'X dB BWD'		1. Specify the reference coordinates with marker I. 2. Specify the search width. (Enter a value for X dB)	Toggle	<input type="radio"/>	∇ . ∇
'SHAPE'		1. Specify the reference coordinates with marker I. 2. Specify the search width. (Enter values for X dB and Y dB.)	Toggle	<input type="radio"/>	∇ ∇ \blacktriangledown \blacktriangledown
'RIPPLE'		None	Toggle	<input type="radio"/>	Rpl $\nabla\nabla$
For servo analysis	'BODE'	None	Toggle	<input type="radio"/>	G P $\blacktriangledown\blacktriangledown$
	'CLOSE LOP'	Specify the DC gain. (Enter a value for DC GAIN.)	Toggle	<input type="radio"/>	Gpk ω $\blacktriangledown\blacktriangledown$
Cursor	① 'SINGLE X X1 Y1' ② 'X1 Y1 X2 Y2' ③ 'X1 Y1 X2 Δ Y' ④ 'Y1 Y2' ⑤ 'Y1 Δ Y'	None None None None None	Selective	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>	X axis cursor 1 X axis cursor 2 X axis cursor 2 Y axis cursor 1 Y axis cursor 2

(Settings before Execution) Marker I : Cursor marker for one point along the X axis ([MKR VAL][SINGLE X])
 Marker II : Cursor markers for two points along the X axis ([MKR VAL][X1 Y1 X2 Y2])
 Marker IV : Cursor markers for two points along the Y axis ([MKR VAL][Y1 Y2])


(Selection Method) Toggle: [ON/OFF] → [ON/OFF]: to change from inactive to active
 Selective: Selection of one condition among several.

(Execution) : The marker is displayed automatically, simply by specifying the selection method.
 DO: Select the type of the marker to be displayed, then press the X MARKER key.
DO ESTIM


2. SEARCH MARKERS

● Marker Display Examples

- (1) Example of X axis cursor marker display: SINGLE X X1 Y1
 One X axis cursor marker is displayed and its coordinates are displayed (Cs).

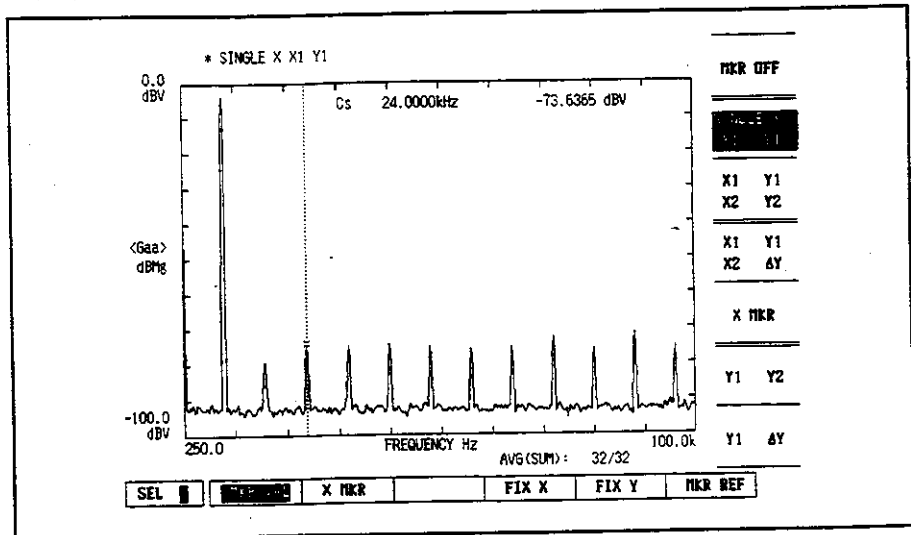


- (2) Example of display of Y axis cursor markers: Y1 ΔY
 Two Y axis markers are displayed and the difference (Δ) between the amplitude (Cs) of the lower cursor and the amplitude of the upper cursor are displayed as well as the amplitude of the lower cursor (Cs).

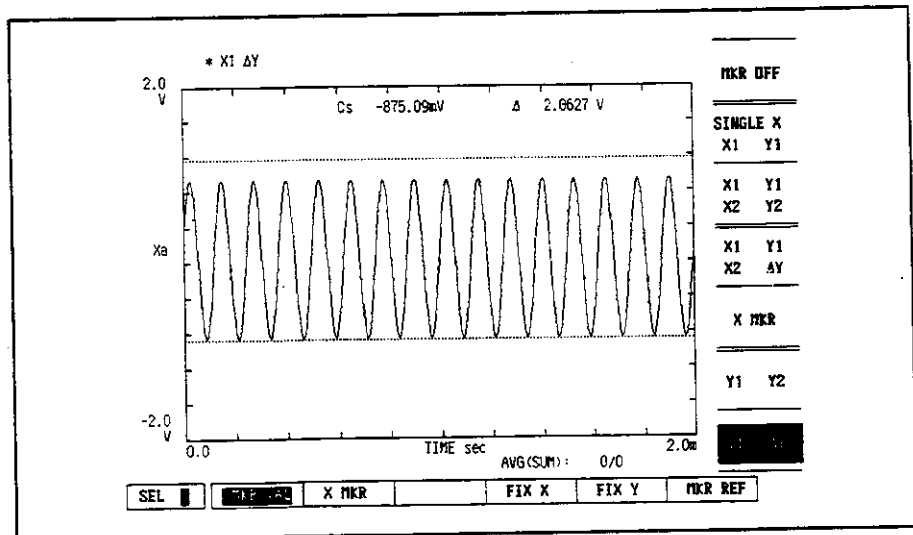


2. SEARCH MARKERS

- (3) Example of peak marker display: PKPK
 The coordinates (Cs) of the higher cursor peak (▽) are displayed as well as the difference (PKPK) between the higher cursor (▽) and lower cursor (△) amplitude.

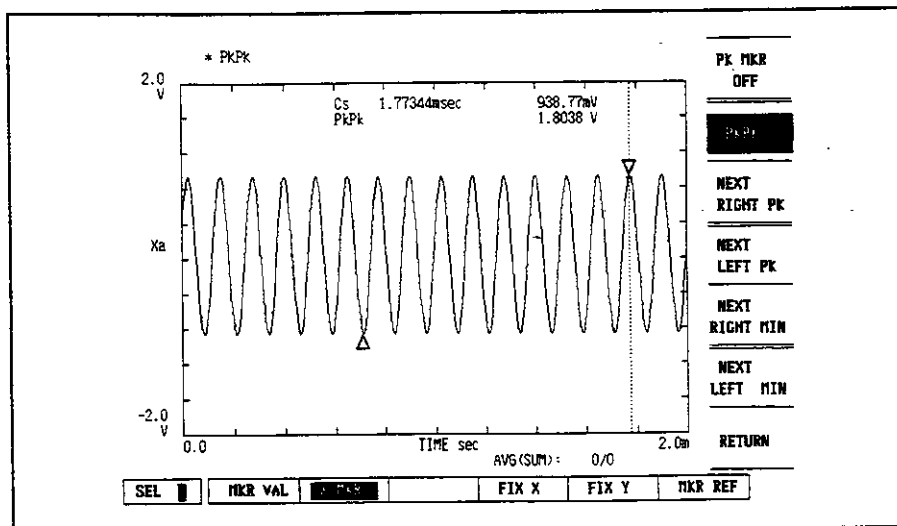


- (4) Example of display of band marker: PK
 The peak coordinates (PK) of the peak (▽) of the waveform between two X axis cursor markers (the left cursor coordinates are indicated by LC and the right cursor coordinates by RC) as well as the boundaries (LC & RC) are displayed.

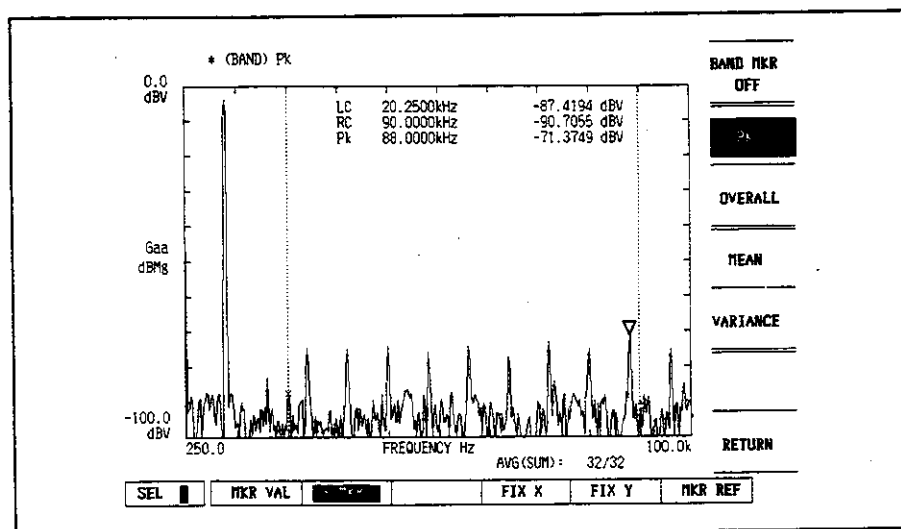

2. SEARCH MARKERS


(5) Example of pulse parameters display: RISE TIME

If the left X cursor (LC) and the right X cursor (RC) respectively correspond to 0% and 100% in amplitude, two Y axis cursors (the lower one, ∇ , for 10% of the maximum amplitude and the upper one, ∇ , for 90%) define the risetime, whose value is then computed and displayed.

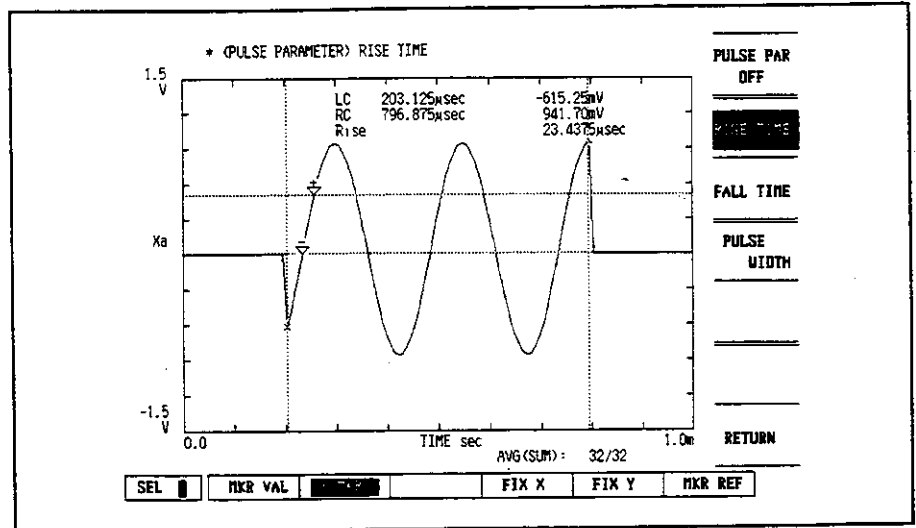

(6) Example of damping power display: DAMP PWR


The damping coefficient (σ) of the data between two X axis cursor markers is computed and displayed.(the left cursor value is indicated by LC and the right cursor value is indicated by RC)

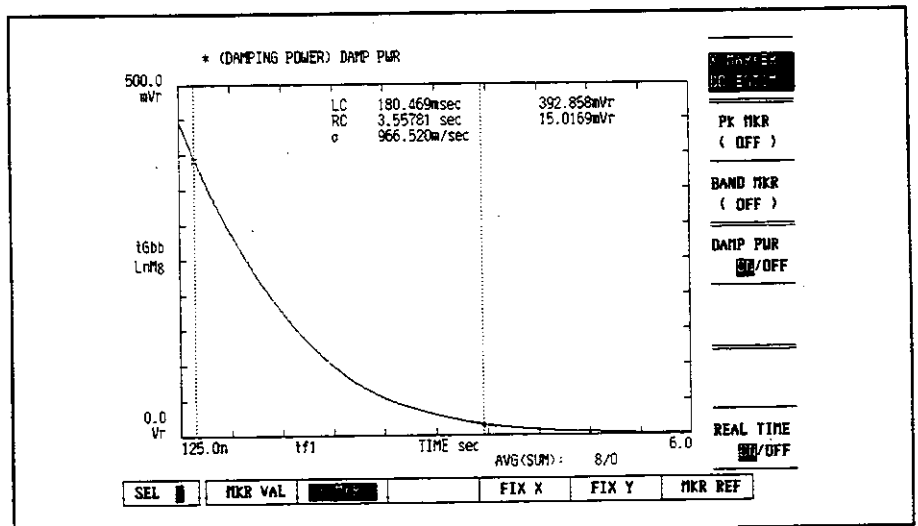

2. SEARCH MARKERS

(7) Example of harmonics markers display: HARMONIC


Harmonics are searched with reference to the fundamental waveform (▽ : PEAK) and displayed with ▽ markers. The distortion factor can be viewed by displaying the markers in the list format.

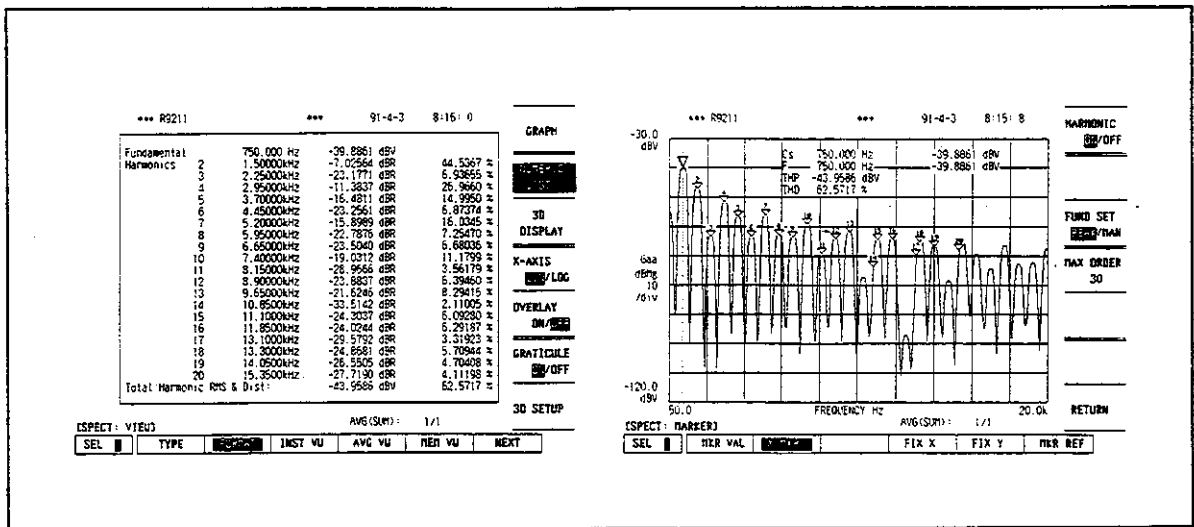

(8) Example of X dB band markers display: X dB BWD


The frequency (Cs) (marked ▽), corresponding to the data whose amplitude is lower than the specified reference level (X dB (-3dB in this example)), is searched and displayed.

- Bwd: Frequency range (between ▽ and ▽) between the two frequencies which have a level lower than the specified reference level minus the specified difference.
- Ctr : Center frequency between ▽ and ▽

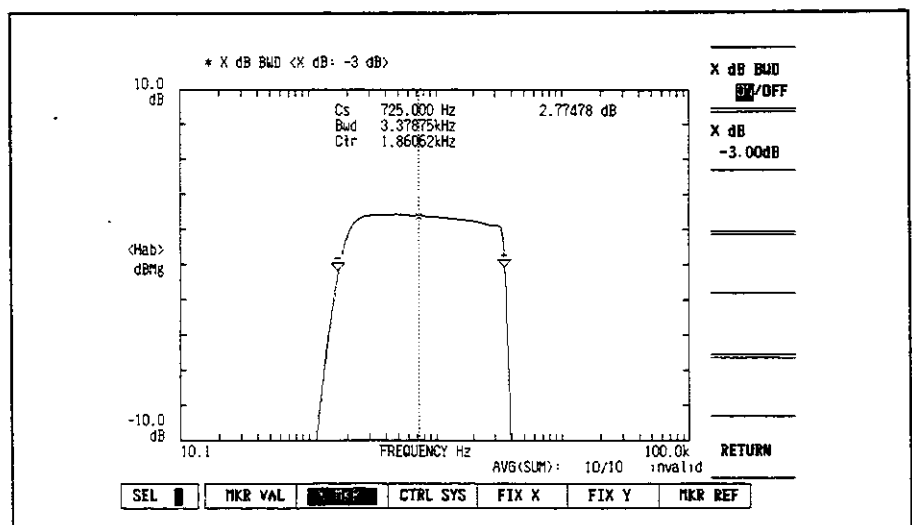


2. SEARCH MARKERS

- (9) Example of ripple markers display: RIPPLE
 The maximum value (∇^+), minimum value (∇^-), and difference (Rpl) between these values are computed and displayed.

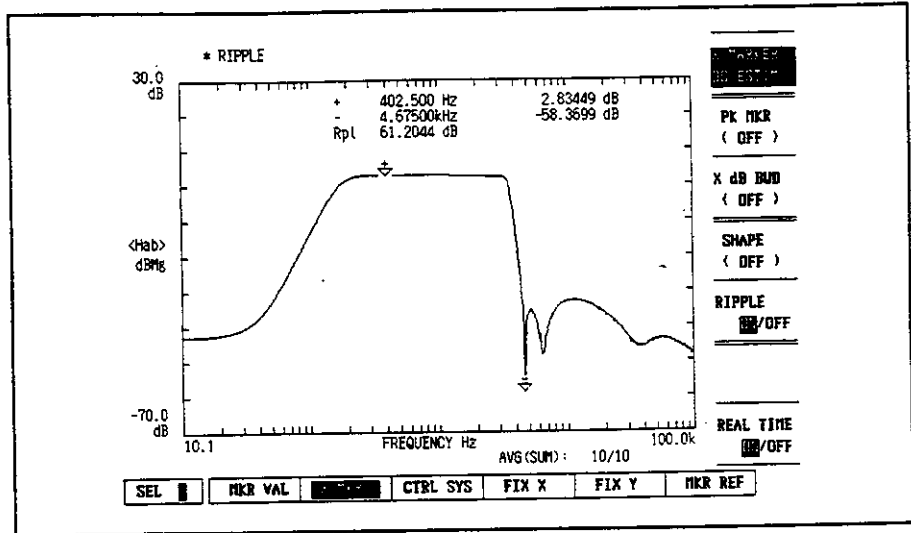

- (10) OPEN LOOP: BODE MKR
 The gain corresponding to a phase of -180° is displayed with reference to 0dB (display of the Gain margin). The phase corresponding to a gain of 0dB is also displayed with reference to -180° (display of the Phase margin).

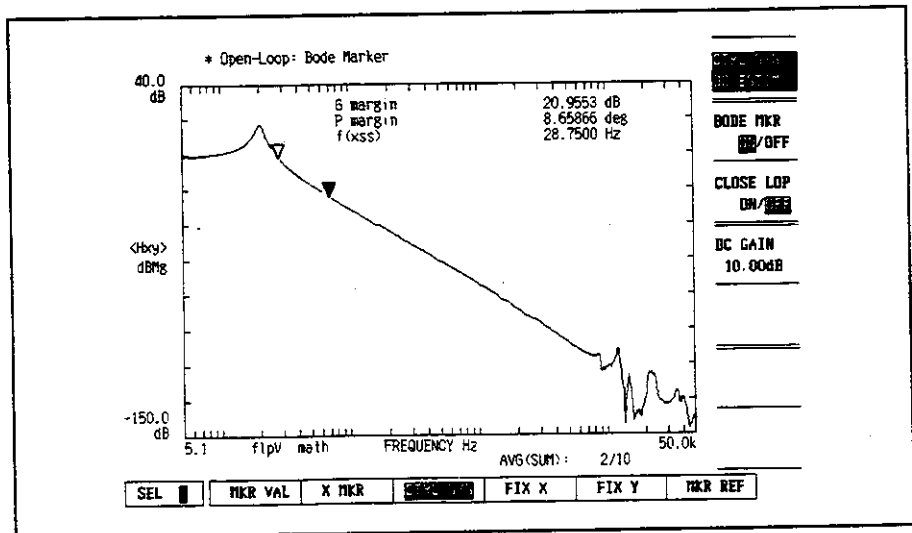

■ Search Markers Display Timing

You can determine whether markers are to be updated each time the waveform changes.



- REAL TIME ON/OFF: Markers are updated each time the waveform changes. (Markers are displayed in the real time mode.)
- REAL TIME ON/OFF: Markers are displayed only once, either when the [DO ESTIM] key is pressed or when they are selected, they are not updated with the changes of the waveform.

3. DISPLAYING LISTS OF MARKERS

● **Setting example**

Display a cursor with **MKR VAL**. Press the **SET REF** key, then enter the reference marker number 2 with the numeric keys.

Press the **ENT** key to input the 84.00 kHz cursor as reference marker 2. See Figure 10-6.

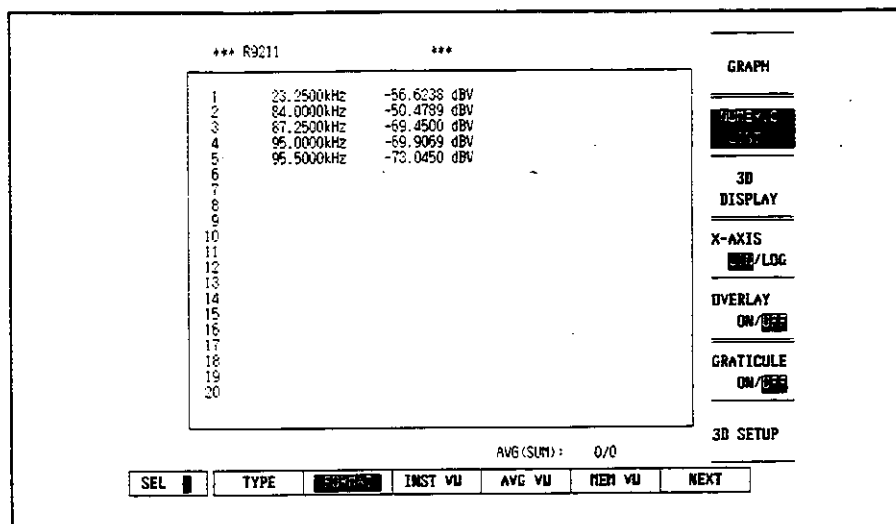


Figure 10-5 Displaying a List of Reference Markers

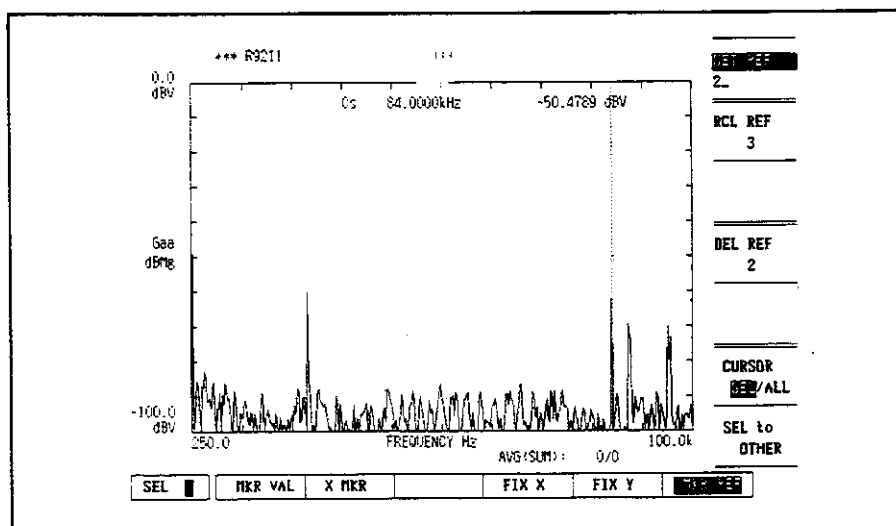


Figure 10-6 Example of Reference Marker Setting

3. DISPLAYING LISTS OF MARKERS

■ Displaying Lists of Search Markers

If the following key sequence is executed when harmonics or sideband markers are displayed, the corresponding markers results list is displayed.

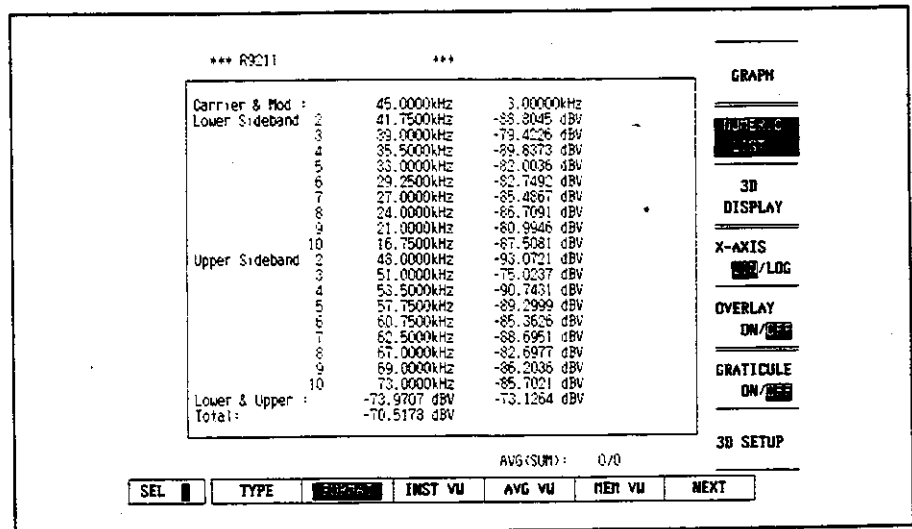


Figure 10-7 Example of Marker Results List Corresponding to Sideband Marker

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

■ How to Use Search Markers


Markers are classified according to the initial conditions to be set.

A	PKPK SINGLE PK	No condition must be set.
B	+ PK, - PK NEXT RIGHT PK NEXT LEFT PK NEXT RIGHT MIN NEXT LEFT MIN	A range must be specified with a vertical and a horizontal cursor.
C	BAND MKR PULSE PAR	A range must be specified with two vertical cursors.
	DAMP PWR	(A default state is automatically provided.)
D	HARMONIC SIDE BAND	Frequency or amplitude must be specified.
	SHAPE X dB BWD	
E	BODE MKR CLOSE LOP RIPPLE	Others (CTL SYS)

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

● How to use PKPK in the waveform mode

This is the most basic procedure of the X MKR key:



By pressing the above sequence, you will display the data related to the marked peak on the upper part of the screen.

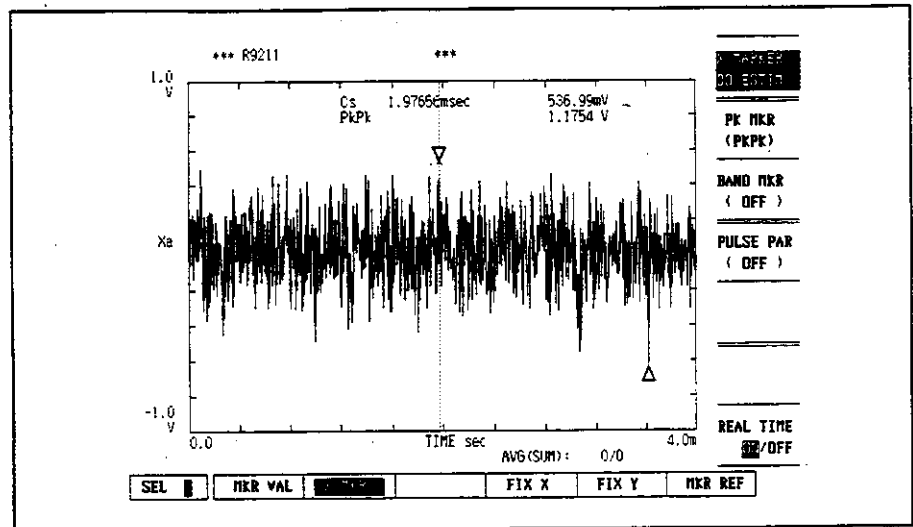


Figure 10-8 Displaying the Marked Peak Data

● How to use the NEXT RIGHT PK (NEXT LEFT PK) marker in the spectrum mode, to find the next right peak (the next left peak) whose amplitude exceeds the value previously set by the Y axis reference cursor.

(1) How to set the value of the reference Y cursor.



By pressing the previous key sequence, you let the Y cursor appear on the screen.


Press the **FIX Y** key, then move the cursor with the knob.

(In this case, all selections from the Y axis fit. However, using

Y FIXED WIDTH is the most suitable selection.)

Since the lower cursor is used as the reference cursor, the value of the upper cursor is ignored.

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

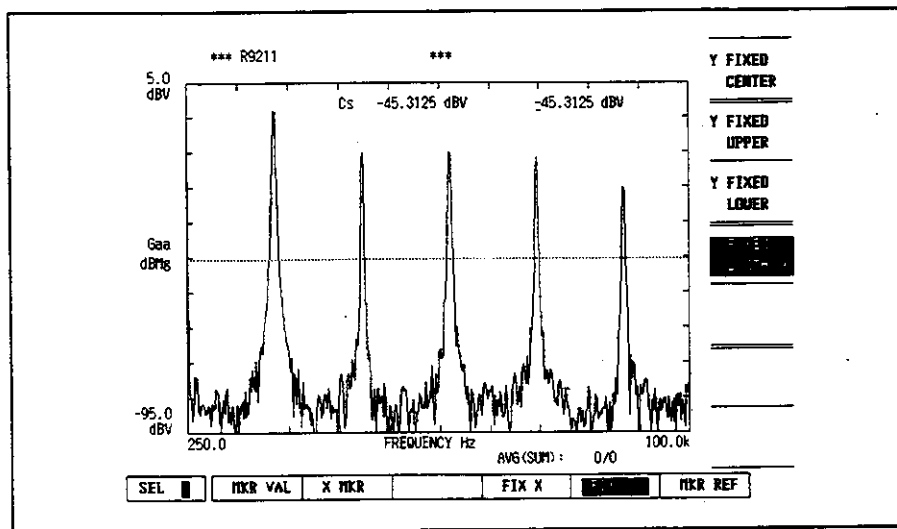


Note




executed, the marker read-out window (marker read value frame) appears.

(2) How to set the X cursor.




and move the X marker with the knob.

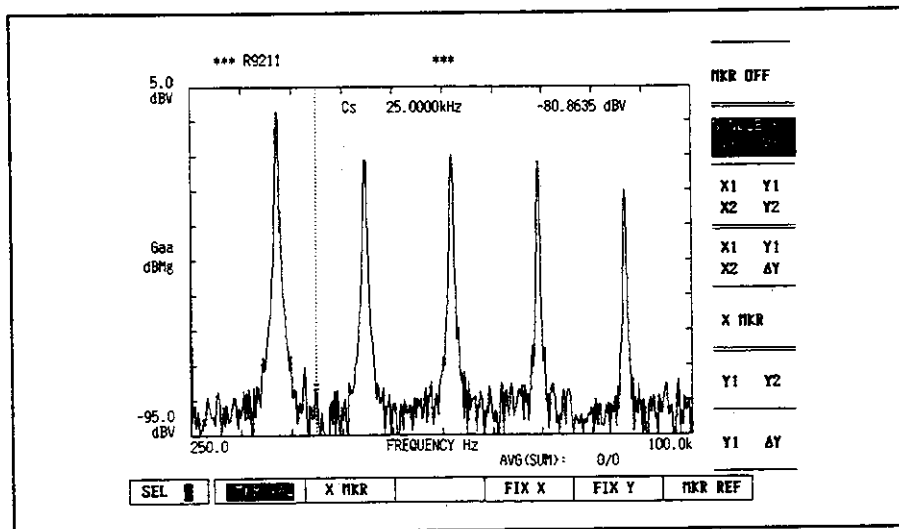

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

(3) How to evaluate the right peak value.

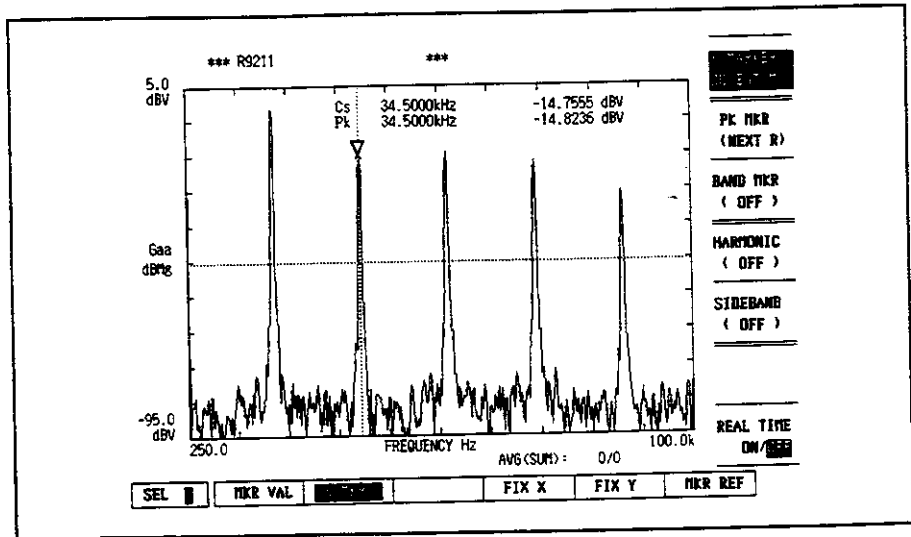

● How to use BAND MKR


Obtain the peak, overall, average, or variance value in the specified frequency range.

(1) How to specify the frequency range.




This sequence displays two cursors.

You need to fix the left cursor and move the right one to the upper limit of the frequency range to be specified.



Using this sequence, the left cursor has been fixed. You need to move the right cursor with the knob. Now fix the right cursor and move the left one to the lower limit of the frequency range to be specified.





Thus, the right cursor has been fixed. Move the left cursor with the knob.

Using this sequence, the range has been specified.


The frequency range has finally been specified.

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

(2) How to Evaluate the peak marker value.

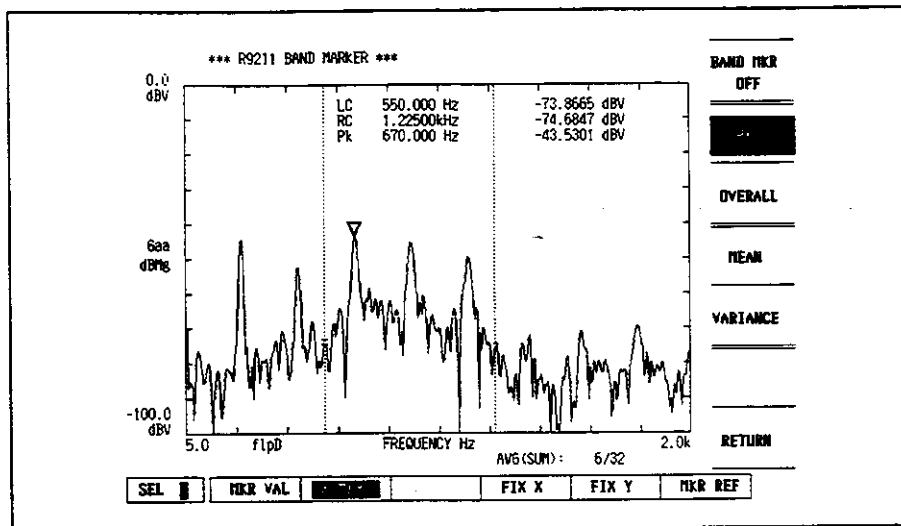


(3) How to obtain the sum of the spectrum lines amplitude in the specified frequency range and display it in the bar format.

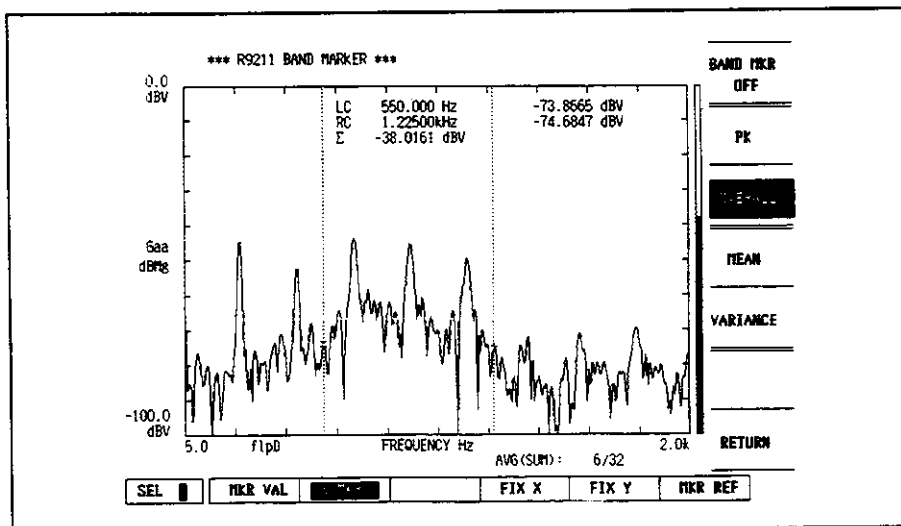


4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

- (4) How to obtain the average of the spectrum in the specified range and display it in the bar format.

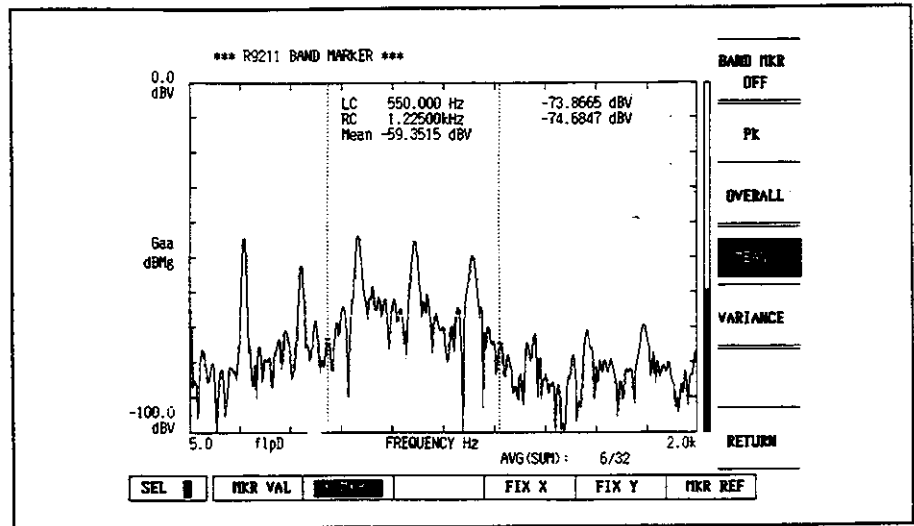

- (5) How to obtain the variance of the spectrum in the specified frequency range and display it in the bar format.

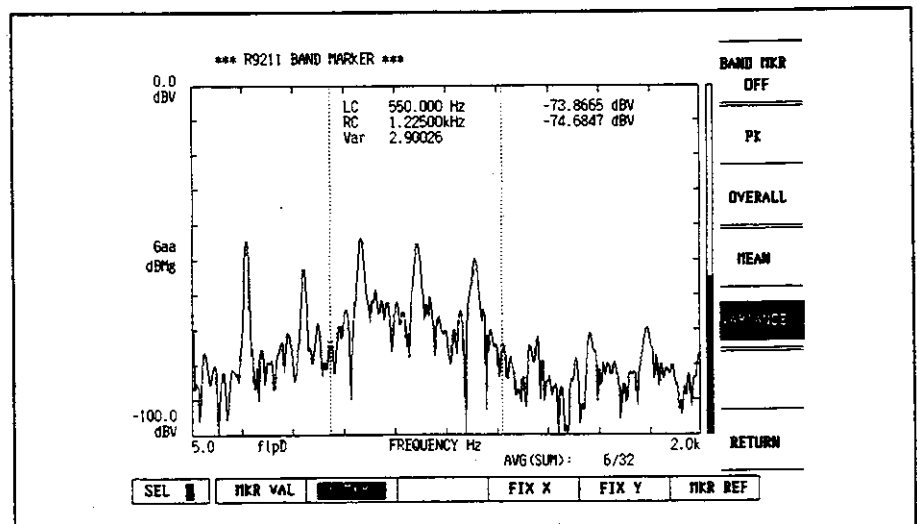


4. MAJOR EXAMPLES OF SEARCH MARKER SETTING


● How to use DAMP PWR

Evaluate the damping power marker value of the impulse response function. Use the arithmetic operation function to make the impulse response function suitable for the evaluation.


To do that, you first have to sample the peak portion of the frequency response function waveform and then execute an inverse Fourier transformation. The process is illustrated below.

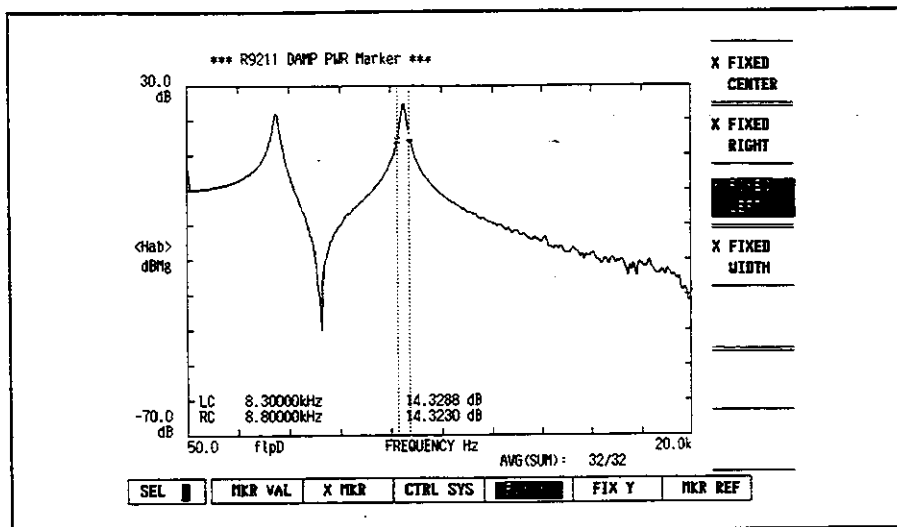


(1) Register the frequency response function as an operand.





(2) Set the sampling range and set an operator.

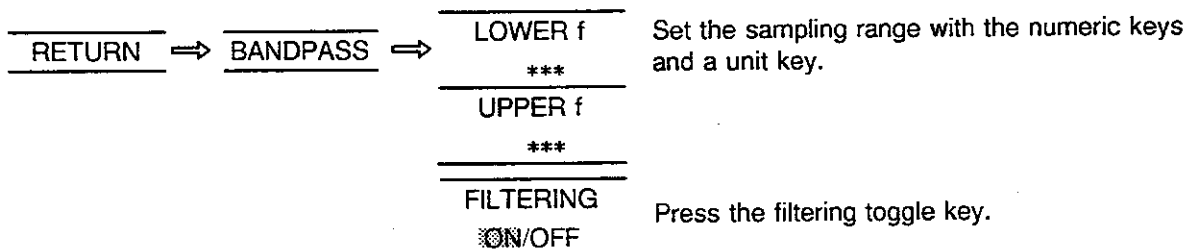

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING


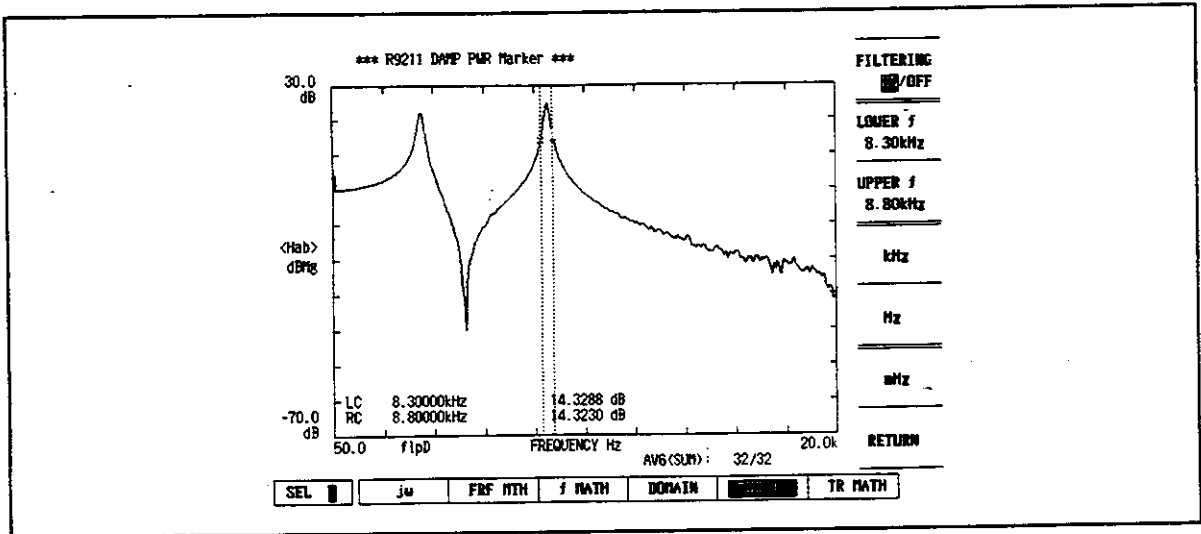


(3) Register the first OPRTR.

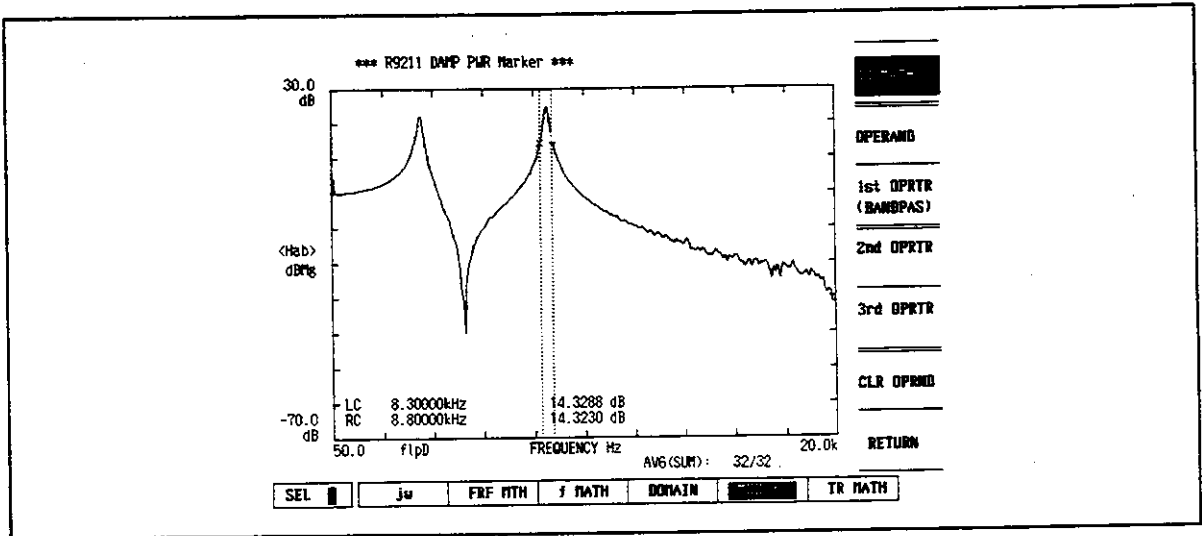


4. MAJOR EXAMPLES OF SEARCH MARKER SETTING


(4) Prepare the reverse Fourier transformation for the second OPRTR.

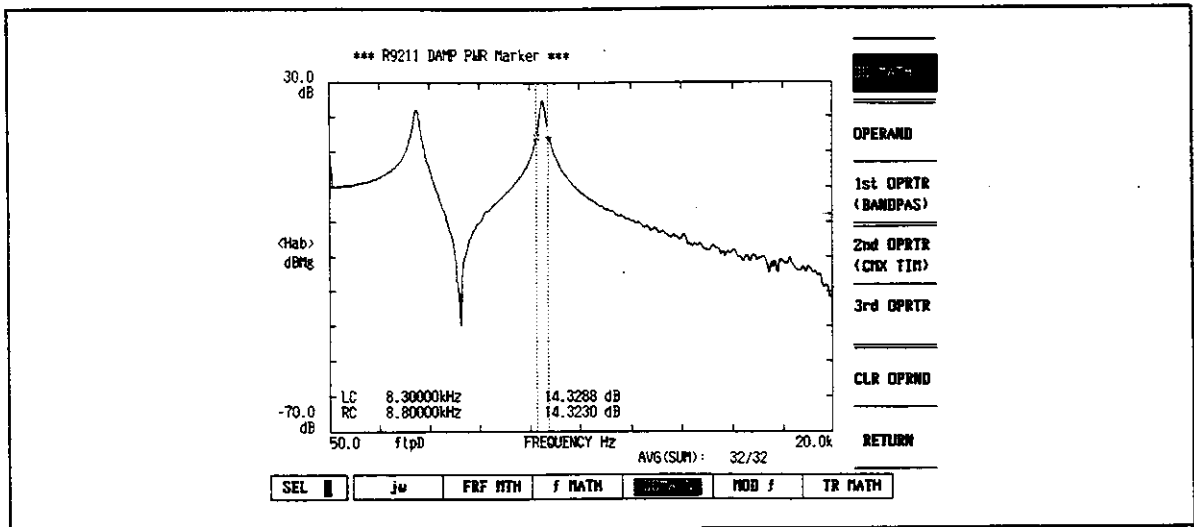

(5) By pressing the following sequence, the arithmetic operation is executed and the results are displayed.




The impulse response function is displayed as shown below. The damping power marker value can now be calculated.

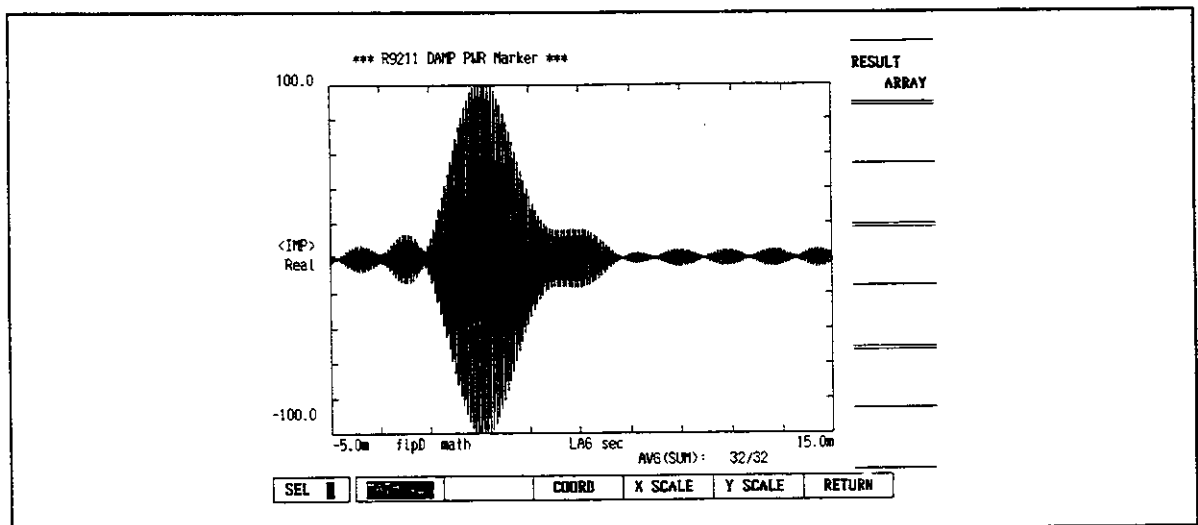


4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

(6) Specify the range with two vertical cursors. As explained in "o How to use BANK MKR". A linear portion of the curve must be selected.

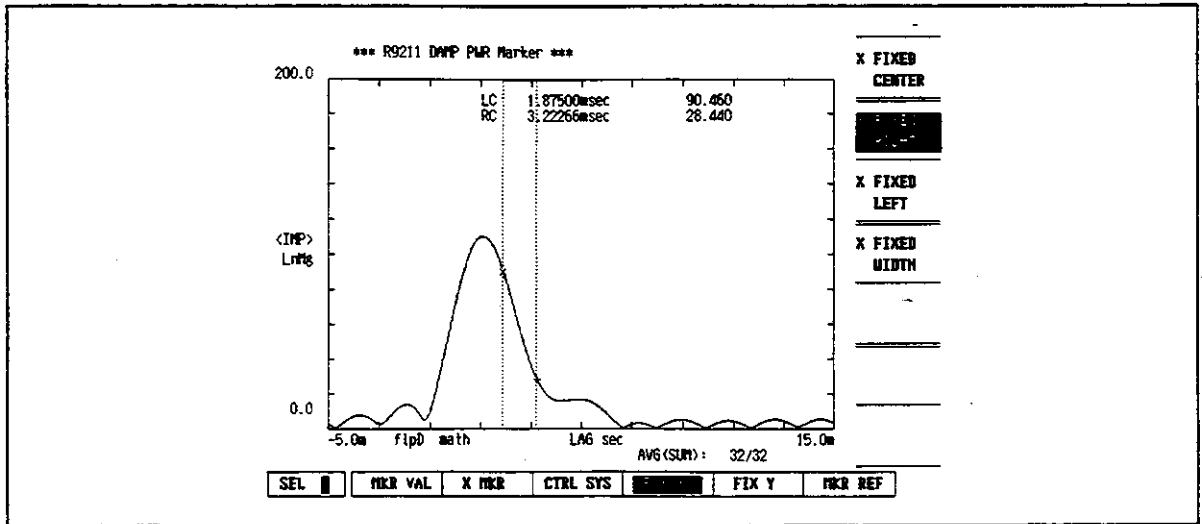


(7) Set the frequency for the damping ratio.




DAMP PWR
ON/OFF When this key is pressed, the following message


Press [DO ESTIM], Please ... is displayed at the upper left corner of the screen:

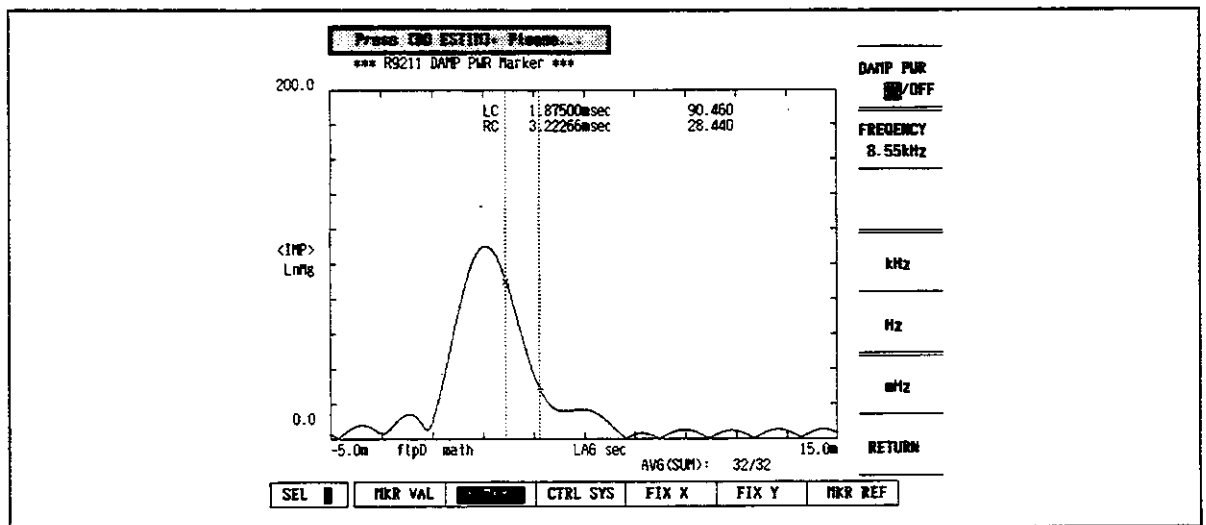

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING





(Move the two vertical cursors to obtain an accurate damping coefficient. To obtain a more accurate damping coefficient, you can also average the damping coefficients obtained by moving the two vertical cursors.)

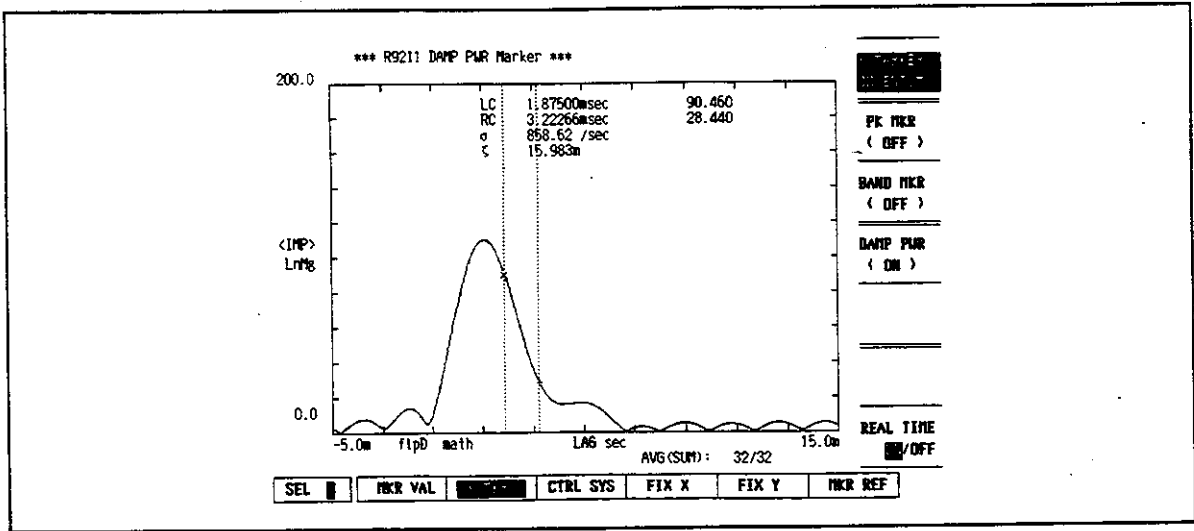

● How to use HARMONIC (when set the fundamental frequency)


(1) Select the manual input for the fundamental frequency (When select PEAK, the setting value of the fundamental frequency is ignored.)

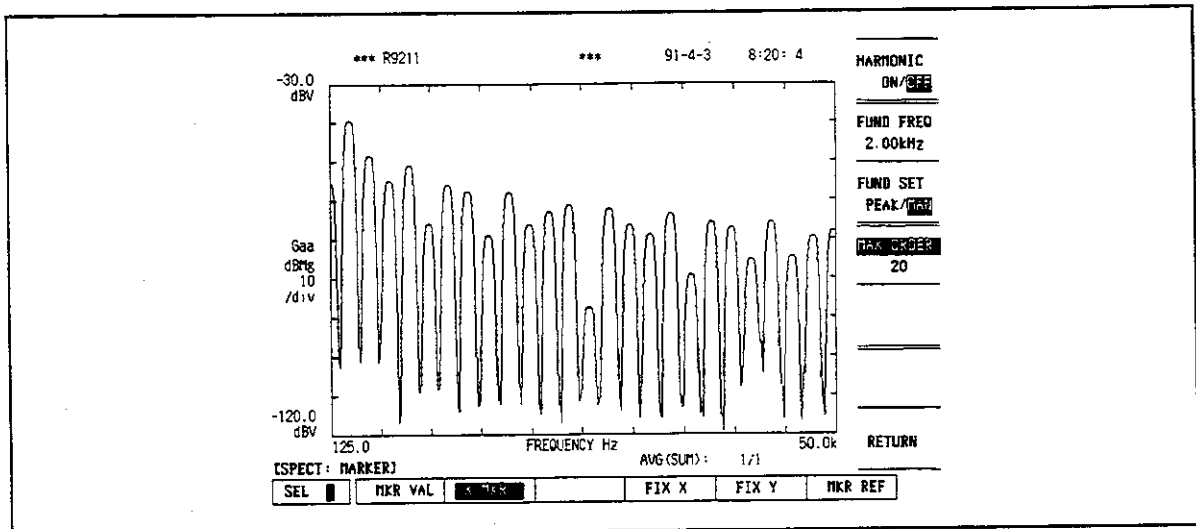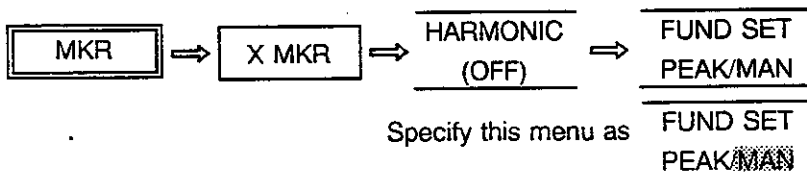

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING


(2) Set the fundamental frequency.

When press FUND FREQ, the new menu is displayed and enter with 2.00kHz the numeric keys and the terminator key.

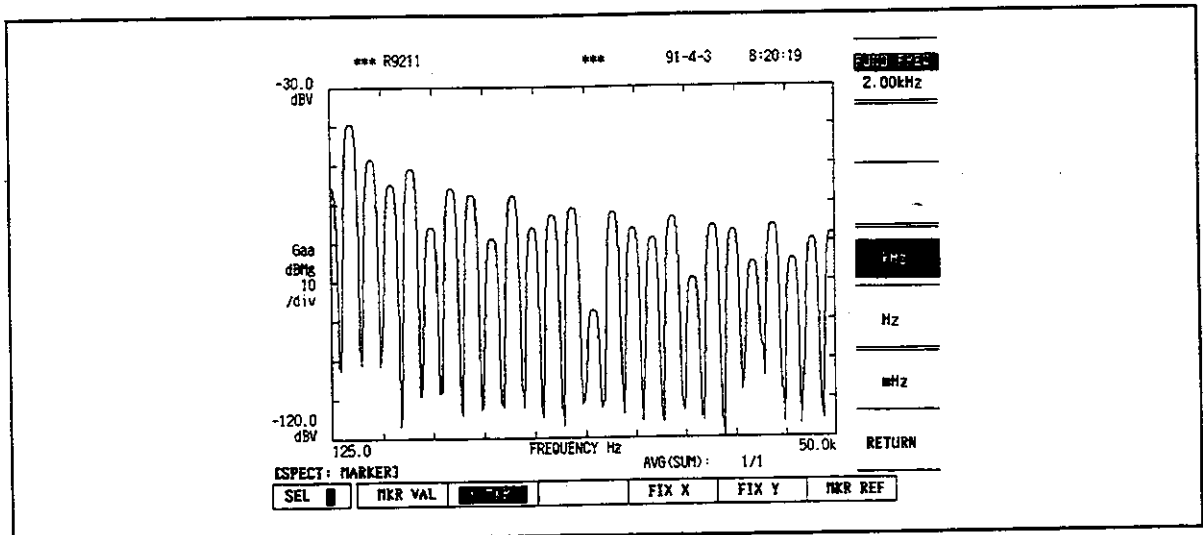

(3) Set search marker. (3 to 100)

Press MAX ORDER and enter with the numeric keys and the ENT key.

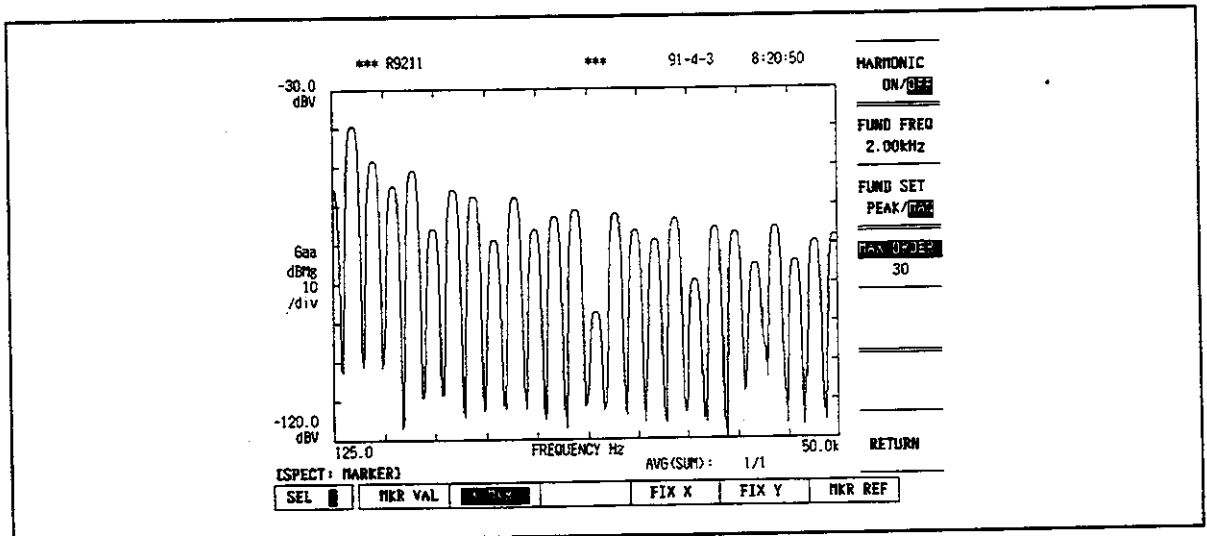


4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

(4) Evaluate harmonic marker.


When press HARMONIC ON/OFF and HARMONIC ON/OFF is specified, the

following Fig. is shown. (The marker displays to the 20 points in the maximum. The points more than 20 is referred to the list display.)

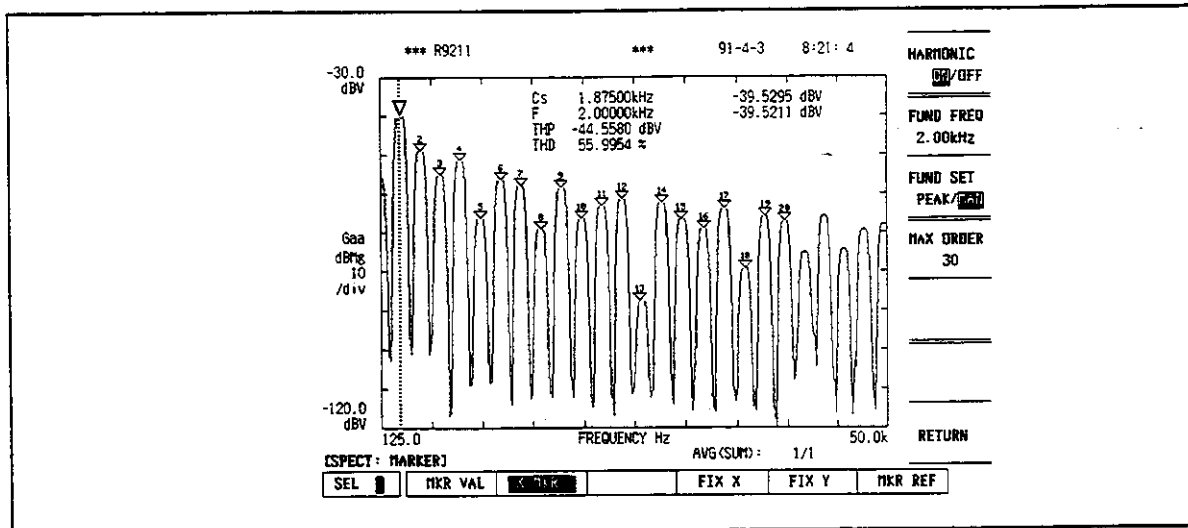

REMARK→


The following procedure can display the list of the harmonic marker.

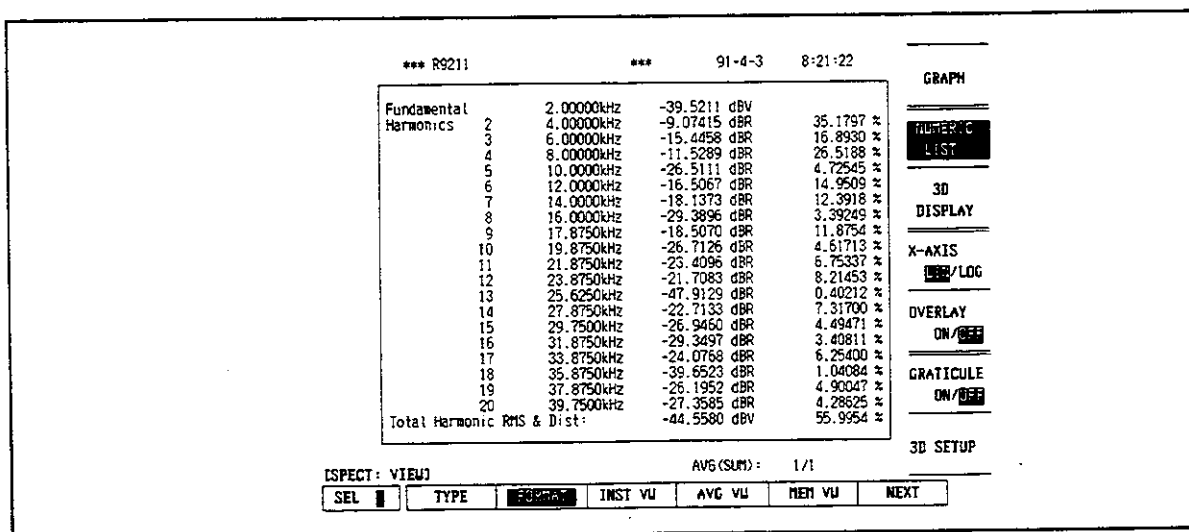

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

The range of the list display can be changed with the up-down key and the knob.

The start point of the list display can be specified with the numeric keys and the **ENT** key.

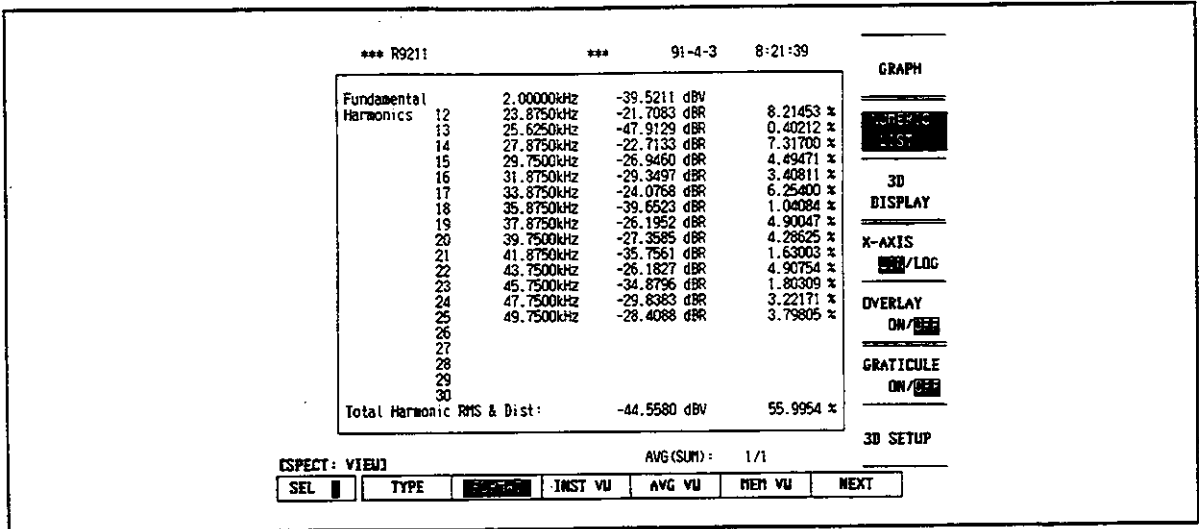



CAUTION !

When three or more screens are displayed in the multi-screen mode, a list cannot be displayed. Reduce the number of screens to 1 or 2.



4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

● How to use X dB BWD

(1) Find a peak value with the single peak marker.

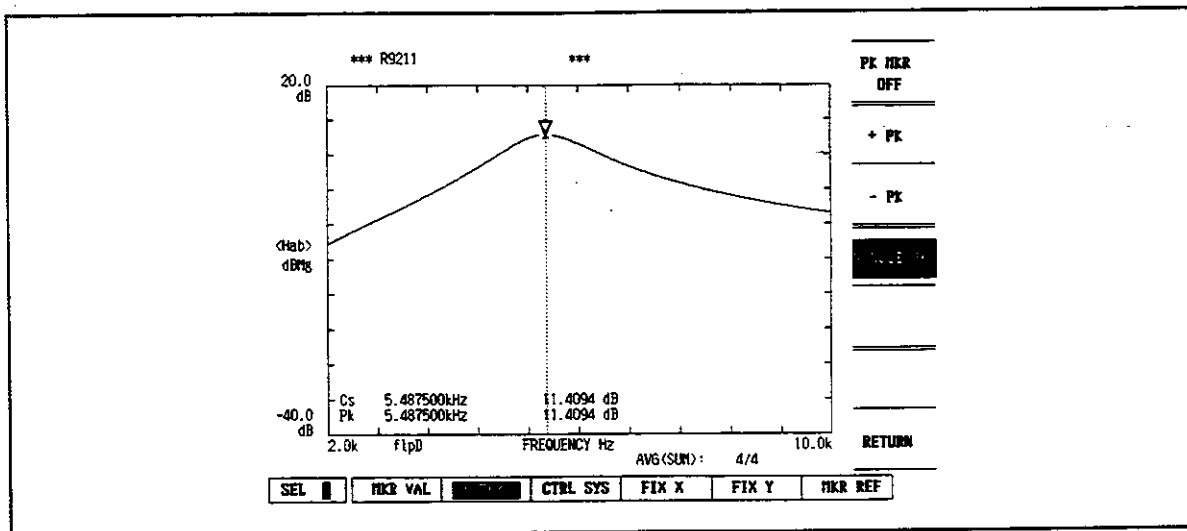



(2) Enter a value for XdB

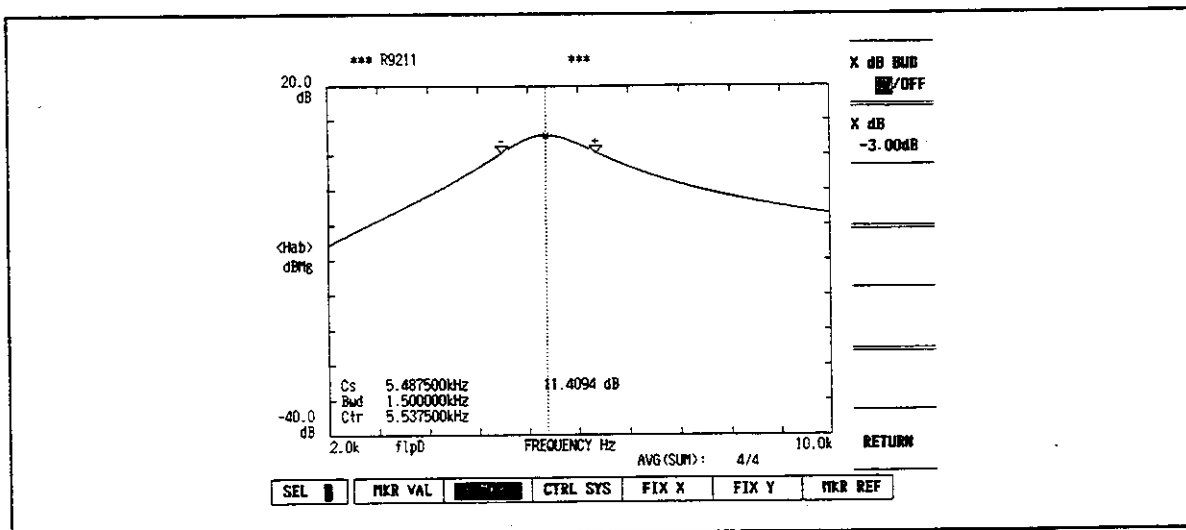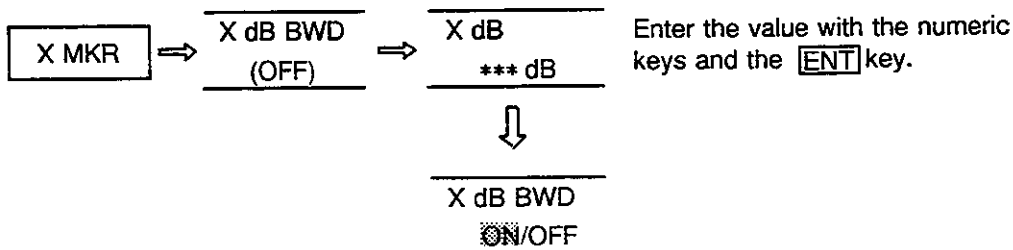



4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

● How to use BODE MKR

- (1) The following sequence enables you to display the frequency response function.
 (Displays Bode diagrams to show the phase and gain margin.)

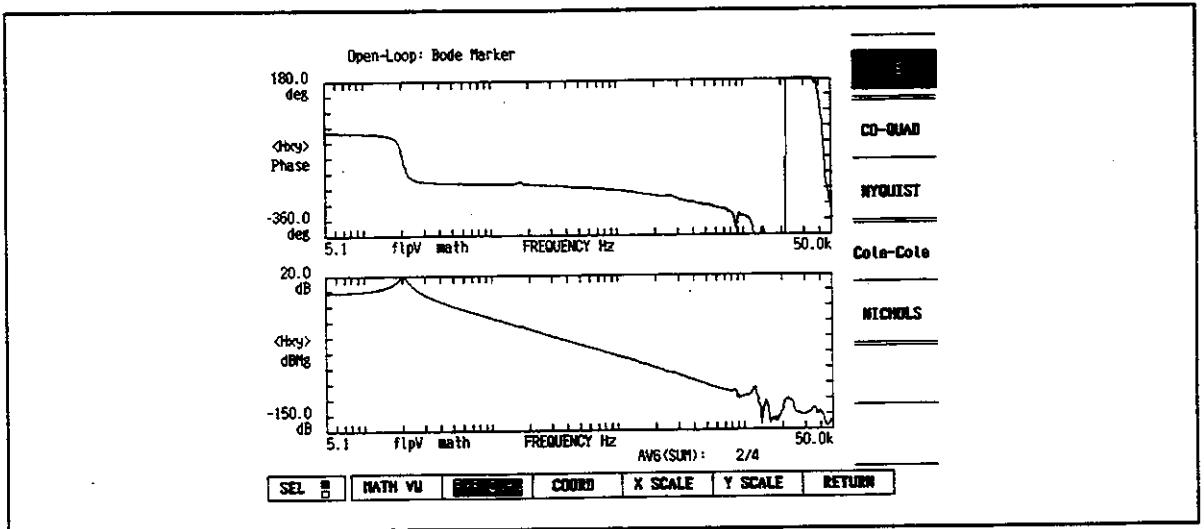



- (2) With this sequence you can evaluate the Bode marker value.

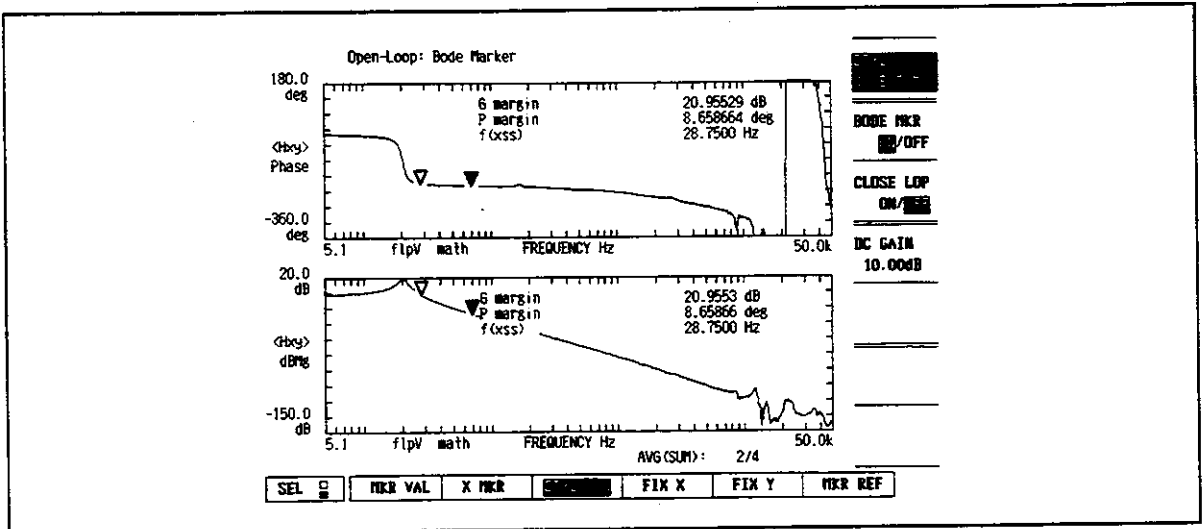

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

(3) You can display a Nichols diagram by pressing the following keys:

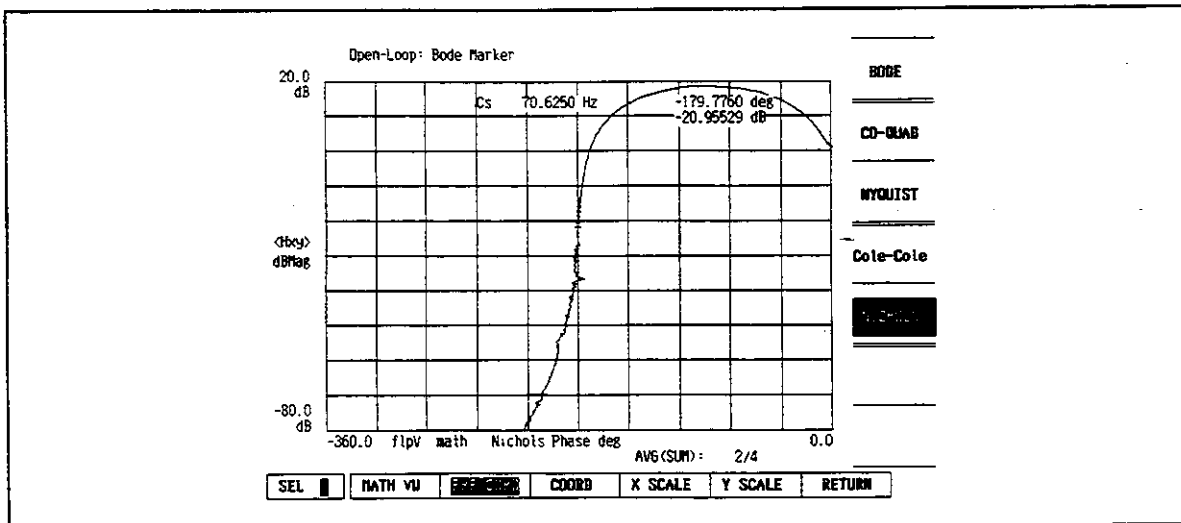

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

List of the markers menus for the R9211 series in the SPECTRUM and TIME-FREQ modes

MODE	MEAS	SPECTRUM	TIME-FREQ			
MKR						
SEL	MKR VAL	X MKR		FIX X	FIX Y	MKR REF
	MKR OFF	X MARKER DO ESTIM		X FIXED CENTER	Y FIXED CENTER	SET REF 1
	SINGLE X	PK MKR (OFF)		X FIXED RIGHT	Y FIXED UPPER	RCL REF 3
	X1 Y1	BAND MKR (OFF)		X FIXED LEFT	Y FIXED LOWER	
	X2 Y2	HARMONIC (OFF)		X FIXED WIDTH	Y FIXED WIDTH	DEL REF 2
	X1 Y1					
	X2 Y2					
	X MKR	SIDEBAND (OFF)				
	Y1 Y2					CURSOR SEL/ALL
	Y1 ΔY	REAL TIME ON/OFF				SEL to OTHER

<p>In case of time data display</p> <p>PK MKR (OFF)</p> <p>BAND MKR (OFF)</p> <p>PULSE PAR (OFF)</p> <p>_____</p> <p>_____</p>	<p>In case of spectrum display</p> <p>PK MKR (OFF)</p> <p>BAND MKR (OFF)</p> <p>HARMONIC ON/OFF</p> <p>SIDEBAND ON/OFF</p> <p>_____</p>	<p>In case of cross spectrum display</p> <p>PK MKR (OFF)</p> <p>_____</p> <p>_____</p>	<p>In case of T-F analysis results display</p> <p>PK MKR (OFF)</p> <p>BAND MKR (OFF)</p> <p>DAMP PWR ON/OFF</p> <p>_____</p>
PULSE PAR OFF	BAND MKR OFF	PK MKR OFF	SIDEBAND ON/OFF
RISE TIME	PKPK	PKPK	CARRIER 4.00kHz
FALL TIME	RMS	NEXT RIGHT PK	MOD FREQ 100.00kHz
PULSE WIDTH		NEXT LEFT PK	kHz
		NEXT RIGHT MIN	Hz
		NEXT LEFT MIN	mHz
RETURN	RETURN	RETURN	RETURN

FUND FREQ 2.00kHz	BAND MKR OFF	PK MKR OFF
	PK	SINGLE PK
	OVERALL	NEXT RIGHT PK
	MEAN	NEXT LEFT PK
	VARIANCE	
RETURN	RETURN	RETURN

4. MAJOR EXAMPLES OF SEARCH MARKER SETTING

List of the markers menu in the WAVEFORM mode for the R9211 series

MODE	MEAS	WAVE FORM			
MKR	When FUNC is set to TIME				
SEL	MKR UAL	X MKR	FIX X	FIX Y	MKR REF
	MKR OFF	X MARKER DO ESTIM	X FIXED CENTER	Y FIXED CENTER	SET REF 1
	SINGLE X	PK MKR (OFF)	X FIXED RIGHT	Y FIXED UPPER	RCL REF 3
	X1 Y1	BAND MKR (OFF)	X FIXED LEFT	Y FIXED LOWER	
	X2 Y2	PULSE PAR (OFF)	X FIXED WIDTH	Y FIXED WIDTH	DEL REF 2
	X1 Y1				
	X2 ΔY				
	X MKR				
	Y1 Y2				CURSOR SEL/ALL
	Y1 ΔY	REAL TIME ON/OFF			SEL to OTHER

When FUNC is set to TIME		When FUNC is set to AUTOCORR or CROSS-CORR		When FUNC is set to HIST	
PK MKR (OFF)		PK MKR (OFF)		PK MKR (OFF)	
BAND MKR (OFF)		BAND MKR (OFF)			
PULSE PAR (OFF)		DAMP PWR ON/OFF			
PULSE PAR OFF	BAND MKR OFF	PK MKR OFF	BAND MKR OFF	PK MKR OFF	PK MKR OFF
RISE TIME	PKPK	PKPK	PK	SINGLE PK	SINGLE PK
FALL TIME	RMS	NEXT RIGHT PK	OVERALL	NEXT RIGHT PK	NEXT RIGHT PK
PULSE WIDTH		NEXT LEFT PK	MEAN	NEXT LEFT PK	NEXT LEFT PK
		NEXT RIGHT MIN	VARIANCE	NEXT RIGHT MIN	
		NEXT LEFT MIN		NEXT LEFT MIN	
RETURN	RETURN	RETURN	RETURN	RETURN	RETURN

CHAPTER 11

MATHEMATICAL OPERATIONS PROCEDURES

This chapter describes the different types of mathematical operations and explains how to use them. Concrete procedures are given as examples.

CONTENTS

1. MATHEMATICAL OPERATIONS	11-2
The Different Types of Mathematical Operations	11-3
Caution on Engineering Unit setting for Operation Result	11-4
Classification of the Mathematical Operations	11-5
Restrictions on the Mathematical Operations	11-6
2. BASIC PROCEDURES	11-9
Basic Operation Procedure (Example of "X + Y")	11-9
3. EXAMPLES OF MATHEMATICAL OPERATIONS	11-11
$1/(j\omega)^2$	11-11
Real-Time Operation	11-13
Display of Setting Condition for Operation Result	11-14
Rotation	11-15
Cepstrum and Liftering	11-17
Conversion of a Feedback Loop System	11-22
InCOP (COP, SNR)	11-25
to CMP TIME	11-28
to TIME/to FREQ	11-31
BANDPASS (BANDSTOP)	11-34
TR MATH (Trace MATH)	11-36

1. MATHEMATICAL OPERATIONS

The R9211 can execute the four basic arithmetic operations (+, -, ×, ÷), as well as integrations, differentiations, Fourier transformations, and so on, on the measurement data. This constitutes what we call the mathematical (MATH) operations.

This chapter provides with easy-to-understand information about the mathematical operations that can be performed with the **MATH** key.

(These mathematical operations can be executed only if the MATH MENU has been previously selected with the **PRESET** key.)

1. MATHEMATICAL OPERATIONS

■ The Different Types of Mathematical Operations

Table 11-1 Mathematical Operations Types (1)

Operator type		Measurement modes which can be selected			Function
Group	Operator	WAVE	SPECT TF	FRF SERVO	
$j\omega$	$j\omega$ $(j\omega)^2$ $1/j\omega$ $(1/j\omega)^2$ ROTATION FREQ SHIFT		<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>	Executes differentiation ($j\omega$), double differentiation ($(j\omega)^2$), integration ($1/j\omega$), and double integration $(1/j\omega)^2$ on frequency domain data. The operation destination domain is set in advance with $j\omega$ RANGE. Shifts frequency domain data from the frequency band specified as the source band to the band specified as destination band.
CEPSTRUM	CEPSTRUM LIFTERING		<input type="radio"/> <input type="radio"/>		Computes the cepstrum of a power spectrum. (cf. Note) Obtains frequency-domain data (liftered spectrum) by liftering the cepstrum data.
FRF	$H/(1+H)$ $H/(1+G\cdot H)$ $H/(1-H)$ $H/(1-G\cdot H)$ EQUALIZE SNR COP InCOP			<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>	For feedback control systems, computes the closed loop's FRF from the open loop's FRF when the feed back block has a transfer function of 1 : $H/(1+H)$, or of $G : H/(1+G\cdot H)$. For feed-back control systems, computes the open loop's FRF from the close loop's FRF when the feed-back block has a transfer function of 1 : $H/(1-H)$ or of $G : H/(1-G\cdot H)$. Equalizes FRF data using correction data. Computes, in the FRF mode the signal-to-noise ratio (SNR) according to the coherence function. Extracts the signal components using the coherence function and the specified power spectrum, in the FRF mode. Extracts the noise components using the coherence function and the specified power spectrum, in the FRF mode.
1 (f) MATH	$X+Y$ $X-Y$ $X\cdot Y$ X/Y CNST +X CNST -X NEGATE $1/X$ COMPLEX CONJUGATE	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>	Performs one of the 4 basic arithmetic operations on 2 arbitrary data series (linear Y axis data are used in the computations) at the condition that they are same X axis data (same domain and same range). Adds to or multiplies by a specified constant (linear amplitude) arbitrary data. Multiplies data by -1. Inverses data. Computes the complex conjugate of data.
DOMAIN	to CMP TIME (HILBERT) to TIME(IFFT) to FREQ(FFT)	<input type="radio"/> <input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/> <input type="radio"/>	Estimates a pre-envelope (envelope) through Hilbert transformation. Transfers frequency domain data to the time domain through IFFT (Inverse Fast Fourier Transform). Transfers time domain data to the frequency domain through FFT.
MOD f	BANDPASS : FILTERING BANDSTOP : FILTERING		<input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/>	Keeps only the frequency domain data within a specified frequency band. Keeps only the frequency domain data outside a specified frequency band.

Note : The logarithmic power spectrum is processed through FFT to obtain the time-domain data which compose the cepstrum. Thus, if low-level spectrum components are enlarged by a logarithmic representation in the frequency domain, these characteristics can be obtained in the time domain as well.

Liftering is the procedure by which FFT is executed on the necessary portion of the cepstrum data to restore it to the frequency domain.

1. MATHEMATICAL OPERATIONS**Table 11-2 Mathematical Operations Types (2)**

Group	Operator	Function
TR	SMOOTHING	Smooths linear frequency power spectrum data.
MATH	CUMULATION	Adds data together, (used for probability density functions or t-f analysis data).
	DIFFERENT	Differentiates time domain data.
	INTEGRATE	Integrates time domain data.
	INT ZERO	Integrates time domain data assuming that the start point is zero.
	TREND RMV	Removes the waveform trends.

■ Caution on Engineering Unit Setting for Operation Result

When execute the following operations, Engineering System Transform is not performed.

- $1/X$
- $X+Y$
- $X-Y$
- $X \times Y$
- $X \div Y$
- EQUALIZE

1. MATHEMATICAL OPERATIONS

Classification of the Mathematical Operations

Table 11-3 Classification of the Mathematical Operations

Two operands operations.	
X + Y X - Y X * Y X / Y EQUALIZE H/(1 + G*H) H/(1 - G*H) COP InCOP	The first operand is specified with the OPERAND key. The second operand specification is validated when the operator is selected.
One operand operations.	
NEGATE 1/X COMPLEX CONJUGATE SNR H/(1 + H) H/(1 - H) to CMP TIME to TIME to FREQ	The operand is specified with the OPERAND key.
One operand operations with parameters.	
CNST + X CNST * X $j\omega(j\omega)^2, 1/(j\omega), 1/(j\omega)^2$ ROTATION FREQ SHIFT BANDPASS BANDSTOP CEPSTRUM LIFTERING	The operand is specified with the OPERAND key. The other parameters specification is validated at the time the operator is selected and must be set in advance.
TR MATH mode operations.	
SMOOTHING CUMULATION DIFFERENT INTEGRATE INT ZERO TREND RMV	"SMOOTHING" requires that "TERMS" be set. Others do not require it. They are activated (deactivated) for the data on the screen by selecting on (off).

1. MATHEMATICAL OPERATIONS

■ Restrictions on the Mathematical Operations

There are constraints on the waveforms that can be input as operand for certain operations. Restrictions on the operations except the TR MATH functions are described in points (1) to (3) and the restrictions on the TR MATH functions are described in point (4).

(1) Restrictions common to all operation functions

T-F analysis results
 Operation Results
 Orbit
 Zoomed time Waveform } No operation enabled.

No operation is enabled if either the operand or the operation result is a complex series of more than 1024.

(2) Restrictions on the four basic arithmetic operations

Table 11-4 lists the possible combinations of the 4 basic arithmetic, 2 operands, operations. (These operations are disabled for the coherence function.)

Table 11-4 Possible Combinations of the 4 Basic Arithmetic Operations

	Xx	Rxx	Rxy	Imp	Step	Px	Sx	Gxx	Gxy	Hxy
Xx (Time waveform)	○	×	×	×	×	×	×	×	×	×
Rxx (Autocorrelation function)	×	○	○	×	×	×	×	×	×	×
Rxy (Cross-correlation function)	×	○	○	×	×	×	×	×	×	×
Imp (Impulse response function)	×	×	×	○	○	×	×	×	×	×
Step (Step response function)	×	×	×	○	○	×	×	×	×	×
Px (Probability density function)	×	×	×	×	×	○	×	×	×	×
Sx (Complex spectrum)	×	×	×	×	×	×	○	○	×	A
Gxx (Power spectrum)	×	×	×	×	×	×	○	○	×	A
Gxy (Cross-spectrum)	×	×	×	×	×	×	×	×	○	×
Hxy (Frequency response function)	×	×	×	×	×	×	×	B	B	○

- : X+Y, X-Y, X*Y, and X/Y are enabled.
- A : Only X*Y and X/Y are enabled.
- B : Only X*Y is enabled.
- ×

CAUTION !

- No operation is enabled if the sizes or the abscissa axis scales are different between the operands.
- No operation is enabled on servo data if the sweep methods are different.

1. MATHEMATICAL OPERATIONS

(3) Other mathematical operations

COP and InCOP can be executed only on the combination of a power spectrum and a coherence function.

For other operations, see Table 11-5.

Table 11-5 Enabled Mathematical Operations Versus Data Types

Enabled mathematical operations versus data types											
	Xx	Gxx	Rxy	Imp	Step	Px	Sx	Gxx	Gxy	Hxy	Coh
CNST + X	○	×	×	○	○	○	○	○	○	○	×
CNST * X	○	×	×	○	○	○	○	○	○	○	×
NEGATE	○	×	×	○	○	○	○	○	○	○	×
1/X	○	×	×	○	○	○	○	○	○	○	×
CMP CNJ	○	×	×	○	○	○	○	○	○	○	×
to FREQ	○	×	×	×	×	×	×	×	×	×	×
to TIME	×	×	×	×	×	×	○	×	×	○	×
to CMPTM	×	×	×	×	×	×	○	×	×	○	×
$j\omega$ related operations	×	×	×	×	×	×	○	○	×	○	×
ROTATION	×	×	×	×	×	×	○	×	×	○	×
frq SHFT	×	×	×	×	×	×	○	○	×	○	×
to QUFR	×	×	×	×	×	×	×	○	×	×	×
LIFT	×	×	×	×	×	×	×	×	×	×	×
$H/(1+H)$	×	×	×	×	×	×	×	×	×	○	×
$H/(1+GH)$	×	×	×	×	×	×	×	×	×	○	×
$H/(1-H)$	×	×	×	×	×	×	×	×	×	○	×
$H/(1-GH)$	×	×	×	×	×	×	×	×	×	○	×
EQUALIZE	×	×	×	×	×	×	×	×	×	○	×
SNR	×	×	×	×	×	×	×	×	×	×	○
BANDPASS	×	×	×	×	×	×	○	○	×	○	×
BANDSTOP	×	×	×	×	×	×	○	○	×	○	×

*1

*2

*2

*3

*4

*5

*6

*7

*7

*7

1. MATHEMATICAL OPERATIONS

Under the following conditions, the operations marked with a number from *1 to *7 cannot be executed even on the data marked with ○.

- *1 : In the log or octave analysis mode
 - : When included in an operations sequence, the operation registered next to this one cannot be executed.
- *2 : Same as *1.
 - : The data is zoomed and the start frequency is not 0Hz.
 - : When a pre-envelope is estimated (in the case when the operand is not a frequency response function), the window applied to the operand is a flat pass, a force, or a response window. (The operation result is forced to 0.)
- *3 : More than 2 operations such as differentiation, integration, double differentiation, or double integration, cannot be used in an operations combination.
- *4 : The abscissa axis is not linear. (Servo, T-F analysis are disabled.)
- *5 : The abscissa axis is not linear.
 - : Zoomed data.
 - : Operation combination (The only possible situation is when the first operator is "to QUFR" and the second operator is "LIFT".)
- *6 : The operand is Cx (cepstrum) only. However, since an operation result cannot be set as operand, use an operations combination :
 - First operator: to QUFR
 - Second operator: LIFT
- *7 : The operation between two data (frequency response functions) cannot be executed in the following cases:
 - When the sizes are different.
 - When the abscissa scales are different.
 - When the sweep methods (servo mode) are different.

(4) Restrictions on TRACE MATH functions


CUMULATION	Enabled for all data.
SMOOTHING TREND RMV	Disabled if the abscissa axis scale is not linear.
DIFFERENT INTEGRATE INT ZERO	Enabled only for time waveforms. (A pre-envelope cannot be estimated.)

2. BASIC PROCEDURES

The basic procedure common to all operations except the TR MATH procedure is described below. About the TR MATH operation procedure, see "■ TR MATH". The operation is executed on the data displayed on the selected screen.

■ Basic Operation Procedure (Example of "X + Y")


1 Specify an operand (unique operand or first operand)

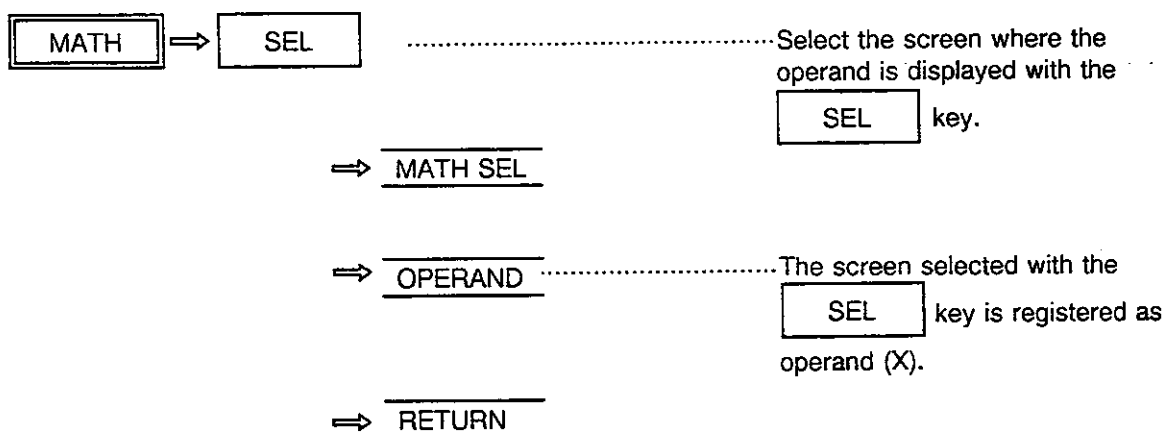


CAUTION !

If two operands are required for the desired operation (for example, for "X + Y": X and Y are the required operands), you must register the first operand as has been described above (OPERAND key), next, you must select the second operand's screen with the SEL key, finally you must step to point 2 of this procedure.

2 Select an operator.

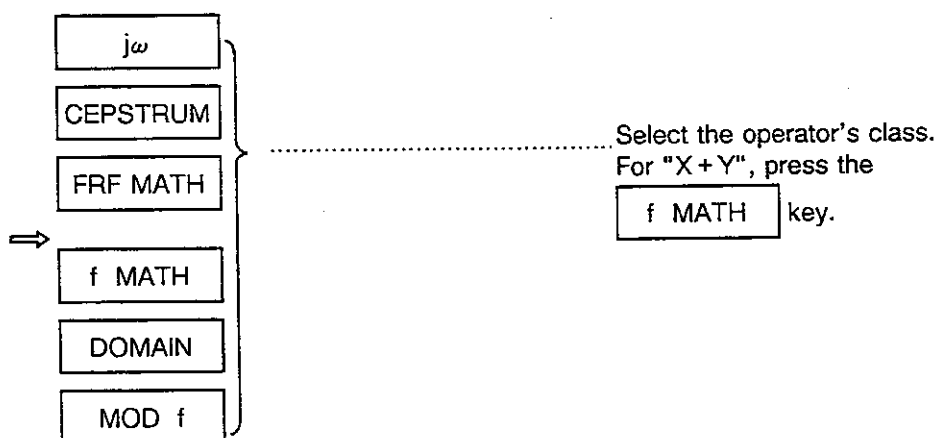


2. BASIC PROCEDURES

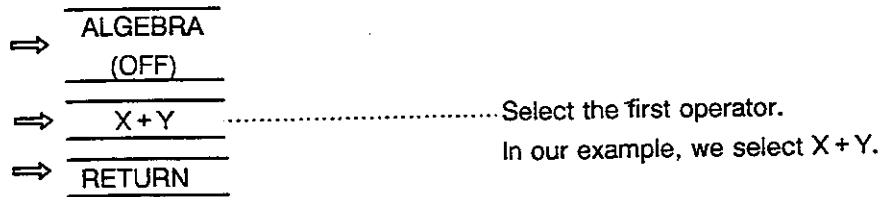

Other parameters may be required depending on the operator type. See concrete setup examples.

3 Register the selected operator.

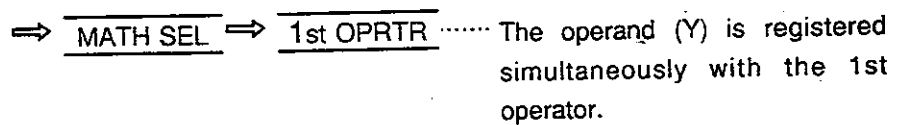


CAUTION !

For an operations combination, select the second operand and press the 2nd OPRTR key, or select the third operand, and press the 3rd OPRTR key.

If some operand is required, display the operand data in advance and select the data with the SEL key, before registering the corresponding operator.



4 Execute the selected operation.



CAUTION !

If the selected operation cannot be executed, an error message is displayed. For details on the error messages, see the Appendix.

5 Display the operation results.



3. EXAMPLES OF MATHEMATICAL OPERATIONS

Major operations examples are described below.

■ $1/(j\omega)^2$


A double integration will be executed on frequency domain data (spectrum or FRF data). For example, a displacement can be estimated through a double integration of the acceleration output from an acceleration sensor. In this example, we describe how to estimate the power spectrum of a displacement from the power spectrum of the corresponding acceleration.

1

Specify the operand.

Input the output signal of the acceleration sensor to channel A.
Display this data.

VIEW ⇒ TYPE ⇒ DUAL Use the double screen configuration.

⇒ SEL 

⇒ INST VW ⇒ CH-A SPECT Display the operand on the upper screen.

MATH ⇒ MATH SEL

⇒ OPERAND

Register the operand. The operand must have been displayed on the screen, and the screen selected.

2

Select an operator.

⇒ $j\omega$ ⇒ $j\omega$ RANGE

⇒ THRESHOLD
-100dBV

⇒ LOWER f
25Hz

⇒ UPPER f
10kHz

To avoid noise influence, execute the operation only on data whose level is higher than a specified level threshold.

Specify a frequency range (band pass filter) for the operation. In this example, we chose to perform the operation over the whole analysis domain.



3. EXAMPLES OF MATHEMATICAL OPERATIONS

⇒ RETURN

⇒ j ω ?

Select the operator.

⇒ (1/j ω)²

A double integration is chosen in this example.

⇒ RETURN

3

Register the operator.

⇒ MATH SEL

⇒ 1st OPRTR

Register $(1/j\omega)^2$ as 1st operator.

4

Execute the operation.

⇒ DO MATH


Execute the operation.

MT.mg = MATH completed!

is displayed. (When REAL TIME is OFF)

5

Display the operation result on the lower screen.

VIEW ⇒ **SEL** 

⇒ **NEXT**

⇒ **MATH VW** ⇒ RESULT
ARRAY

The result is displayed.

⇒ **Y SCALE** ⇒ Y AUTO
SCALE



3. EXAMPLES OF MATHEMATICAL OPERATIONS

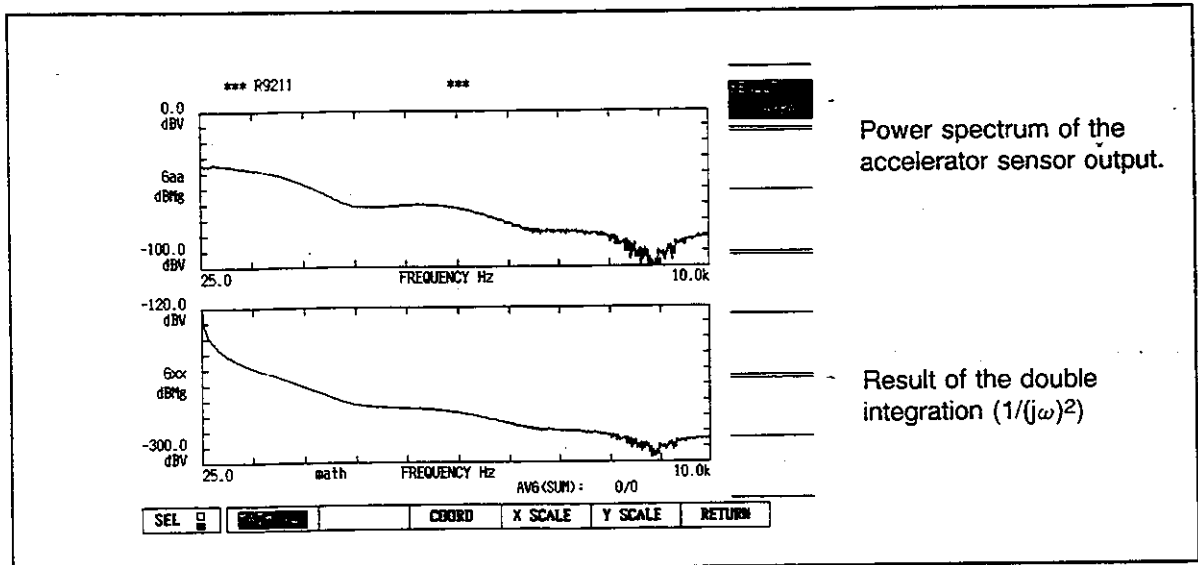


Figure 11-1 $1/(j\omega)^2$


Real-Time Operation

TR MATH performs the real-time processing.


Operations other than this is usually executed only when the DO MATH key is pressed.

This explains how to perform a real-time processing about operations other than TR MATH.

1 Real Time goes to ON.



2 Execute operation.




This procedure starts a real-time processing.

When the execution is completed, MT.mg = MATH completed! is not displayed.

During the execution of real-time operation, RTM is displayed on the right-down of the screen.

3 Interrupt real-time operation.



3. EXAMPLES OF MATHEMATICAL OPERATIONS

The message of MT.er = Real-Time MATH interrupted! is displayed to interrupt.

CAUTION !

In the following case, the real-time operation is forced to be interrupted.


Change of setting operation	Change of setting condition
OPERAND setting	MODE change
1st OPRTR setting	FUNCTION change
2nd OPRTR setting	ACTIVE CH change
3rd OPRTR setting	RANGE change
	SENS (Sensitivity range) change
	SWEEP change
	A/D input change

* SAMPL CLK available to change INT/EXT


■ Display of Setting Condition for Operation Result

The operator and the operated data information about the operation result can be displayed on the message box of the left-upper side of the screen. The procedure is shown as below.

1 Display the first operation information.



2 Display the second operation information.



3 The third operation information is displayed, the same as 2nd.

CAUTION !

When the operation result to be displayed is a regenerative data from floppy, the operation information can not be displayed.

3. EXAMPLES OF MATHEMATICAL OPERATIONS


Rotation

A specified time delay is compensated on frequency domain data (spectrum or FRF data) by rotation.

The procedure for compensating a $-10\mu s$ delay on some FRF data is described below. FRF data are measured, then the phase of these FRF data is displayed on the upper screen of a double screen configuration.


1

Specify the operand.

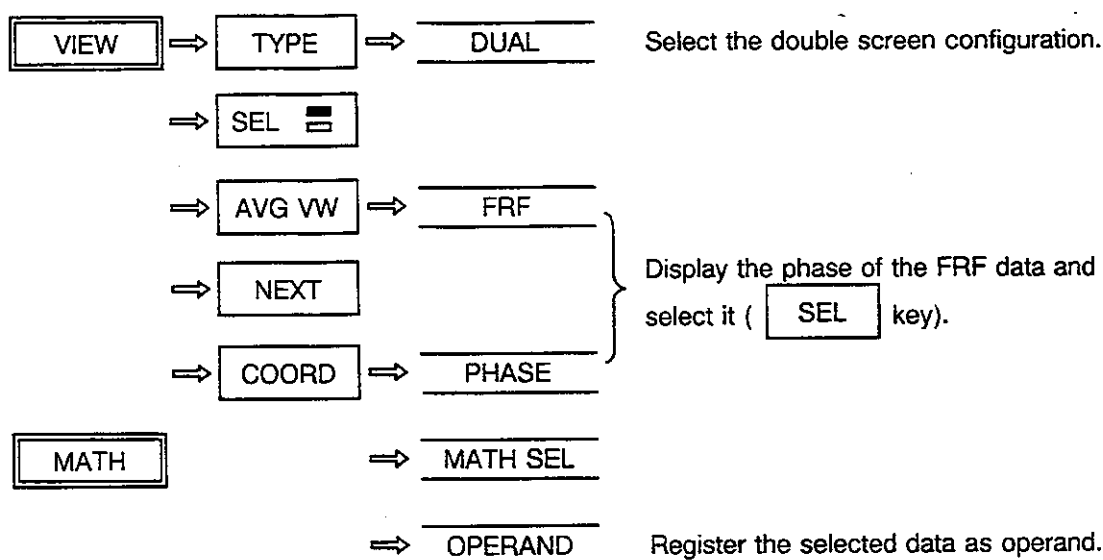

2

Select the operator.

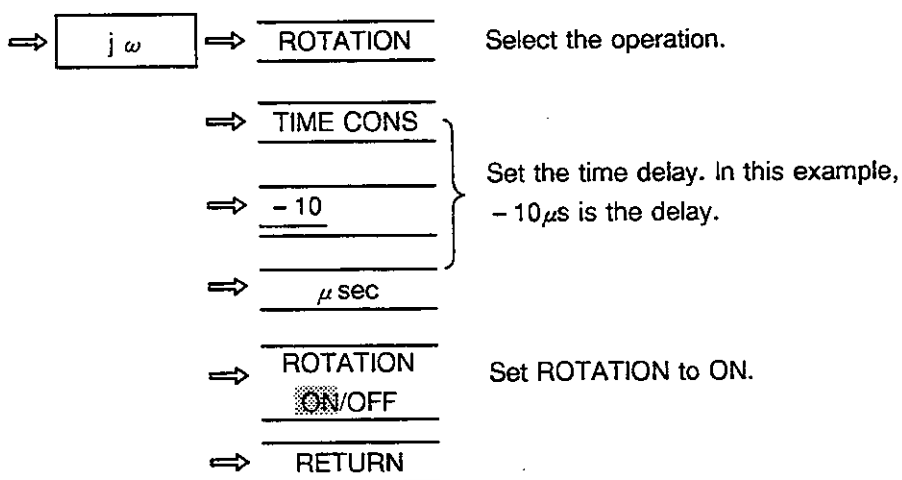

3. EXAMPLES OF MATHEMATICAL OPERATIONS

■ Cepstrum and Liftering

The cepstrum operation is performed to estimate a cepstrum from a power spectrum. The cepstrum is obtained by performing an inverse FFT on the logarithm of the power spectrum. The obtained data belongs to the quefrequency domain (very similar to the time domain). This operation is close to an autocorrelation computation.

ADVICE

In the Quefrequency domain, low-level spectrum components are enlarged and their characteristics can be pointed out, because the logarithm of the data in the frequency domain is used.


LIFTERING is the procedure for transporting back to the frequency domain, a specified portion of the cepstrum in the quefrequency domain (similar to the time domain). The spectrum obtained through liftering is called liftered spectrum.

In the following example, is described the procedure for estimating the cepstrum and liftered spectrum of a voice signal recorded through a microphone.

1

Specify an operand.

Input the microphone signal to channel A and acquire the data with the arm function. Display the received data on the top screen and its power spectrum on the middle screen in the triple screen configuration.

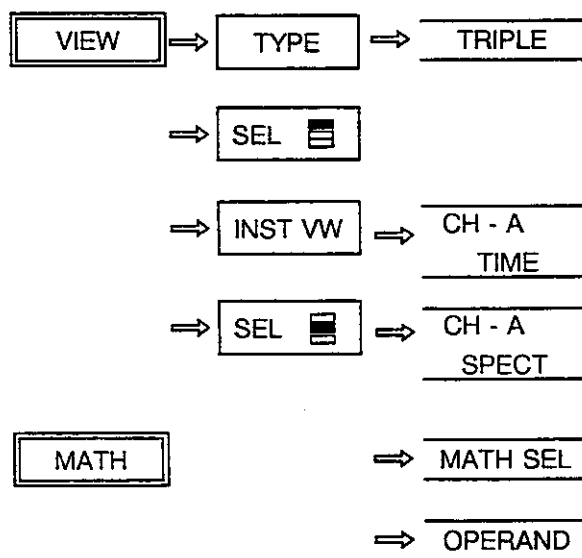

Select the triple screen configuration.

Register the power spectrum as the operand.



3. EXAMPLES OF MATHEMATICAL OPERATIONS

2

Select an operator.

⇒ CEPSTRUM ⇒ THRESHOLD

⇒ THRESHOLD
- 135dBV

⇒ LOWER f
25Hz

⇒ UPPER f
10kHz

⇒ RETURN

Here we specify that we want to estimate the cepstrum over the entire frequency range.

⇒ CEPSTRUM
ON/OFF

Set CEPSTRUM to ON.

3

Register the operator.

⇒ MATH SEL

⇒ 1st OPRTR

Register the cepstrum operation.

4

Execute the operation.

⇒ DO MATH

MT.mg = MATH completed!

is displayed. (When REAL TIME is OFF)



3. EXAMPLES OF MATHEMATICAL OPERATIONS

5

Display the operation result on the lower screen.


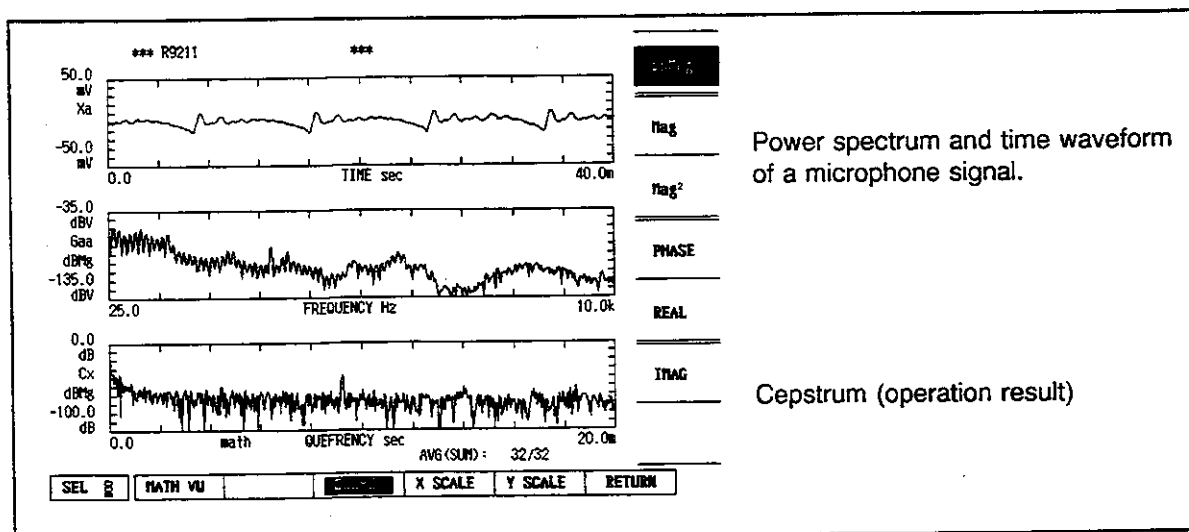


Figure 11-3 Cepstrum

The cepstrum waveform obtained above is liltered to estimate the liltered spectrum. To obtain the liltered spectrum, add the liltering operation to the above procedure (combination operation).

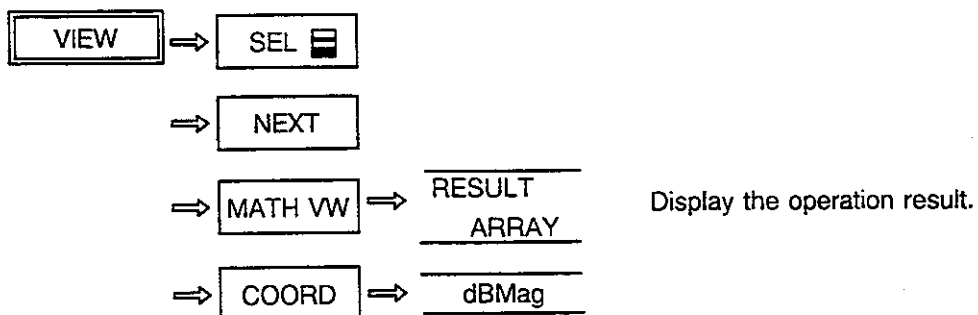


3. EXAMPLES OF MATHEMATICAL OPERATIONS


6 Select an operator.

CAUTION !


Select the middle screen with the **SEL** key (power spectrum display screen) in advance. (An operator cannot be registered if the data selected as operand correspond to the result of an other operation)

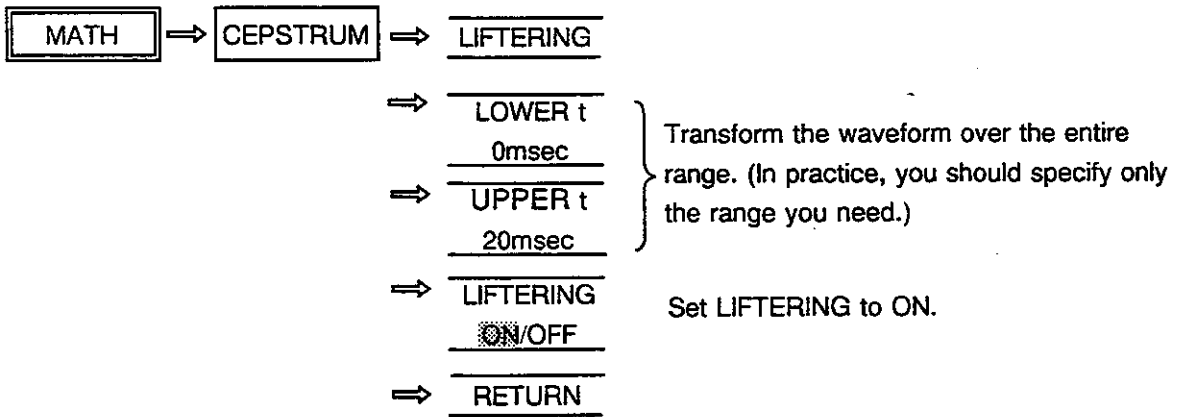

7 Register the operator.

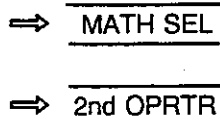

8 Execute the operation.

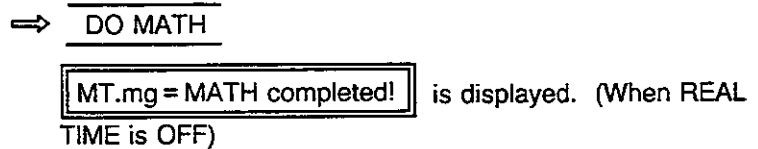

3. EXAMPLES OF MATHEMATICAL OPERATIONS

9

The operation result is displayed on the lower screen.

(Display of the operation result has been specified.)

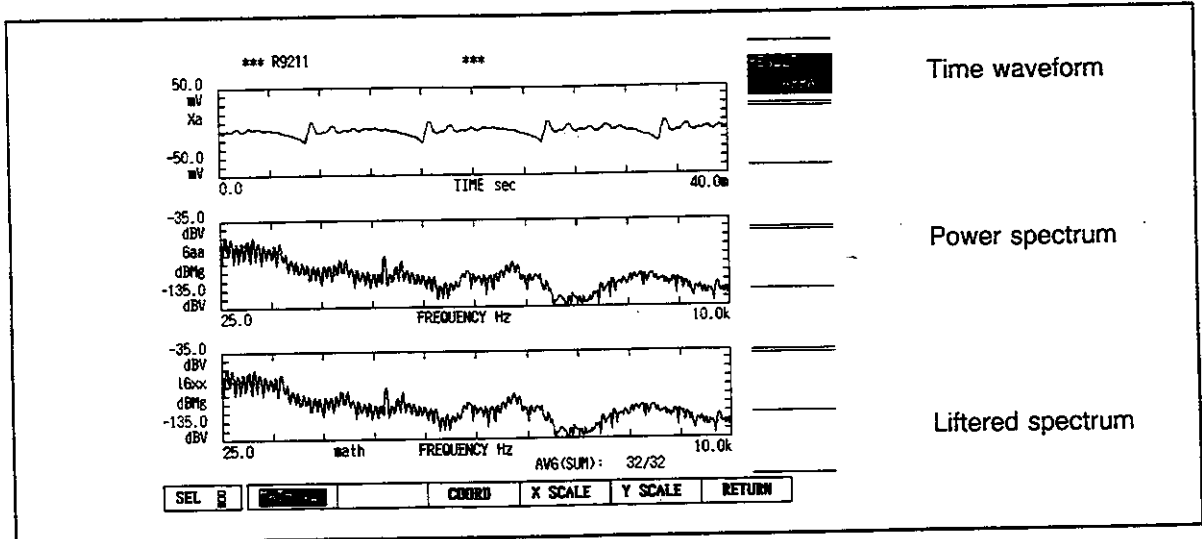



Figure 11-4 Lifiered Spectrum

Eventually, the lifiered spectrum is equal to the original spectrum (because the cepstrum, as well as the lifiered spectrum were estimated over the entire range)

3. EXAMPLES OF MATHEMATICAL OPERATIONS

■ Conversion of a Feedback Loop System

This operation is performed to convert open loop characteristics (FRF data) to closed loop characteristics (FRF data) of feedback loop control systems, and the other way around. The following block diagram shows the general concept of feedback loop control.

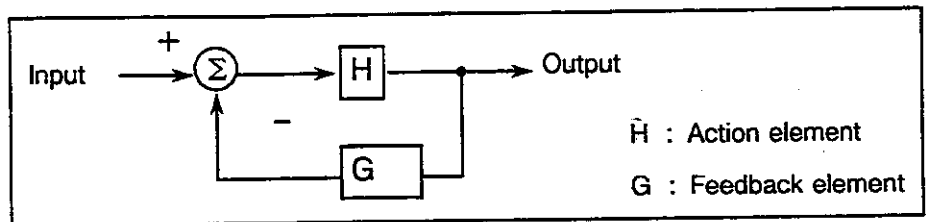

Hopen, the open loop characteristic, is defined as $H_{open} = G \cdot H$. This characteristic is essential in feedback loop control. The input/output characteristic of such a system is the closed loop characteristic, Hclose. The relationships between these characteristics are expressed as follows:

$$H_{close} = \frac{H}{(1 + G \cdot H)} \dots\dots (A)$$

$$H = \frac{H_{close}}{(1 - G \cdot H_{close})} \dots (B)$$

If the feedback element, G, is equal to 1, the above equations (A) and (B) become:

$$H_{close} = \frac{H_{open}}{(1 + H_{open})} \dots\dots (C)$$

$$H_{open} = \frac{H_{close}}{(1 - H_{close})} \dots\dots (D)$$


The R9211 transforms the FRF data according to the above equations. We are now going to describe the procedure to follow in order to estimate the closed loop characteristics of a feedback loop control system knowing the open loop characteristics.

3. EXAMPLES OF MATHEMATICAL OPERATIONS


1

Specify an operand.


Measure the open loop characteristic and display it on the upper screen of the dual screen configuration.

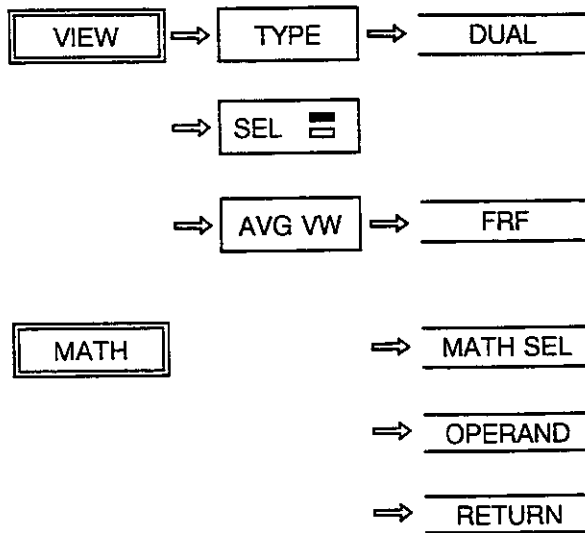

2

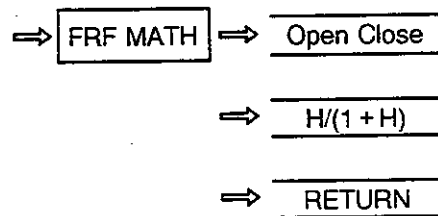Select an operator.

3

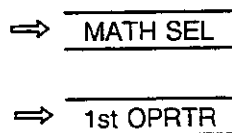Register the operator.

3. EXAMPLES OF MATHEMATICAL OPERATIONS

4 Execute the operation.

⇒ DO MATH

MT.mg = MATH completed! is displayed. (When REAL TIME is OFF)

5 Display the operation result on the lower screen.

VIEW ⇒ SEL 

⇒ NEXT

⇒ MATH VW ⇒ RESULT
ARRAY

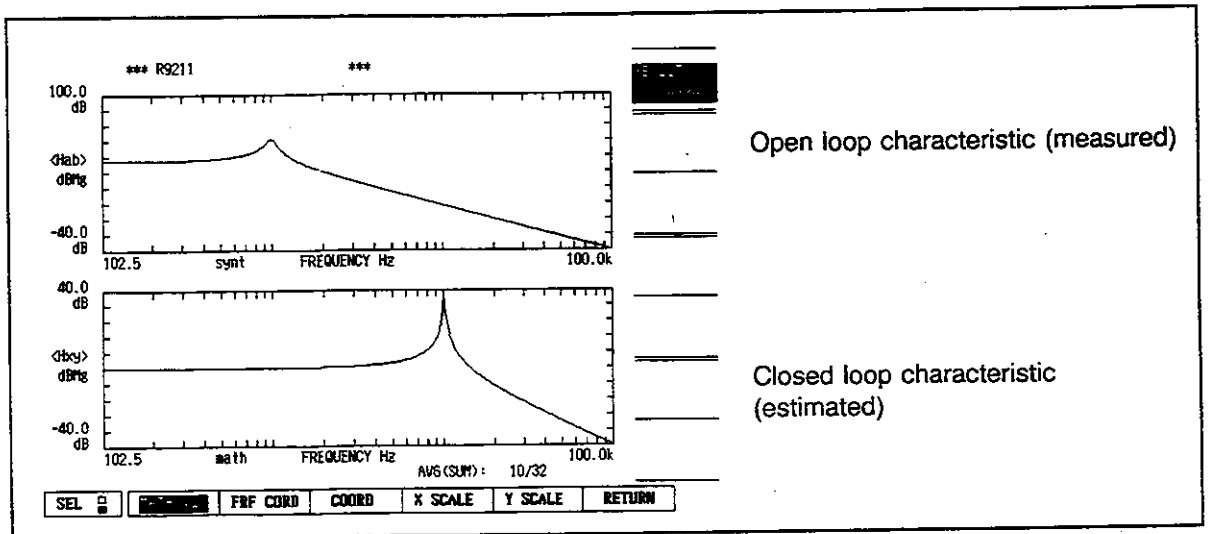


Figure 11-5 Closed Loop Characteristic


ADVICE

When the feedback element G is not equal to 1, display its characteristics on the screen before setting the 1st OPRTR, so that you can register it also. Then, perform the same operations.

3. EXAMPLES OF MATHEMATICAL OPERATIONS

■ InCOP (COP, SNR)

Through this operation, the noise components, contained in the output, can be estimated, according to the coherence function (FRF analysis) and the specified power spectrum. As for the SNR operation, the ratio of the signal components to the noise components is estimated.

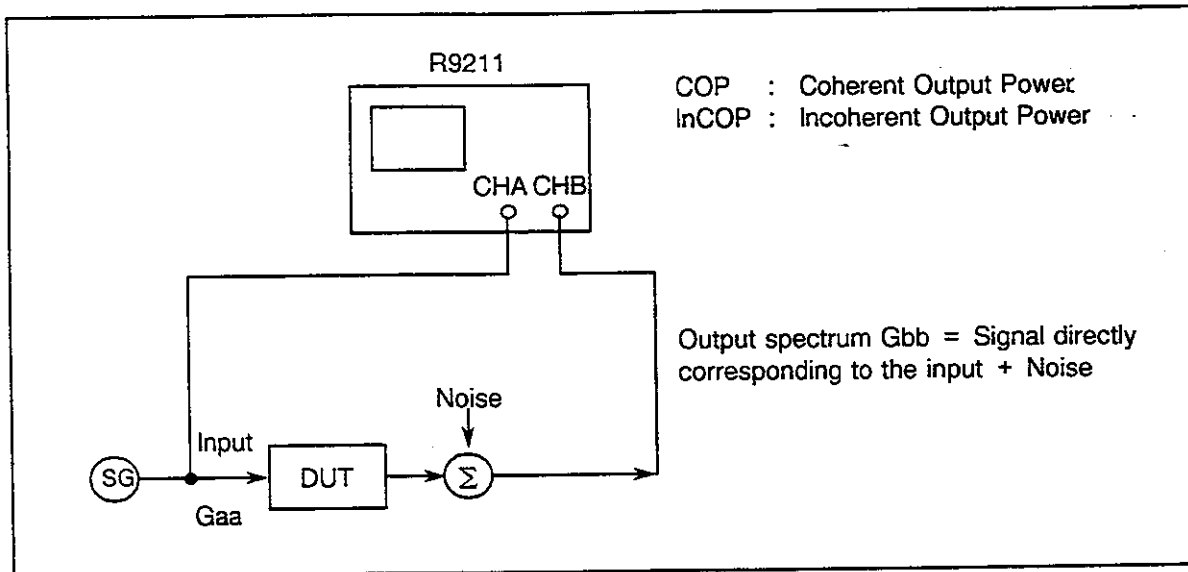

$COP = G_{bb} \cdot \text{Coherence}$ Signal spectrum corresponding to the input
 $InCOP = G_{bb} \cdot (1 - \text{Coherence})$ Noise spectrum

CAUTION !

The power spectrum is not required for the SNR operation.



The procedure to follow in order to obtain the noise components in a notch filter characteristic is described below.

3. EXAMPLES OF MATHEMATICAL OPERATIONS

1


Specify the operand.

Estimate the FRF data of the notch filter, through a FRF measurement. Select the triple screen mode. Display the coherence data on the upper screen and the power spectrum on the middle screen.

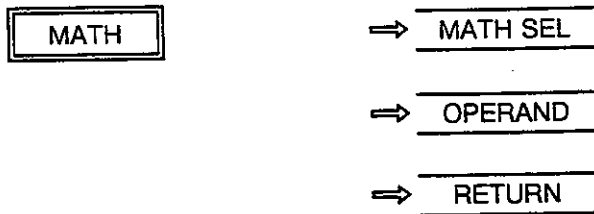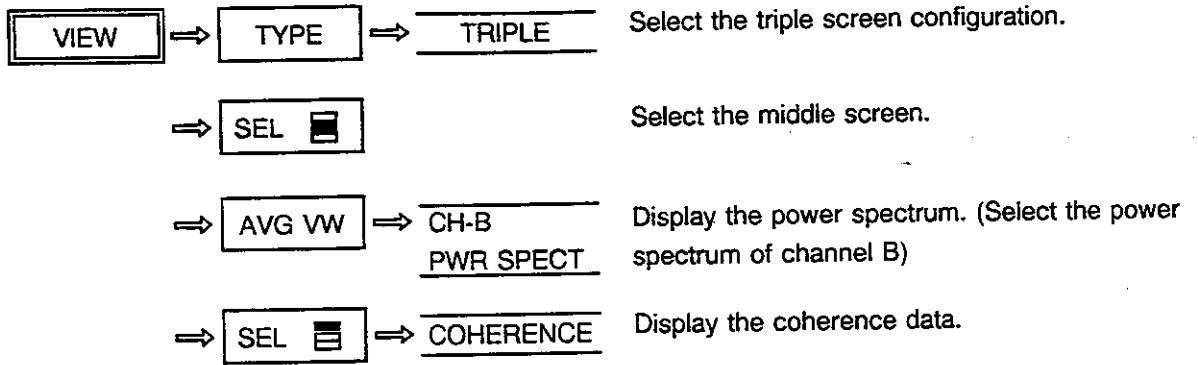


2

Select an operator.

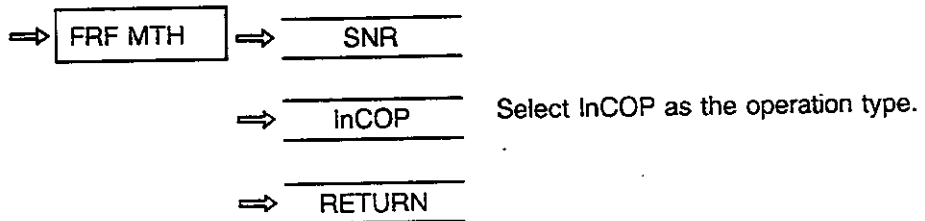

3

Register the operator.

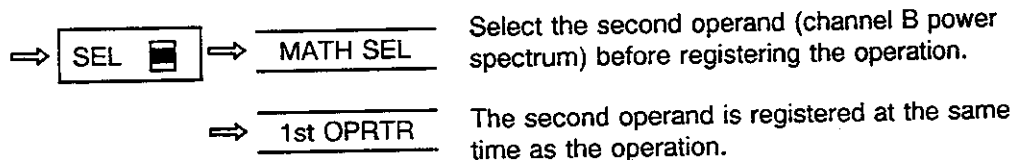

3. EXAMPLES OF MATHEMATICAL OPERATIONS

4

Execute the operation.

⇒ DO MATH Execute the operation.

MT.mg = MATH completed! is displayed. (When REAL TIME is OFF)

5

Display the operation result on the lower screen.

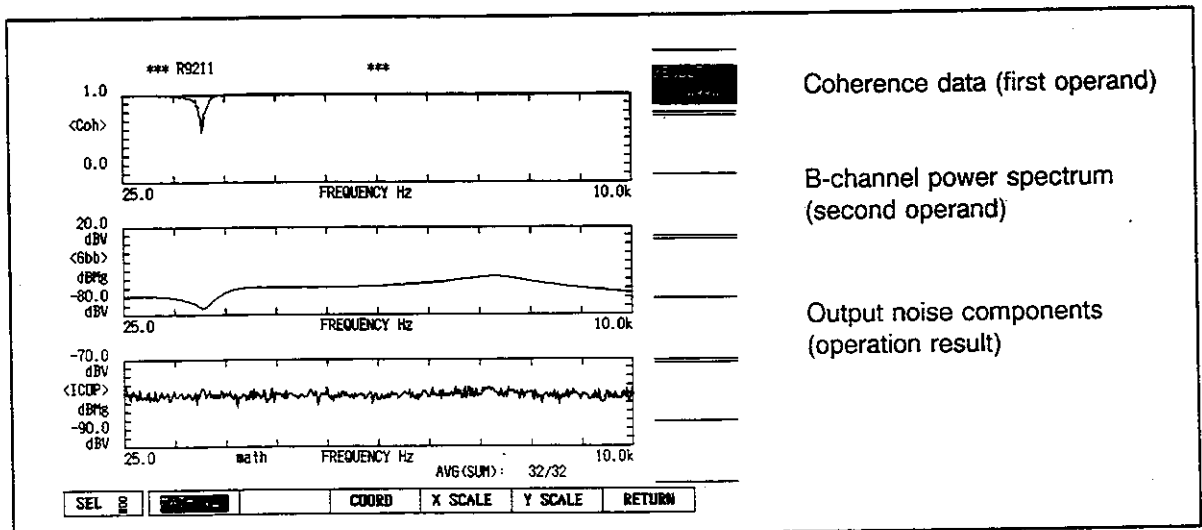
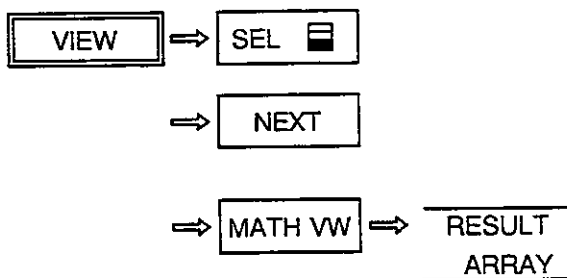


Figure 11-6 Power Spectrum of the Noise Components

3. EXAMPLES OF MATHEMATICAL OPERATIONS

■ to CMP TIME

An Hilbert transformation is performed on a time-series $X(t)$, then the pre-envelope is estimated according to the transformation results as follows:

$$z(t) = X(t) + j\hat{x}(t) \quad (j = \sqrt{-1})$$

The pre-envelope is transformed to the time domain by internally performing an IFFT.

The envelope corresponds to the magnitude of the pre-envelope. Thus, the signal energy distribution can be analyzed .

ADVICE

THEORETICAL BACKGROUND

The Hilbert transform of a real-valued time domain signal $x(t)$ is another real-valued time domain signal, denoted $\hat{x}(t)$, such that $z(t) = x(t) + j\hat{x}(t)$ is an analytic signal. From $z(t)$, one can define a magnitude function, which corresponds to the envelope of the original signal. The Hilbert transform may be mathematically defined in several ways. One of these is as a $(\Pi/2)$ Phase Shift system.

One can show (see the excellent book "Random data, Analysis and Measurement procedures" Julius S. Bendat and Allan G. Piersol, Wiley Interscience edition) that the Hilbert transform consists of passing $x(t)$ through a system which leaves the magnitude of $x(f)$ (Fourier transform of $x(t)$) unchanged, but shifts its phase $\Pi/2$ for positive frequencies and $-\Pi/2$ for negative frequencies.

The procedure followed to obtain the envelope of a voice signal output by a microphone is described below.

CAUTION !

This operation can be performed only on complex spectrum data and FRF data.


The operation result is a time domain data.

3. EXAMPLES OF MATHEMATICAL OPERATIONS




1

Specify the operand.


The signal output from the microphone is triggered and input to channel A. The input data is displayed on the upper screen in the dual screen configuration.



Select the dual screen configuration.




Display the complex spectrum's real part.



Register the operand.

2



Select an operator.



Select an operation.

3

Register the operator.



Register the operation.



3. EXAMPLES OF MATHEMATICAL OPERATIONS

4 Execute the operation.

⇒ DO MATH Execute the operation.

MT.mg = MATH completed! is displayed. (When REAL TIME is OFF)

5 Display the operation result on the lower screen.

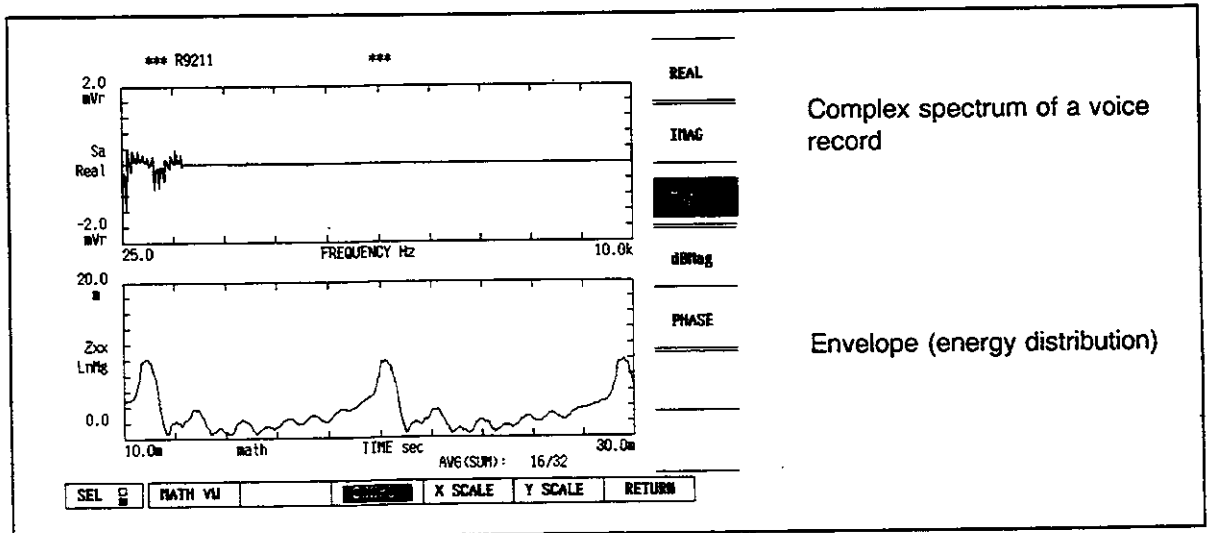
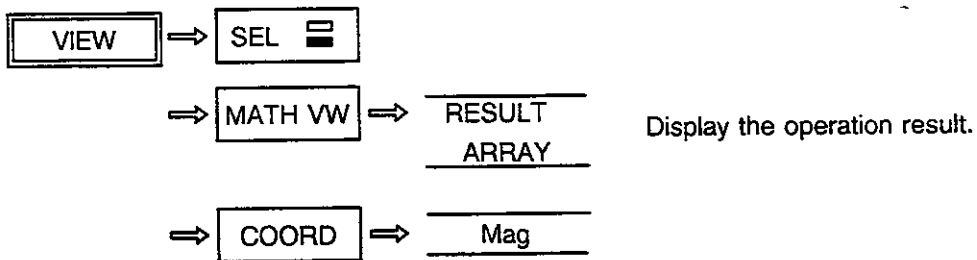


Figure 11-7 Voice Envelope

3. EXAMPLES OF MATHEMATICAL OPERATIONS

■ to TIME/to FREQ

These operations are used to transfer time domain data to the frequency domain through FFT, or frequency domain data to the time domain through IFFT.


ADVICE

These operations are used to convert measurement data of one domain (time or frequency), over which different operations may have been executed, to the other domain. When executing an inverse FFT, the operand must be complex data. To only execute a FFT, you can use the FFT function in the spectrum or T-F mode.

In the following example, a square wave is input to channel A, an integration ($1/j\omega$) is performed on the complex spectrum, and an IFFT is performed on the integration result to transfer it to the time domain.

1


Specify an operand.

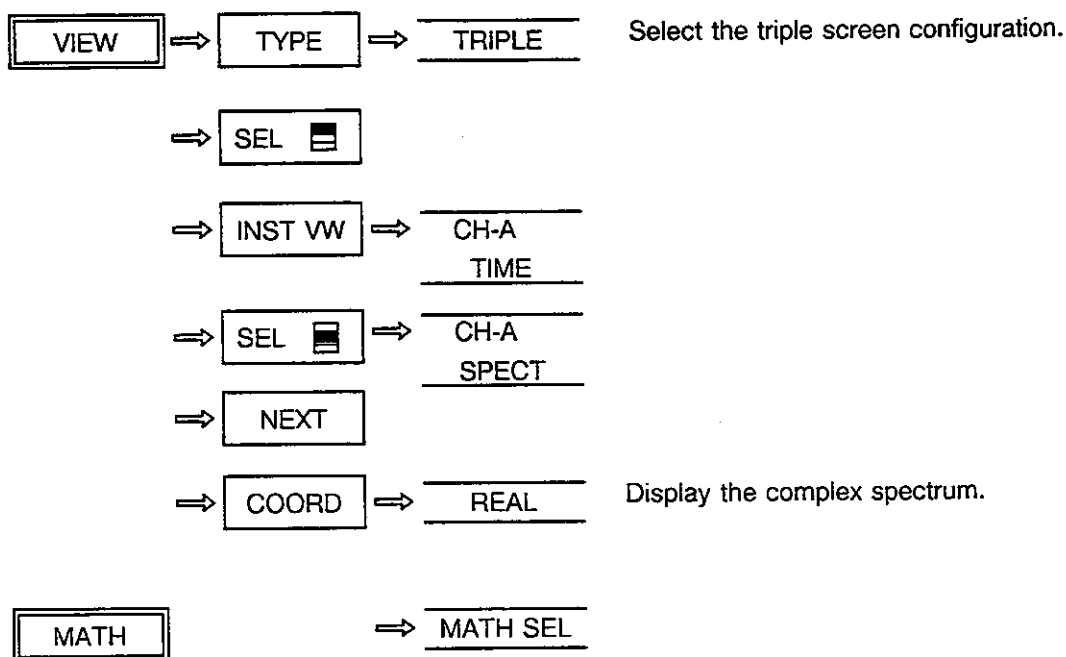

3. EXAMPLES OF MATHEMATICAL OPERATIONS

2

Select an operator.

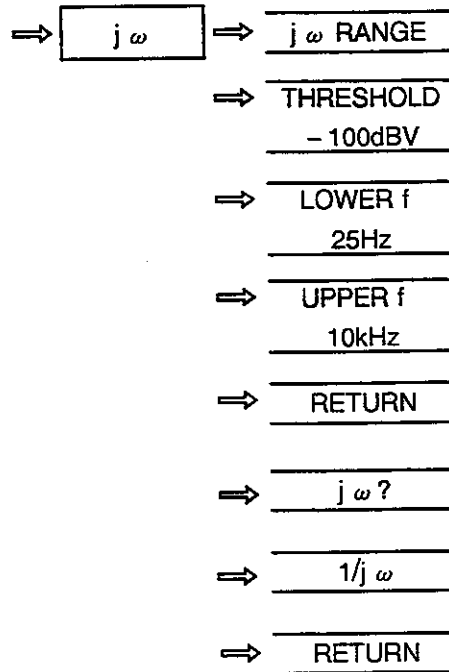


Register the operand (complex spectrum data).

Select the integration ($1/j\omega$).

3

Register the operator.

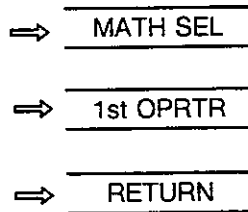

Register $1/j\omega$ operation.

4

Select the second operator.



Select the second operation (IFFT).




3. EXAMPLES OF MATHEMATICAL OPERATIONS



5 Register the 2nd operator.



6 Execute the operation.

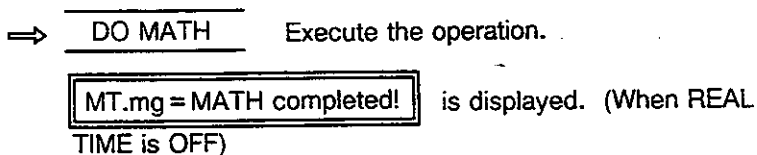

7 Display the operation result on the lower screen.

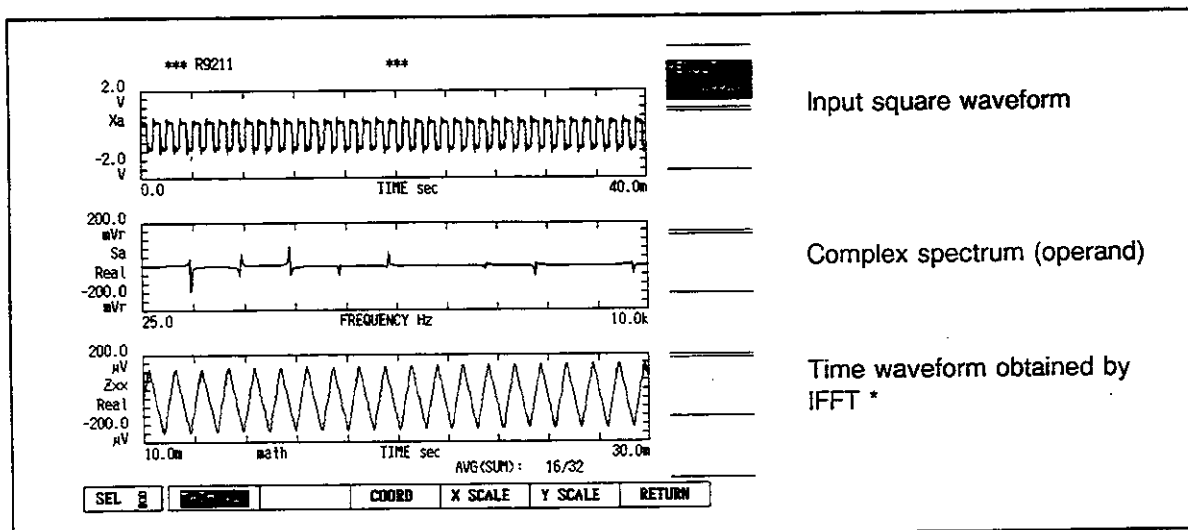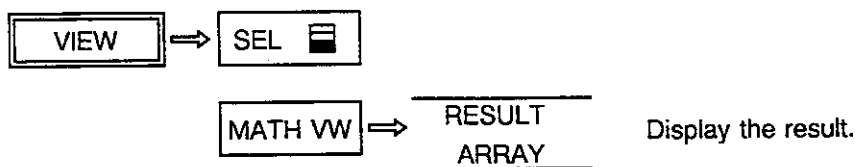

* The square waveform was changed to the chopping waveform by integration ($1/j\omega$).

Figure 11-8 Time Waveform Obtained by IFFT

3. EXAMPLES OF MATHEMATICAL OPERATIONS

BANDPASS (BANDSTOP)


This operation is performed to obtain the frequency domain data (power spectrum, complex spectrum, or FRF data) that passed (or did not pass) through the specified frequency range.

The procedure followed to extract the necessary portion of some FRF data is the following one:




1 Specify an operand.

Perform a FRF measurement.
Display the FRF data on the upper screen in the double screen configuration.

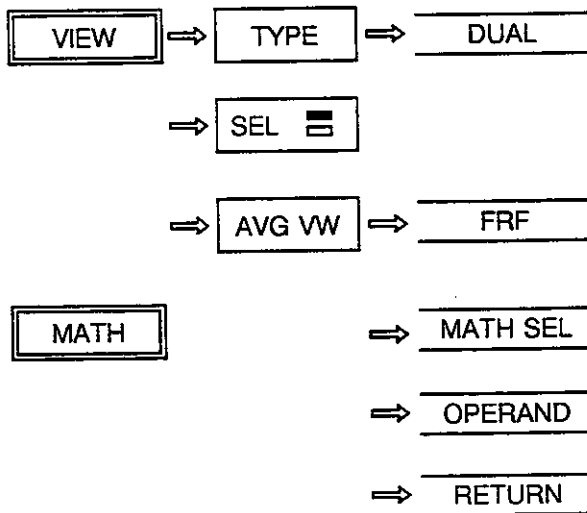

Register the FRF data as operand.

2 Select an operator.

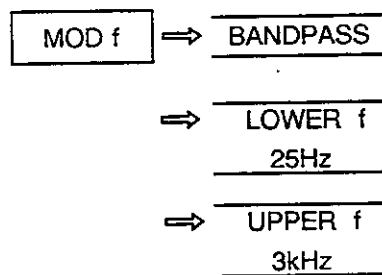

Select only the frequencies within the range 25Hz to 3kHz.



3. EXAMPLES OF MATHEMATICAL OPERATIONS

3

Register the operator.

⇒ FILTERING
ON/OFF

Switch on the band pass filter.

⇒ RETURN

4

Execute the operation.

⇒ MATH SEL

⇒ 1st OPRTR

Register the band pass filter operation.

⇒ DO MATH

MT.mg = MATH completed!
TIME is OFF)

is displayed. (When REAL

5

Display the operation result on the lower screen.

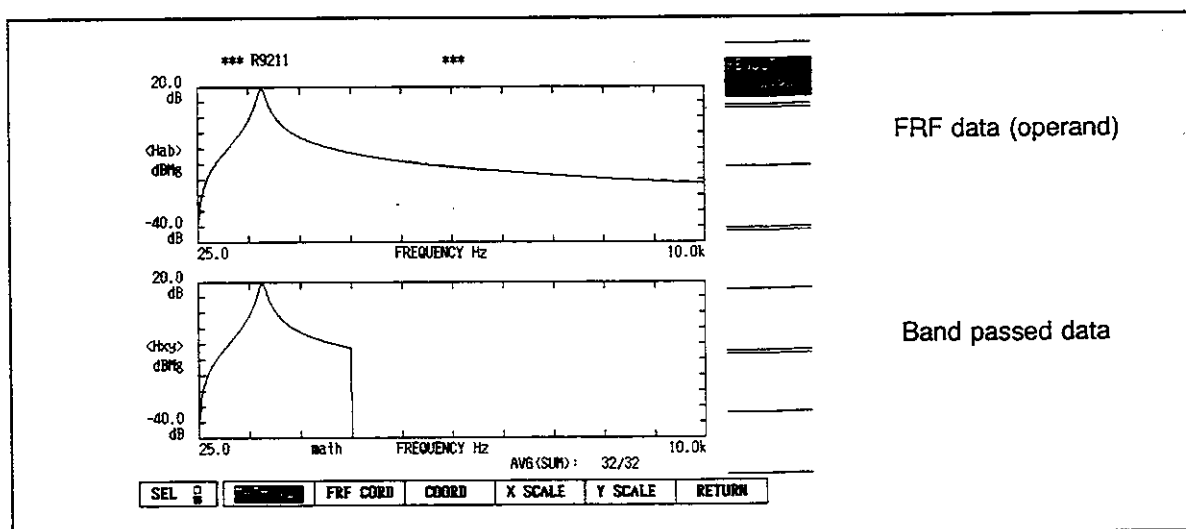
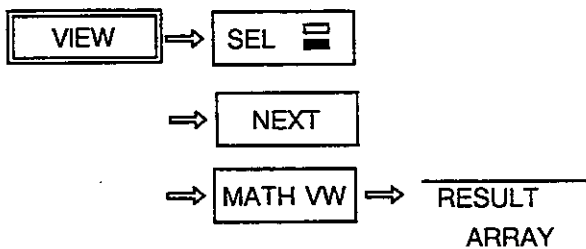


Figure 11-9 BAND PASS

3. EXAMPLES OF MATHEMATICAL OPERATIONS

■ TR MATH (Trace MATH)

Each TR MATH operations are performed in real time on the displayed data. The operation to be processed can be selected in the Y softmenu. Unlike the other operations, a result array different from the operand data array is not generated. Reversely the results are directly over-written on the operand data.

A TR MATH Operation takes effect on the data displayed on the screen selected with the SEL key immediately after the operation selection.

For example, start the smoothing of spectrum (See Figure 11-10).


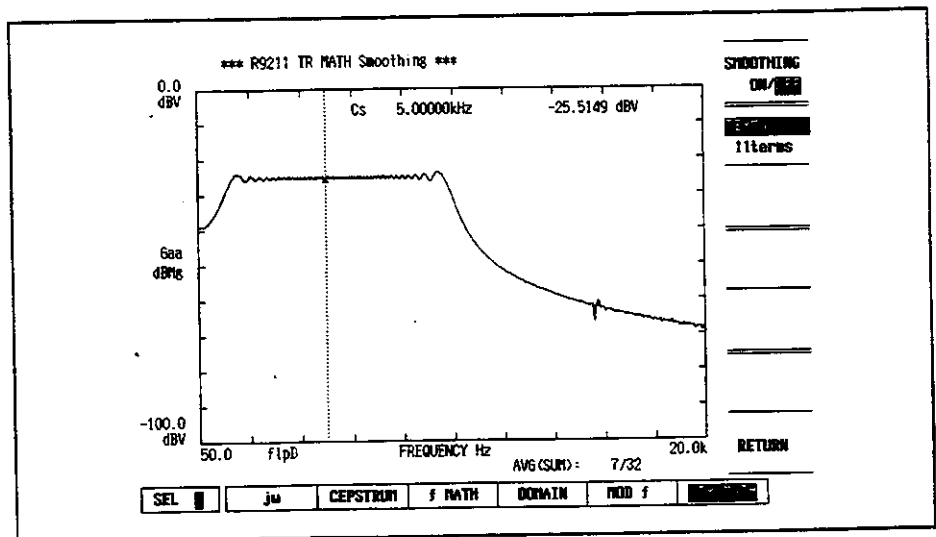


Figure 11-10 TR MATH Operand (before execution)



Smoothing starts when SMOOTHING is set to ON and stops only when SMOOTHING is set to OFF.

3. EXAMPLES OF MATHEMATICAL OPERATIONS


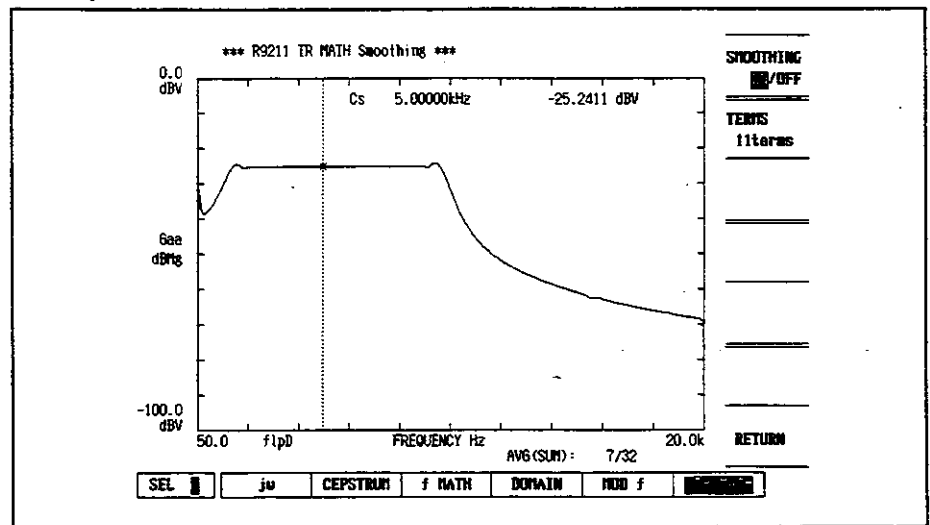


Figure 11-11 TR MATH

NOTE
 "TERMS" may be changed during smoothing.


3. EXAMPLES OF MATHEMATICAL OPERATIONS

R9211 Series Menu List (MATH in the SPECTRUM and TIME-FREQ modes)

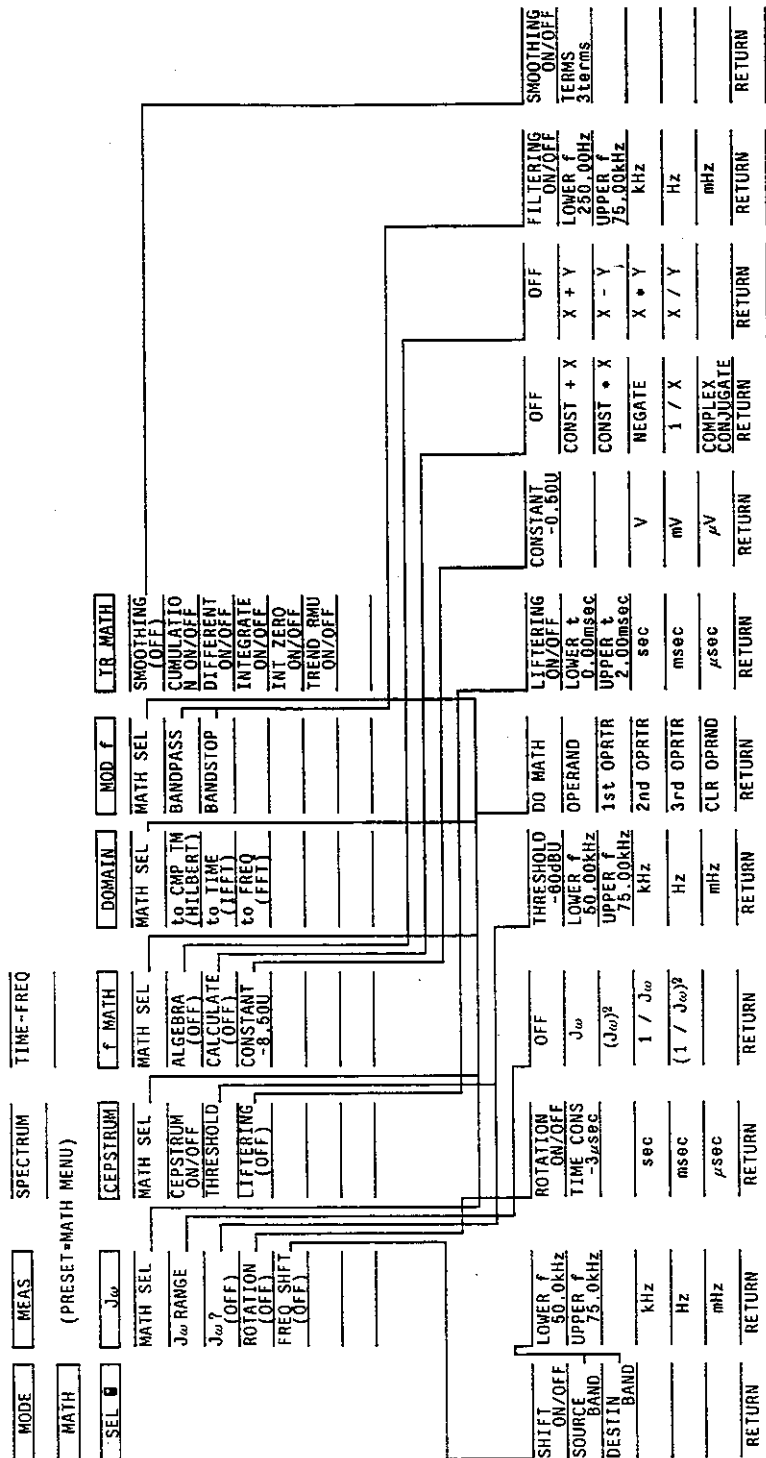

3. EXAMPLES OF MATHEMATICAL OPERATIONS

R9211 Series Menu List (MATH in the WAVEFORM mode)

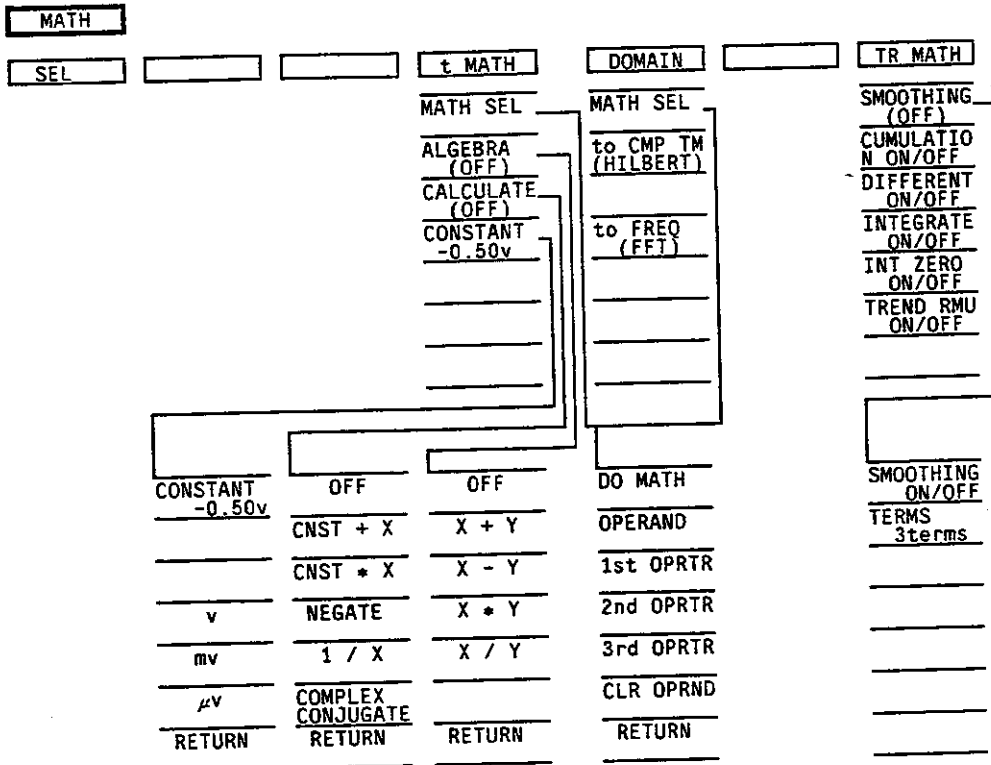

CHAPTER 12

CURVE FITTING AND SYNTHESIS (R9211C Only)

Explanation is omitted in this manual.

CHAPTER 13

COMPARATOR (GO/NOGO) FUNCTION (R9211C Only)

Explanation is omitted in this manual.

CHAPTER 14

DIGITAL I/O AND MEASUREMENT (OPTION 11)

This chapter describes the digital I/O functions and explains how to use it.

CONTENTS

1. Outline	14-2
Digital I/O Connector Pin Configuration ..	14-3
2. Digital Input	14-4
How to Use the Digital Input Function ...	14-4
Digital Input Signal and Timing	14-5
Digital Input Connections	14-6
Scale Conversion for Digital Input	14-7
3. Digital Output	14-8
How to Use the Digital Output Function	14-8
Digital Output Signal and Timing	14-9
Digital Output Connections	14-10
Scale Conversion for Digital Output	14-11
4. Examples Of Measurement Using The Digital I/O Function	14-12
Measurement of a Frequency Response Function	14-12

1. Outline

The R9211 is equipped with a digital I/O function. (For some models, this function is provided as an option.) The digital I/O function has a digital input mode and digital output mode. When it is combined with the digital output function of the built-in SG, the performance of D/A and A/D converters can be evaluated. Moreover, analog SG signals can be converted to digital signals via the A/D converter. The comparator function control signal is also output from the DIGITAL I/O connector on the rear panel of the R9211.

- (1) Example of utilization of the digital input mode
Figure 14-1 shows an example of A/D converter evaluation.

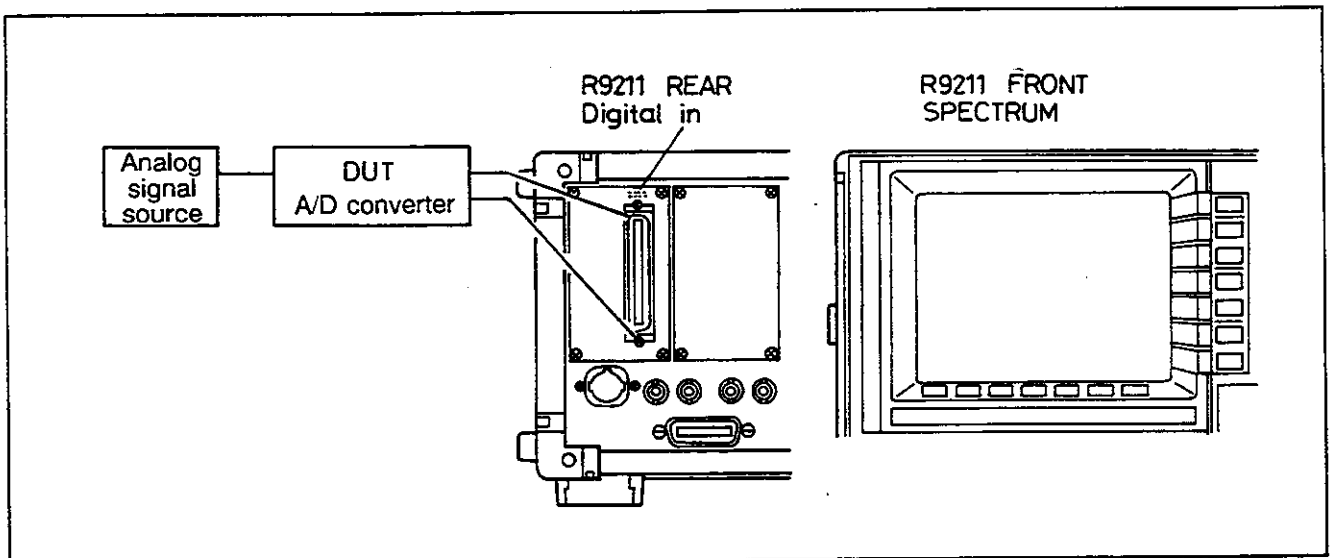


Figure 14-1 Example of A/D Converter Evaluation

- (2) Example of utilization of the digital output mode
Figure 14-2 shows an example of conversion of an analog signal source to a digital signal source.

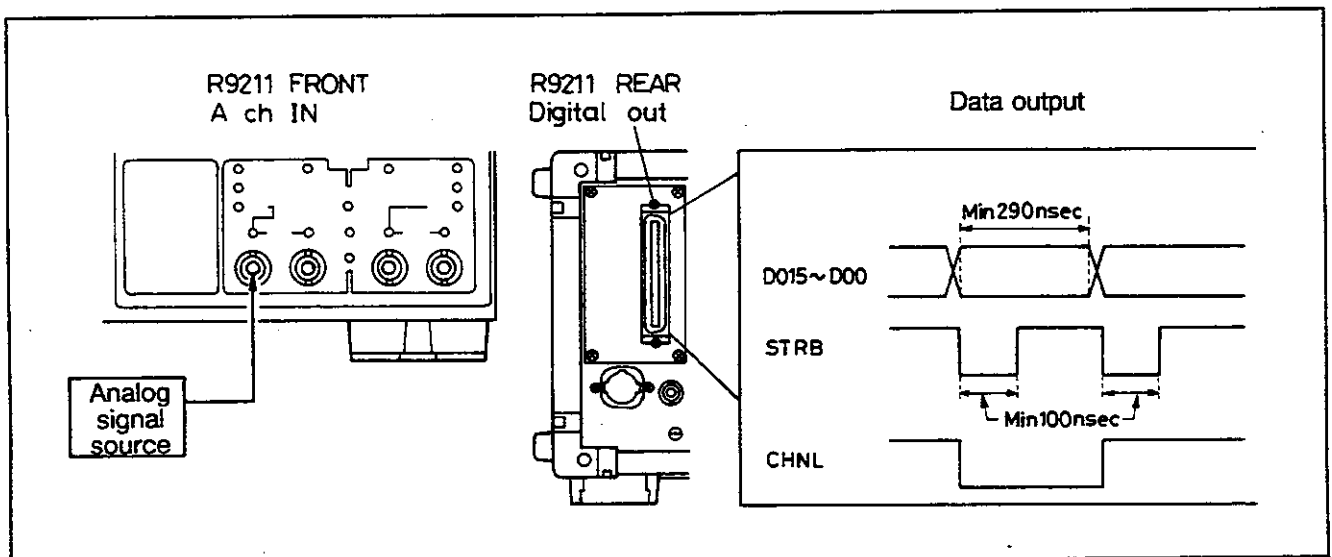


Figure 14-2 Conversion of an Analog Signal Generator to a Digital Signal Generator

Digital I/O Connector Pin Configuration

Figure 14-3 shows the pin configuration of the I/O connector at the rear panel of the R9211.

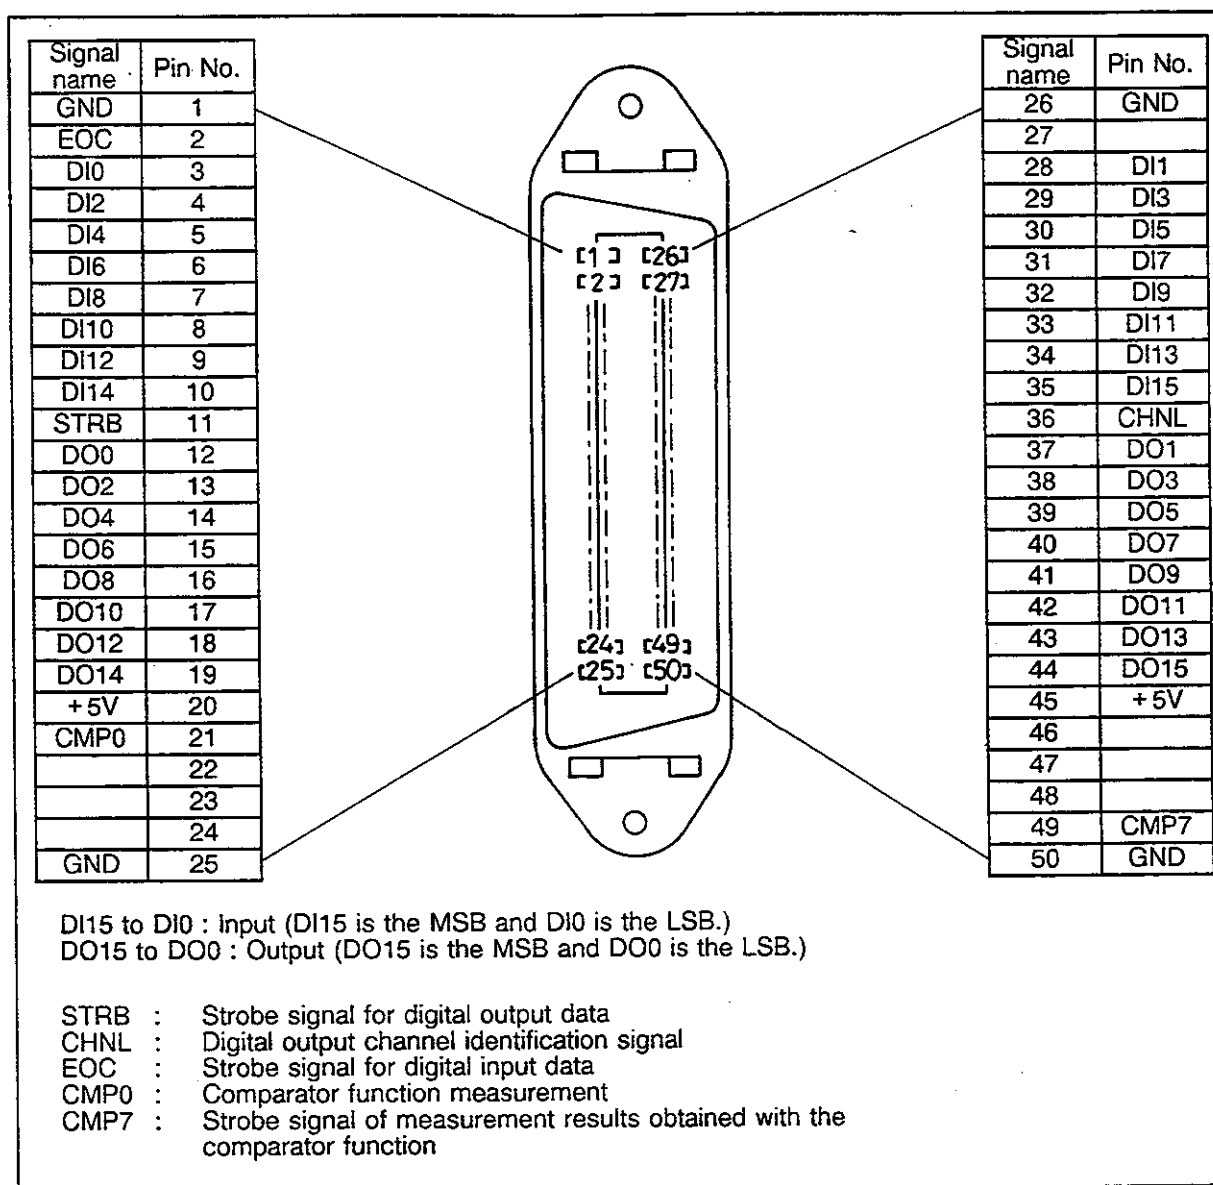


Figure 14-3 DIGITAL I/O Connector Pin Configuration

NOTE

- EOC and DI15 to DI0 are inputs equivalent to those of the 74LS TTL series.
- STRB, CHNL, and DO15 to DO0 are open collector outputs (without pull-up resistor) equivalent to those of the 74LS series.
- Available connector: 57FE-30500-20N(D8) or equivalent (Daiichi Electronics Corp.)
- Do not connect any signal to unused pins.

2. Digital Input

■ How to Use the Digital Input Function

- (1) To use the digital input function, the following requirements must be satisfied:
 - (a) Using the menu, select the digital input mode for channel A.
 - (b) Using the menu, set the R9211 in external sampling mode.
 - (c) Input the digital data and strobe signals to the R9211 through the connector at the rear panel.
 - (d) Input the external sampling clock signal to the R9211 through the connector at the rear panel.

- (2) You must also be careful about the following points:
 - (a) When the digital input "switch" in the R9211 menu is activated, the DIGITAL I/O connector at the rear panel of the analyzer is identified to channel A. Therefore, the results of analyses on digital inputs becomes CH-A data and the analog CH-A inputs through the front panel are ignored.

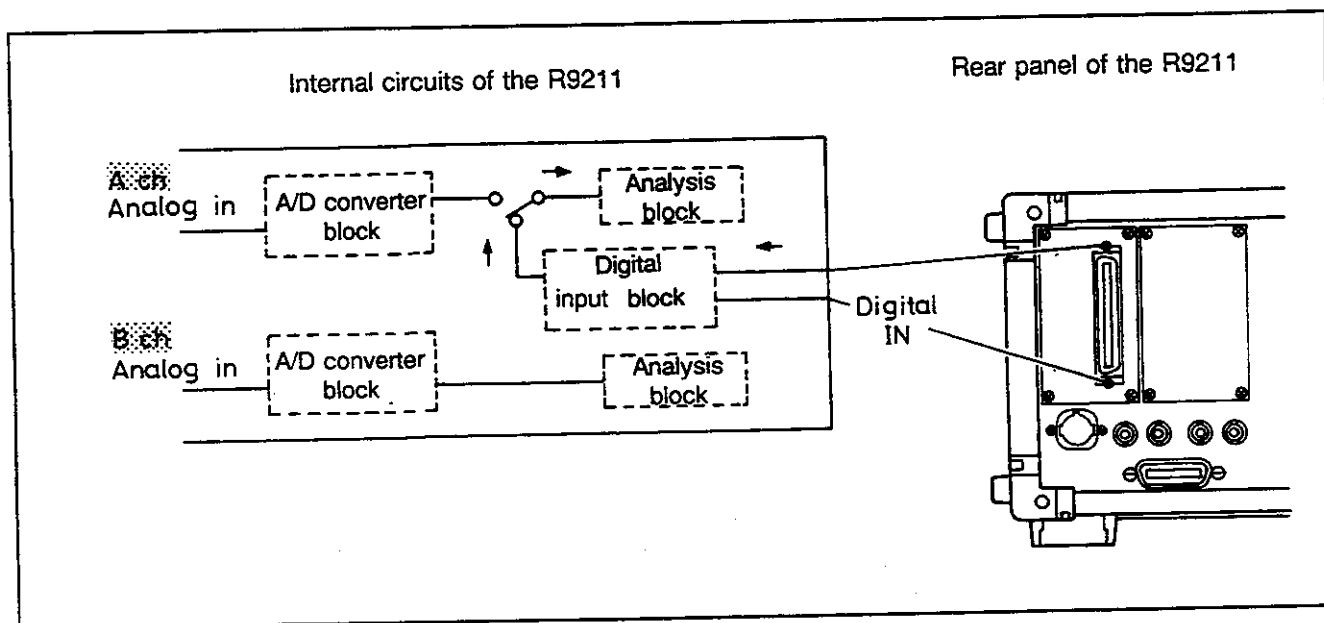


Figure 14-4 Block Diagram for Digital Inputs

- (b) When the digital input function is used, X- and Y-scales are not automatically converted. See "■ Scale Conversion for Digital Input".
- (c) In the zoom mode, the digital input mode is disabled (R9211A).
- (d) The digital input level is a TTL level.

■ Digital Input Signal and Timing

16-bit parallel signals can be input to channel A through the DIGITAL I/O connector.

Data are loaded into the internal register at the rising edge of the EOC (strobe signal). The data is input in the offset binary format (2's complement).

Figure 14-5 shows the digital input timing.

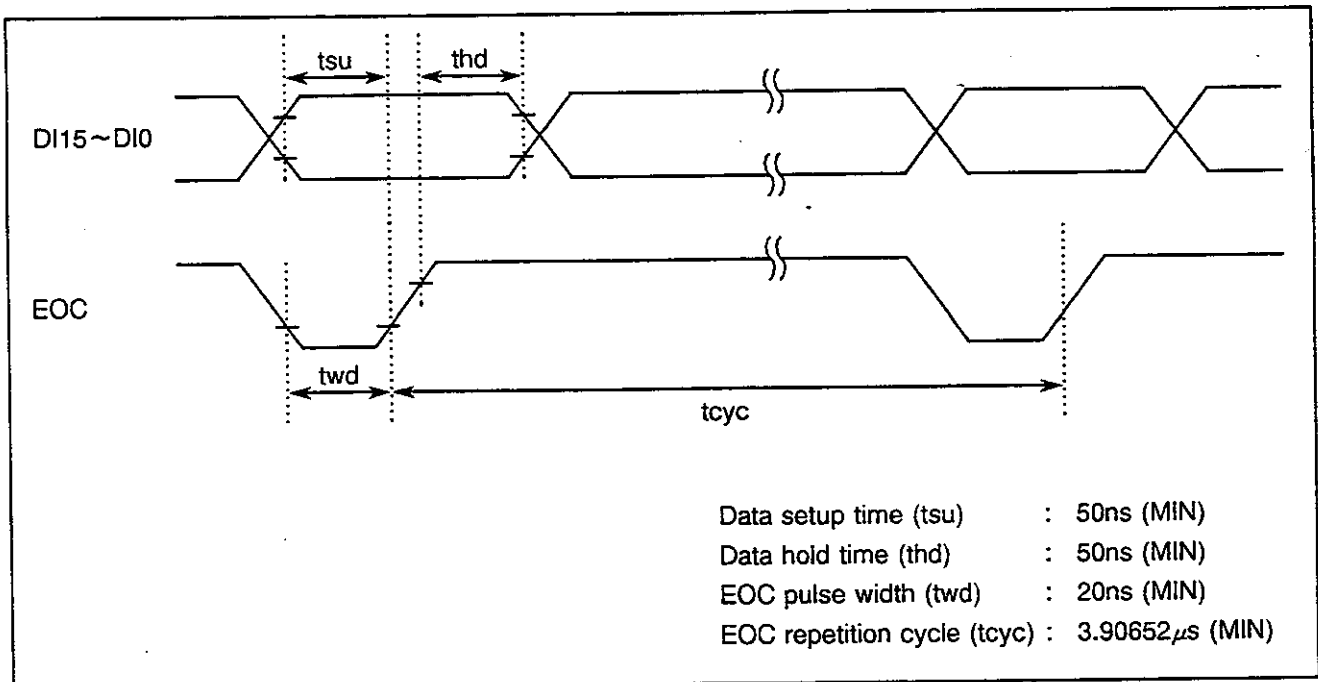


Figure 14-5 Digital Input Timing

2. Digital Input

Digital Input Connections

When the digital input function is used, you must connect the 16-bit digital signal and the EOC signal to the appropriate pin of the I/O connector, and you must also input the EOC signal through the external SMPLG CLK input connector at the rear panel (digital input is enabled in the zoom mode). Figure 14-3 shows the DIGITAL I/O connector pin configuration.


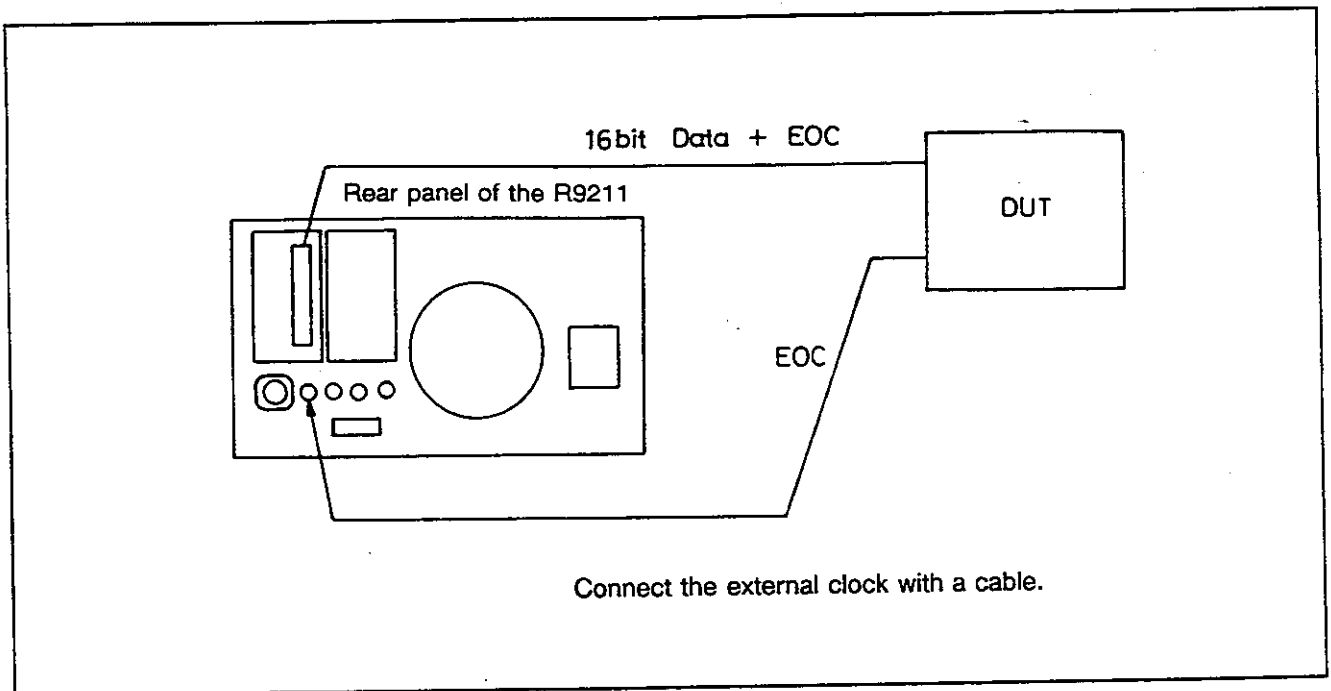


Figure 14-6 Connections for Digital Input

After the connections shown figure 14-6 have been made, set the R9211 as follows:




1 Specify that the sampling clock is to be an external one.

(When MODE = TIME)



Switch the sampling clock from internal to external.

(When MODE = SPECT/TIME - FREQ/FRF)

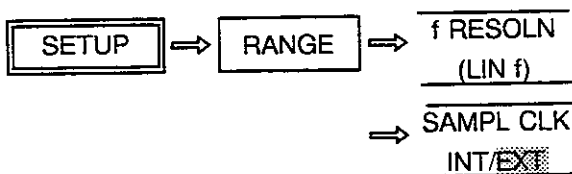

2

Switch channel A to digital input mode.

(When MODE = TIME/SPECT/TIME-FREQ/FRF)



Make channel A to correspond to the digital input connector, at the rear panel, instead of the analog input connector at the front panel.

Thus, digital signals can be displayed on the screen of the R9211.

Scale Conversion for Digital Input**● Frequency axis scale conversion**

Since the scale annotation displayed on the screen for digital input does not take into consideration the external sampling clock, you must perform the following correction.

$$\text{Actual frequency} = \frac{\text{External sampling frequency}}{2.56 \times \text{Analysis frequency range}} \times (\text{Annotation on screen})$$

● Ordinates axis scale conversion

When a 16-bit full scale value is input digitally, the data displayed on the screen change according to the set input range.

When the input range is set to 0dBV (1V_{rms}), the full scale value corresponds to (1.414 × 2) V.

When the input range is set to 10dBV (3.16 V_{rms}), the full scale value corresponds to (4.472 × 2) V.

The voltage resolution per bit (when the input range is XdBV) is as follows:

When the unit is V_{rms}, the voltage resolution per bit is found by:

$$\text{Voltage per 1-bit} = \frac{2 \sqrt{2} \cdot 10^{X/20}}{2^{15}} \quad (\text{V})$$

When the unit is V_{lt}, the voltage per bit is found by:

$$\text{Voltage per 1-bit} = \frac{2 \cdot 10^{X/20}}{2^{15}} \quad (\text{V})$$

3. Digital Output

■ How to Use the Digital Output Function

In the R9211C, an analog signal input through one of the front panel connectors to the analyzer is first transformed into a digital signal by an A/D converter.

This obtained digital signal can then be output through the rear panel connector.

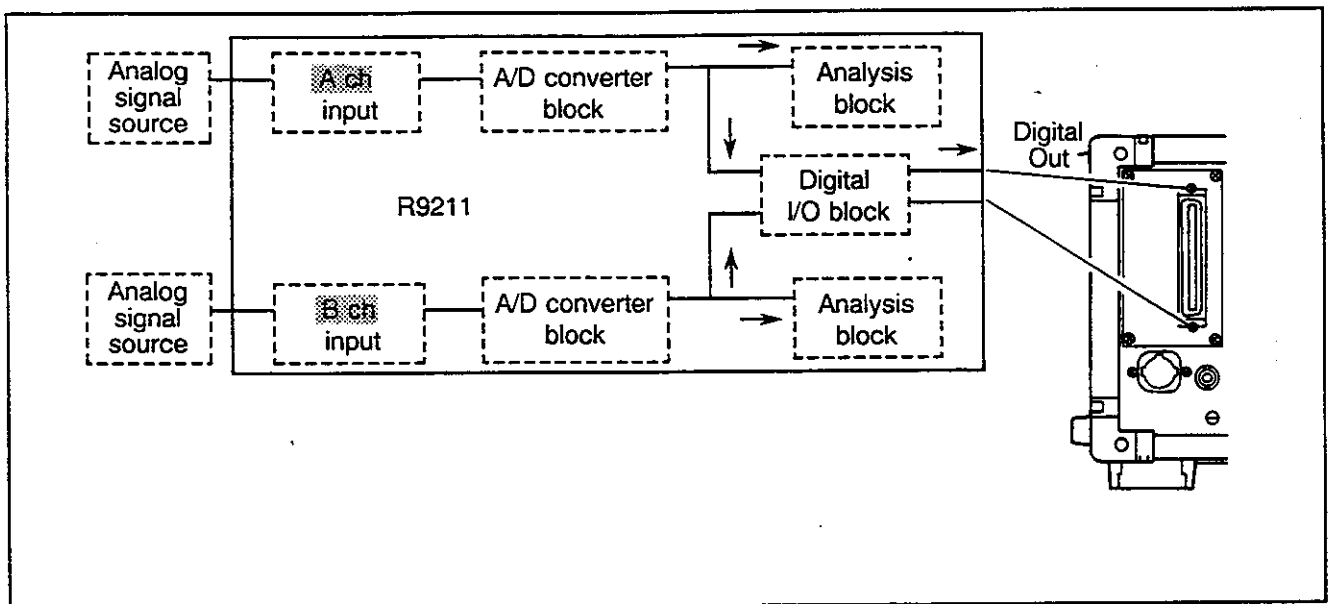


Figure 14-7 Digital Output Block Diagram

No menu settings are necessary in order to use the digital output function, unlike the digital input function.

CAUTION!

- When the digital output function is used, the Y scale is not converted automatically. See "■ Scale Conversion for Digital Input".
- In the zoom mode, the sampling rate is fixed to 256kHz.

■ Digital Output Signal and Timing

Figure 14-8 shows the timings of CH-A and CH-B digital outputs from the DIGITAL I/O connector.

The data output from the digital I/O connector correspond alternately to the data output from the A/D converter of channel A and channel B.

The digital output consists of a data output signal, channel switching signal, and strobe signal. The data output signal is a 16-bit signal. The output format is the same as the input format (offset binary format).

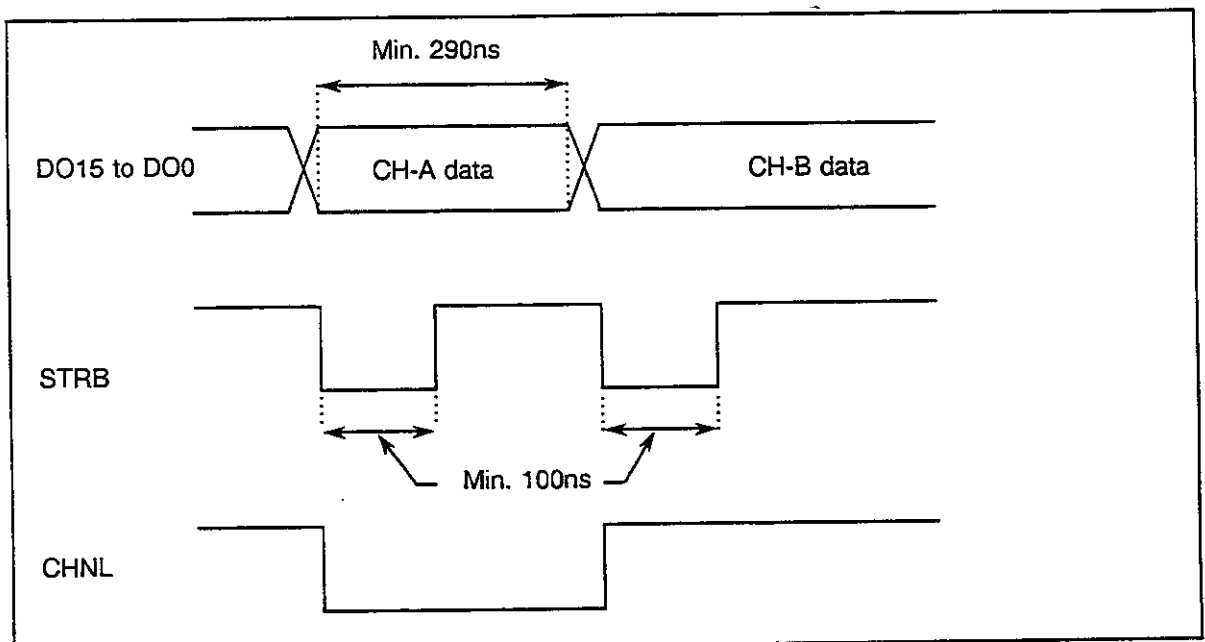


Figure 14-8 Digital Output Timings

3. Digital Output

■ Digital Output Connections

Figure 14-3 shows the DIGITAL I/O (input/output ports) connector pin configuration. Since the digital outputs are open collector outputs, connect them to pull-up resistors.

No menu setting is required for digital outputs.

Figure 14-9 shows pull-up resistor constants and CH-A/CH-B data separator circuit.

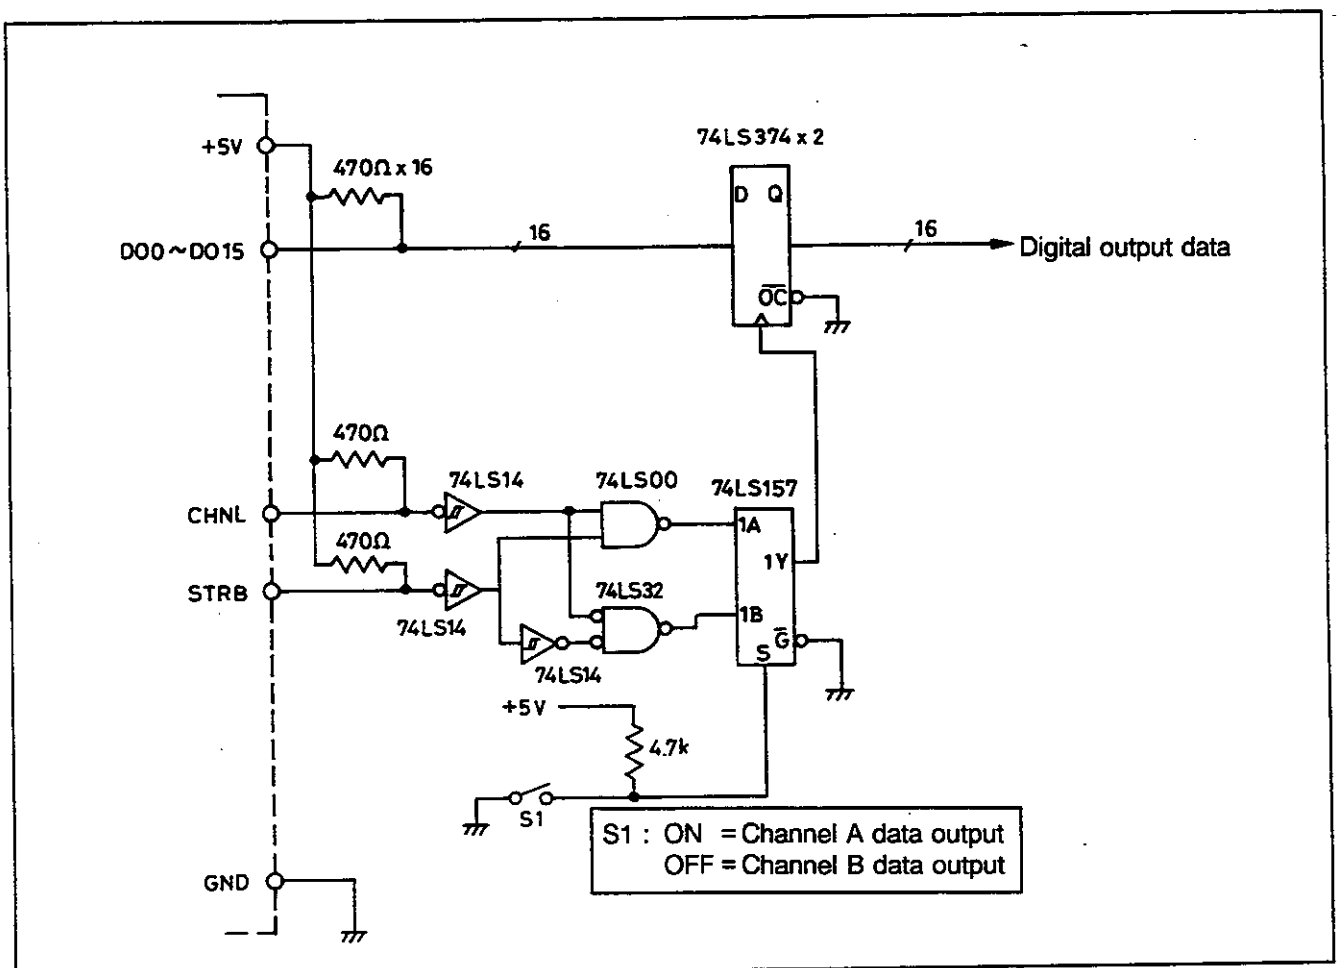


Figure 14-9 CH-A/CH-B Data Separator Circuit for Digital Output

■ Scale Conversion for Digital Output

The voltage per output bit depends on the input sensitivity setting.

For example, if a 1Vrms sine-wave is input through the analog input connector and the input sensitivity is set to 0dBV, a 16-bit full-scale value is output through the digital output connector.

However, a full scale value is not output when the input sensitivity is set to 10dBV.

When the input range is XdBV, the voltage resolution per bit is the following one:

If the unit is Vrms, the voltage per bit is found by:

$$\text{Voltage per 1-bit} = \frac{2 \sqrt{2} \cdot 10^{X/20}}{2^{15}} \quad (\text{V})$$

If the unit is Vlt, the voltage per bit is found by:

$$\text{Voltage per 1-bit} = \frac{2 \cdot 10^{X/20}}{2^{15}} \quad (\text{V})$$

The output sampling rate corresponds to (analysis range) × 2.56.

For instance, if the analysis range is 20kHz, the output sampling rate is found by:

$$20\text{kHz} \times 2.56 = 51.2\text{kHz}$$

In the zoom mode, the sampling rate is fixed to 256kHz.

4. Examples Of Measurement Using The Digital I/O Function

■ Measurement of a Frequency Response Function

(Example of conversion of an analog signal sent from an external SG and of measurement of a DUT (digital → analog) using the R9211's digital output function)

In the measurement system shown in Figure 14-10, an external SG's (the built-in SG can also be used) output is sent to channel A, then the digital output corresponding to this channel is input to the DUT. To output channel A's data, a strobe signal is generated for channel A's digital data, using a gate based on CHN and STRB.

The data input to the DUT is processed in the DSP, then converted to analog data in the D/A, and input to channel B.

Since, usually the external SG used output analog signals, the digital output function of the R9211 is used to analyze the DUT so that there is no need to connect an external A/D converter to the external SG.

4. Examples Of Measurement Using The Digital I/O Function

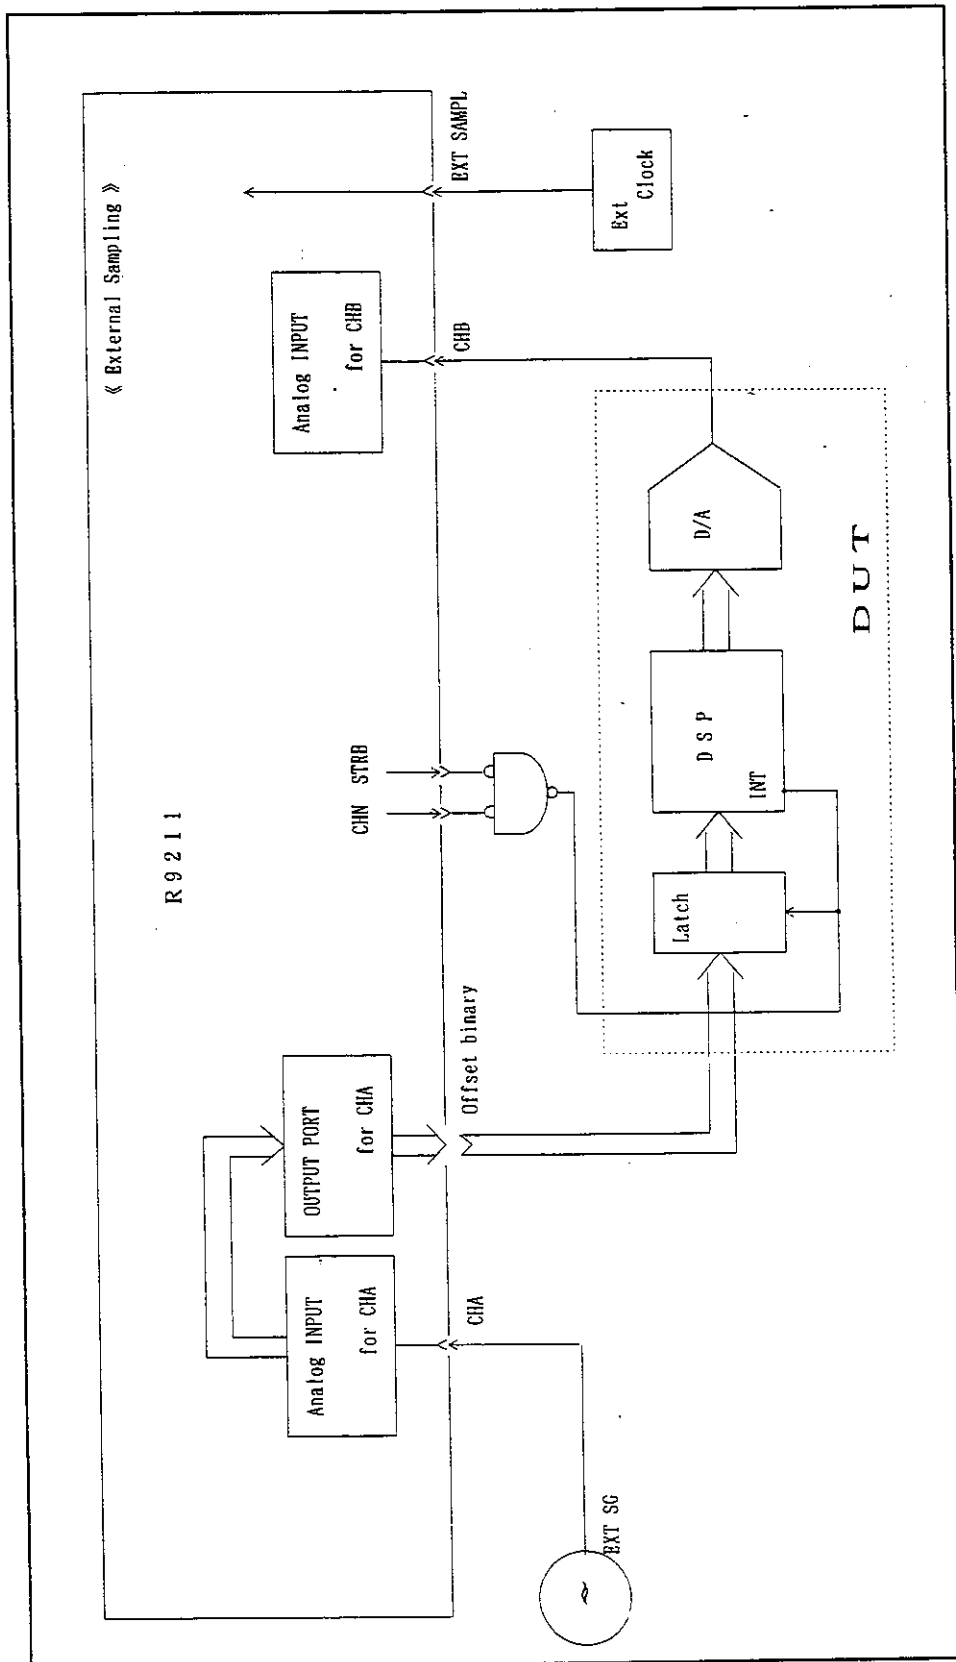


Figure 14-10 Example of Measurement Using the Digital I/O Function

CHAPTER 15

FLOPPY DISK

This chapter explains how to save and retrieve data from the floppy disk.

CONTENTS

1. Outline	15-2
Specifications of the Floppy Disk Drive	15-2
2. How To Use A Floppy Disk	15-3
How to Handle a Floppy Disk	15-3
MEAS File (Data File/View File)	15-5
PANEL FILE	15-7
Catalog Display and File Names	15-9
Saving Settings	15-11
Data Compatibility between Models	15-12
Menus Related to the Floppy Disk	15-13
3. Operation Method	15-14
Floppy Disk Initializing Operation Procedure	15-14
"SAVE" Operation Procedure for Floppy File Specification	15-15
"COPY" Operation Procedure for Floppy File Specification	15-16
"RECALL/DELETE" Operation Procedure for Floppy File Specification	15-18
Notes on the Retrieving Procedure	15-20
How to Compare New Data with Retrieved Data	15-21
4. Regenerating Floppy Data With An IBM-PC	15-22
Floppy Disk Data Types and Data Format	15-22
R9211 View File Reading Program	15-24

1. Outline

A floppy disk can be used to save and retrieve measured data setup conditions and table information. Up to 100 files can be stored on a floppy disk. Since the data format conforms to the MS-DOS format (binary data format), data saved on a floppy disk through the R9211 can be retrieved by a MS-DOS based personal computer.

■ Specifications of the Floppy Disk Drive

Drive	:	3.5-inch micro-floppy disk drive
Floppy disk	:	2DD(Double-sided double-density) 2HD(Double-sided high-density)
Storage capacity after formatting	:	720KB(2DD)/1MB(2HD)
Recording format	:	2DD IBM/NEC compatible format 2HD NEC format
Number of files that can be stored	:	Maximum 100 files/disk

2. How To Use A Floppy Disk

■ How to Handle a Floppy Disk

Here are given some basic notions about floppy disks handling:

● Write protection

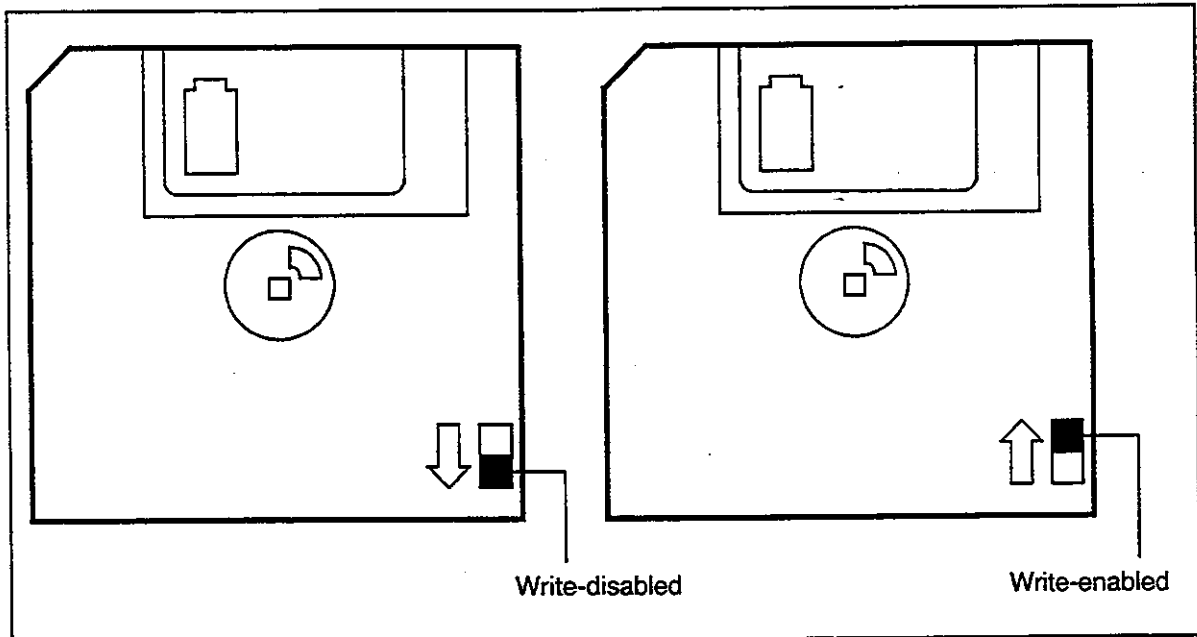


Figure 15-1 Floppy Disk Write Protection

A 3.5-inch micro-floppy disk can be write-protected so that valuable data cannot be erased by mistake. To write-protect the disk (that is to say to forbid all writing on the disk), you just have to change the position of the write-protection slider, as shown on Figure 15-1

● Floppy disk drive handling advices

- Do not use the floppy disk with the analyzer's front panel or side panel (left, right panel) up.

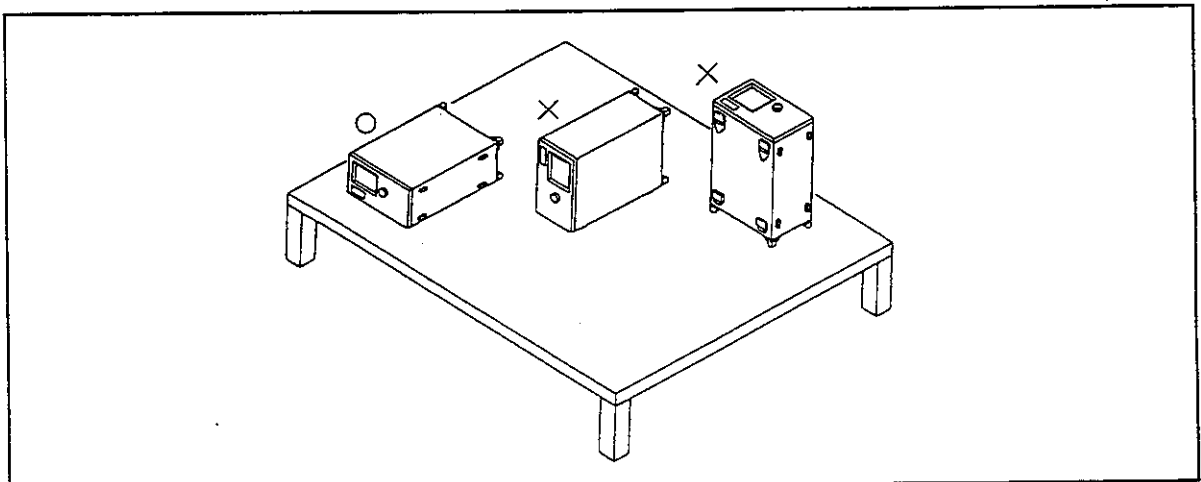


Figure 15-2 Use Position of the R9211

2. How To Use A Floppy Disk

- An excessive shock to the floppy disk drive may damage the drive head or the floppy disk.
- If the floppy disk is removed before it is ejected completely, the drive head may be damaged by the disk shutter window.
- To insert a half ejected floppy disk back may damage the drive head.
- Before switching on the analyzer, remove the floppy disk from the drive. Otherwise, a write protection state may be detected incorrectly.

● How to insert a floppy disk

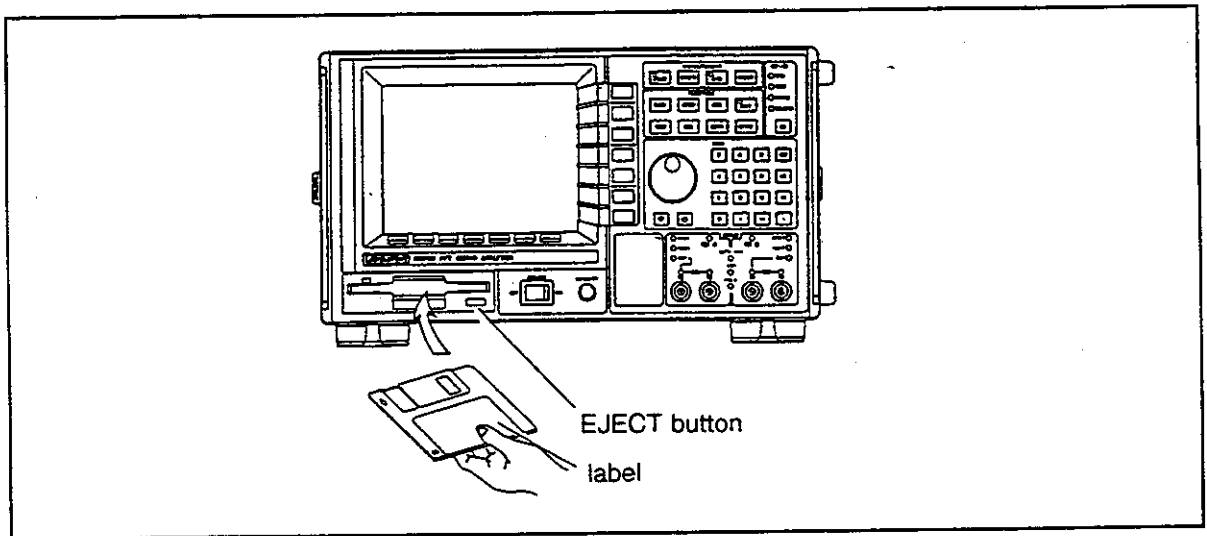


Figure 15-3 How to Insert a Floppy Disk

Figure 15-3 shows the correct insertion method of a floppy disk in the drive. Insert a floppy disk in the slot with the label up. Insert the floppy disk fully until it is locked in the slot. To remove the floppy disk, press the EJECT button. Any incorrect operation among those listed below may damage the floppy disk.

CAUTION !

- *Never press the EJECT button when the red lamp of the disk drive is on.*
- *If the analyzer is switched on without removing the floppy disk, the disk contents may be read incorrectly. Remove the floppy disk, switch on the analyzer, then insert the floppy disk again.*

■ MEAS File (Data File/View File)

Measurement data, setup conditions or table information can be saved and retrieved from the floppy disk by the R9211; however, the file type depends on the saved information. In this section, we will describe the saving and retrieving operations for measurement data and setup conditions: MEAS FILE.

The MEAS file can be of data file format or view file format.

In a DATA FILE, the original data and the setup conditions of the currently displayed waveform are saved. Because the original data of the current waveform are saved, the data format can be changed by pressing the

INST VW or AVG VW menu key. (For example, you can display the spectrum and then switch to the time waveform.)

Note that the measurement mode cannot be changed.

In the VIEW FILE mode, the data format cannot be changed because the waveform displayed on the screen is saved as an image (one-to-one correspondence).

● Differences between DATA FILE and VIEW FILE

Table 15-1 lists the differences between DATA FILE and VIEW FILE.

Table 15-1 Differences between DATA FILE and VIEW FILE

	DATA FILE	VIEW FILE
Instantaneous logarithmic/octave frequency resolution data	×	○
Operation results	×	○
Numeric list	×	×
T-F analysis results	×	○
Selected screen in a multi-screen configuration	○*	○*

○ : Enabled × : Disabled

* : Since only one screen (selected with the SEL key at saving) is displayed during regeneration, the number of screens must be respecified with the TYPE menu (VIEW menu).

2. How To Use A Floppy Disk

● **Data saved in a DATA FILE**

Table 15-2 lists the data saved in a DATA FILE.

Table 15-2 Data Saved in a DATA FILE


Displayed data			Saved data		
	MODE	FUNC	Active Ch		
			ChA	ChB	ChA & B
Instantaneous data	Not related to MODE	Not related to FUNC	Xa	Xb	Xa, Xb
Average data	WAVEFORM	TIME	<Xa>	<Xb>	<Xa> <Xb>
		AUTO CORR	—	—	<Raa> <Rbb>
		CROSS-CORR	—	—	<Rab>
		HISTOGRAM	<Pa>	<Pb>	<Pa> <Pb>
	SPECTRUM & TIME-FREQ	POWER SPECT	<Gaa>	<Gbb>	<Gaa> <Gbb>
		CROSS-SPECT	—	—	<Gab>
		COMPLX SPECT	<Sa>	<Sb>	<Sa> <Sb>
FRF	FRF	—	—	<Gaa> <Gbb> <Gab>	

CAUTION!

- T-F, logarithmic frequency, and octave analysis data cannot be saved. (The source data cannot be saved.) However, the data displayed on the screen can be saved in a VIEW FILE as an image.
- Do not save retrieved data, which were previously saved in a VIEW FILE in a DATA FILE.

2. How To Use A Floppy Disk

● MEAS FILE operation procedure

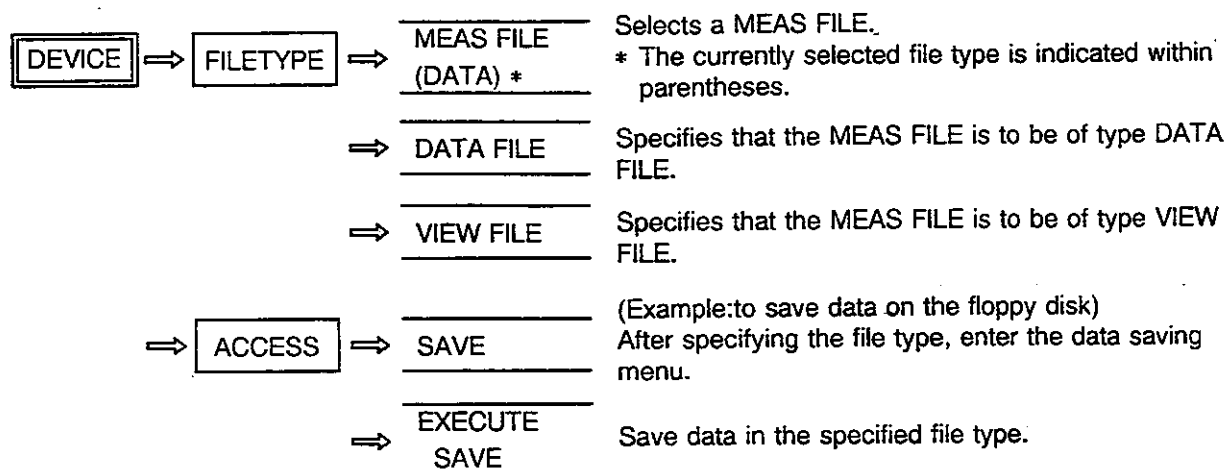

For further details, see Section 3 "Operation Method".


The file type and set-up function specified at saving are described by the file name. For further details, see "■ Catalog Display and File Names".

■ PANEL FILE


When user records/reproduces the manual setting and the measurement condition set at the GP-IB, or the display setting only on the floppy disk, PANEL FILE is used.

The record/reproduce of measurement data uses DATA FILE or VIEW FILE.

● How to operate PANEL FILE

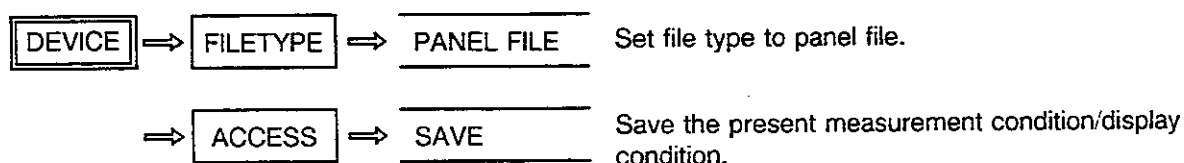


The input methods of file name is referred to "SAVE" Operation Procedure for specification of Floppy File Name.



2. How To Use A Floppy Disk

● Setting unable to SAVE/RECALL

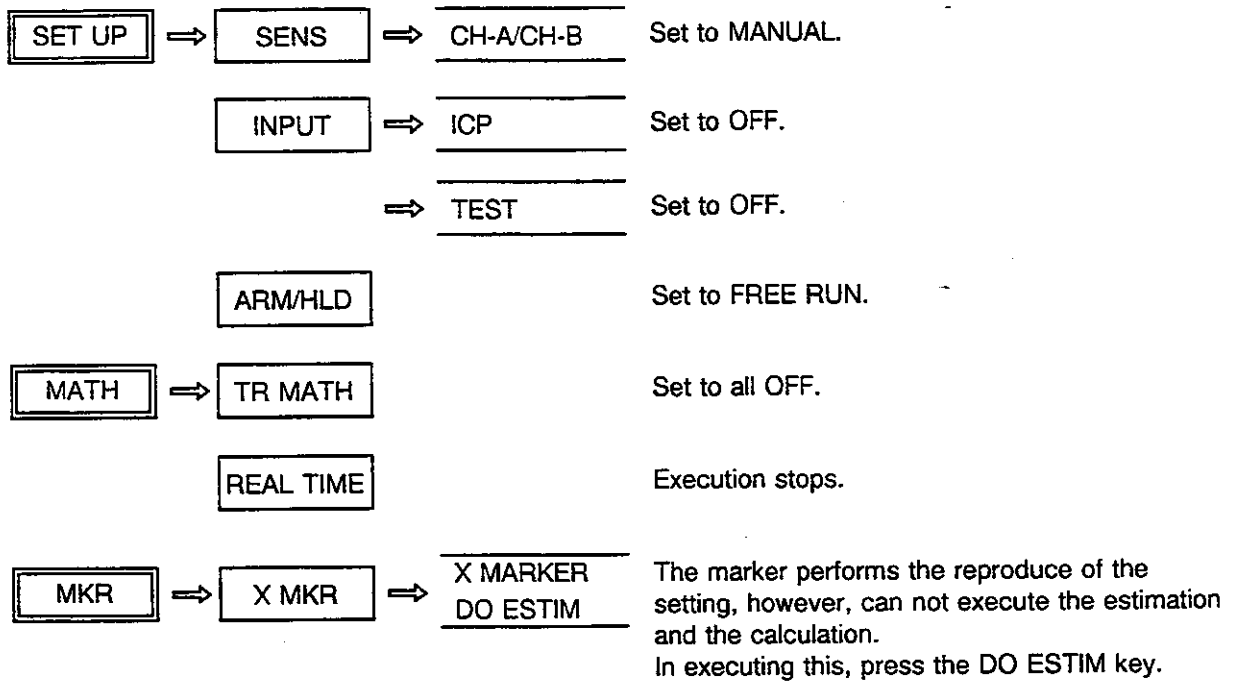

CAUTION !

When reproduce the panel file recorded by different options and device types, the mode of the device type to reproduce which has no functions is changed into WAVEFORM mode.

2. How To Use A Floppy Disk

■ Catalog Display and File Names

When some data are saved on a floppy disk through the R9211, all necessary information are automatically provided as shown in Figure 15-4.

This table is called a catalog. When the RECALL, COPY, DELETE, or INITIAL menus are selected, the floppy disk is analyzed to display this catalog.

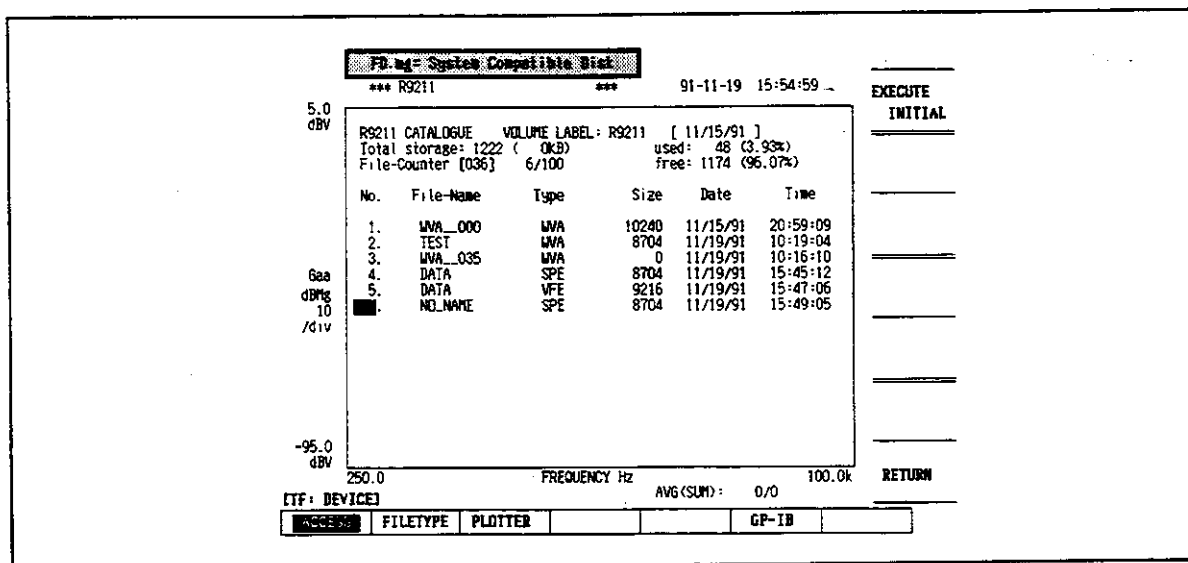


Figure 15-4 File Catalog Display

2. How To Use A Floppy Disk


● Signification of each information displayed on the catalog

- No. : The file number. Up to 100 files can be created.
- File-Name : Display the file name.
- Type : The code indicating the mode, SETUP-FUNC setting, or the file format

(1) Signification of the type item

(a) MEAS file

X X Y (3 characters)



MODE code (2 characters)

File Type	MODE	Code
DATA	WAVEFORM	WV
	SPECTRUM	SP
	TIME-FREQ	TF
	FRF	FR
VIEW	VIEW FILE	VF

SETUP-FUNC code (1 character)


SETUP-FUNC	Code
TIME	A
AUTOCORR	B
CROSS-CORR	C
HISTGRAM	D
POWER-SPECT	E
CROSS-SPECT	F
COMPLX-SPECT	G
FRF	K

Size : Data size

Date : Date of saving

Time : Time of saving

To exit from the catalog, press



(b) PANEL file

File Type	Code
PAN FILE	PAN

■ Saving Settings

The settings made with the **MODE** and **SETUP** keys can be saved and retrieved (and only these).

The settings made with the **MKR** or **MATH** key cannot be saved.

As for the **MODE** key, the settings of the **MEAS** softmenu can be saved.

As for the **SETUP** key, the settings listed in Table 15-3 can be saved.

Table 15-3 Menus Set Conditions of the SETUP Key which can be Saved

X menu	Y menu
FUNC	All settings except DIGITALin
RANGE	All settings except SAMPL CLK
SENSE	All settings (For AUTO, when RECALL DATA switches off, AUTO is automatically set to MANUAL)
INPUT	All settings (For TEST, when RECALL DATA switches off, TEST automatically switches to off)
TRIG	SOURCE setting only
ARM/HLD	No settings can be saved
WEIGHT	All settings
AVG	All settings except REJECT and OVERLAP
UNIT	No settings can be saved
chDELAY	No settings can be saved

2. How To Use A Floppy Disk

■ Data Compatibility between Models

There are five models of R9211 series analyzers: R9211A, B, C, E, and F, so that you can select the model which is provided with the special features you need.

Data obtained by using a special function are compatible only with the analyzers provided with this function. (The analyzers which do not implement this function can not retrieve the data). Data obtained by using a common function are compatible with every model.

The special functions together with the models provided with them are listed below:

- (1) Zoom function
R9211A/C
- (2) SERVO function
R9211B/C
- (3) Curve fitting function
R9211C only
- (4) Comparator function
R9211C only
- (5) Table file
R9211C only

■ Menus Related to the Floppy Disk

Figure 15-5 lists the menus related to the floppy disk operations.

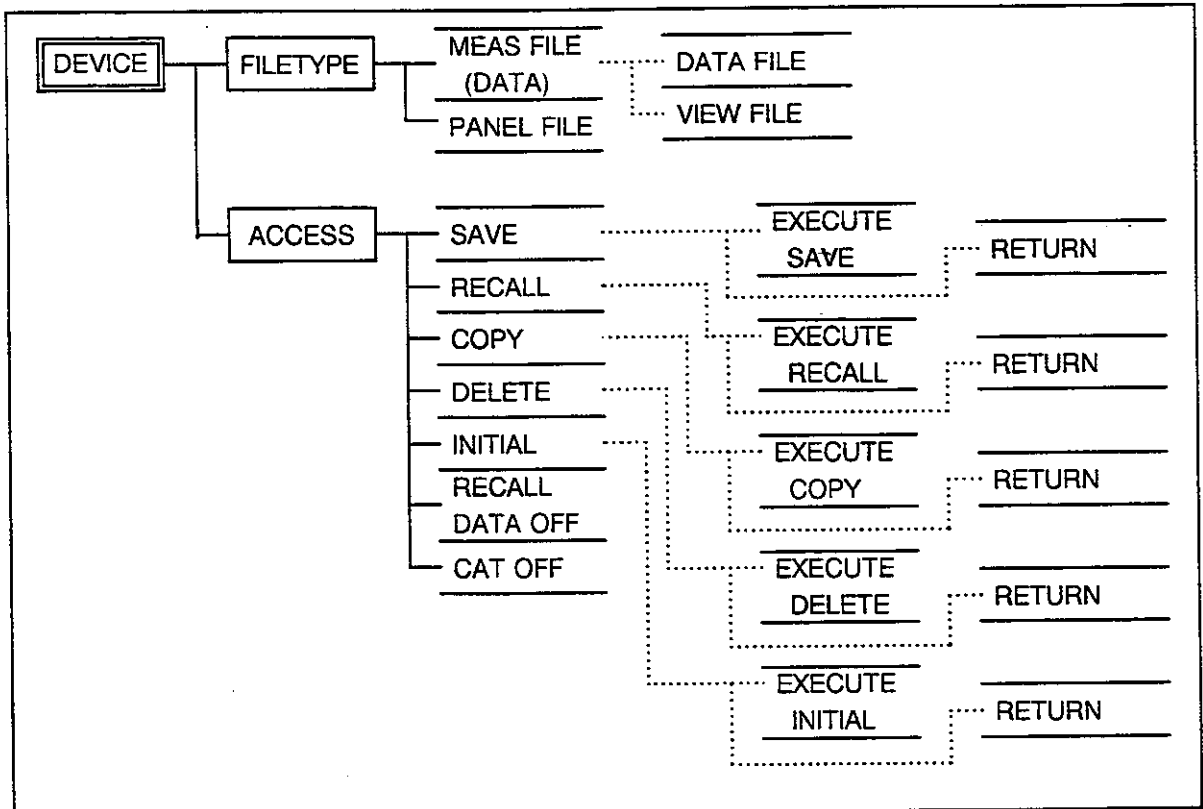


Figure 15-5 Floppy Disk Operation Menus

- MEAS FILE : Selects the measurement data saving format.
- PANEL FILE : Specifies only to record Displaying condition and Setting condition.
- SAVE : Saves data or table information in files of the specified format.
- RECALL : Retrieves data saved on the floppy disk.
- COPY : Copies a file to another area on the same floppy disk.
- DELETE : Deletes data from the floppy disk.
- INITIAL : Initializes the floppy disk.
- RECALL DATA OFF : Stops displaying, on the screen, data retrieved from the floppy disk to display real time data.
- CAT OFF : Clears the floppy disk catalog screen.

3. Operation Method

■ Floppy Disk Initializing Operation Procedure


In this section, how to use the floppy disk functions, is explained through an example.

In the following procedure, a new floppy disk is initialized.

7

Initialize a new floppy disk.

Insert a new floppy disk in the disk drive.



Enter the floppy disk initialization menu.

(Displayed at the upper left)

FD.mg = Reading the Disk Status

FD.er = Badly Formatted/Badly Mounted Disk : Check


This message is displayed for a new floppy disk or while the floppy disk status is being checked.




Initialize the floppy disk. (NOTE)

FD.mg = Disk Initialization Completed

This message is displayed when the initialization is completed.



Exit from the initialization menu.



Exit from the catalog display mode in which floppy disk files information are displayed.

NOTE

Before initializing the floppy disk, remove the write-protection from the floppy disk (write enabled). (See Figure 15-1.)

If an attempt is made to initialize a write-protected disk, initialization fails and the message


FD.mg = Disk Initialization Completed *is displayed.*

In the R9211, you can only use floppy disks initialized by the R9211.



■ "SAVE" Operation Procedure for Floppy File Specification

When perform data access (SAVE/RECALL/COPY/DELETE) to the floppy, the file name of user's specification can execute.
 When file name is not specified in SAVE, R9211 gives file name to be determined inside to execute SAVE. The way of file name specification is common to DATA FILE/VIEW FILE/PANEL FILE.

1 Set floppy disk to disk drive.

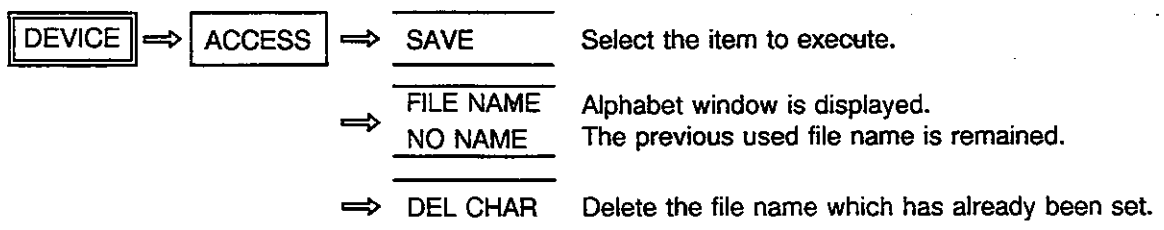

2 Enter the file name with the knob and the ENT key. (Specify up to 7 characters)

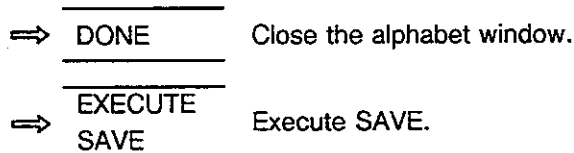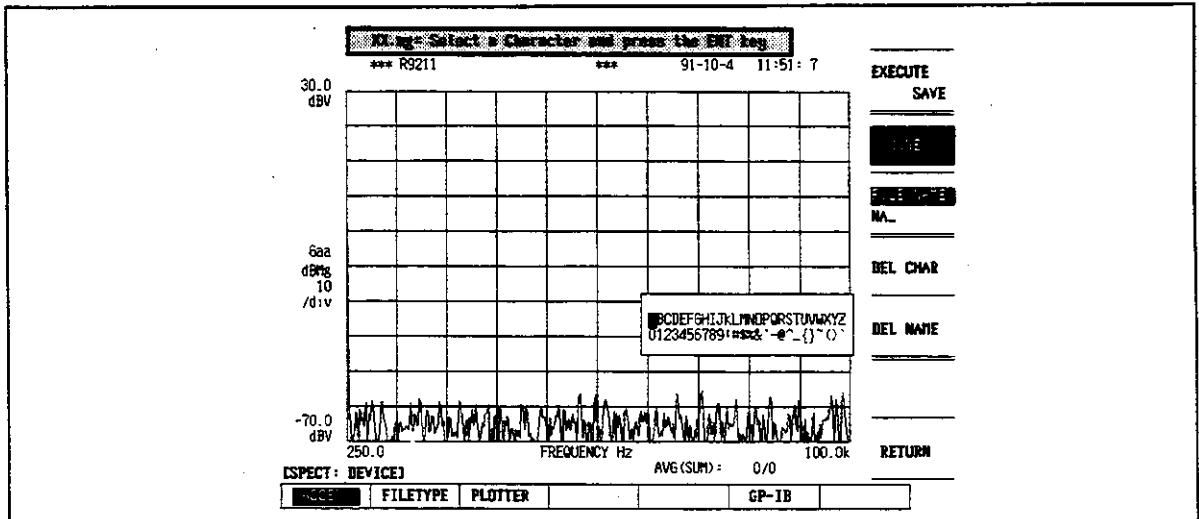

3. Operation Method

■ "COPY" Operation Procedure for Floppy File Specification

When perform data access (COPY) to the floppy, the file name of user's specification can execute.

When file name is not specified in SAVE, R9211 gives file name to be determined inside to execute SAVE. The way of the file name specification is common to DATA FILE/VIEW FILE/PANEL FILE.

1

Set floppy disk to disk drive.



Select the item to execute.
Specify the file to perform COPY with the knob.

*** R9211 *** 91-10-4 14: 8:10

RS211 CATALOGUE VOLUME LABEL: R9211 [10/03/91]
 Total storage: 714 (OKB) used: 62 (8.68%)
 File-Counter [004] 6/100 free: 652 (91.32%)

No.	File-Name	Type	Size	Date	Time
1.	SPE_000	SPE	8704	10/04/91	11:52:01
2.	PAN_001	PAN	14848	10/04/91	11:54:11
3.	VFE_002	VFE	9216	10/04/91	11:54:22
4.	WTB_003	WTB	8448	10/04/91	11:55:01
5.	GP1B	SPE	8704	10/04/91	11:56:16
6.	GP1B2	SPE	8704	10/04/91	11:56:25

EXECUTE
 RECALL
 FILE NAME
 PANL_001
 DEL CHAR
 DEL NAME
 RETURN

3SPECT: BEVICE] FILETYPE PLOTTER CP-IB



2

Enter the file name for the COPY.

→

FILE NAME
NO NAME

 Alphabet window is displayed.
 The previous used file name is remained.

Enter the file name with the  knob and the

ENT

 key.

30.0
dBV

6aa
dB%
10
/div

-70.0
dBV

FDisk: System Compatible Disk

*** R9211 *** 91-10-4 11:57:27

R9211 CATALOGUE VOLUME LABEL: R9211 [10/03/91]

Total storage: 714 (OKB) used: 62 (8.68%)

File-Counter [004] 6/100 free: 652 (91.32%)

No.	File-Name	Type	Size	Date	Time
1.	SPE_000	SPE	8704	10/04/91	11:52:01
2.	PAN_001	PAN	14848	10/04/91	11:54:11
3.	VFE_002	VFE	9216	10/04/91	11:54:22
4.	MTB_003	MTB	8448	10/04/91	11:55:01
5.	GP1B	SPE	8704	10/04/91	11:56:16
6.	GP1B2	SPE	8704	10/04/91	11:56:25

EXECUTE

COPY

FILE NAME

GP1B2

DEL CHAR

DEL NAME

RETURN

250.0 FREQUENCY Hz AVG(SUM): 0/0 100.0k

ISPECT: DEVICE1

FILETYPE	PLOTTER	GP-1B
----------	---------	-------


3. Operation Method


"RECALL/DELETE" Operation Procedure for Floppy File Specification


When perform data access (COPY) to the floppy, the file name of user's specification can execute.

When file name is not specified in SAVE, R9211 gives file name to be determined inside to execute SAVE. The way of file name specification is common to DATA FILE/VIEW FILE/PANEL FILE.

1 Set floppy file to disk drive.

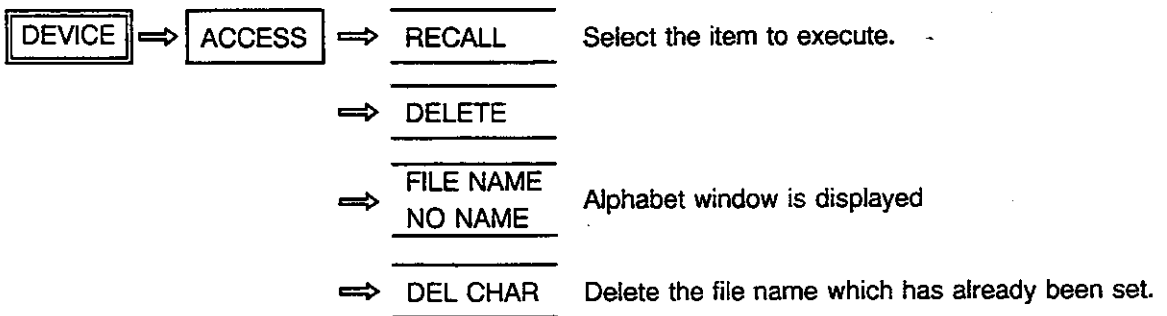


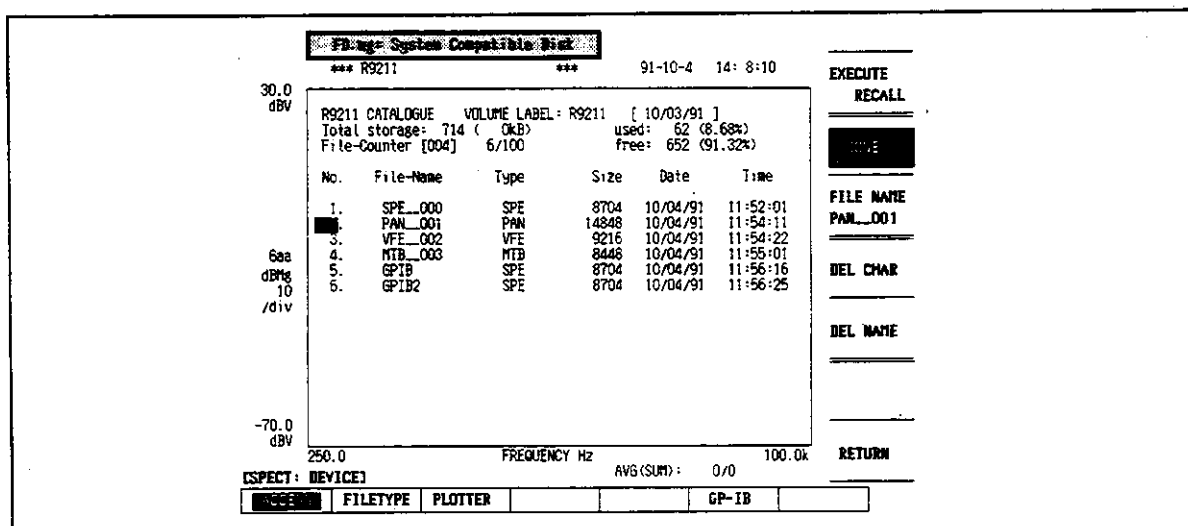
2 Enter the file name with the  knob and the **ENT key. Extension is not entered.**

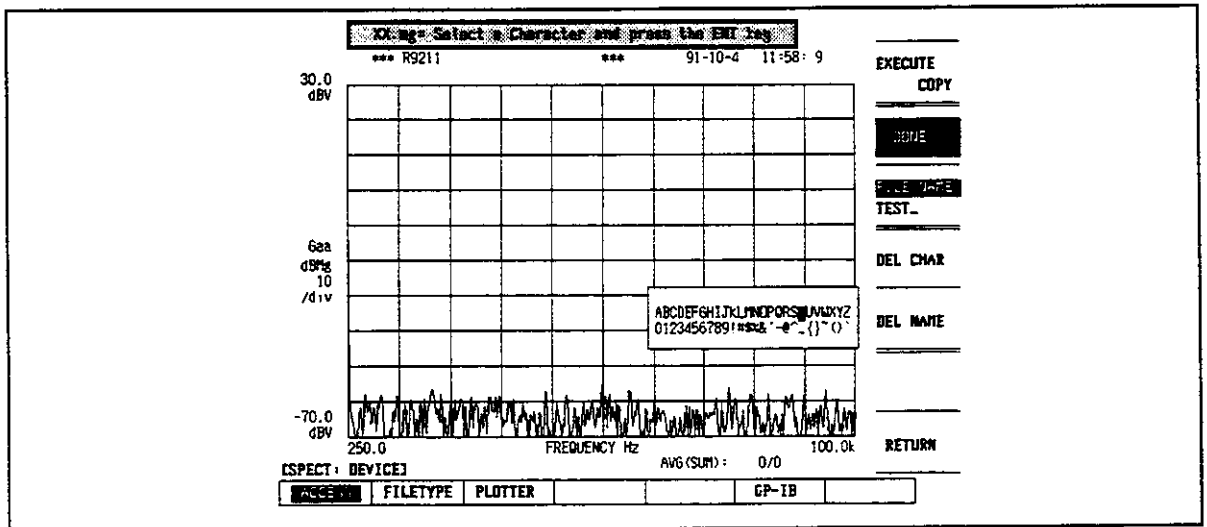

3. Operation Method

- ⇒ DONE Close alphabet window.
- ⇒ EXECUTE
RECALL Execute RECALL or DELETE when the same file name is not multiple.
- ⇒ EXECUTE
DELETE Display the corresponding file when the same file name is multiple.

3 Specify the file to perform RECALL (DELETE) from the displaying file with the  knob.



- ⇒ EXECUTE
RECALL Execute RECALL (DELETE) for the file specified with the knob.
- ⇒ EXECUTE
DELETE

3. Operation Method

■ Notes on the Retrieving Procedure

- Recalled data are displayed on one screen (single screen configuration).
- To return from the retrieved data analysis screen to the measurement screen after data have been recalled from the floppy disk, press the

RECALL
DATA OFF key.

- After a view file is recalled, the following operations are inhibited until the

RECALL
DATA OFF key is pressed.

Screen configuration modification and monitor function

Three-dimensional display

Display of instantaneous data, average data, memory saved data, operation result or t-f analysis result

- When power spectrum or complex spectrum data are recalled from a view file, do not press the VIEW ⇒ COORD sequence.


If the coordinates are changed, incorrect data will be displayed.

- Even after the RECALL
DATA OFF key is pressed, the analyzer starts

operating according to the settings of the recalled file.

■ How to Compare New Data with Retrieved Data

To compare data retrieved from the floppy disk with the current measurement data or to compare two pieces of data retrieved from the floppy disk, store one data series (floppy disk data) in the internal memory of the R9211 and set RECALL DATA to OFF. The comparison procedure is the following one:

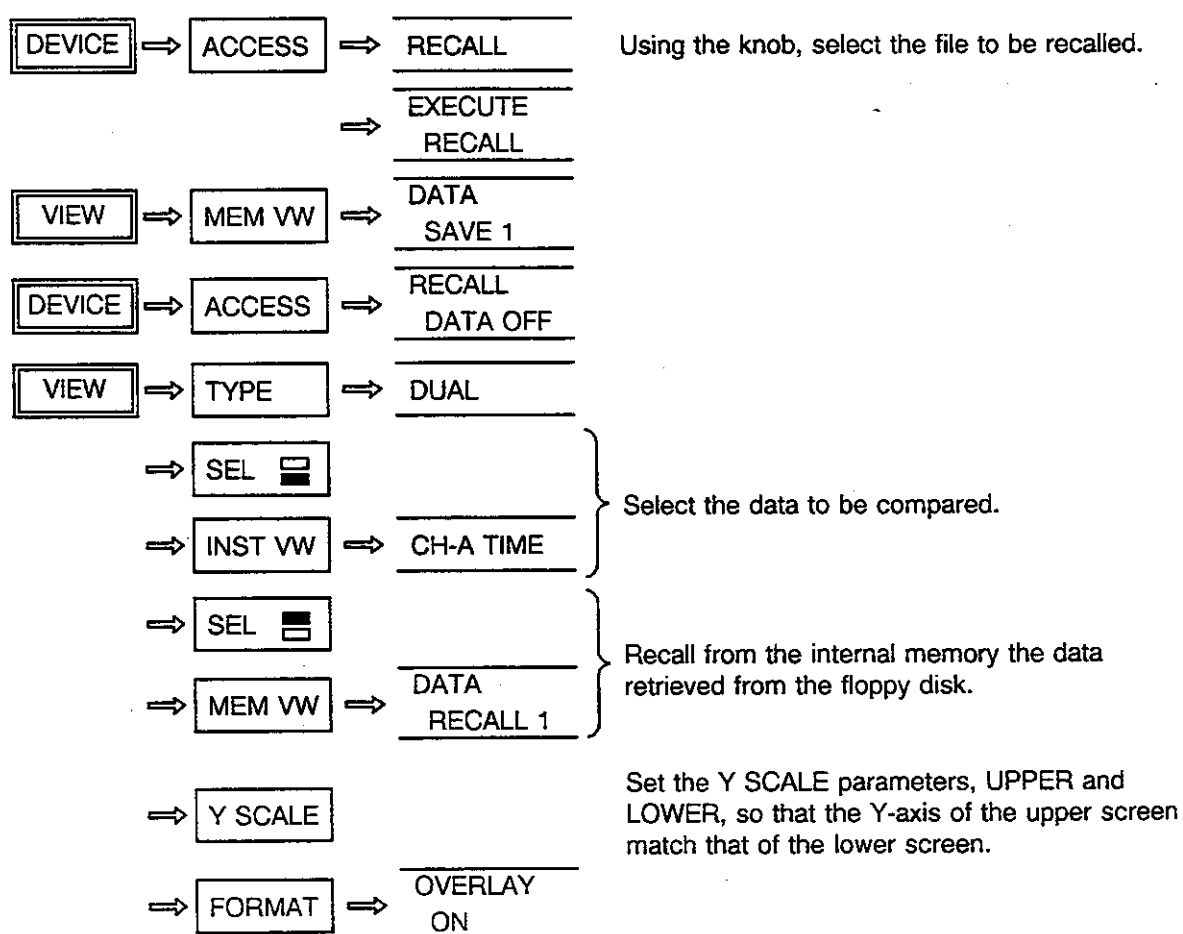

4. Regenerating Floppy Data With An IBM-PC


■ Floppy Disk Data Types and Data Format

The R9211 offers 2 types of files : data files and view files. In a data file all the information used in Table 15-4 are stored. In a view file, only the displayed screen is saved. When such a file is retrieved, the screen can not be modified with the COORD menu. However, the data format is the same for both file types.

Table 15-4 summarizes the relationships between the file types and data types.

● <IEEE floating format >

The IEEE floating point format is represented on 32 bits.

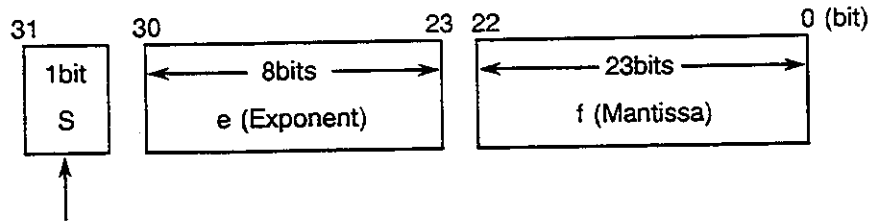

Sing of the mantissa

$$\text{Numeric value} = (-1)^S * 2^{(e-127)} * 1.f$$

Binary

NOTE

Mantissa "f" indicates the decimal data only. Therefore, "1" of the integer part must be added when it is converted to a numeric value.

4. Regenerating Floppy Data With An IBM-PC

Table 15-4 Data Arrays Saved on Disk

Mode	Function	Instantaneous	Average
Waveform	Time * Auto Corr * Cross Corr Histogram	Time (16bit) Time (16bit) Time (16bit) Time (16bit)	Time (32bit) Auto Corr (IEEE float) Cross Corr (IEEE float) Hist (32bit)
Spectrum T-F	Power Spect * Cross Spect Complex Spect	Time (16bit) Time (16bit) Time (16bit)	Power Spect (IEEE float) Cross Spect (IEEE float) Complex Spect (IEEE float)
FRF		Time (16bit)	ChA Power Spect (IEEE float) ChB Power Spect (IEEE float) Cross Spect (IEEE float)

(* In the 2-channel operation mode only)

NOTE

- If two channels (A and B) are active, ChA data and ChB data are saved in the data array block in this order.
- Instantaneous data : The waveform data is saved.
- Average data other than FRF : The average data is saved.
- FRF average data : The input and output power spectra and cross spectrum are saved in the order of "Gaa", "Gbb", and "Gab".

4. Regenerating Floppy Data With An IBM-PC

■ R9211 View File Reading Program

● Abstract


This program reads View files created on the R9211 and displays the date on an IBM-PC.

● Language

GW-BASIC (Micro Soft)

● Flowchart of the program


(1 of 4)

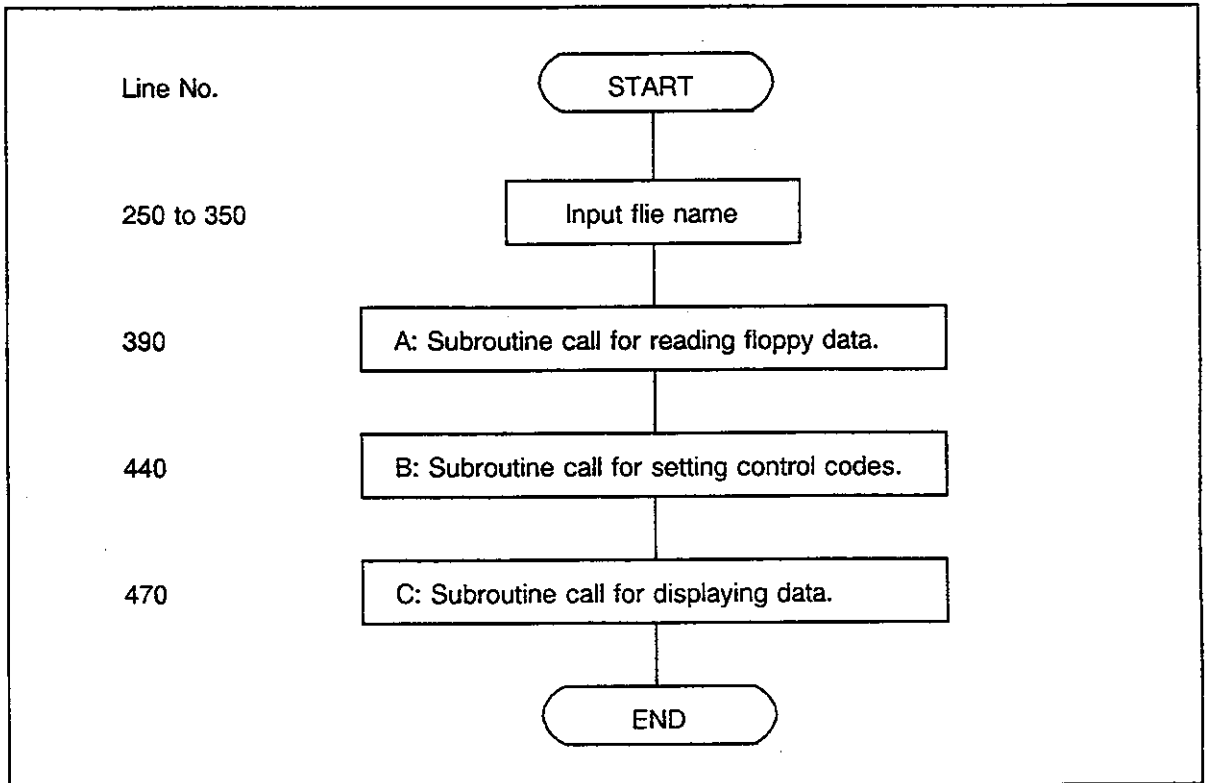

4. Regenerating Floppy Data With An IBM-PC


A : Subroutine for reading floppy data. (2000 to 2400)

(2 of 4)

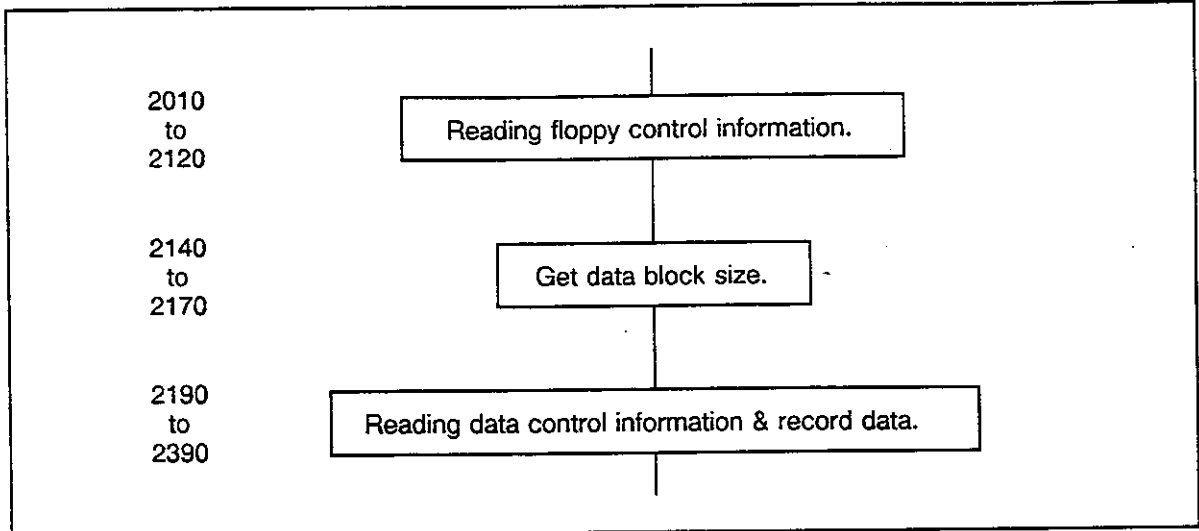

B : Setting control codes. (510 to 1100)


(3 of 4)

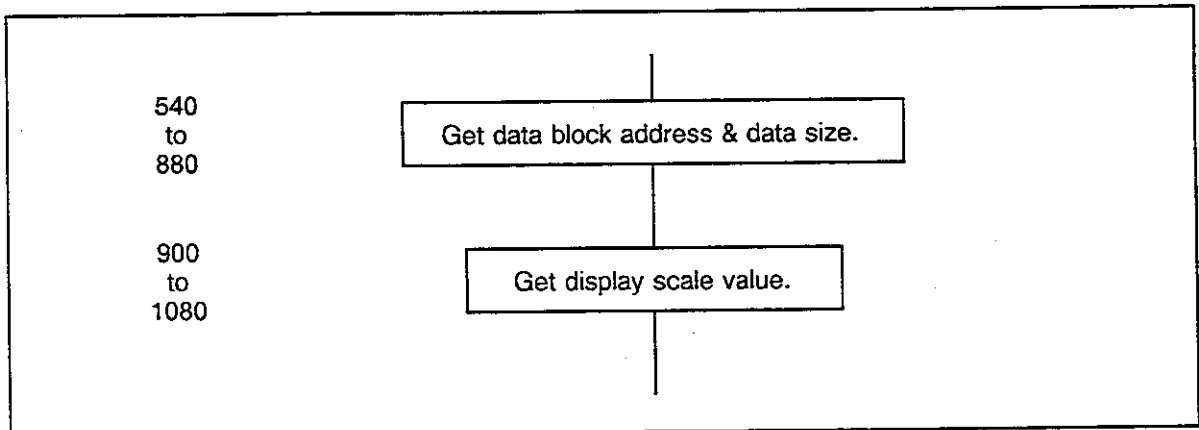

4. Regenerating Floppy Data With An IBM-PC

C : Displaying data (1100 to 1400)

(4 of 4)

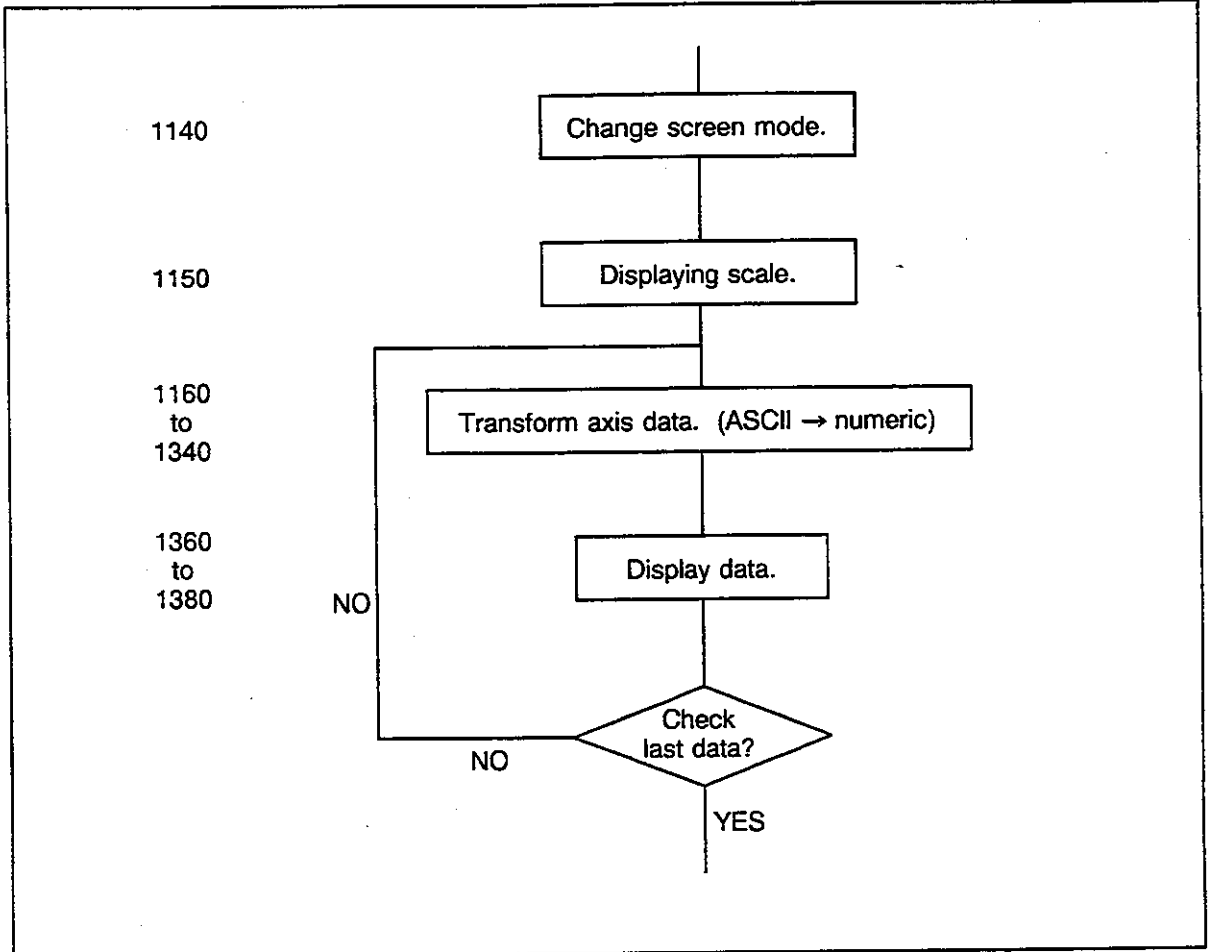

4. Regenerating Floppy Data With An IBM-PC

● Example of program

```

100 '*****
110 '*
120 '*   R9211 Floppy data reading program.
130 '*
140 '*   for VIEW FILE data.
150 '*
160 '*   REV 1.00           14-Feb-1990
170 '*
180 '*****
190 OPTION BASE 1
200 '
210 DIM D(13000),SCL$(3),DATA$(3),PNT(3),DTYP(3)
220 '
230 CLS 3
240 '
250 ' input read file name.
260 'FL$ = "c:vfe_001.vfe":GOTO 1240
270 INPUT "CURRENT DRIVE ?",DRIVE$
280 INPUT "FILE FUNCTION ?",FUNC$
290 INPUT "FILE NUMBER  ?",FILEM$
300 IF LEN(FILEM$) = 0 THEN FILEM$ = "000"
310 IF LEN(FILEM$) = 1 THEN FILEM$ = "00"+FILEM$
320 IF LEN(FILEM$) = 2 THEN FILEM$ = "0"+FILEM$
330 FL$ = DRIVE$+"vf"+FUNC$+"_"+FILEM$+".vf"+FUNC$
340 PRINT "input file name is ",FL$
350 '
360 '*****
370 '   read data from floppy.
380 '
390 GOSUB 2000           'read floppy data
400 '
410 '*****
420 '   set control flag
430 '
440 GOSUB 510
450 '
460 '===== data display =====
470 GOSUB 1130
480 '
490 END
500 '*****

```


4. Regenerating Floppy Data With An IBM-PC

(cont'd)

```

510 '*****
520 ' set control flag
530 '
540 AOF = 513
550 '
560 '=== top of X axis data array ==
570 '
580 P= 145
590 GOSUB 1680 ' 32bit integer
600 XTOP = INTX*256 + 1
610 '
620 '=== size of array ==
630 P = 149
640 GOSUB 1680 ' 32 bit integer
650 DATAN = INTX/4
660 '
670 '=== X axis scale and offset value ==
680 N = 153
690 GOSUB 1420 ' IEEE floating format --> floating data
700 XSCALE# = A#
710 '
720 N = 157
730 GOSUB 1420 ' IEEE floating format --> floating data
740 XOFSET# = A#
750 '
760 '=== top of Y axis data array ==
770 P = 161
780 GOSUB 1680 ' 32 bit integer
790 YTOP = INTX*256 + 1
800 '
810 '=== Y axis scale and offset value ==
820 N = 169
830 GOSUB 1420 ' IEEE floating format --> floating data
840 YSCALE# = A#
850 '
860 N = 173
870 GOSUB 1420 ' IEEE floating format --> floating data
880 YOFSET# = A#
890 '
900 '===== display scale ====='
910 ADF = 513
920 VW = AOF + D(AOF)*256 + D(AOF+1) + 768 + 112 'VIEW INFORMATION
930 '
940 N = VW + 60
950 GOSUB 1550 ' IEEE 64 bit floating format --> float data
960 XMAX = ID#
970 '
980 N = VW + 68
990 GOSUB 1550 ' IEEE 64 bit floating format --> float data
1000 XMIN = ID#
1010 '
1020 N = VW + 76
1030 GOSUB 1550 ' IEEE 64 bit floating format --> float data
1040 YMAX = ID#
1050 '
1060 N = VW + 84
1070 GOSUB 1550 ' IEEE 64 bit floating format --> float data
1080 YMIN = ID#
1090 '
1100 RETURN

```

4. Regenerating Floppy Data With An IBM-PC

(cont'd)

```
1110 '*****
1120 ' display view file data.
1130 '
1140 CLS:CLS 2:SCREEN 2,0,0 ' graphics mode ON
1150 GOSUB 1730 ' display scaling
1160 DMAX = -YMAX: DMIN = YMAX
1170 STPN = 4
1180 XN = XTOP : YN = YTOP
1190 N = XN
1200 GOSUB 1420 ' IEEE floatin format --> floating data
1210 NX = A# * XSCALE# + XOFSET#
1220 '
1230 N = YN
1240 GOSUB 1420 ' IEEE floatin format --> floating data
1250 NY = A# * YSCALE# - YOFSET#
1260 '
1270 FOR I = 1 TO DATAN-1
1280 N = XN + I * STPN
1290 GOSUB 1420 ' IEEE format --> 32 bit floating data.
1300 XP = A# * XSCALE# + XOFSET#
1310 '
1320 N = YN + I * STPN
1330 GOSUB 1420 ' IEEE format --> 32 bit floating data.
1340 YP = A# * YSCALE# - YOFSET#
1350 '
1360 LINE (XP,YP)-(NX,NY),2
1370 NX = XP : NY = YP
1380 NEXT I
1390 '
1400 RETURN
```

4. Regenerating Floppy Data With An IBM-PC

(cont'd)

```

1410 *****
1420 IEEE 32 bit floating format --> floating data
1430
1440 X1 = D(N) : X2 = D(N+1) : X3 = D(N+2) : X4 = D(N+3)
1450 IF (X1 = 0) AND (X2 = 0) AND (X3 = 0) AND (X4 = 0) THEN 1460 ELSE 1480
1460 A# = 0!
1470 GOTO 1530
1480 SIGN = (-1)^((X1 AND 128)/128)
1490 EXP1 = ((X1 AND 127)*2 + (X2 AND 128)/128)-127
1500 EXPO# = 2^EXP1
1510 FRAC# = ((X2 OR 128)+(X3 + X4/256)/256)/128
1520 A# = SIGN*EXPO#*FRAC#
1530 RETURN
1540 *****
1550 IEEE 64 bit floating format --> double data
1560 X1 = D(N) : X2 = D(N+1) : X3 = D(N+2) : X4 = D(N+3)
1570 X5 = D(N+4):X6 = D(N+5) : X7 = D(N+6) : X8 = D(N+7)
1580 IF (X1=0)AND(X2=0)AND(X3=0)AND(X4=0)AND(X5=0)AND(X6=0)AND(X7=0)AND(X8=0)THEN
1590 ELSE 1610
1590 ID# = 0!
1600 GOTO 1660
1610 SIGN = (-1)^((X1 AND 128)/128)
1620 EXP1 = ((X1 AND 127)*16 + (X2 AND 240)/16)-1023
1630 EXPO# = 2^EXP1
1640 FRAC# = ((((((X8/256)+X7)/256+X6)/256+X5)/256+X4)/256+X3)/256+((X2 AND 15)
OR 16))/16
1650 ID# = SIGN * EXPO#* FRAC#
1660 RETURN
1670 *****
1680 32 bit integer data
1690
1700 INTX = ((D(P)*256+D(P+1))*256 + D(P+2))*256 + D(P+3)
1710 RETURN
1720

```

4. Regenerating Floppy Data With An IBM-PC

(cont'd)

```
1730 *****
1740 ' view scale
1750 WINDOW (XMIN,YMIN)-(XMAX,YMAX)
1760 VIEW (50,40)-(600,160),,1
1770 LINE (XMIN,YMIN)-(XMAX,YMIN)
1780 LINE (XMAX,YMIN)-(XMAX,YMAX)
1790 LINE (XMAX,YMAX)-(XMIN,YMAX)
1800 LINE (XMIN,YMAX)-(XMIN,YMIN)
1810 FOR X = XMIN TO XMAX STEP (XMAX-XMIN)/10
1820   LINE (X,YMIN)-(X,YMAX)
1830 NEXT X
1840 FOR Y = YMIN TO YMAX STEP (YMAX-YMIN)/10
1850   LINE (XMIN,Y)-(XMAX,Y)
1860 NEXT Y
1870 '
1880 '----- scale -----
1890 LOCATE 6,2
1900 PRINT YMAX
1910 LOCATE 20,2
1920 PRINT YMIN
1930 LOCATE 5,2
1940 PRINT XMIN
1950 LOCATE 5,60
1960 PRINT XMAX
1970 LOCATE 1,1
1980 RETURN
1990 *****
```

4. Regenerating Floppy Data With An IBM-PC

(cont'd)

```

1990 '*****
2000 ' data read from floppy
2010 OPEN "RB",#1,FL$
2020 FIELD #1,64 AS X$,64 AS Y$
2030 '
2040 GET #1
2050 GET #1
2060 FOR N = 1 TO 64
2070   D(N+128)=ASC(MID$(X$,N,1))      ' transfer bin-->Value
2080 NEXT N
2090 FOR N = 1 TO 64
2100   M = N + 64
2110   D(M+128)=ASC(MID$(Y$,N,1))    ' transfer Bin-->Value
2120 NEXT N
2130 '
2140 ' check data size
2150 P = 177
2160 GOSUB 1680
2170 MAXBUF = INTX * 2
2180 '
2190 FOR L = 3 TO MAXBUF
2200   GET #1
2210   FOR N = 1 TO 64
2220     M = 128*(L-1)+N
2230     D(M)=ASC(MID$(X$,N,1))      ' transfer Bin-->Value
2240   NEXT N
2250   FOR N = 1 TO 64
2260     M = 128*(L-1)+N+64
2270     D(M)=ASC(MID$(Y$,N,1))    ' transfer Bin-->Value
2280   NEXT N
2290 NEXT L
2300 GOTD 2400
2310 FOR I = 1 TO 2048 STEP 24
2320   IF (I > 1) AND (((I-1) MOD 512)=0 ) THEN INPUT DMY
2330   ANS$ = ""
2340   FOR J = 0 TO 23
2350     AD$ = HEX$(D(I+J)) : IF LEN(AD$) = 1 THEN AD$ = "0"+AD$
2360     ANS$ = ANS$ + AD$
2370   NEXT J
2380   PRINT HEX$(I-1),ANS$
2390 NEXT I
2400 RETURN

```

CHAPTER 16

PLOTTER AND PRINTER

This chapter explains how to make a hard copies of some data with a plotter or a printer.

CONTENTS

1. Outline	16-2
2. How To Use A Plotter	16-3
Connectable Plotters and Connection Method	16-3
Plotter Setting	16-4
Operation Procedure	16-5
Scale Plot Operation Procedure	16-9
Plot Area for Scale Plot	16-12
Set the Rate of Reduction for Scale Plot ..	16-13
Precautions	16-15
3. How To Use A Video Printer	16-21
Video Printer Connection Method	16-21
Video Printer Setting	16-22
Precautions	16-22
4. How To Use The Built-In Printer	16-23

1. Outline

A plotter or a video printer (See Figure 16-1) can be connected to the R9211. Besides an optional built-in printer is also available.

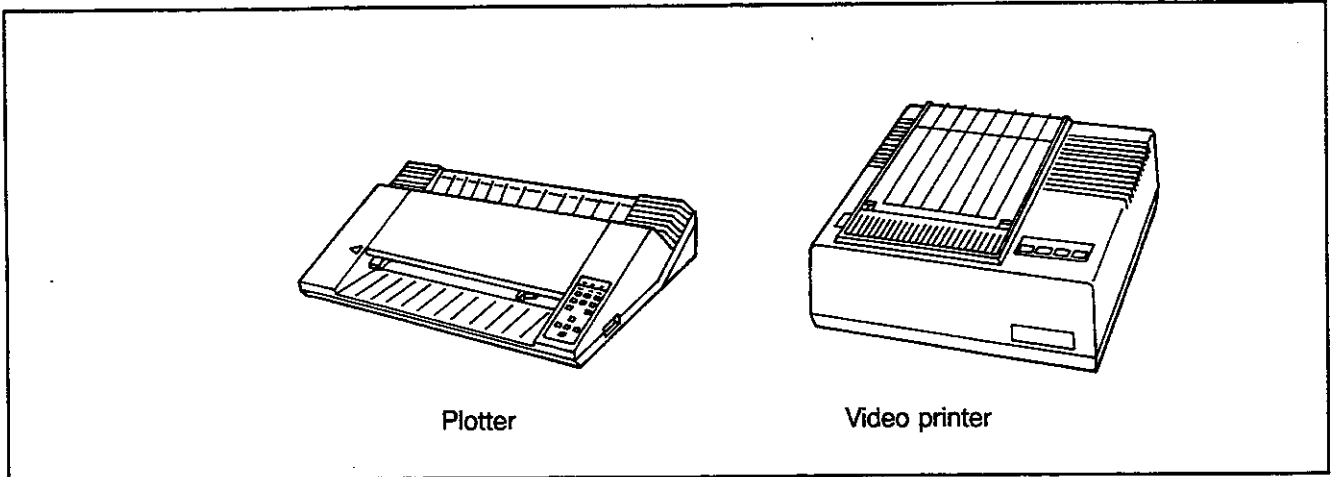


Figure 16-1 Plotter and Video Printer

- (1) The plotter is used to plot, on paper, data sent through the GPIB.
The paper size depends on the plotter type. But the R9211, accepts A4 and A3 size paper for data plotting. Waveform data, labels, and scales can be output ; however, the menu settings shown on the screen cannot be output.
The advantage of using a plotter is that data such as a waveform can be output onto a A4-size paper directly. Such data can be used in a report without any change. Moreover, several curves can be written, with no information pass, on the same piece of paper, by changing the pen (different colors are available!), thus facilitating data comparison.
- (2) A video printer and the optional built-in printer output the whole data displayed on the screen.
Unlike a plotter, these devices cannot print several curves on the same piece of paper. However, since the output time is short, any intermediate data, which must be recorded, can be printed out handily.

CAUTION !

Data printed on thermosensible paper (used by the printers) may disappear depending on the temperature and storage period. You should take a photocopy of such printed out data when you want to keep them for a long time.

2. How To Use A Plotter

■ Connectable Plotters and Connection Method

To output measured data to a plotter, you must connect the plotter to the R9211's GPIB connector. Table 16-1 lists the plotters which can be connected. Figure 16-2 shows the plotter connection diagram.

Table 16-1 Connectable Plotters

Manufacturer	Plotter
ADVANTEST	R9833
HP	7470A, 7475A, 7550A

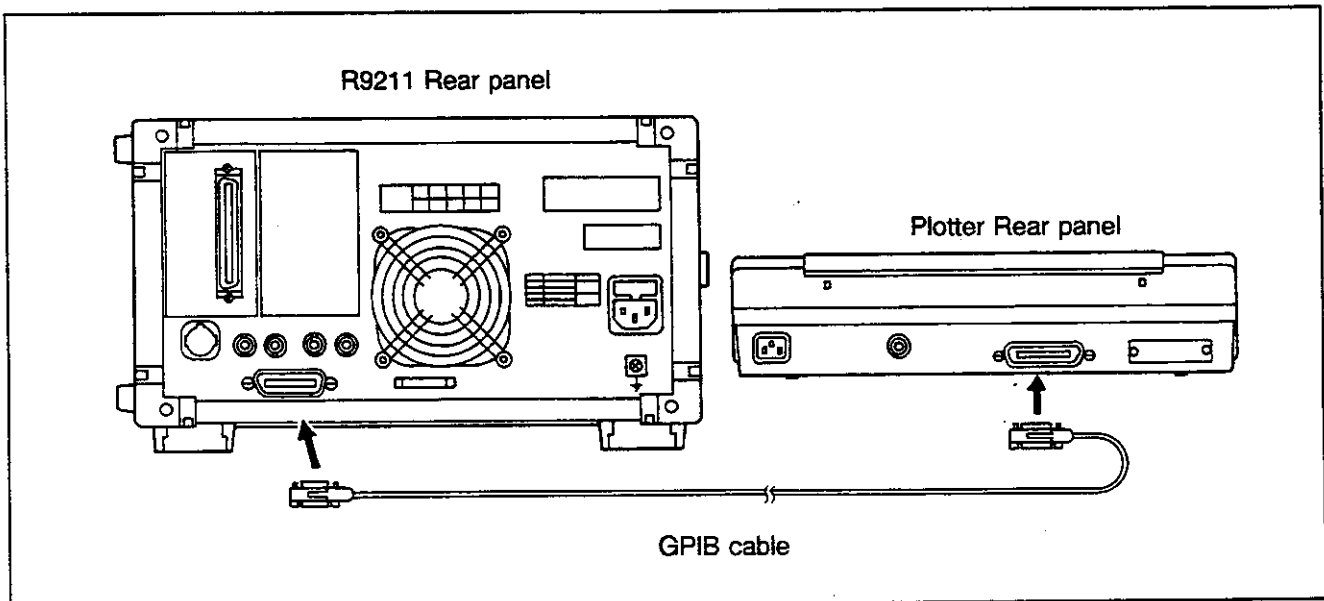


Figure 16-2 Plotter Connection Diagram

CAUTION!

- Before connecting a plotter to the R9211, switch them both off.
- Read the Instruction Manual of the plotter carefully before using it.

2. How To Use A Plotter

■ Plotter Setting

For the plotter address, set the dip switches to the listen only mode. Some types of plotters require settings other than the address setting. For further details, refer to the Instruction Manual of the plotter.

- Example of settings when using horizontally A4-size paper, on the R9833 (ADVANTEST)

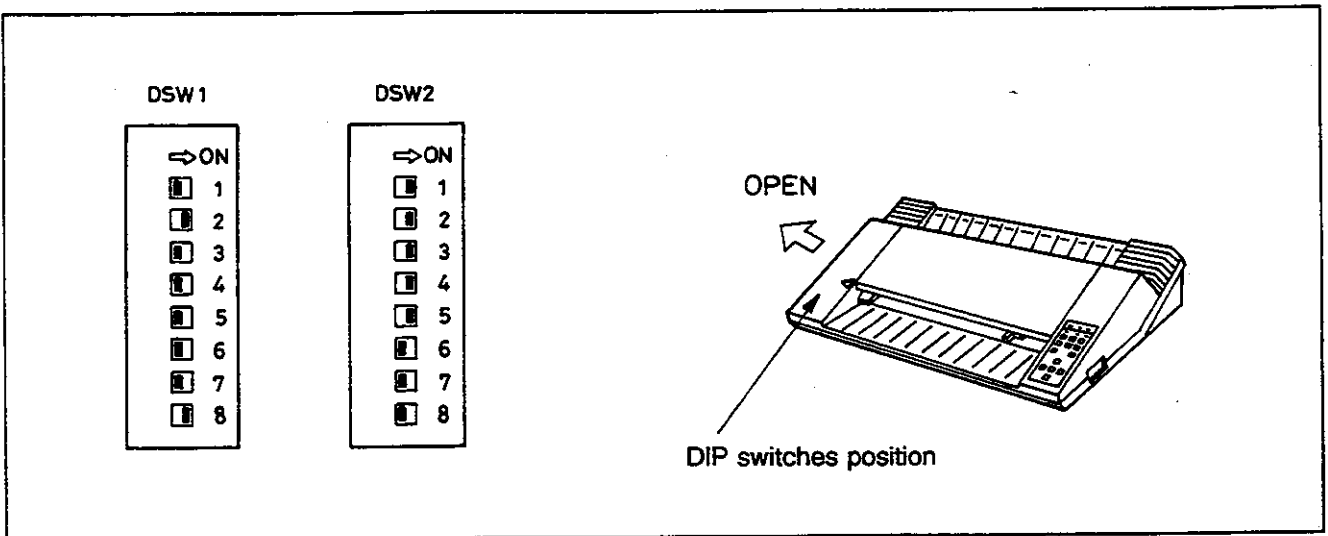


Figure 16-3 DIP Switches Settings

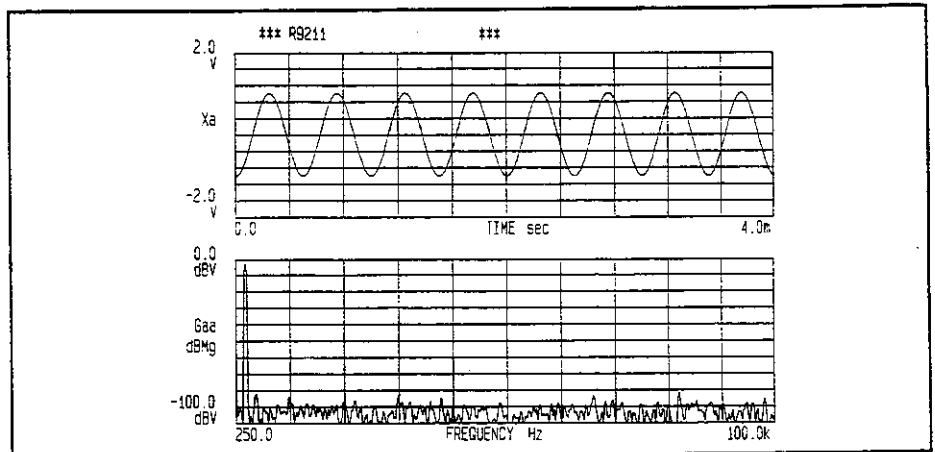


Figure 16-4 Plotter Output Example

■ Operation Procedure

In the operation procedure below, two screens are plotted on different areas of one A4-size piece of paper with a plotter (R9833).

Connect the plotter to the R9211 via a GPIB cable and set the plotter address to listen only mode. The steps marked with * are set during initialization but execute them at least once to remember these items.

1


Set the GPIB.



To output data to the plotter through the GPIB, set the GPIB mode of the R9211 to "talk only".

2

Specify the information to be output.

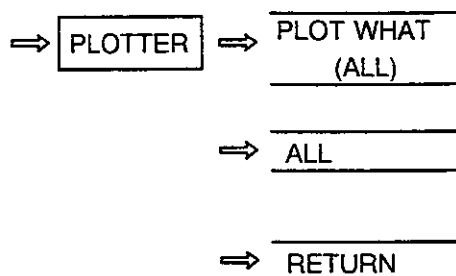


* Select the information (waveform, scales, label) to be output to the plotter.

* Output all possible information: waveform, scales, and label.

*

3

Select a pen mode.

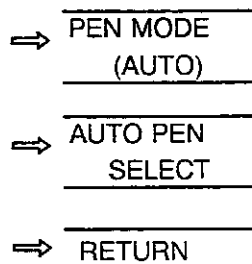

* Determine whether the pen color is to be changed according to the information type.

* Switch pens automatically to plot data in different colors.

*



2. How To Use A Plotter

4

Select the paper size.

⇒ PAPER SIZ
(OFF)

Set the size of the paper to be used.
(OFF: A4-size)

⇒ A4

Set the paper size to A4.

⇒ RETURN

5

Specify the plotter command format.

⇒ PLOT TYPE
AT/HP

Specify the command format of the plotter to be used. You can select either AT (ADVANTEST) or HP (Hewlett Packard). If the DIP switches of the R9833 are set as shown in Figure 16-3, select HP.

6

Specify a division pattern (lower).

⇒ MACRO PLT
(OFF)

Determine whether the data are to be plotted on different areas on the paper.

⇒ Mnm

Specify paper partitioning.

⇒ nm ?
21

* Specify the position of the partition.

⇒ 21 ⇒ ENT

* Specify the lower area of a twice partitioned, A4, vertical paper.



7 Display, on the CRT, the data to be plotted.

Actually plot these data (in the lower paper area).

Plot.

Specify the next paper area (upper area).

⇒ ⇒ MACRO PLT

Change the position of the area.

⇒ nm ?

Specify the divided area position.

⇒ 22 ⇒

Specify the upper area of a twice partitioned, A4, vertical paper.

8 Display, on the CRT, the data to be plotted.

Actually plot these data (in the upper paper area).

Plot.

Thus, data are plotted on the upper and lower areas of a A4 vertical piece of paper. (See Figure 16-5.)

CAUTION!

If you press the key while data are being plotted, plotting is aborted. However, the data which have already been sent, are nevertheless plotted.

2. How To Use A Plotter

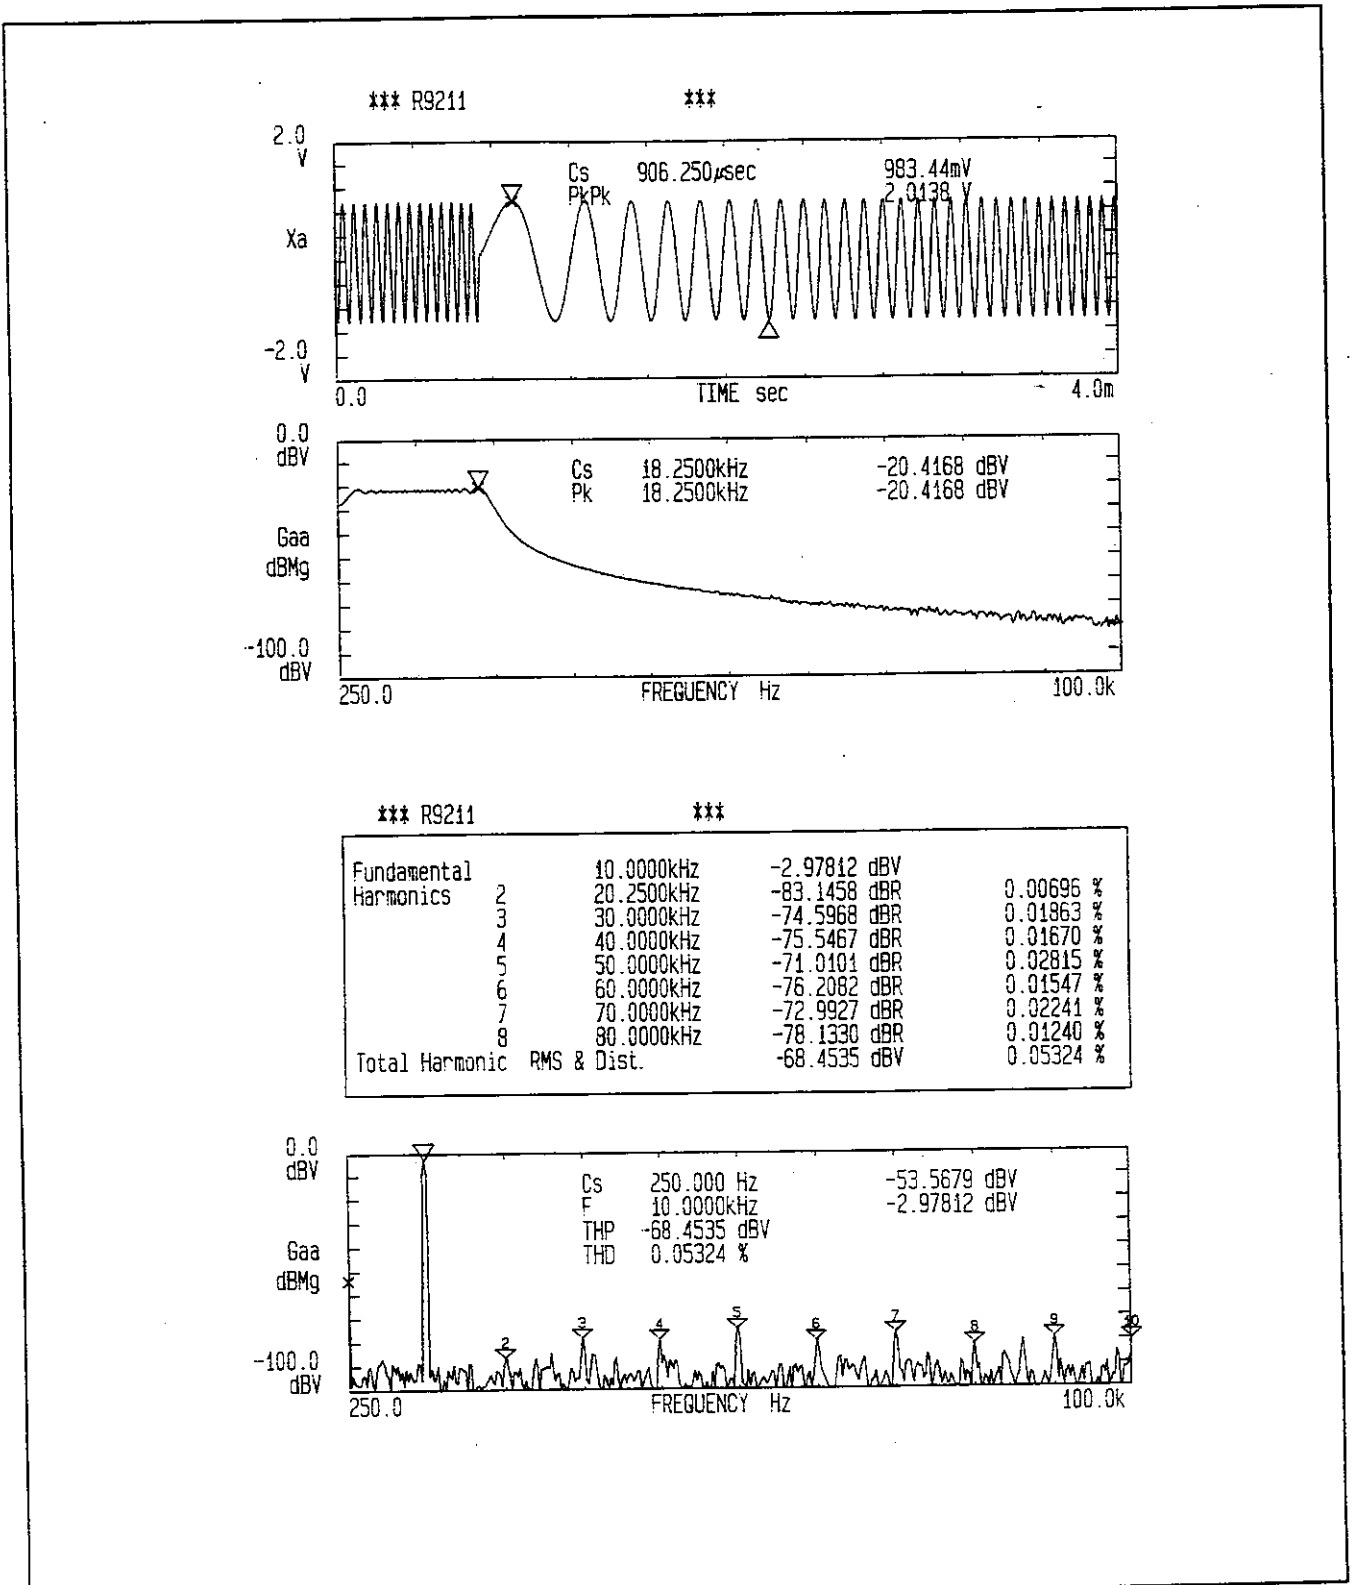


Figure 16-5 Plotting Example: 2 Double Screen Figures Are Plotted on a A4 Vertical Piece of Paper Partitioned in 2 Areas

Scale Plot Operation Procedure

This operational explanation shows the procedure to plot in the point specified by one A4-size piece of paper with a plotter.


Conned the plotter to the R9211 via a GPIB cable and set the plotter address to listen only mode. The step marked with * are set during initialization but execute them at least once to remember these items.

1 Set the GPIB.



To output data to the plotter through the GPIB, set the GPIB mode of the R9211 to "talk only".

2 Set output information.

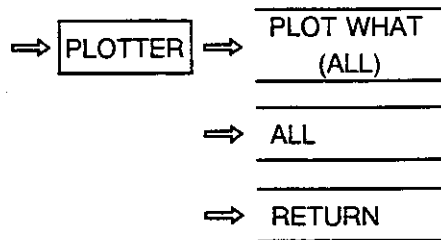


* Select the data information (waveform, scale, label) to be output to the plotter.

* Output all possible information: waveform, scale, and label.

*

3 Select a pen mode.

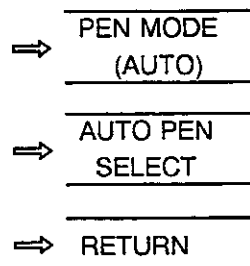

* Determine whether the pen color is to be changed according to the information type.

* Switch pens automatically to plot data in different colors.

*



2. How To Use A Plotter

4 Select the paper size.

- ⇒ PAPER SIZ
(OFF) Set the size of the paper to be used.
(OFF : A4-size)
- ⇒ USER SIZE Set the paper size to USER SIZE.
- ⇒ RETURN When setting USER SIZE, Plot the specified area
in SCALE PLOT menu.

5 Specify the plotter command format.

- ⇒ PLOT TYPE
AT Specify the command format of the plotter to be
used. You can select either AT (ADVANTEST)
or HP (Hewlett Packed).
If the DIP switches of the R9833 are set as
shown in Figure 16-3, select HP.

6 Set the drawing area.

- ⇒ SCALE PLT Set the drawing area.
- ⇒ Xmin
0mm Set each value with the **ENT** key.
- ⇒ Ymin
0mm
- ⇒ Xmax
225mm
- ⇒ Ymax
162mm
- ⇒ SCALE
100% Set the rate of reduction.



7

Confirm the plot area.

When select the TEST
SCALE to plot on the PLOT
WHAT menu, the area to be plotted is confirmed.

The plotted line displays the sheet size in the range of the standard for the scale plot.
The solid line displays the area to be drawn by the scale plot.

⇒ PLOT WHAT Select the object to be drawn.
(ALL)

8

Display, on the CRT, the data to be drawn.

Execute the plot (in the upper paper area).

COPY

Execute the drawing.

Thus, data are plotted on the upper and lower areas of a A4 vertical piece of paper.
(See Figure 16-5)


CAUTION !

*If you press the **COPY** key while data are being plotted, plotting is aborted.*


However, plot the data which have already been sent.

2. How To Use A Plotter

■ Plot Area for Scale Plot

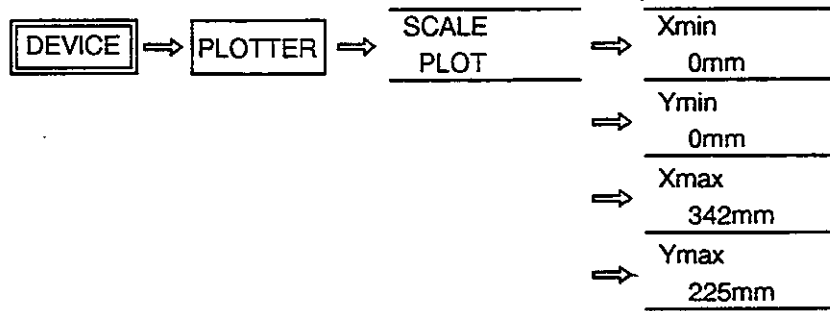

Enter the area to be plotted with the numeric key and the "ENT" key. This value specifies the place for the starting point of the standard box in the area to be plotted.

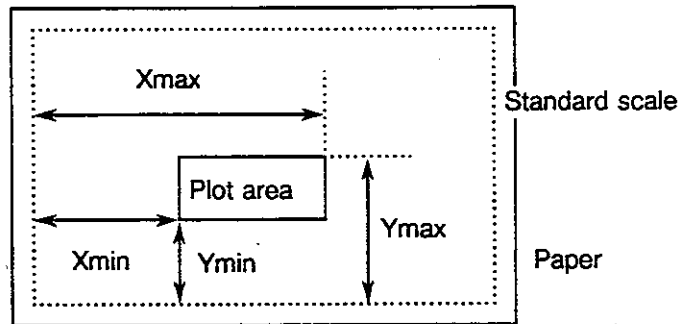

Graph and list are plotted in the scale which indicates the plot area. Refer to "TEST SCALE" for the plot of the standard scale which indicates the standard scale and the plot area.

The plot area to be set is as follows:

	Plot area to the X axis Xmin, Xmax	Plot area to the Y axis Ymin, Ymax
A4 (width)	0 to 250mm	0 to 180mm
A3 (width)	0 to 380mm	0 to 250mm
A4 (vertical)	0 to 175mm	0 to 246mm
A3 (vertical)	0 to 266mm	0 to 385mm

However, the difference between Xmax and Xmin, Ymax and Ymin needs 10mm or more than. When plot, the offset of 1mm for A4 paper, and 3mm for A3 paper occurs in some cases.

2. How To Use A Plotter


When $X_{max} \leq 250\text{mm}$ and $Y_{max} \leq 180\text{mm}$ in the width (ROT 90 OFF), plot the standard scale according to A4 paper.

When either of the above is larger than each value, plot the standard scale automatically according to A3 paper.

Similarly when $X_{max} \leq 175\text{mm}$ and $Y_{max} \leq 266\text{mm}$ in the vertical (ROT 90 ON), plot the standard scale according to A4 paper.

When either is larger than each value, plot the standard scale automatically according to A3 paper.

■ Set the Rate of Reduction for Scale Plot




Enter the rate of reduction in the actual plot for the area specified by the [Specification of Plot Area]

Enter the value with the numeric key and the ENT key.

The setting range goes to 100 from 10%.

The reduction is the standard for the center of the scale which indicates the plot area. The X and Y axis is performed at the same rate for the reduction.

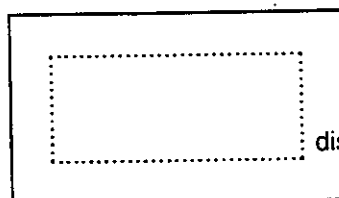

Scale to indicate the plot area.
(display area for graph and list in 100%)

display area for graph and list in 50%

At this time, the scale size to be plotted in "TEST SCALE" is not changed. The following page shows the scale and the graph in the 100% plotting and the 50% plotting.

2. How To Use A Plotter

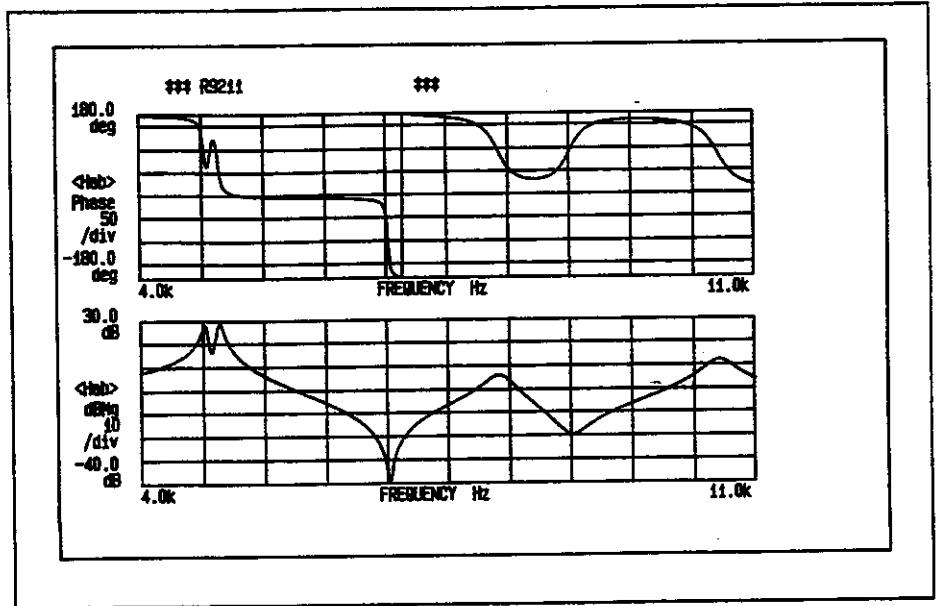


Figure 16-6 Scale and Graph in 100% Plotting

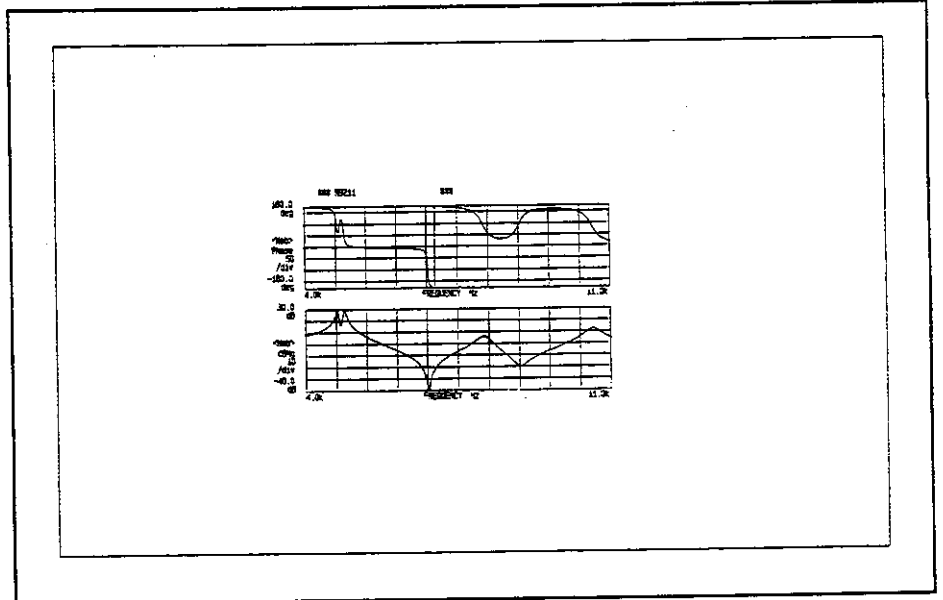


Figure 16-7 Scale and Graph in 50% Plotting

■ Precautions

● Specifying pen colors

With the R9211, you can specify a different pen color for each information


to be plotted by using the PEN
SELECT key.

Pen type (related to the information it draws)	Color default value
GRID PEN	1
ANNOT PEN	2
TRACE PEN	3
READOUT	4

In the R9833, pen 1 is used if there is no pen at the specified position. The plotter must move to exchange pens, thus, in such cases, it must repeat unnecessary operations.

Attach a pen or change the R9211 default pen specification made.

● How to change the pen color. (Example: TRACE PEN from 3 to 1.)

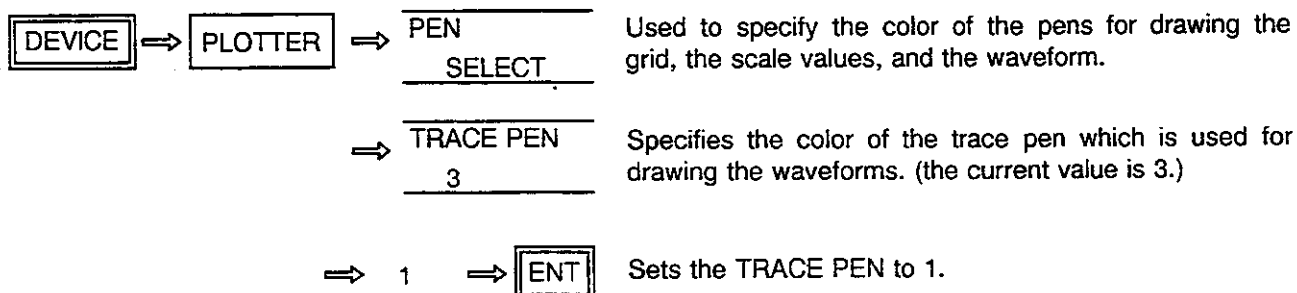


● How to specify TRAC LINE

Using the TRAC LINE key in the PEN SELECT menu, you can specify a solid, dashed, or dotted line to plot waveform data.

2. How To Use A Plotter

○ Modification example: How to change TRAC LINE from solid to dashed

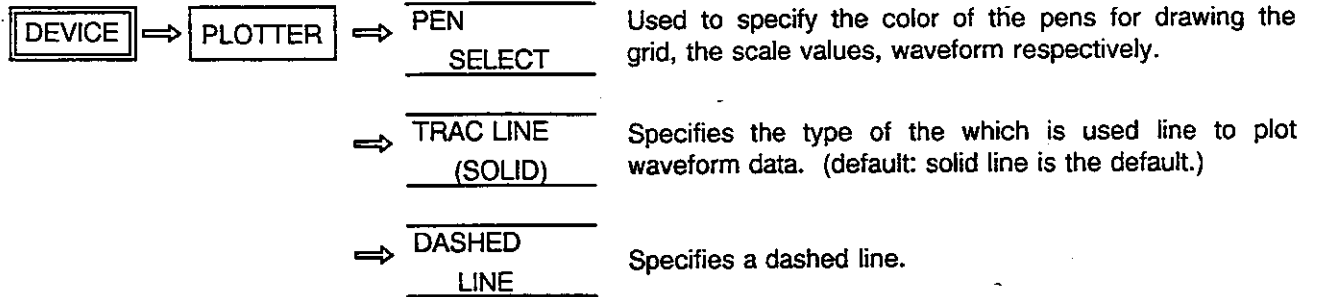

○ Plotter Output Example

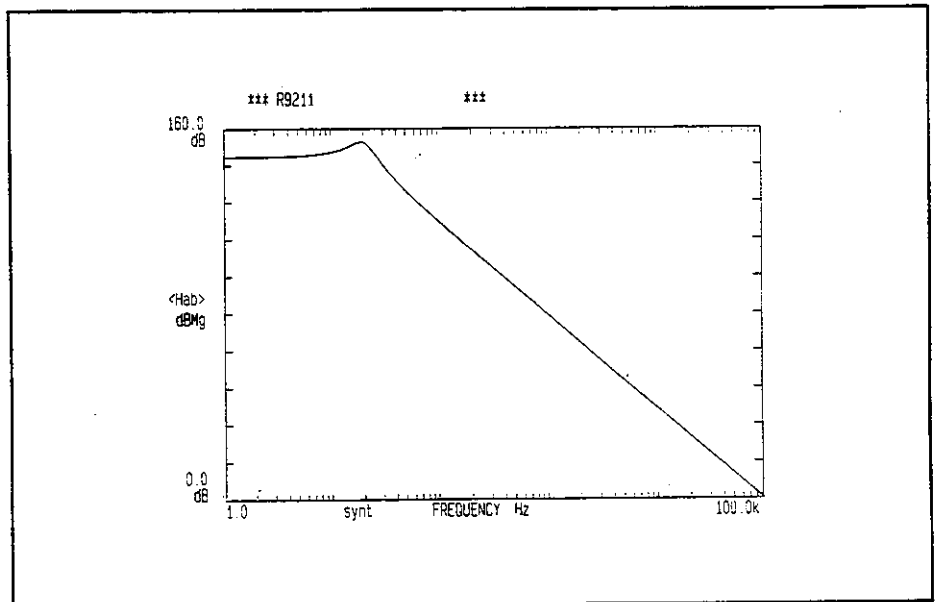


Figure 16-8 Example: TRAC LINE = SOLID LINE

2. How To Use A Plotter

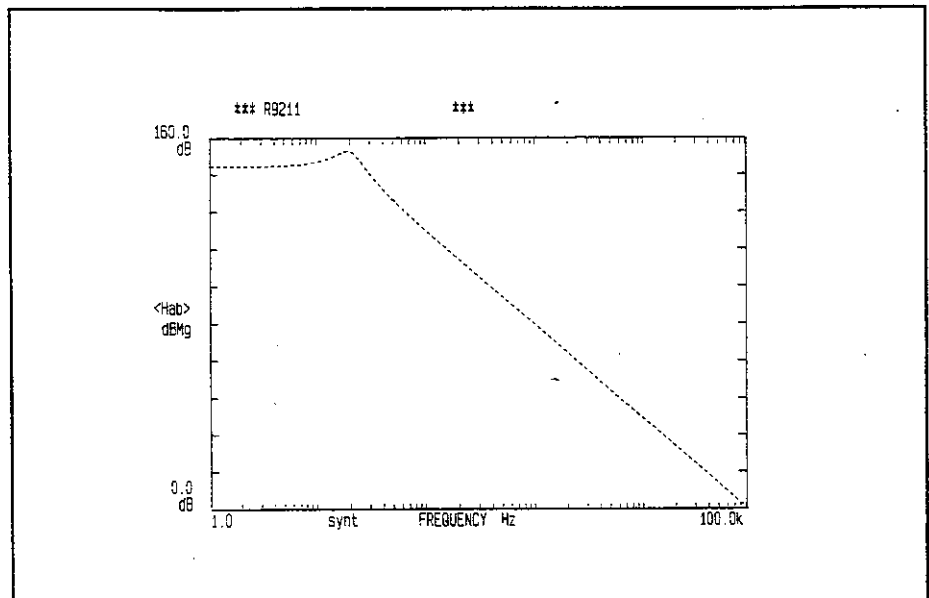


Figure 16-9 Example: TRAC LINE = DASHED LINE

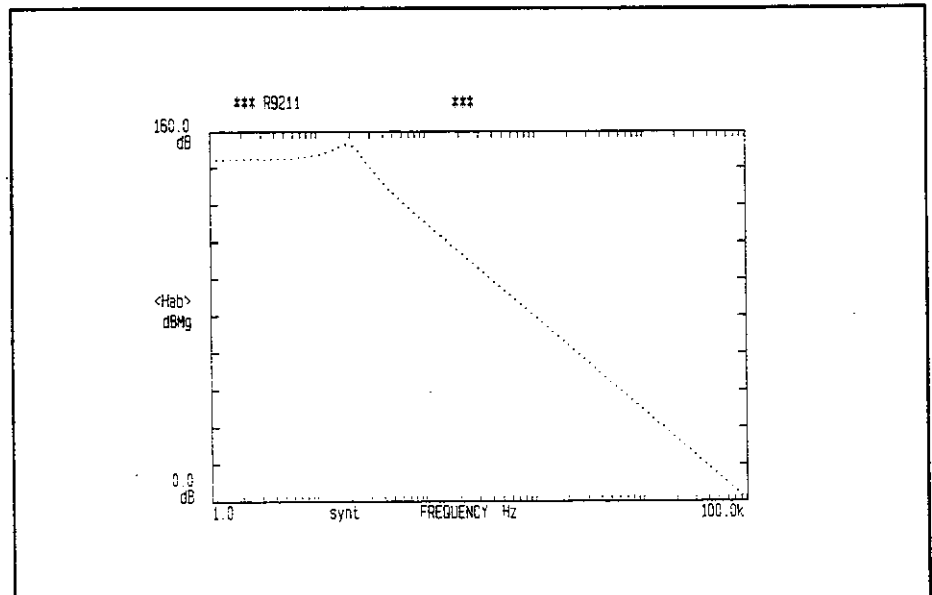


Figure 16-10 Example: TRAC LINE = DOTS LINE

2. How To Use A Plotter

● How to specify the position of a plotting area when th paper sheet is partitioned (MACRO PLT)

There are four division patterns and each divided area is assigned a number. Choose the appropriate combination for Mnm to specify a plotting position.

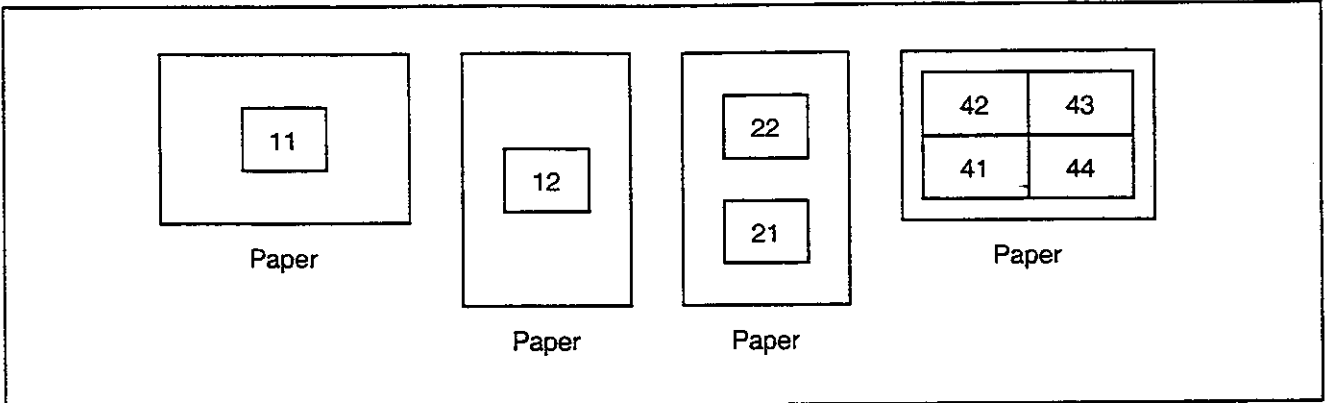



Figure 16-11 MACRO PLT Partition's Area Positions

● How to plot 3-dimensional graphs

It is impossible to store whole 3-dimensional data in the memory. Therefore, 1-line data is output to the plotter each time 1-line data is displayed on the screen. The plotting procedure is slightly different from those in other screen modes.

○ Procedure

- (1) Set carefully the appropriate parameters in the GPIB and PLOTTER menus.
- (2) Set the timing for 3-dimensional data plotting.

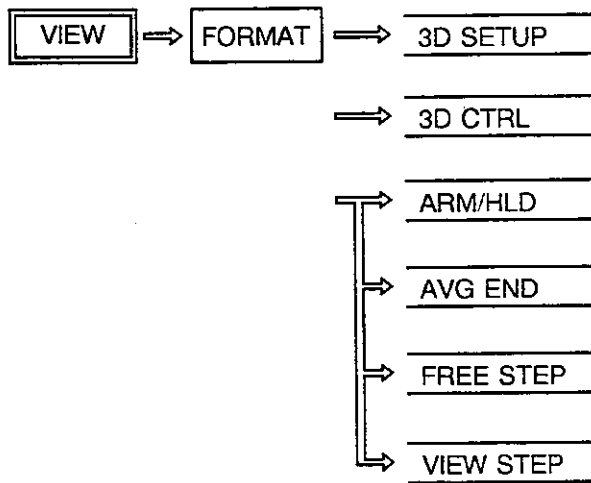


(3) Press the following keys:



(4) Press the **COPY** key.

(5) When FREE STEP is selected, pressing the **COPY** key will start plotting.

(6) When ARM/HLD is selected, the following menu will be displayed:

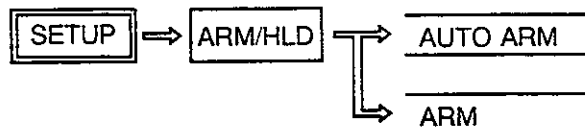

Select AUTO ARM or ARM.


When AUTO ARM is selected, data are plotted at each trigger event.

When ARM is selected, data are plotted each time ARM is pressed.

(7) When you selected AVG END, press the **START** key.
After completion of averaging, data plotting starts.

2. How To Use A Plotter

(8) When VIEW STEP is selected (only in the T-F mode), the following menu will be displayed:

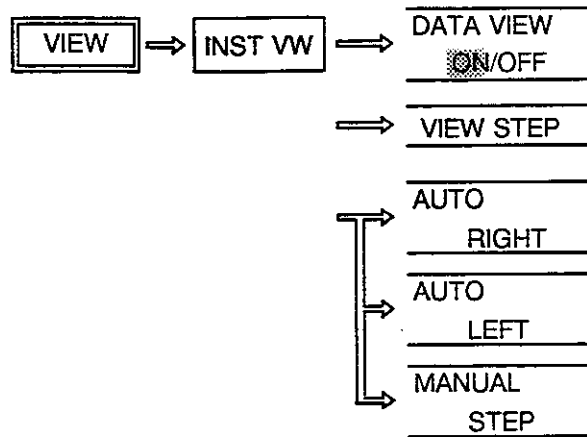

Select AUTO RIGHT, AUTO LEFT, or MANUAL STEP.
 When AUTO RIGHT or AUTO LEFT is selected, plotting starts.
 When MANUAL STEP is selected, data is plotted each time the

MANUAL STEP key is pressed.

For further details, see "● Three-dimensional Display in T-F Mode" in Chapter 7.

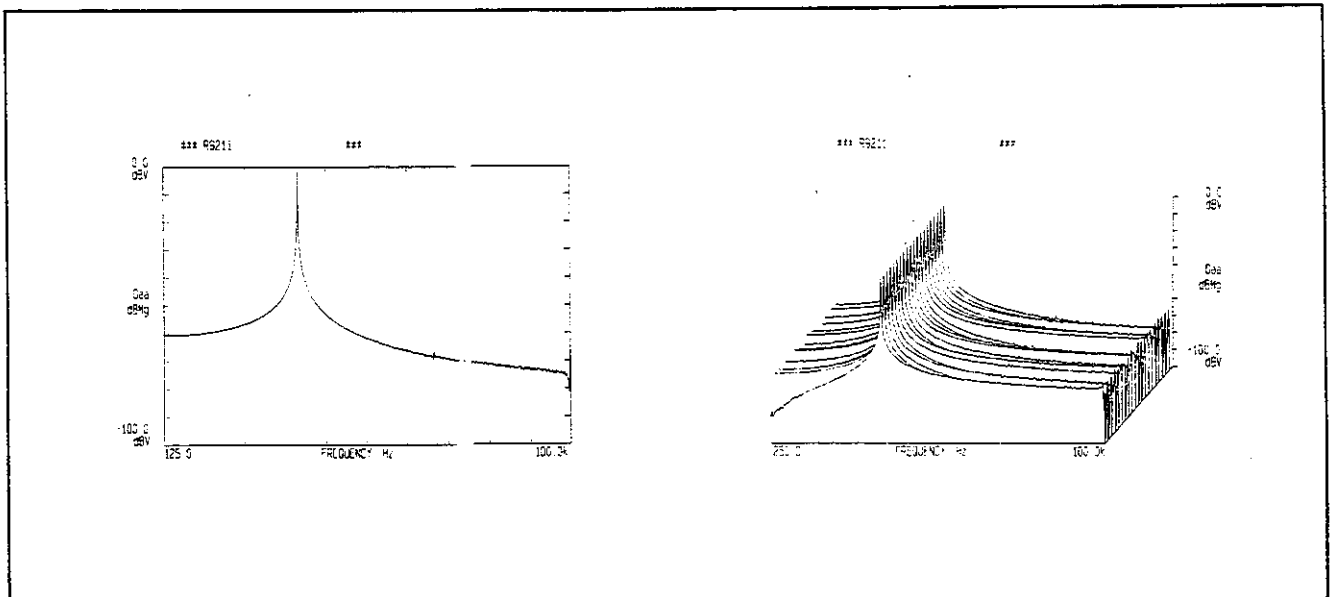


Figure 16-12 3D DISPLAY Plotter Output Example

3. How To Use A Video Printer

■ Video Printer Connection Method

You can output the displayed waveform to a video printer using the VIDEO OUTPUT connector at the rear panel of the R9211. An external CRT monitor permitting separate signal input can also be connected.

Use a dedicated cable (A01236) when connecting a video printer. Separate signals are output. Figure 16-11 shows the DIN connector pin numbers (1-8) associated signals.

The recommended video printer is the VP-45 (SEIKO).

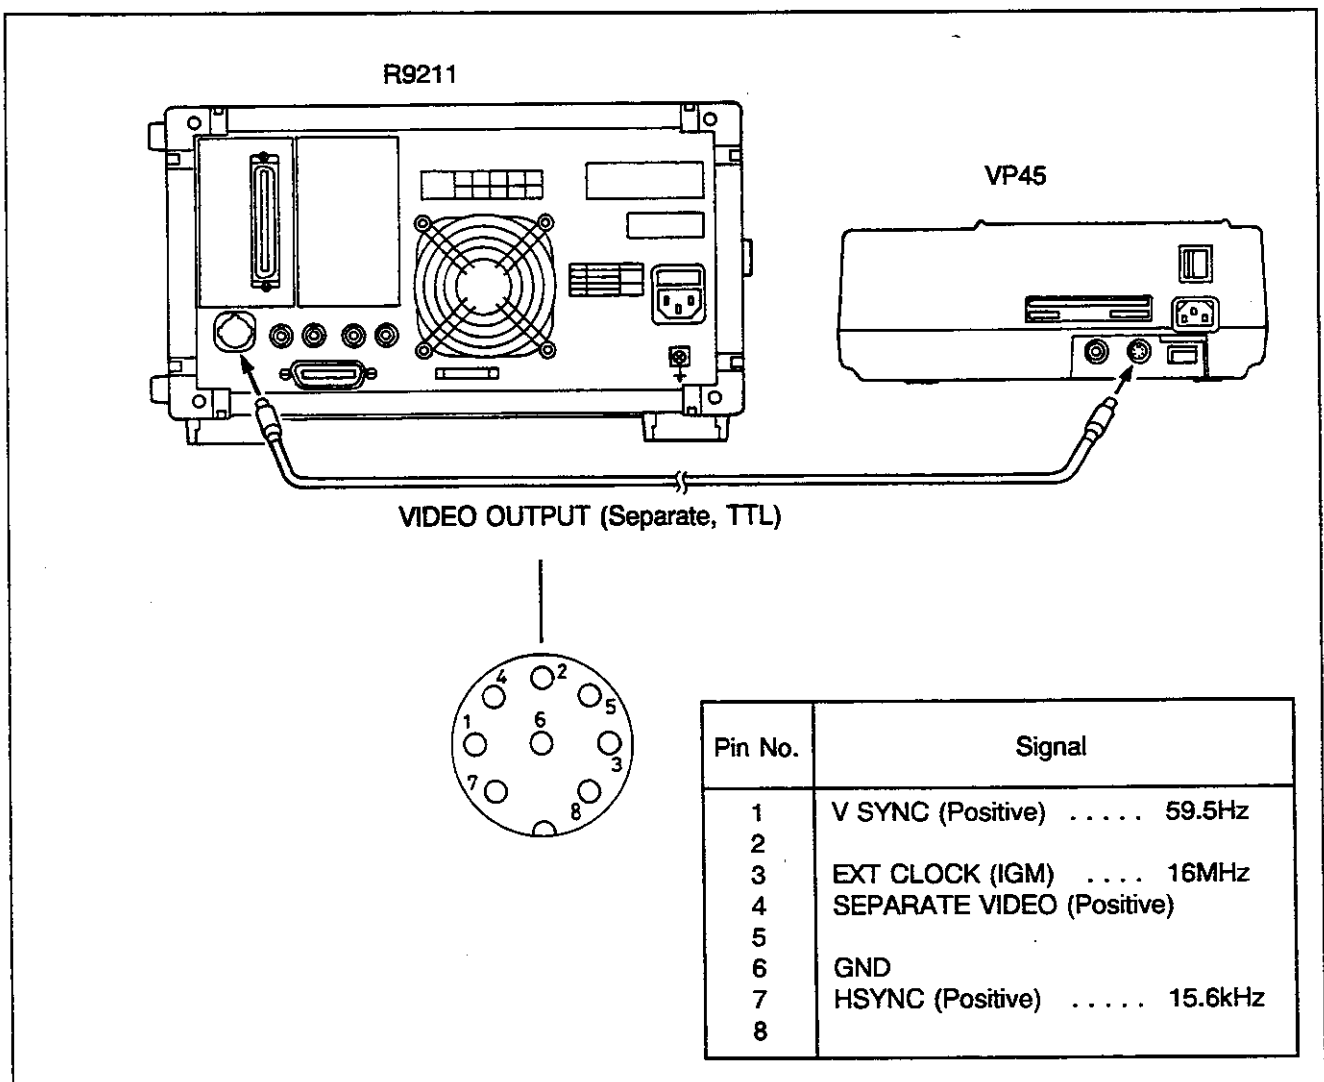



Figure 16-13 Video Printer Connection Diagram

3. How To Use A Video Printer


Video Printer Setting

When you use the recommended VP-45 (SEIKO), set its switches and controls volumes as follows:

● **Setting rear panel DIP switches**

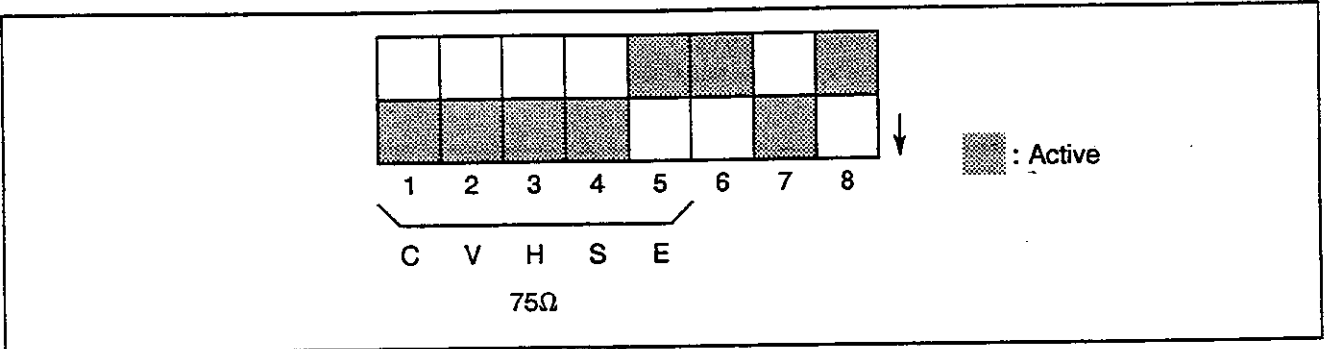

● **Set switches and controls in the lower part of the front panel**

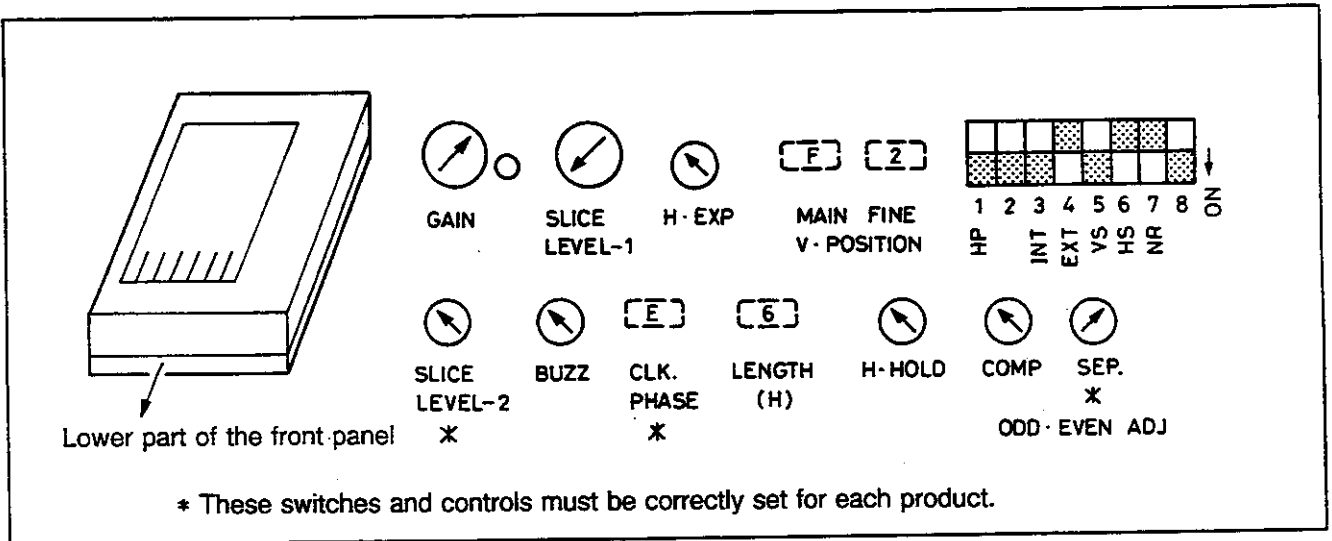

Precautions

- When you use a VP-45, adjust the SLICE LEVEL-2, CLK PHASE, and SEP controls finely for each product.
- When a video printer is used, set the CRT screen in the hold state; otherwise, updated screen data will be output.
- An external CRT monitor connected to the VIDEO OUTPUT connector must permit separate signal input.

4. How To Use The Built-In Printer

This printer is designed to print all information displayed on the CRT on the thermosensible paper. It is also designed to feed the print paper. Use the switches on the top of the printer to start printing or to feed the print paper.

Operation speed	:	Data transfer time from the R9211 to the printer	Max. 3 seconds
		Print time	Max. 10 seconds
Print paper	:	A09075 (Order No.)		
		5 rolls/box (Order unit : 1box.)		
		Thermosensible paper length	: ...	30 m
		Paper width	:	114 mm

CAUTION !

Use only the specified paper.

[How to load the Print Paper]

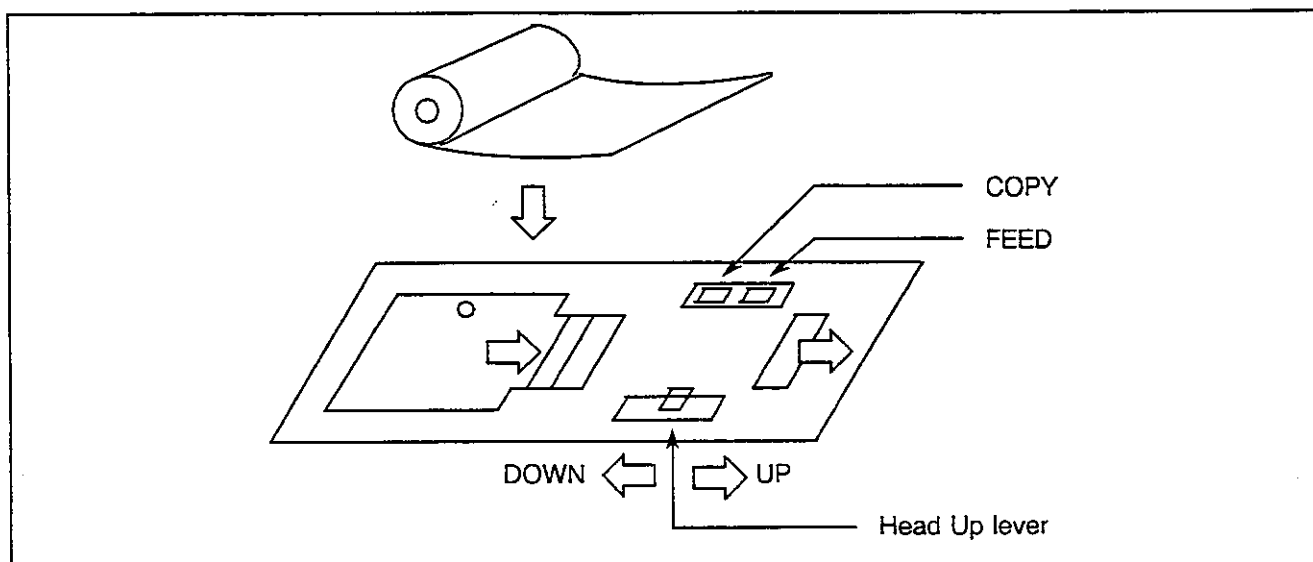


Figure 16-14 Built-in Printer

- (1) Put the HEAD UP lever in the UP position.
- (2) Load the roll paper in the holder with the outside of the paper roll down.
- (3) Set the paper over the printer mechanism toward the front side.
- (4) Put the HEAD UP lever in the DOWN (hold) position.
- (5) Feed the paper to check whether it was correctly installed.

CAUTION !

The R9211 stops while it is sending data to the thermal printer (for about 3 seconds). The R9211 functions while the printer is printing.

A P P E N D I X

In this appendix, you will find the analyzer's specifications, a description of the accessories, a glossary, a quick operation guide, and a list of the error messages.

CONTENTS

1. SPECIFICATIONS AND ACCESSORIES	
DESCRIPTION	A-2
2. GLOSSARY	A-12
3. QUICK OPERATION GUIDE	A-21
4. ERROR MESSAGES	A-27

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION

■ Specifications

□ Input and Analysis Characteristics

Number of input channels	: 2
Input method	: Differential input, single ended input
Input impedance	: About 1M Ω /100pF (single ended)
Input coupling	: AC, DC, GND
A/D converter resolution	: 16 bits
Frequency range	: 10mHz to 100kHz, 22 ranges (1, 2, 5-step)
Frequency accuracy	: ± 50 ppm of the frequency range \pm measurement resolution (at 23°C \pm 5°C)
Input filter	: An antialiasing filter (roll-off characteristic of ~ -148 dB/octave) is automatically set for each frequency range. In the ranges lower than 1kHz, an analog filter is combined with a digital filter.
Common-mode signal rejection ratio (CMRR)	: more than 50dB (DC coupling, 50Hz/60Hz)
Maximum differential input voltage	: ± 200 V
Maximum common-mode input voltage	: ± 200 V
Input range	: +30dBV to -60dBV (variable in 1dB steps) in Volt : 44.7V to 1.41mV, in Vrms : 31.6V to 1mV
Maximum common-phase signal voltage	: ± 14 V (-60dBV range to -6dBV range), ± 140 V (-5dBV range to +14dBV range), ± 200 V (+15dBV range to +30dBV range)
Maximum input sensitivity	: -125dBV (Approx. 0.56 μ Vrms) (-140dBV for a 2kHz range)
Dynamic range	: Dynamic range is measured with reference to the full scale in the spectrum mode. It is measured under the conditions: frequency range of 0-90%, input of a sine wave with an amplitude of -3dB, averaging number of 32, rectangular weighting, filter on, and 400 spectrum lines. 1/f noise and excluded. (23°C \pm 5°C) 85dB (+30dBV to -40dBV) (Central value : 90dB) 75dB (-41dBV to -50dBV) 60dB (-51dBV to -60dBV)
Residual noise	: The residual noise is measured with reference to the full scale in the spectrum mode. It is measured under the conditions: averaging number of 32, rectangular weighting, filter on, and 400 spectrum lines. 1/f noise is excluded. The frequency range is 0 to 90%. (23°C \pm 5°C) -85dB (+30dBV to -40dBV) -75dB (-41dBV to -45dBV) -60dB (-46dBV to -60dBV)
Amplitude linearity	: ± 0.2 dB (within -40dB of full scale, 23°C \pm 5°C)
Frequency flatness	: ± 0.3 dB (23°C \pm 5°C, within 0 to 90% of the frequency range), Approx. 0.2Hz, -3dB point when AC coupling
Amplitude accuracy	: Amplitude linearity + Frequency levelness (23°C \pm 5°C)
Amplitude (phase) difference between channels	: ± 0.1 dB/ ± 1.0 deg (at 23°C \pm 5°C) In the same sensitivity range and within 0 to 90% of the frequency range

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION
Power supply to accelerometer

- : Input coupling ; AC only
- : Source current of 4mA ; Ach/Bch, + side
- : Maximum operating voltage ; +18V
- : Open circuit voltage ; +24V or less

Test signal (in the frequency range from 100kHz to 2kHz)

- : Amplitude level; Approx. -4dBV
- : Frequency; 8% of frequency range (rectangular wave)

Overload display

- : Indication by LED

 Trigger

- Trigger mode** : Free run, manual trigger, external trigger, input trigger, input signal trigger, and auto repetition trigger modes
- Trigger level** : Input signal trigger ; Resolution of 1/256 of the amplitude range (set with the numeric keypad)
- External signal trigger level ; TTL
- Trigger slope** : +, -, ± (Input signal trigger)
- Trigger position** : -128K to +1M samples in 1-channel operation mode
-64K to +1M samples in 2-channel operation mode

 Averaging**Averaging modes in the frequency domain**

- : Summation (SUM), subtraction (SUB), exponential function move (EXP), peak detection (PEAK)

Averaging mode in the time domain

- : Summation (SUM)

Averaging number

- : From 1 to 32767 times

Overlapping

- : 0%, 50%, 75%, and MAX

Start stop control

- : Start, stop, +1, continue (Excepted under servo mode where deletion is automatically executed at when starting)

 Frequency Response Function Measurement Mode

- Measurement function** : Frequency response function, group delay, coherence function, time waveform, power spectrum, phase spectrum, impulse response function
- Averaging** : Frequency domain averaging
- Number of data for analysis** : 64 to 2048 points
- Frequency resolution** :
Linear ; 25 to 800 lines
- Window function** : Rectangular, hanning, minimum, flat-pass, and force/response
- Waiting** : A-/B-C-waiting, C-message waiting
- Marker analysis function** : Peak, next peak, band, harmonics, sideband, overall power, partial power, average power, variance, +peak, -peak, XdB, shape factor, and ripple markers
- Operation function** : Addition/subtraction/multiplication/division, unlapped phase, $j\omega$, $1/j\omega$, inverse, impulse response, equalization, phase compensation, COP (coherent output power)
- Display function** : Frequency-amplitude, frequency-phase, frequency-real part, frequency-imaginary part, frequency-group delay, frequency-coherence function, Nyquist diagram, cole-cole diagram, Nichols diagram
- Conversion function** : Engineering unit

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION
 Spectrum Measurement Mode

Measurement function	: Complex spectrum, power spectrum, cross spectrum, time waveform
Averaging	: Frequency domain averaging
Analysis data count	: 64 to 8192 points (1 channel), 64 to 4096 points (2 channels)
Frequency resolution	: Linear ; 20 to 3200 lines (1 channel) ; 25 to 1600 lines (2 channels) Logarithmic ; Max. 3 decades, 80 lines/decade Others ; 1/3 octave, 1/1 octave
Window function	: Rectangular, hanning, minimum, flat pass, force/response * The window function is set to the minimum or rectangular function in the logarithmic frequency or octave analysis mode.
Waiting	: A, B, C-waiting, C-message waiting
Marker analysis function	: Peak, next peak, band, harmonics, sideband, overall power, partial power, average power, and variance markers
Operation function	: Addition/subtraction/multiplication/division, pre-envelope, filtered spectrum, power cepstrum, $j\omega$, $1/j\omega$, smoothing
Display function	: Frequency-amplitude, frequency-phase, frequency-real part, frequency-imaginary part, Nyquist diagram
Conversion function	: Engineering unit

 Time-Frequency Analysis Mode

Basic measurement function	: Time waveform, complex spectrum, power spectrum, cross spectrum
Time-frequency analysis function	: Amplitude, phase, or frequency monitor
Averaging	: Frequency domain averaging
Frequency resolution	: Linear ; 25 to 800 lines Logarithmic ; Max. 3 decades, 80 lines/decade Others ; 1/3 octave, 1/1 octave
Window function	: Rectangular, hanning, minimum, flat pass, force/response * The window function is set to the minimum or rectangular function in the logarithmic frequency or octave analysis mode.
Waiting	: A, B, C-waiting, C-message waiting
Marker analysis function	: Peak, next peak, band, harmonics, sideband, overall power, damping power, partial power, average power, and variance markers
Operation function	: Addition/subtraction/multiplication/division, pre-envelope, filtered spectrum, power cepstrum, $j\omega$, $1/j\omega$, smoothing, level monitor cumulation
Display function	: Frequency-real part, frequency-imaginary part, frequency-amplitude, frequency-phase, Nyquist diagram, time-amplitude, time-phase, time-frequency
Conversion function	: Engineering unit

 Waveform Measurement Mode

Measurement function	: Time domain instantaneous data, time domain average data, auto correlation function, cross correlation function, probability density function
Averaging	: Time, delay, or amplitude averaging
Analysis data count	: 64 to 8192 points (1 channel) 64 to 4096 points (2 channels)
Delay data count	: 64 to 2048 points

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION

Marker analysis function	: Peak, rise time, fall time, pulse width, effective value
Operation function	: Differentiation, integration, smoothing, trend removal, addition/subtraction /multiplication/division, pre-envelope
Display function	: Time-amplitude, amplitude-probability density, orbit
Conversion function	: Engineering unit

 Running Zoom Function (R9211A only)

When the stop frequency is 10kHz or less, the minimum span is 10mHz. When the stop frequency is higher than 10kHz, high-resolution spectrum analysis is enabled with a minimum span of 100mHz. The frequency range is set with the start and stop frequencies.

 Display Specifications and Functions

Display unit	: 8-inch raster scan CRT
Engineering unit	: Marker read-out values and vertical axis scale values are indicated with physical quantities. Scaling ; Linear/logarithmic scaling Scaling for each channel is enabled Unit ; Up to two of the specified characters can be set
Display mode	: Single, dual, triple, and quadruple screen display modes
Overlapping	: Data in the same domain and same analysis range can be overlaid
Display of grid	: Display and deletion are enabled
Three-dimensional display	: Any data can be displayed in up to 50 lines in the 3-dimensional mode
Display of bar	: Overall power, partial power, average power, or the distribution of power is displayed at the right of the screen with a bar.
Label	: Up to 40 characters including alphanumeric, numeric, and special characters can be displayed and moved vertically
List mode	: Single mode ; Twenty frequencies and amplitude values from a spectrum, after being set with the cursor, can be displayed. Harmonics mode ; When a fundamental frequency is input with the numeric keypad, the amplitude values of the harmonics can be displayed. As well as the THD (total harmonics distortion) and the THP (total harmonics power) after computation. Sideband mode ; When carrier wave and harmonics frequencies are input with the numeric keypad, the power of up to 10 upper and lower sidebands are computed and displayed.
Horizontal axis	: Linear, logarithmic
Vertical axis	: Set with the numeric key pad

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION

Built-in Floppy Disk Drive Functions (Option for R9211E)

- Type : 3.5-inch micro-floppy disk drive
- Medium : 2DD or 2HD type (automatically detected)
- Capacity : 720K/1.2M bytes (at formatting)
- Formatting : MS-DOS format
- File type : Data, view, and table files
- Data file handling : Listing, creation, deletion, copy

Input/Output Functions

- Video signal output : Separate, TTL level
- GPIB interface : Standard equipment
- Plotter output : The plotter, having the HP-GL equipment, is directly connected to the analyzer with a GPIB cable
- External sampling clock input : BNC type, TTL level
- External trigger input : BNC type, TTL level
- Sampling clock output : BNC type, TTL level
- Trigger output signal : BNC type, TTL level

General Specifications

- Operating environment : Ambient temperature ; +5°C to +35°C
Relative humidity ; up to 80%
- Storage environment : Ambient temperature ; -20°C to +60°C
- In voltage change : The supply voltage is set according to your order.

Option No.	Standard	Option 32	Option 42	Option 44
Voltage	90 to 110VAC	103 to 132VAC	198 to 242VAC	207 to 250VAC

- Power frequency range : 48 to 66Hz
- Power consumption : (Standard)

R9211A	R9211E
Up to 160VA	Up to 140VA

- Dimensions : Approx. 330 (W) × 177 (H) × 450 (D) mm
- Weight : (Main unit)

R9211A	R9211E
Up to 14kg	Up to 12kg

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION **Options (In the R9211E, one of option 06,10,11 is selected)**

Option 06: Internal floppy disk function (In the R9211A, it is standard equipment.)

Type 3.5-inch micro floppy disk

Media 2DD/2HD

Capacity 640 K/720 K/1 Mbyte (when formatted)

Format MS-DOS

Data file Measured data and panel conditions

Data file operation Listing, generation, erasure, and copy

Option 07 : Built-in printer

Hard copy of data on screen

Printing method : Thermal line/dot printing

Dot matrix : 640 dots

Print paper : A09075 (5 rolls/box)

Paper width : 114mm

Option 10 : CMOS memory

1M-word (2M-byte) battery back-up memory

Option 11 : I/O memory card

This optional board has the following characteristics:

Extended memory : 1 megawords (2MB)

Digital input : Digital signals can be received from outside.
(Maximum sampling rate: 256kHz)

Data format: 16bits + EOC signal (offset binary)

Digital output : Data is output from the built-in A/D converter.

Data format : 16bits + Channel identification signal + Strobe signal
(Offset binary)

Option 12 : High-speed numeric operation (R9211A only)

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION

■ Accessories

- (1) R9833 digital plotter
- (2) HP-GL plotter (Hewlett Packard 7470A, 7475A 7550A, or 7225A)
- (3) Accelerometer (Endebco or Dytran) See Tables A-1 and A-2.

● How to connect the Accelerometer


The R9211 can output an approximately 4mA current from the + input sockets of channels A and B, to power the acceleration sensor. Thanks to this ICP function, you can avoid using a signal conditioner.

When acceleration sensor, provided with an amplifier or an impedance converter circuit is directly connected and if the ICP function is set to ON, current is supplied to the electric circuit of the sensor.


The input terminal of the R9211 is a BNC connector. When an acceleration sensor with a #10-32 type connector, is used, the following conversion is needed:

- #10-32 male connector — BNC plug (Cable: 6011A XX)
- #10-32 female connector — BNC plug (Conversion connector: EJ-21)

Example 1 : Connection of the Endebco 2250AMI-10 to the R9211E

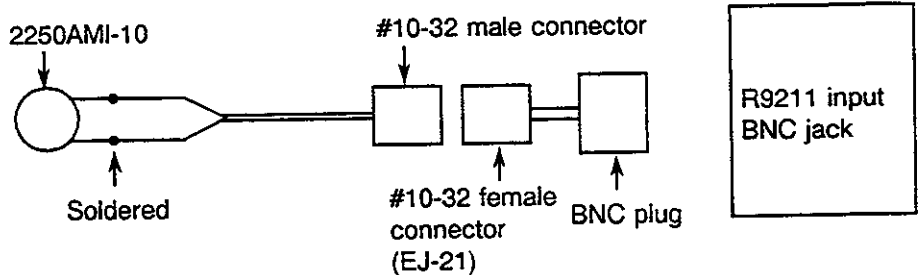



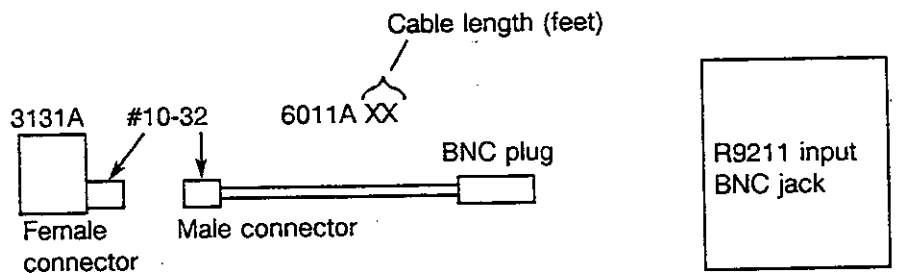



Example 2 : Connection of the Dytran 3131A Piezodyne acceleration sensor to the R9211



1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION

Table A-1 Endevco Accelerometers

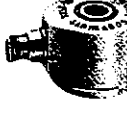						
Model	2250A-10/ 2250AMI-10	7250A/ 7250AMI	7254-10, -100	7259A-1, -10	7251-10, -100	2256-10, -100
Sensitivity (mV/g)	10	2/10	10/100	1/10	10/100	10/100
Response frequency (Hz)	4 to 15,000	4 to 20,000	1 to 10,000	5 to 30,000 ± 1dB	1 to 10,000	1 to 5,000
Resonance frequency (Hz)	80,000	85,000	45,000	150,000/100,000	45,000	20,000
Anti-G (G)	2,000	10,000	5,000	10,000	5,000	2,000
Operating temperature range (°C)	-55 to +125	-55 to +125	-55 to +125	-55 to +125	-55 to +125	-55 to +125
Case	Ground	Ground	Ground	Ground	Ground	Ground
Case mounting plane	Insulated	Insulated	Ground	Ground	Insulated	Insulated
Size (mm)	5.8×3.8	9.5×5.8	15.9×16.0	9.5×12.0	15.3×10.7	11.1×10.1
Weight (g)	0.4	1.8	20	4.4	11	5
Mount	Adhesion	2-56 screw	10-32 stud	10-32 stud	6-32 screw	Adhesion
Seal	Epoxy	Welded	Welded	Epoxy	Welded	Epoxy
Accessory cable	3006-120	3091E-120	3090C-120	3091E-120	3090C-120	3060A-120


Conversion connector EJ21 (For conversion from microdot to BNC)

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION

Table A-2 Dytran Accelerometers

Model Specifications	3115A	3121A	3110A	3131A	3132A	3134A
Weight grams	1.5	7	19	17	17	56
Sensitivity (mV/g)	15 ($\pm 10\%$)	50 ($\pm 5\%$)	100 ($\pm 5\%$)	100 ($\pm 2\%$)	100 ($\pm 2\%$)	500 ($\pm 5\%$)
Measurement range (5V output) (g)	333	100	50	50	50	10
Frequency range Hz $\pm 5\%$	2 to 10k	1 to 5k	1 to 5k	1 to 5k	1 to 5k	1 to 3k
Frequency range $\pm 3\text{dB}$	0.66 to 12k	0.5 to 8k	0.5 to 8k	0.5 to 8k	0.5 to 8k	0.5 to 8k
Resonance frequency (when mounted) kHz	100	30	30	25	25	20
Noise level gRMS	0.007	0.003	0.0009	0.0009	0.0009	0.00028
Strain sensitivity (250 μ strain) (g/ μ)	0.03	0.01	0.004	0.008	0.015	0.012
Maximum vibration resistance (g)	± 1000	± 1000	± 1000	± 1000	± 1000	± 200
Maximum impact resistance g peak	1500	2500	2500	2000	2000	500
Temperature range ($^{\circ}\text{C}$)	-51 to +121					
Temperature coefficient %/ $^{\circ}\text{F}$	0.06					
Temperature coefficient %/ $^{\circ}\text{C}$	0.108					
Discharge constant seconds	0.5			1.0		
Connector type	#10-32					
Seal	Epoxy			Welding/Epoxy		
Case material	303 S. S.					
Mounting method (at calibration)	Adhesion	#10-32, Integrated type	#10-32, Detachable	Adhesion	#10-32, Integrated type	#10-32, Detachable
Dimensions (Hex \times H) inches	1/4 \times .230	5/16 \times .495	1/2 \times 1.10	1/2 \times 0.70	1/2 \times .70	5/8 \times 1.13
(m \times m)	6.4 \times 5.8	7.9 \times 12.6	12.7 \times 27.9	12.7 \times 17.8	12.7 \times 17.8	15.9 \times 28.7
Cable type	6016A	6014A	6010A, 6016A	6010A, 6016A	6010A, 6016A	6010A, 6016A
Ground insulation	-	-	-	-	-	-
Accessories	-	-	6200 stud	-	-	6200 stud
Options	-	3121AC adhesion type	-	-	-	-
Common specifications	Power supply : 2 to 20mA, 18 to 30VDC			Linearity : $\pm 2\%$ full scale		
	Bias level : 9 to 12VDC			Maximum horizontal sensitivity : 5%		
	A test report (with NBS traceability) is attached to each acceleration sensor.					

1. SPECIFICATIONS AND ACCESSORIES DESCRIPTION

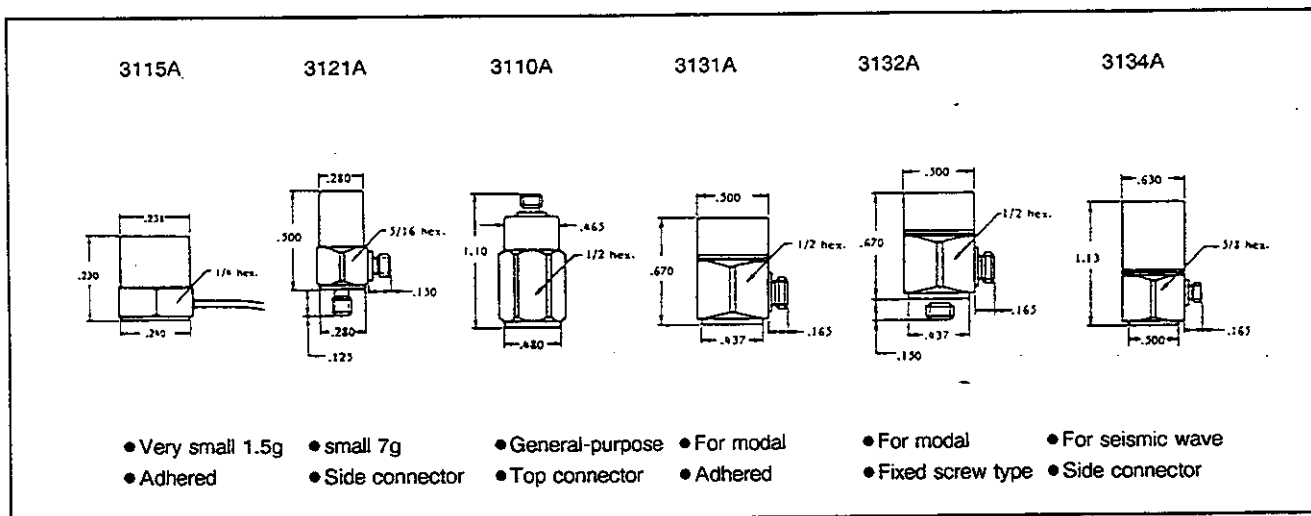

2. GLOSSARY

■ Terms Related to the Analysis Itself

Xa : A channel time waveform data
A signal input to the analyzer is first digitalized (A/D converter), then truncated to a time length corresponding to the frame time which is estimated according to the frequency range. The resulting, finite, digital serie constitutes Xa.

<Xa> : Averaged Xa (time averaging or signal enhancement)
Averaging in the time domain is performed to improve the SNR of noisy signals and to detect signals repeated rhythmically.
To average time series data, a trigger signal is required (synchronization). This trigger signal secures the relative phase of the sampled series.

$$\langle Xa(t) \rangle = \frac{1}{N} \{ Xa_1(t) + Xa_2(t) + \dots + Xa_N(T) \}$$

The SNR is improved by N times when averaging is executed N times. This is expressed in decibels (dB) as follows:

$$20 \log_{10} \sqrt{N} \text{db}$$

Sa : Fourier spectrum of Xa (Complex spectrum of Xa)
The complex spectrum Sa(f), results from the conversion to the frequency domain of the time waveform Xa(t), by the Fourier Transform.

$$Sa(f) = \int_{-\infty}^{+\infty} Xa(t) \{ \cos(2\pi ft) - j \sin(2\pi ft) \} dt$$

Sa(f) consists of a real part and an imaginary part. These real and an imaginary parts can also be observed as an amplitude and a phase. To average a complex spectrum, a trigger signal is required as it was for time averaging (<Xa>). This function can be effectively used to extract the signal components generated by rotation from random noise or to extract signal elements from background noise.

Gaa : Auto power spectrum (Auto Spectrum)
Auto power spectrum is a representative term used of the frequency spectrum. It is expressed in the square amplitude unit: V².
To calculate the auto power spectrum, Sa(f) is multiplied by its complex conjugate Sa(f)*. The auto power spectrum is expressed as follows:

$$\begin{aligned} Gaa &= Sa \cdot Sa^* \\ &= [\text{Re}(f) + j\text{Im}(f)] \cdot [\text{Re}(f) - j\text{Im}(f)] \\ &= \text{Re}^2(f) + \text{Im}^2(f) \end{aligned}$$

The power spectrum, Gaa is a real function carrying only amplitude information. Since it has no imaginary part, it does not carry any phase information. For this reason, averaging can be executed regardless of the trigger position without using a synchronization signal.

2. GLOSSARY

<Gaa> : Averaged Power Spectrum

Given a certain frequency, the averaged power spectrum at this frequency corresponds to the average of the values that the different available estimations of the power spectrum take at this frequency. The amplitude of the spectrum at a certain frequency is expressed as follows:

$$\sqrt{\langle Gaa(f) \rangle} = \sqrt{\frac{1}{N} \{ Gaa_1(f) + Gaa_2(f) + \dots + Gaa_N(f) \}}$$

It corresponds to the RMS value (effective value) at this frequency. Note that this averaging smoothes the random components but that it does not reduce the noise level.

Gab : Cross-spectrum

At each frequency, the amplitude indicates the product of the amplitude of two signals and the phase indicates the relative difference of those two signals. To obtain the cross-spectrum, the Fourier spectrum (Sb) of Xb is multiplied by complex conjugate Sa* of the Fourier spectrum (Sa) of Xa:

$$\begin{aligned} Gab &= Sb \cdot Sa^* = [\text{Re}(b) + j\text{Im}(b)] \cdot [\text{Re}(a) - j\text{Im}(a)] \\ &= [\text{Re}(b) \cdot \text{Re}(a) + \text{Im}(b) \cdot \text{Im}(a)] + j[\text{Im}(b) \cdot \text{Re}(a) - \text{Re}(b) \cdot \text{Im}(a)] \end{aligned}$$

The cross-spectrum is not a series of positive real numbers as the power spectrum but a series of positive or negative complex numbers.

The cross-spectrum, in the frequency domain, corresponds to the cross-correlation function, in the time domain. It can be used to measure time delays like the cross-correlation function. If the signal transfer speed and path depend on the frequency, the delay time (τ) can be obtained from the phase (θ) at the specified frequency (f):

$$\tau = \frac{\theta}{2\pi f}$$

<Gab> : Averaged cross-spectrum

The averaged cross spectrum Gab(f) at each frequency is computed by:

$$\langle Gab(f) \rangle = \frac{1}{N} \{ Gab_1(f) + Gab_2(f) + \dots + Gab_N(f) \}$$

<Hab> : Frequency response function (FRF)

Frequency response characteristics such filter characteristics are estimated with the system input/output signals.

Two types of information (amplitude and phase) are obtained. The frequency response function corresponds to the ratio of the Fourier spectrum of the output signal to the Fourier spectrum of the input signal.

$$\langle Hab \rangle = \langle Sb/Sa \rangle$$

or

$$\langle Hab \rangle = \left\langle \frac{Sb \cdot Sa^*}{Sa \cdot Sa^*} \right\rangle = \frac{\langle Gab \rangle}{\langle Gaa \rangle}$$

The frequency response function can also be expressed as the ratio of the cross spectrum to the system input power spectrum.

2. GLOSSARY

This past evaluation method presents the following characteristics:

- Since the cross spectrum $\langle G_{ab} \rangle$ is used, both amplitude and phase can be analyzed.
- The FRF can be estimated whatever the input signal.

The Inverse Fourier transform of the frequency response function is called impulse response. The frequency response function can be represented by three types of diagrams: Bode, Nyquist, and Nichols.

$\langle \text{COH} \rangle$: Coherence function

The coherence function characterizes the relationship between input and output. It takes its values between 0 and 1

$$\langle \text{COH} \rangle = \frac{\langle G_{ab} \rangle \langle G_{ab} \rangle^*}{\langle G_{aa} \rangle \langle G_{bb} \rangle}$$

The coherence function is computed by dividing the square amplitude of the cross-spectrum by the product of the input and output power spectrum.

When the coherence value at a certain frequency is equal to 1, the output is caused only by the input. When it is equal to 0, the output is absolutely not related to the input. When it is between 0 and 1, for example 0.3, it means that the influence of the specified input upon the output is equal to 0.3 and that the influence of other inputs or additional noise upon the output is equal to 0.7.

Thus, if the coherence function is smaller than 1.0, it may be because:

- (1) the measurement is affected by additional noise,
- (2) the DUT is a nonlinear system (e.g., too large input signal amplitude),
- (3) the output is related to an input other than the input currently being observed (e.g., time delay between input and output signals), or
- (4) the frequency resolution is poor (e.g., sharp resonance point).

Therefore, it is recommended that the coherence function be studied whenever a frequency response function is estimated.

The traditional servo analyzers cannot conduct this test.

Since the closer the coherence function is to 1.0, the more accurate the frequency response function is shown to be, you can easily check the validity of your measurement method and measurement points. The coherence function can also be used to choose the number of averages.

When the number of averages is only 1, the coherence function is forced to 1. As the number of averages increases, it converges toward the true value. If the coherence function varies greatly from one averages number to the next, the number of averages is insufficient.

$\langle \text{Hab} \rangle \text{Gly}$: Group delay obtained from $\langle \text{Hab} \rangle$

The phase of the frequency response function, $\langle \text{Hab} \rangle$, is differentiated to calculate the group delay of the system (envelope time delay).

$$\tau_g(f) = -\frac{1}{2\pi} \frac{d\phi(f)}{df} \quad \phi(f) : \text{phase (radian)}$$

This group delay corresponds to the phase inclination. Thus, if the phase linearly varies, the group delay is constant.

- <SNR> : Signal-to-noise ratio
The ratio of the power spectrum of the signal components to the power spectrum of the noise components is calculated according to the coherence function as follows:

$$\begin{aligned} \langle \text{SNR} \rangle &= \frac{\langle G_{ss}(f) \rangle}{\langle G_{nn}(f) \rangle} \\ &= \frac{\langle \text{C.O.P.} \rangle}{\langle G_{bb} \rangle - \langle \text{C.O.P.} \rangle} \\ &= \frac{\langle \text{COH} \rangle}{1 - \langle \text{COH} \rangle} \end{aligned}$$

- <COP> : Coherent output power
The coherent output power is obtained by multiplying the coherence function by the auto power spectrum of the output of the system. It represents the power spectrum of the part of the output that corresponds only to the input.

$$\langle \text{C.O.P.} \rangle = \langle \text{COH} \rangle \cdot \langle G_{bb} \rangle$$

- <IMP> : Impulse response
The impulse response represents the system output (in the time domain) caused by in putting a unit impulse. Note that when a signal $X_a(t)$ is input to a system characterized by its impulse response $h_{ab}(\tau)$, the output is expressed as follows:

$$X_b(t) = \int_{-\infty}^{+\infty} h_{ab}(\tau) X_a(t-\tau) d\tau$$

The impulse response is obtained through inverse Fourier transformation of the frequency response function.

$$\langle \text{IMPLS}(\tau) \rangle = \text{IFFT}\{\langle \text{Hab} \rangle\}$$

The impulse response may indicate the time delay between input/output signals with a higher sensitivity than the cross correlation function.

- Raa : Auto-correlation function of X_a
For random time signals, 2 points are strongly correlated if the time difference between them is small, and the larger the time difference (τ) the weakest the correlation. If a periodic signal is buried in a random signal, there is a time difference (the period of the periodic signal) at which the correlation between 2 points is strong.
The auto correlation function is expressed as the function of the time difference (τ). It is used to analyze the characteristic of a random signal (degree of irregularity) and to improve the SNR of a periodic signal buried in a random signal.

2. GLOSSARY

Mathematically, the auto correlation function can be obtained through inverse Fourier transformation of the auto power spectrum G_{aa} . Generally, it is expressed by the following equation:

$$R_{aa}(\tau) = \int_{-\infty}^{\infty} G_{aa}(f) e^{j2\pi f\tau} df$$

The R9211 FFT analyzer computes, and provides you with normalized autocorrelation functions (normalization factor: the sum of the squared time serie elements).

$$R_{aa}(\tau) = \frac{\sum_t X_a(t) \cdot X_a(t + \tau)}{\sum_t \{X_a(t)\}^2}$$

CAUTION!

The autocorrelation function does not directly correspond to the IFFT of the auto power spectrum because of the FFT periodicity; it corresponds to the IFFT of the cross-spectrum of 2 series obtained by adding particular zeros patterns to the original time serie.

The R9211 computes autocorrelation functions according to this method.

Rab : Cross-correlation function

The cross-correlation function enables the study of the similarity between two points of two different signals when the time difference between these points is τ . It is used to measure transmission speeds, transmission distances, and to determine transmission paths according to the measured time delay.

Mathematically, the cross correlation function corresponds to the IFFT of the cross-spectrum G_{ab} . It is usually expressed as follows:

$$R_{ab}(\tau) = \int_{-\infty}^{\infty} G_{ab}(f) e^{j2\pi f\tau} df$$

The R9211 FFT analyzer computes a cross-correlation function normalized with the product of the sums of the square components of the input and output series.

$$R_{ab}(\tau) = \frac{\sum_t X_a(t) \cdot X_b(t + \tau)}{[\sum_t \{X_a(t)\}^2 \cdot \sum_t \{X_b(t)\}^2]^{1/2}}$$

CAUTION!

The cross-correlation function does not directly correspond to the IFFT of the cross-spectrum because of the FFT periodicity; it corresponds to the IFFT of the cross-spectrum of 2 series obtained by adding particular zeros patterns to the original time series.

The R9211 computes cross-correlation according to this method.

2. GLOSSARY

- Cx : Real cepstrum of G_{aa}
It corresponds to the transformation to the quefrequency domain, by Fourier transform of the logarithmic amplitude of the power spectrum G_{aa} .

$$C_a(\tau) = \text{IFFT} \{ \text{Log } G_{aa} \}$$

The low-level area are enlarged because the performed operation was non linear (logarithmic); eventual cyclic patterns in the power spectrum are effectively extracted because they correspond to peaks in the quefrequency domain.

Complicated power spectrum envelopes can be obtained through filtering in the quefrequency domain (short pass filter) and conversion to the frequency domain.

- Zxx : Pre-envelope of X_a
The real part of a pre-envelope corresponds to the original time series and the imaginary part corresponds to the Hilbert transform of this time series.

$$\hat{X}_a(t) = -\frac{1}{\pi} \int_{-\infty}^{\infty} X_a(\tau) \frac{d\tau}{\tau-t}$$

$$Z_a(t) = X_a(t) + j\hat{X}_a(t)$$

Z_{aa} corresponds to the sum of the real part squared and of the imaginary part squared of Z_a . It is the envelope of the original time series and its unit is V^2 (energy). The transient response energy damping time can be calculated from the envelope.

- Pa : Histogram or probability density function
The amplitude probability density function is used to analyze the statistical features of the signal.
It describes the probability for a time signal to exist in a specified amplitude range.
In the case of the computation of the probability density of a random signal, the probability for the signal to take its amplitude between X_a and $X_a + \Delta X_a$, is expressed, using the data sample at time T, as follows:

$$P_a = \text{Prob} [X_a < \tilde{X}_a < (X_a + \Delta X_a)]$$

A cumulative distribution function (CDF) can be obtained by integrating the amplitude probability density function. It indicates the probability that the instantaneous value of the signal be under a particular amplitude value.

- <Pa> : Average histogram or average probability density function
The closer T becomes to infinity (in the expression used for calculation Pa), the closer to the true value the estimated values Pa becomes.

2. GLOSSARY

■ Audio Weights Characteristics

Figures A-1 to A-4 show the audio weights (WEIGHT (f)) characteristics: A, B, and C and C-message characteristic.

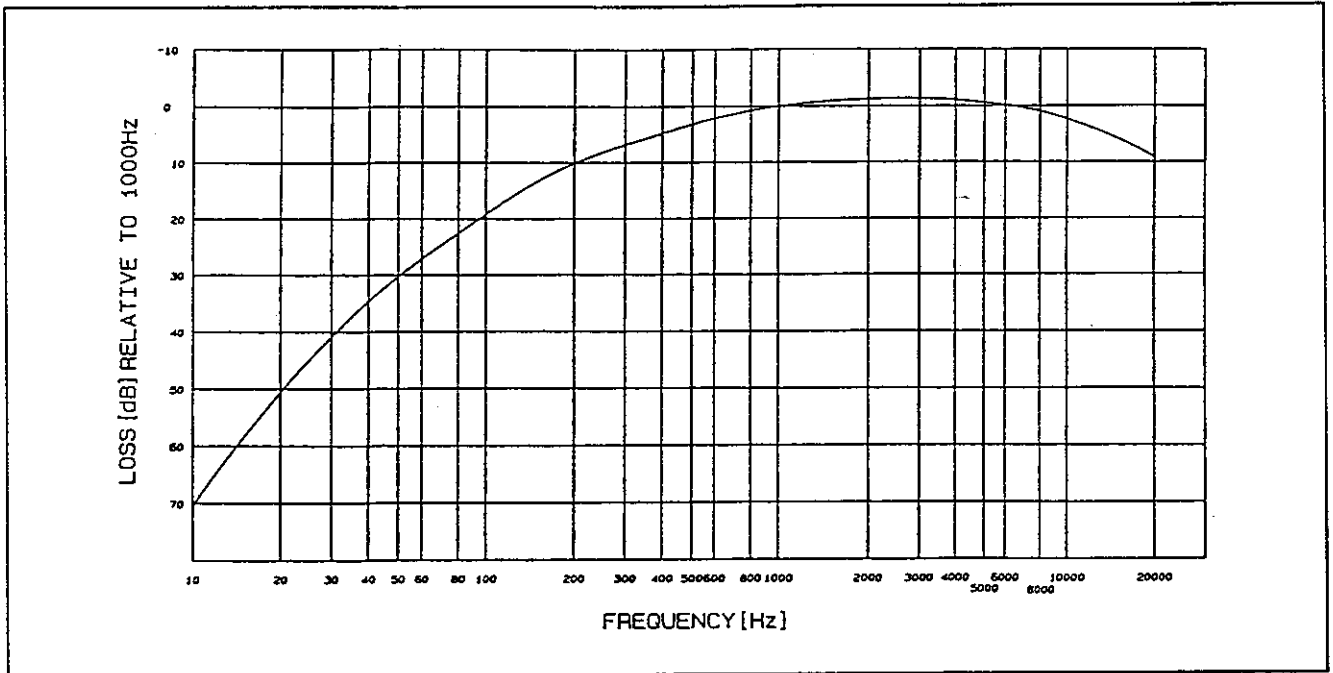


Figure A-1 A Characteristic

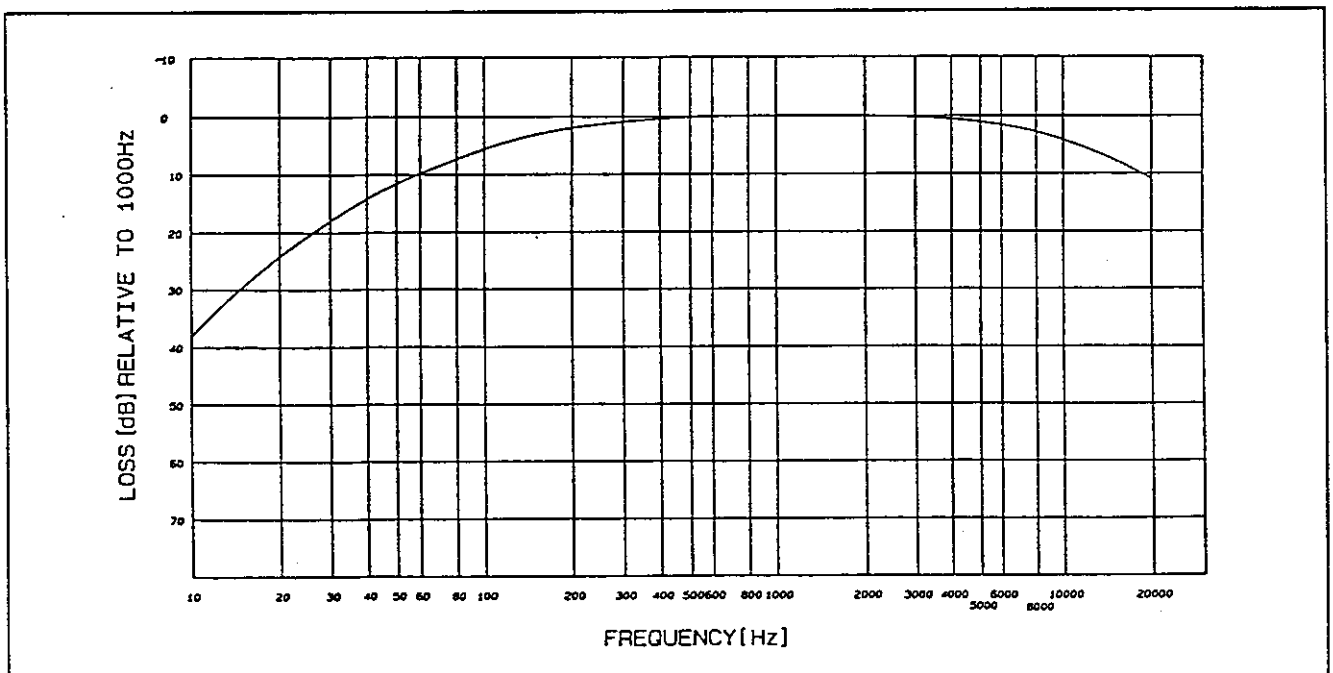


Figure A-2 B Characteristic

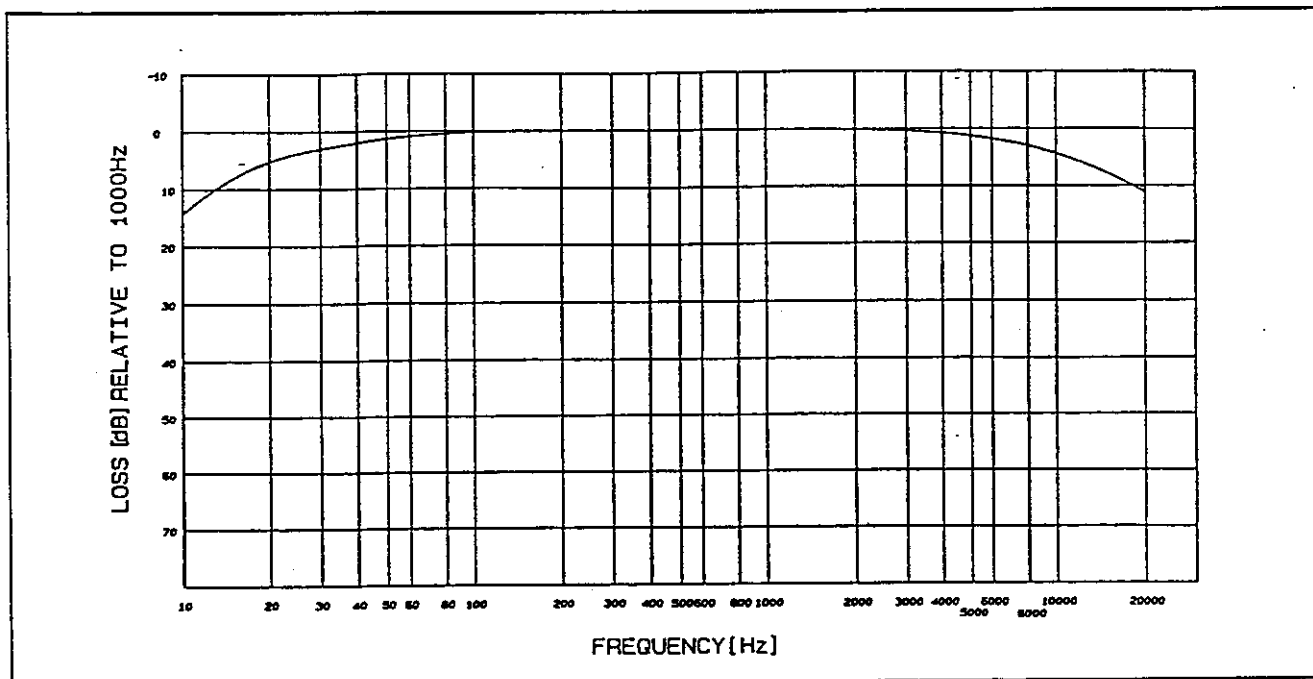


Figure A-3 C Characteristic

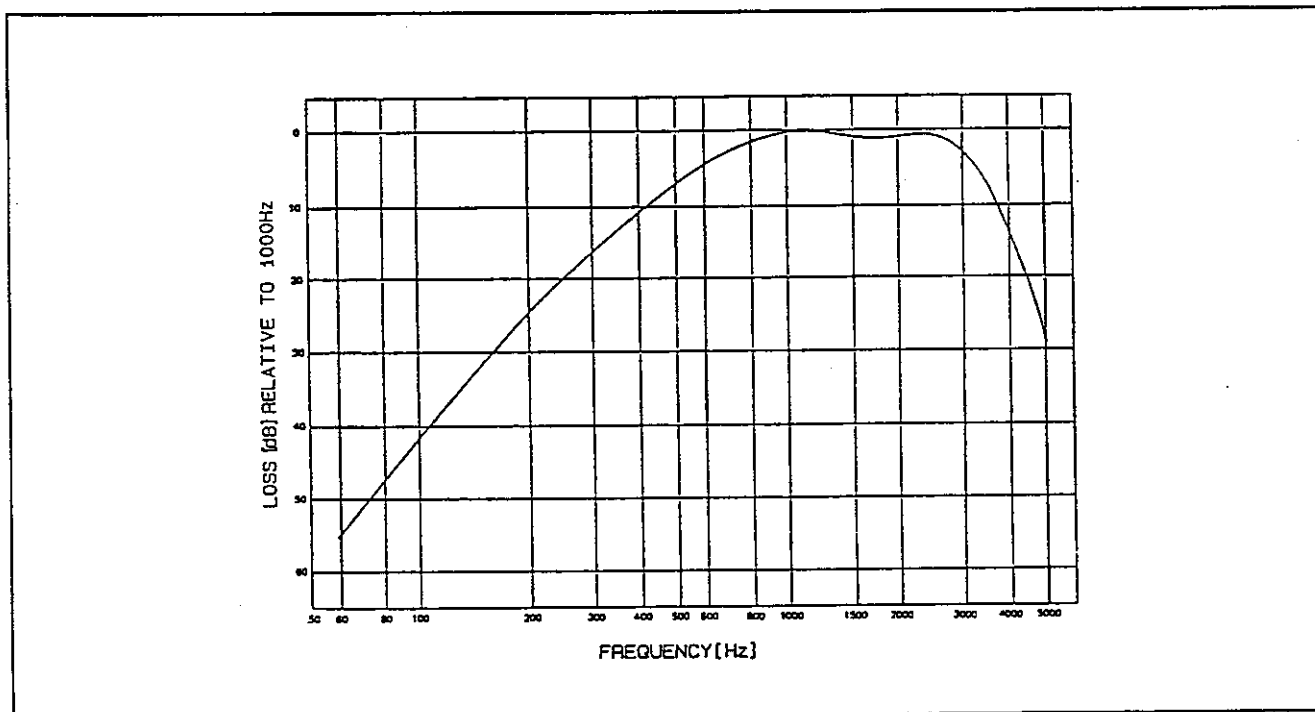


Figure A-4 C-message Characteristic

2. GLOSSARY

■ Octave filter No., Relation between Center Frequency and Setting Frequency Range


Table A-3 Octave filter No., Relation between Center Frequency and Setting Frequency Range

Filter No.	Center frequency	OCTAVE		Setting frequency range					
	Hz	1/1	1/3	100k	50k	20k	10k	5k	2k
49	80 K		←	↑					
48	63 K	←	←						
47	50 K		←						
46	40 K		←						
45	31.5 K	←	←		↑				
44	25 K		←						
43	20 K		←						
42	16 K	←	←			↑			
41	12.5 K		←						
40	10 K		←						
39	8 K	←	←				↑		
38	6.3 K		←						
37	5 K		←						
36	4 K	←	←						
35	3.15K		←					↑	
34	2.5 K		←						
33	2 K	←	←						
32	1.6 K		←						
31	1.25K		←						↑
30	1 K	←	←						
29	800		←						
28	630	←	←						
27	500		←						
26	400		←						
25	315	←	←						
24	250		←						
23	200		←						
22	160	←	←						
21	125		←						
20	100		←	↓					
19	80		←						
18	63	←	←		↓				
17	50		←						
16	40		←						
15	31.5	←	←			↓			
14	25		←						
13	20		←						
12	16	←	←				↓		
11	12.5		←						
10	10		←						
9	8	←	←					↓	
8	6.3		←						
7	5		←						
6	4	←	←						
5	3.15		←						
4	2.5		←						
3	2.0	←	←						↓

3. QUICK OPERATION GUIDE

FRF Mode

- [HOW TO] : Do not forget that X softkeys must be pressed first and then Y softkeys.
- : If the dynamic range of the DUT inferior to 70dB, select the FRF mode. If the dynamic range is superior to 70dB or the resolution at the low analysis frequencies must be enhanced, select the servo mode.
 - : The analyzer initialization (master reset) is performed by pressing the RESET key twice while the message "R9211X" is displayed with large characters after the power is turned on.

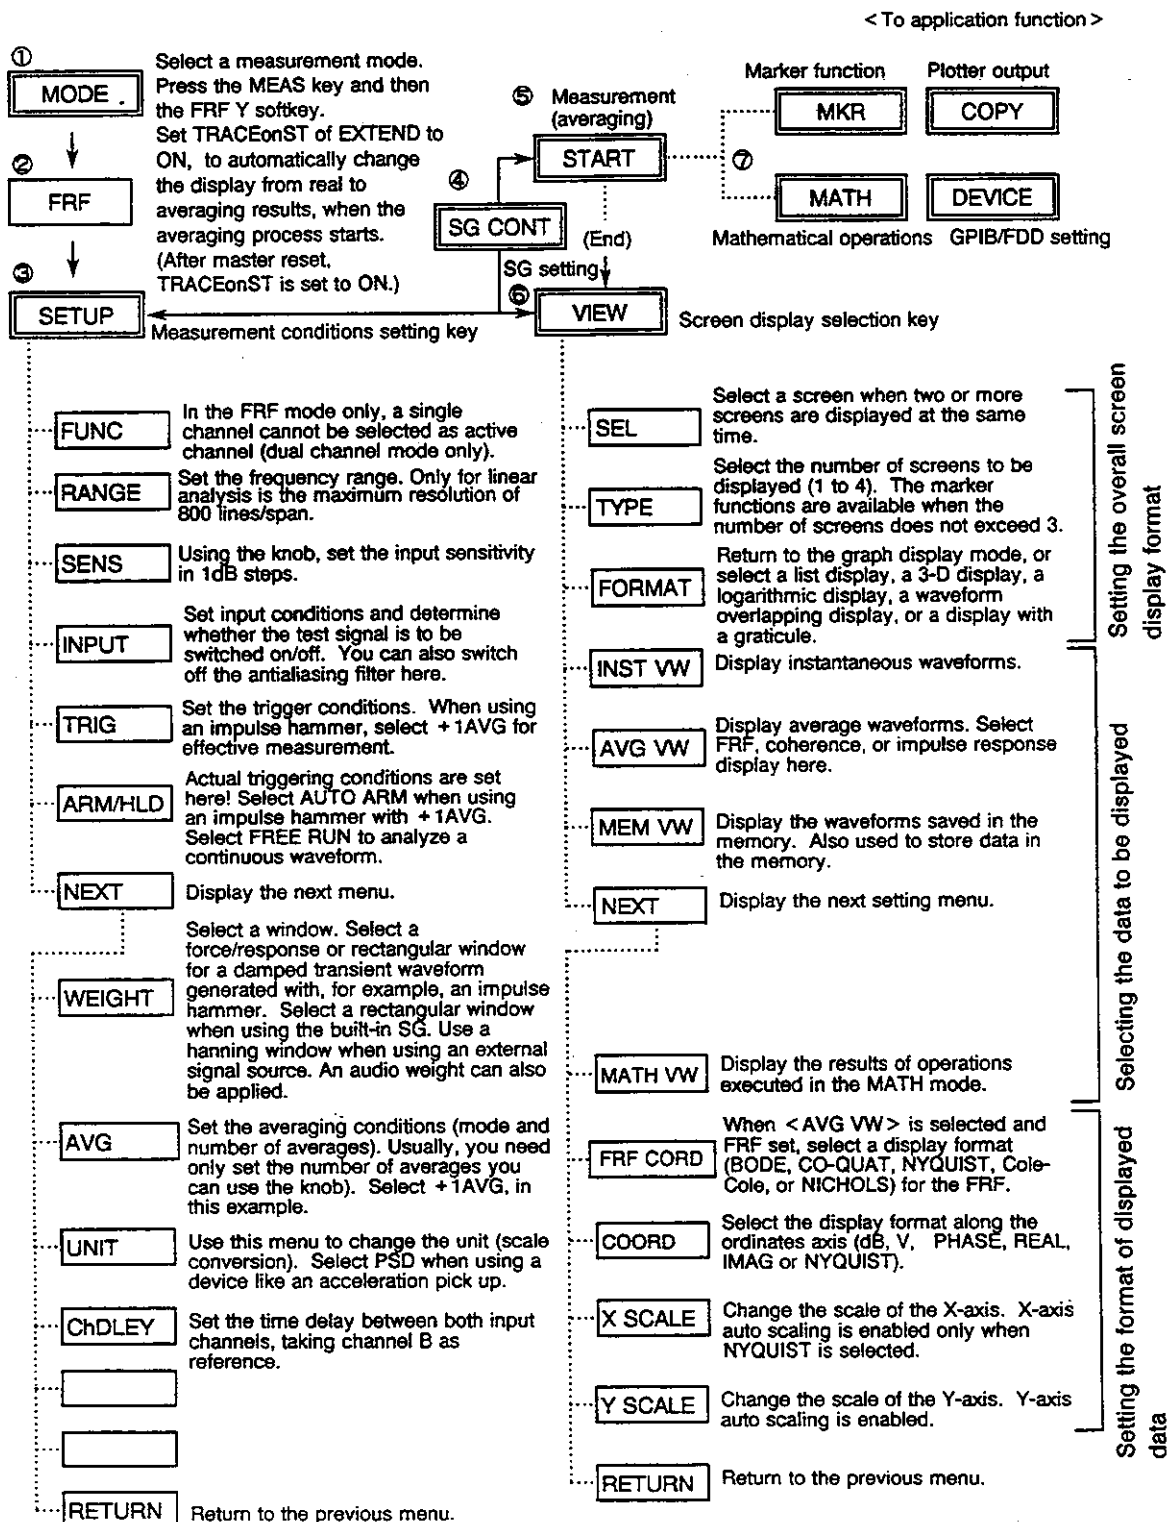


3. QUICK OPERATION GUIDE

Spectrum Mode

- [HOW TO] : Do not forget that X softkeys must be pressed first and then Y softkeys.
- : One-frame data is stored in the input buffer for spectrum analysis (simple spectrum analysis). The maximum resolution is 1600 lines/span.
 - : The analyzer initialization (master reset), is performed by pressing the RESET key twice while the large message "R9211X" is displayed after the power is switched on.

< To application function >

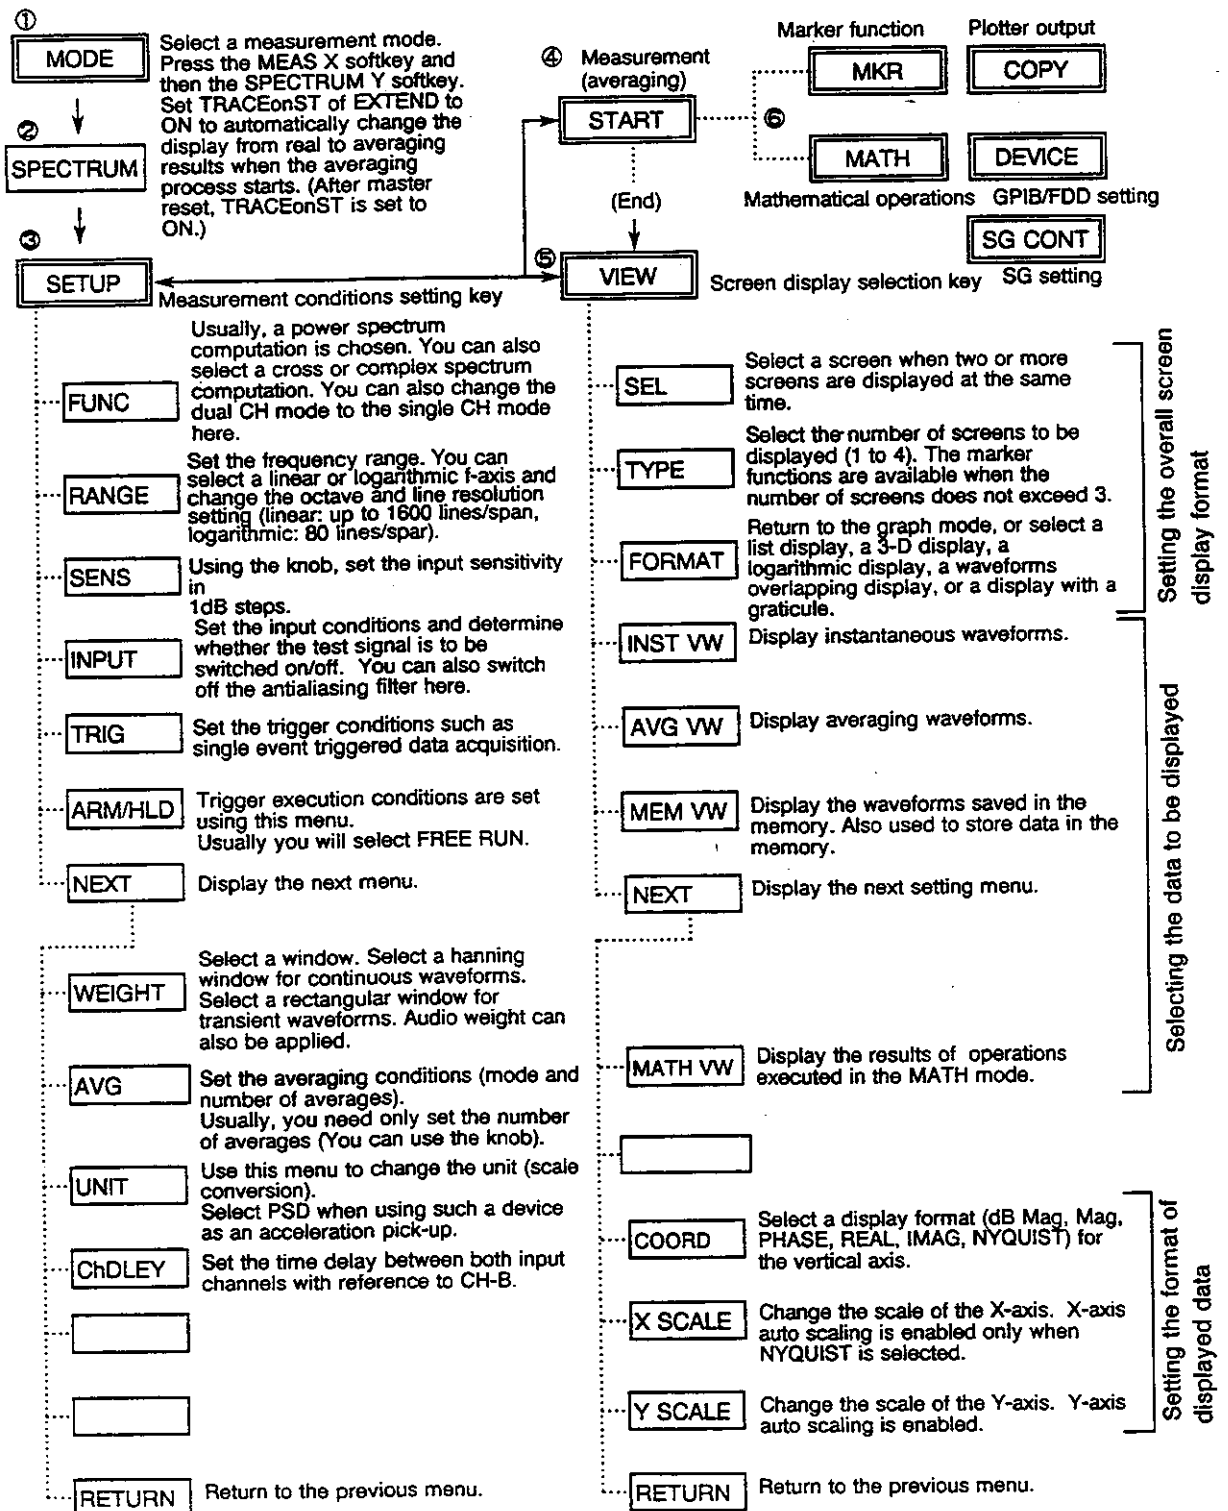


3. QUICK OPERATION GUIDE

TIME-FREQ Mode

- [HOW TO] : Do not forget that X softkeys must be pressed first, and then Y softkeys.
- : A large input buffer, longer than 1 frame is used, for either TF analysis or data view. The maximum resolution is 800 lines/span.
 - : The analyzer initialization (master reset) is performed by pressing the RESET key twice while the message "R9211X" is displayed with large characters after the power is switched on.

* Input buffer size: R9211C : Standard, 512Kw (single channel, 1024Kw)
 R9211A/B/E : Standard, 64Kw (single channel, 128Kw)
 I/O or CMOS : Option, 512Kw (single channel, 1024Kw)
 I/O + CMOS : Option, 1024Kw (single channel, 2048Kw)

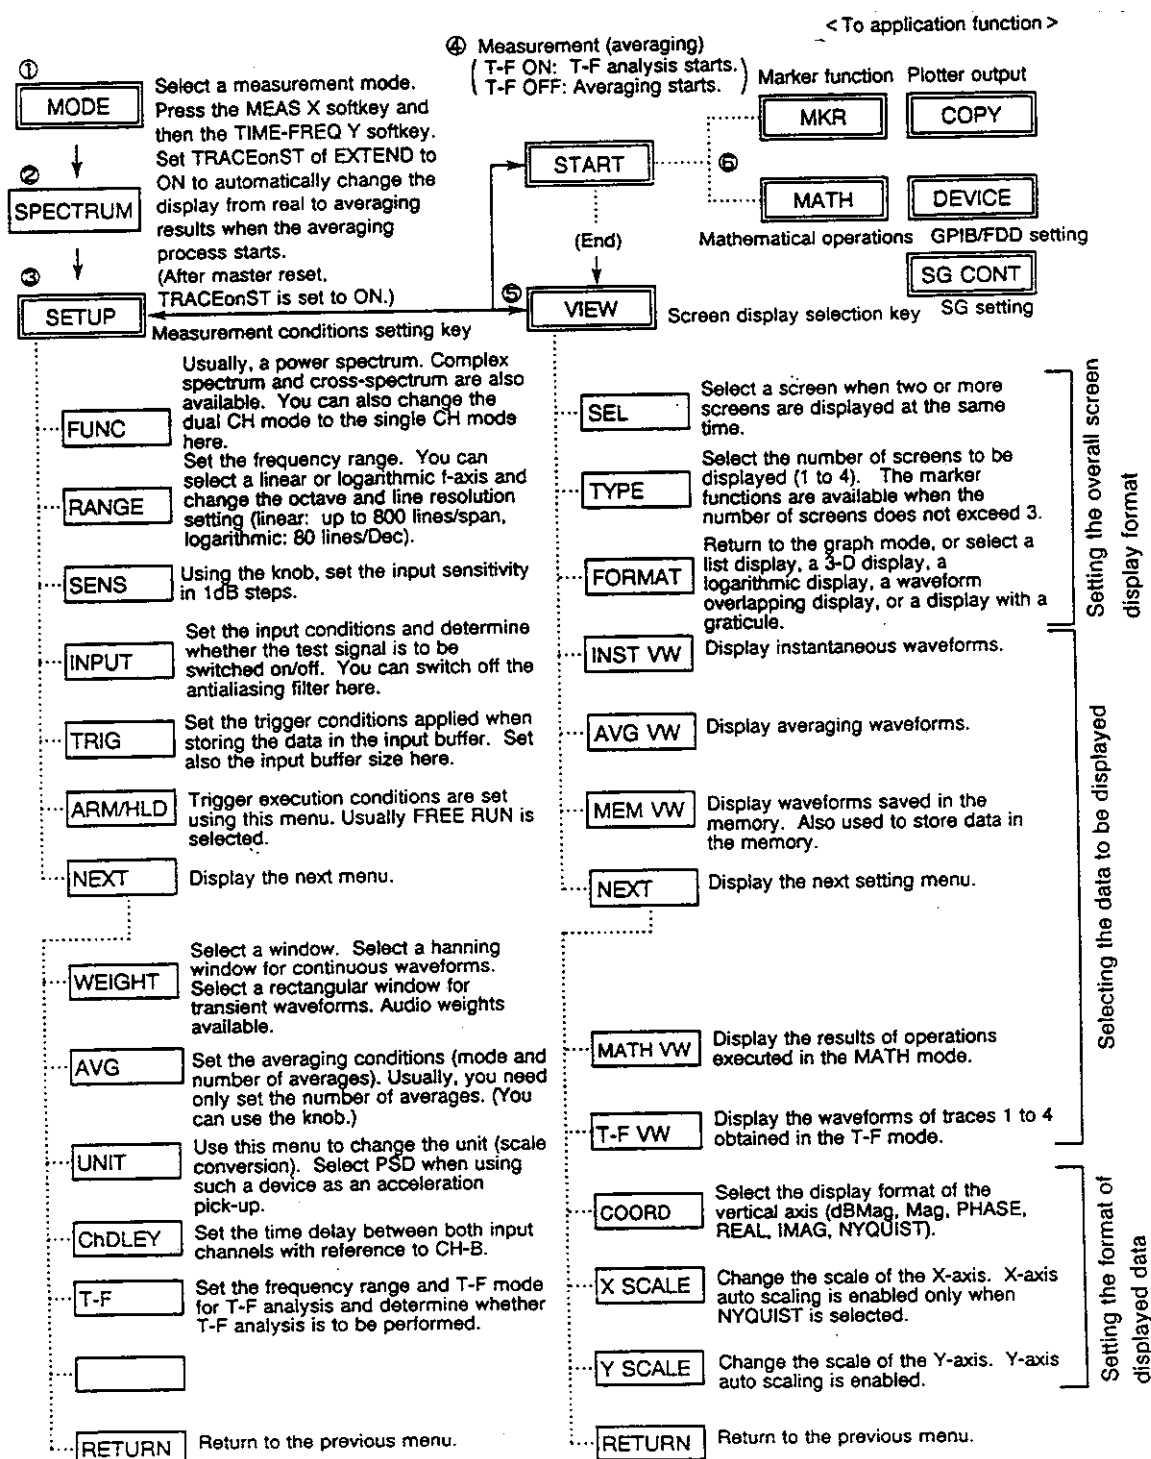


3. QUICK OPERATION GUIDE

■ Waveform Mode

- [HOW TO] : Do not forget that X softkeys must be pressed first, and then Y softkeys.
- : Time waveforms, auto correlation functions, cross-correlation functions, and histograms are measured.
 - : The analyzer initialization (master reset), is performed by pressing the RESET key twice while the message "R9211X" is displayed with large characters after the power is switched on.

< To application function >

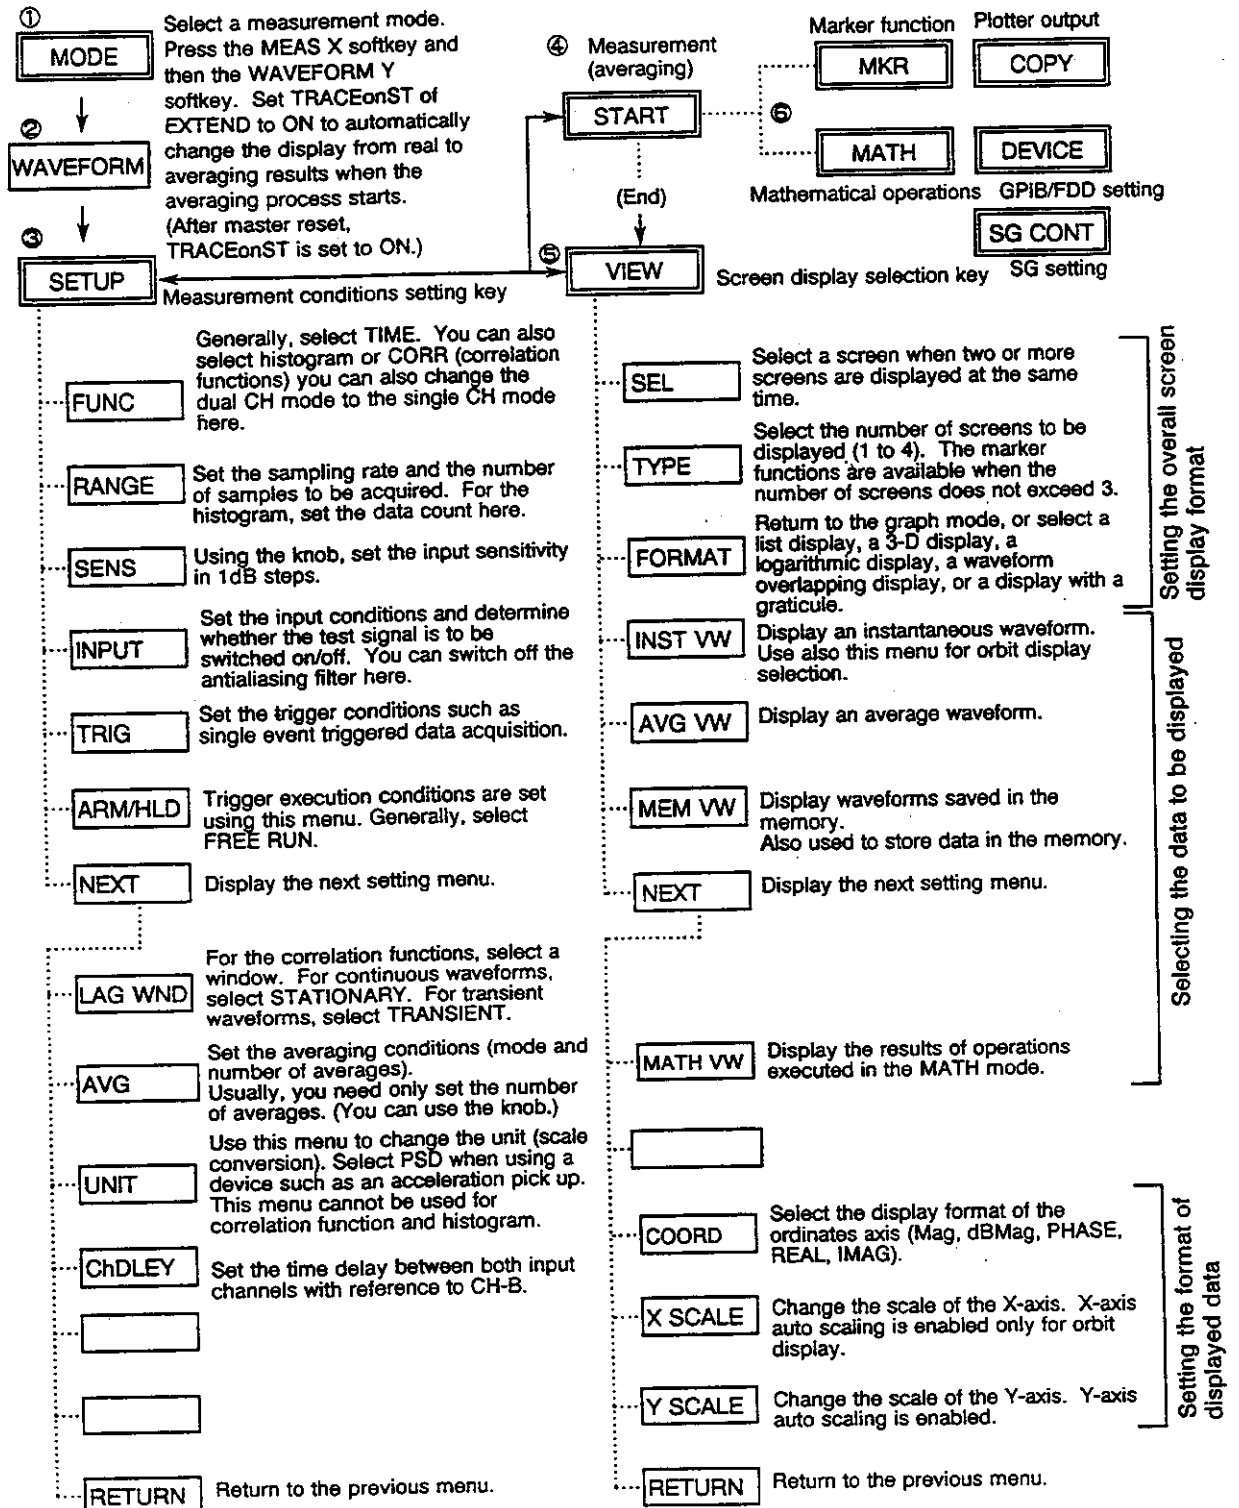


3. QUICK OPERATION GUIDE


Mathematical Operations

Basic procedure followed in the MATH mode
(the 4 basic arithmetic operations)

I. When **TR MATH** is selected

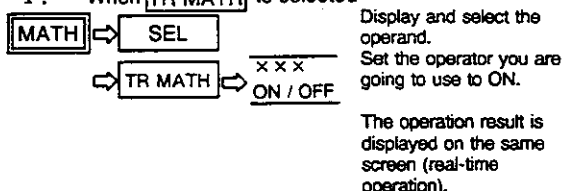

II. When **TR MATH** is not selected

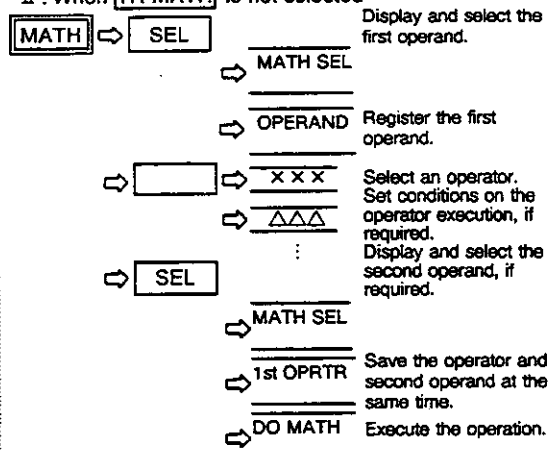

When the operation is completed, "MATH Completed!!" is displayed.
The operation result is displayed with the **VIEW** key.
If other operators are selected, and the 2nd and 3rd OPRTRs are set before execution of the first operation, a sequence of three operations can be executed.

MATH Four Basic Arithmetic Operations

When **MATH MENU** is selected with the **PRESET** key

- ... **SEL** Select the data displayed on the screen as the operand.
- ... **jw** SPECTRUM/TIME-FREQ/FRF/SERVO modes:
Integrations and differentiations in the frequency domain, time delay estimations, and frequency shift executions.
- ... **CEPSTUM** SPECTRUM/TIME-FREQ modes:
Cepstrum operations and liftering operations.
- ... **FRF MTH** FRF/SERVO modes:
Conversions between open and closed characteristics of feedback loops equalizer function, and SNR estimations.
- ... **t MATH** WAVEFORM mode
Four basic arithmetic operations, operations with a constant, inversions ($1/x$), negations ($-X$) and conjugations ($a + ib \rightarrow a - ib$)
- ... **DOMAIN** Transformation into another domain, Hilbert Transformation, FFT, and IFFT
- ... **MOD f** SPECTRUM/TIME-FREQ/FRF/SERVO
Band-pass, band-stop operation.
- ... **TR MATH** Smoothing, cumulative display, time waveform differentiation and integration, and waveform trend removal.

MATH Comparator Function

When **LMT MENU** is selected with the **PRESET** key

- ... **LMT CTRL** Execution control of the comparator function. Set a test mode and upper and lower display limits.
- ... **LMT MODE** Select a comparison mode between upper limits, lower limits, or upper/lower limits.
- ... **LMT VAL** Set each comparison level.
- ... **LMT EDIT** When the table mode is selected as the test mode, edit each table segment.

MATH Curve Fit

When **Curve Fit MENU** is selected with the **PRESET** key

- ... **Fit** Start or abort curve fitting execution and select the data subject to curve fitting. Also set the evaluation of the time delay.
- ... **sEDIT** Display the results of curve fitting execution: poles and zeros display.
- ... **sSCALE** Display the results of curve fitting execution: scale frequency and gain.
- ... **sWEIGHT** Specify the curve fitting frequency range and auto weighting.
- ... **sCONV** Change and display the Laplace parameter format for the curve fitting results.
- ... **to SYNTH** Transfer the Laplace parameters (obtained through curve fitting) to a synthesis table.

MATH Synthesis

When **FRF Synth MENU** is selected with the **PRESET** key

- ... **SYNTH** Start or abort synthesis execution.
- ... **sEDIT** Edit the Laplace parameters or input parameters for the synthesis execution.
- ... **sSCALE** Set the scale frequency and gain for synthesis execution.
- ... **sCONV** Change and display the format of the edited or input Laplace parameters.


Note

Average the data before curve fitting or synthesis execution.

4. ERROR MESSAGES

■ Meaning of Error Messages

The messages on upper screen have the following meaning.

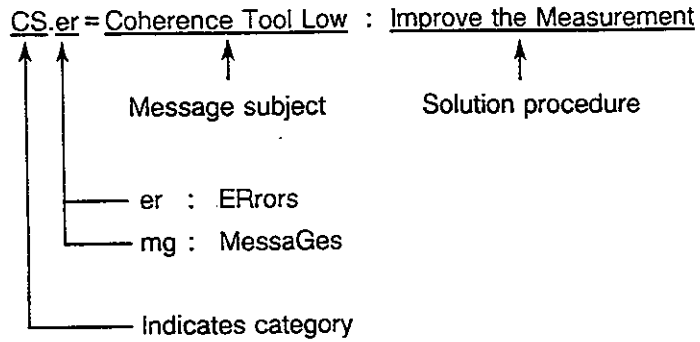

CS : Curve-fit & Synthesis
 DY : DisplaY
 FD : Floppy Disk
 GN : Go-Nogo
 GP : GP-ib
 MK : MarKer
 MT : MaTh
 PL : PLoT
 RS : Recall & Save
 SG : Signal Generation
 SM : Servo-Mode
 SU : SetUp
 TF : Time-Frequency
 WL : WeLcode
 XX : Miscellaneous

4. ERROR MESSAGES

■ Display Errors [DY.er]

DY.er= A Marker is Used: screens<4

[Problem]

- ① You attempted to use a marker function while the display is composed of 4 screens.
- ② You attempted to set the display type to 4 screens while using a marker function.

[Solution]

Reduce the screen number to at most 3 screens.

DY.er= Can't OVERLAY ON in NUMERIC LIST: try GRAPH

[Problem]


You were displaying 2 screens, one of them in NUMERIC LIST format and you tried to overlay

them with the  ⇒  ⇒  key.

[Solution]

You should display both screens in GRAPH mode.

[Reference]

Chapter 9, 4.  KEY OPERATION, ■ Display Format, ● Changing the display mode(OVERLAY)

DY.er= Invalid from 3D Display: Select GRAPH.

[Problem]

While the display format is the tridimensional format (3D Display):

- ① You pressed a forbidden key.
- ② You tried to change the display format to NUMERIC LIST.

[Solution]

You should return to the GRAPH format and then proceed to what you wanted to do.

[Reference]

Chapter 9, 4.  KEY OPERATION, ■ Display Format, ● Changing the display format

4. ERROR MESSAGES

DY.er= Invalid from CATalog Display: Set CAT OFF

[Problem]

While the floppy disk catalog is displayed, only the Y softmenu can be used.

Y softkeys of the

DEVICE



ACCESS

[Solution]

Switch the catalog display off by pressing:

DEVICE



ACCESS



CAT OFF

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ Menus Related to the Floppy Disk
Chapter 15, 3. Operation Method, ■ Floppy Disk Operation Procedure

DY.er= Numeric List Displayed: All screens to GRAPH

[Problem]

While the display format of at least one screen is the NUMERIC LIST format:

- ① You tried to change the display format to 3D display.
- ② You pressed a forbidden key.

[Solution]

You should return to the GRAPH format for All screen and then proceed to what you wanted to do.

[Reference]

Chapter 9, 4. VIEW KEY OPERATION, ■ Display Format, ● Changing the display format

DY.er= Multi-screen Not Allowed: Select SINGLE

[Problem]

When more than 1 screen are displayed, you tried to:

- ① Change the display format to 3D DISPLAY.
 - ② Edit a label (LABEL).
- When more than 2 screens are displayed, you tried to:
- ③ Change the display format to NUMERIC LIST.

[Solution]

You should display only 1 screen (or 2 screens in the NUMERIC LIST case), by pressing:

VIEW



TYPE



SINGLE (resp. DUAL)

[Reference]

Chapter 9, 4. VIEW KEY OPERATION, ■ Display Format, ● Changing the display format

About LABEL:

Chapter 9, 2. MODE KEY OPERATION, ■ Label

4. ERROR MESSAGES

DY.er= ORBITAL not displayed in 3D: try new COORD

[Problem]

While orbital data are being displayed (⇒ INST VW ⇒ ORBITAL), you tried to select the 3D Display format.

[Solution]

Either change the displayed data type (⇒ INST VW menu) or choose another display format (GRAPH).

DY.er= OVERLAY Invalid: Check Domain and Resolution

[Problem]

The screens that you attempted to OVERLAY do not have:

- ① the same frequency resolution
- ② the same X axis domain

[Solution]

Check the characteristics of each screen, and make sure they have same X axis domain and same frequency resolution.

[Reference]

Chapter 9, 4. KEY OPERATION, ■ Display Format, ● Changing the display mode(OVERLAY)

DY.er= Too many Points on Too Many Screens: Adjust

[Problem]

You selected a number of screens too large for the number of points on which your data are studied.

[Solution]

Reduce either the number of displayed screens, or the number of lines. Note that if you are displaying more than the allowed number of screens and that you setup a "forbidden" amount of samples or lines, then the number of screens is automatically modified!

[Reference]

Chapter 9, 4. KEY OPERATION, ■ Display Related Modifications, ● Changing the number of screens

4. ERROR MESSAGES

DY.er= Recalled data are LOG scaled: screens<3

[Problem]

While the number of displayed screens is at least 3 (3 or 4), you tried to recall from the memory

(**VIEW** → MEM VW → DATA
RECALL #) some LOG scaled data.

[Solution]

Reduce the number of displayed screens to 1 or 2 screens.

[Reference]

About Memory View:

Chapter 9, 4. **VIEW** KEY OPERATION, ■ How to Display Various Data, ● Saving and retrieving data

DY.er= Too many points: Reduce the number of points

[Problem]

- ① You tried to display some data in NYQUIST format on too many lines.
- ② You tried to save in the analyzer memory too large a data series (too many points) ...

[Solution]

Reduce the number of lines, so that it becomes strictly inferior to the maximum limit. Remember that the number of lines is specified in:

SETUP → **RANGE** → f RESOLN
(LIN f) → LINE/SPAN

[Reference]

Chapter 9, 4. **VIEW** KEY OPERATION, ■ Selection of the Various Data Display Formats, ● Nyquist diagram display

4. ERROR MESSAGES

■ Display Messages [DY.mg]

DY.mg= +MONITOR UNDO: Can't Return to MATH VW

[Problem]

This message tells you that even if you toggle the **VIEW** ⇒ **TYPE** ⇒ **+ MONITOR DO/UNDO** key to UNDO, the original MATH VW display cannot and will not be restored.

[Reference]

Chapter 5, 3. Toward Better Measurement, ■ Monitor Function

Chapter 9, 4. **VIEW** KEY OPERATION, ■ Display Related Modifications, ● Instantaneous data monitor

DY.mg= +MONITOR UNDO: Can't Return to MEM VW

[Problem]

This message tells you that even if you toggle the **VIEW** ⇒ **TYPE** ⇒ **+ MONITOR DO/UNDO** key to UNDO, the original MEM VW display cannot and will not be restored.

[Reference]

Chapter 5, 3. Toward Better Measurement, ■ Monitor Function

Chapter 9, 4. **VIEW** KEY OPERATION, ■ Display Related Modifications, ● Instantaneous data monitor

DY.mg= Before Changing VIEW STEP, Press PAUSE

[Problem]

This message tells you to press the **VIEW** ⇒ **INST VW** ⇒ **VIEW STEP** ⇒ **PAUSE** key before any attempt to modify the STEP TIME.

[Reference]

About VIEW STEP:

Chapter 9, 4. **VIEW** KEY OPERATION, ■ How to Display Various Data, ● VIEW STEP(data view function)

4. ERROR MESSAGES

DY.mg= Set DATA VIEW OFF, Please!

[Problem]

This message tells you to switch the VIEW STEP mode off. To do this you must press the

VIEW → **INST VW** → **DATA VIEW**
ON/OFF so that the OFF position be selected.

[Reference]

About VIEW STEP:

Chapter 9, 4. **VIEW** KEY OPERATION, ■ How to Display Various Data, ● VIEW STEP(data view function)

DY.mg= UNIT Settings have NO Effect on MATH RESULT

This message is displayed, when a mathematical operation is executed on data to which an Engineering Unit, together with a scaling factor, have been associated. It indicates that even if you decide to represent your data in Engineering Unit, because of limitations of the Analyzer, the MATH RESULT will be displayed with no consideration with your Engineering Unit settings, even though the display will bear the notation "EU" (or whatever you may have set as unit name). You should take extreme caution in your interpretation of the math results when the operands are not expressed in Volt Root Mean Square Value!

DY.mg= VIEW TYPE is changed to SINGLE Display

[Problem]

This message warns you that, for some reasons, the display format has been automatically changed to SINGLE, that is only one screen is displayed.

[Reference]

Chapter 9, 4. **VIEW** KEY OPERATION, ■ Display Format, ● Changing the display format

4. ERROR MESSAGES

DY.mg = Warning: NO DATA yet!

There is not yet any data in the buffers corresponding to the type of data you have just tried to display.

The different cases, you might encounter are:

- ① Average data : VIEW → AVG VW menu (no average processed has been executed yet)
- ② Memory data : VIEW → MEM VW → DATA key (no data has been saved yet)
RECALL #
- ③ Math data : VIEW → MATH VW → RESULT key (no math operation has been
ARREY executed yet)
- ④ Time Frequency trace : VIEW → T-F VW → t-f key (the trace number# is still
TRACE# empty)
- ⑤ Curve Fit or Synthesis data : VIEW → MATH VW menu when the PRESET setting is on
 Curve Fit or Synthesis settings (no curve fit or synthesis process has been executed yet)

In such a situation you might want to create the appropriate data.

For example, you might have forgotten to press the START key to start an average process.

■ Floppy Disk Errors [FD.er]

FD.er= Already Existing File: Change File Name

[Problem]

You tried to write data under an already used file name. There is already a file, on the disk currently inserted in the drive, with such a name.

[Solution]

Give a different name to your file.

[Reference]

Chapter 15, 2. How to Use A Floppy Disk, ■ Catalog Display and File Names, ● Signification of each information displayed on the catalog

FD.er= Badly Formatted / Badly Mounted Disk: Check


[Problem]

- ① The disk currently inserted in the drive has not been correctly formatted: it was not initialized with the R9211.
- ② The disk inside the drive is not correctly mounted.

[Solution]

- ① The R9211 can only access disks it has itself initialized. Since the initialization operation will DESTROY any information on the disk, if you care for the data that may be on your disk, use another one, one that has never been used yet.
- ② Try to insert it again.

The sequence for initializing a disk is:



[Reference]

Chapter 15, 3. Operation Method, ■ Floppy Disk Initializing Operation Procedure, 1:Initialize a new floppy disk

FD.er= Can't find FILE: Check File Name

[Problem]

No file with the name you specified, can be found on the disk. Most probably, you misspelled the name.

[Solution]

Check the spelling of the file name you specified, and if there is any mistake correct it. Otherwise, check that you inserted the intended disk in the drive!

[Reference]

Chapter 15, 3. Operation Method, ■ Floppy Disk Initializing Operation Procedure, 1:Initialize a new floppy disk

4. ERROR MESSAGES

FD.er= File Access Impossible: Check size (<32KB)

[Problem]

The specified file is too large to be accessed. Practically the file size exceeds 32 KB.

[Solution]

No Solution!

FD.er= File Access Impossible: Check size (>512B)

[Problem]

The specified file is too small to be accessed. Practically the file size is smaller than 512B.

[Solution]

No Solution!

FD.er= Illegal Disk Type: Change Disk

[Problem]

The disk inserted in the drive cannot be used by the R9211 analyzer.

[Solution]

Use another disk, whose format will be compatible with the R9211 analyzer.

[Reference]




Chapter 15, 1. Outline


FD.er= Invalid Change: RECALL DATA OFF First

[Problem]

You cannot change the measurement conditions on data recalled from the disk. Furthermore, you are considered in the recall data mode until the time when you clearly specify you want to quit this mode.

[Solution]

To specify you want to quit the recall data mode press the   

 RECALL
DATA OFF key. Then you can proceed to the desired measurement mode changes.

[Reference]

Chapter 15, 3. Operation Method, ■ Notes on Retrieving Procedure

4. ERROR MESSAGES

FD.er= Invalid File Header: Check File Type

[Problem]

- ① The file which you want to access has not been created by the R9211 analyzer.
- ② The file which you want to access has not the appropriate format, for the specified operation.

[Solution]

You should check the file type and origin.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ Data Compatibility between Models

FD.er= Invalid File Name: Check it

[Problem]

A file name such as the one you have specified is incorrect. For example, it might not correspond to the file type.

[Solution]

You should check the file name, and correct it so that it matches the file type.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ Catalog Display and File Names, ● Signification of each information displayed on the catalog

FD.er= Invalid File or Disk Format: Try new Disk

[Problem]

The file format or the disk format is not correct.

[Solution]

Check the file or disk format, and eventually try to use another disk.

FD.er= Invalid Format Selection: Try new one

[Problem]

Such a file format cannot be selected for the type of data considered here.

[Solution]

Check the file format and the data type, and select a file format that will match this data type.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ MEAS File(Data File/View File) + ■ Table File (R9211C Only)

4. ERROR MESSAGES

FD.er= Invalid Operation: RECALL DATA OFF First

[Problem]

While you are in the recalled data mode (You recalled data from the disk, and you did not press the RECALL key), the following operations are forbidden:

- ① changing the number of screens
- ② using the + Monitor function
- ③ selecting the 3D display format
- ④ modifying the instantaneous data (INST VW)
- ⑤ modifying average data (AVG VW)
- ⑥ modifying memory data (MEM VW)
- ⑦ modifying math result data (MATH VW)
- ⑧ modifying T-F analysis data (T-F VW)
- ⑨ executing a MATH operation
- ⑩ executing a Limit Tests operation (GO-NOGO)
- executing a curve-fit or synthesis operation

[Solution]

Before executing any of these operations, press the



[Reference]

Chapter 15, 3. Operation Method, ■ Notes on Retrieving Procedure

FD.er= No Data to Save: Check it

[Problem]

There is no data at all on the screen you attempted to save on a floppy disk.

[Solution]

You should check what you are trying to save. Remember for example, that only ONE screen can be saved at a time, therefore be sure the desired screen is actually selected (SEL key).

An empty screen is characterized by the display of the following message: "DY.rng = Warning: No DATA yet", You cannot save such a screen on the floppy disk!

FD.er= No Disk: Insert! a Disk

[Problem]

You tried to use a floppy disk function, while the drive contains no disk!

[Solution]

Insert your floppy disk in the drive and try again.

4. ERROR MESSAGES

FD.er= Non-Formatted Disk: Format it on the R9211

[Problem]

- ① The disk actually inserted in the drive has not yet been initialized.
- ② The disk actually inserted in the drive is not correctly initialized.

[Solution]

- ① If there is no data you care for on the disk, initialize it with the R9211 analyzer. Be careful that all the data that may be on the disk, will be thus erased!
- ② If you want to keep the disk as it is, you must use another disk, possibly a new one and initialize it with the R9211 analyzer.

[Reference]

Chapter 15, 3. Operation Method, ■ Floppy Disk Initializing Operation Procedure, 1:Initialize a new floppy disk.

FD.er= Read Error (LOAD) !

[Problem]

During the loading process of the specified file, an error occurred. Possibly the file contains some garbage, so that the analyzer cannot correctly read it.

[Solution]

Check the file. Check also the load operation parameters.

FD.er= Unknown File Name; Check File Name

[Problem]

The specified file name is not a valid file name.

[Solution]

Check :

- ① the spelling of the name you have specified.
- ② whether the file has been created by the R9211.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ Catalog Display and File Names, ● Signification of each information displayed on the catalog

4. ERROR MESSAGES

FD.er= Write Error (SAVE) !

[Problem]

During the saving process of the specified file, an error occurred. The disk might be damaged, or there might have been some perturbations during the operation.

[Solution]

Check :

- ① the disk status.
 - ② the saving parameters
- Try to save the file again.

FD.er= Write Protected Disk!

[Problem]

You are trying to write on a write protected disk.

[Solution]

- ① Use another disk if you actually do not want to write on this disk.
- ② Temporary remove the write-protection from the disk.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ How to Handle the Floppy Disk, ● Write protection

■ Floppy Disk Messages [FD.mg]

```
FD.mg= Copying: #####.### To #####.###
```

This message is displayed during a file copy operation. It tells you that the first file of the message is copied to the second file of the message. The message is equivalent to: "FD.mg= Copying: Source_file To Destination_file"

```
FD.mg= Delete Operation Completed
```

The file delete operation is completed, you can proceed to the next operation you want to execute.

```
FD.mg= Deleting: #####.###
```

This message is displayed while the file, whose name is specified in the message, is being deleted from the disk.

```
FD.mg= Disk Changed
```

You changed the disk inside the drive.

```
FD.mg= Disk Files > 100, invalid CATalogue Display
```

[Problem]

This message is displayed when the disk inserted in the drive contains more than 100 file entries, which is the maximum number of file entries the R9211 can access on a disk. Therefore, the catalogue display cannot correct.

[Solution]

You should partition the files on your disk between two disks, so that each disk will contain less than 100 file entries.

```
FD.mg= Disk Initialization Completed
```

The initialization procedure is completed. The disk is ready for use.

```
FD.mg= Disk Initialization in Progress
```

The disk is being initialized. Wait until the message "FD.mg= Disk Initialization Completed" is displayed.

4. ERROR MESSAGES

FD.mg= Empty Disk!

This message is displayed when you try to access an empty disk (contains NO file). You should delete this useless file entry.

FD.mg= File Copy Completed

The file copy operation is completed, you can proceed to the next operation you want to execute.

FD.mg= Loading: #####.###

This message is displayed while the file, whose name is specified in the message, is being loaded from the disk to the R9211 memory.

FD.mg= Load operation Completed

The load operation is completed. You can proceed to the next operation you want to execute.

FD.mg= Overwrite #####.###? Yes=EXECUTE No=Any key

[Problem]

This message is displayed when the operation you have specified causes the file, whose name is specified in the message, to be overwritten.

[Solution]

If you actually want this file to be overwritten, press the EXECUTE key, where XXXXXX represents the operation you are trying to execute. If you do not want the file to be overwritten press any other key.

FD.mg= Reading the Disk Status

The disk is analyzed, and the disk information are read. Thus the status of the disk can be known. If the disk is not compatible, you will be told so by a specific message.

FD.mg= Save Operation Completed

The specified was saved to the disk and this operation is completed. You can proceed to the next operation you want to execute.

FD.mg= Saving: #####.###

This message is displayed while the file, whose name is specified in the message, is being saved onto the disk.

4. ERROR MESSAGES

FD.mg= System Compatible Disk

The disk is compatible with the R9211 analyzer. It has the correct specifications and it was correctly initialized.

FD.mg= the Disk is FULL

[Problem]

This message is displayed when the disk is full. The disk capacity is exceeded. Remember that the disk capacity is:

- 100 file entries
- 720KB (2DD)
- 1MB (2HD)

[Reference]

Chapter 15, 1. Outline

FD.mg= the Disk is FULL, can't SAVE

[Problem]

This message is displayed when the disk is full, so that no more file can be saved onto it. Remember that the disk capacity is:

- 100file entries
- 720KB (2DD)
- 1MB (2HD)

[Reference]

Chapter 15, 1. Outline

FD.mg= the Disk is FULL, can't SAVE or COPY

[Problem]

This message is displayed when the disk is full, so that no more file can be saved or copied onto it.

Remember that the disk capacity is:

- 100file entries
- 720KB (2DD)
- 1MB (2HD)

[Reference]

Chapter 15, 1. Outline

4. ERROR MESSAGES

■ GPIb Errors [GP.er]

GP.er= [%s] Invalid: Check the PRESET menu

[Problem]

The command, whose name is specified in the message, cannot be executed because it does not match the **PRESET** menu settings. For example, if the **MATH** menu is actually selected under the **PRESET** menu (**PRESET** → **MATH KEY** → **MATH MENU**) you cannot execute any function belonging to the Curve-Fit menu.

[Solution]

Check the settings in the **PRESET** menu, and change them to match with what you want to do.

[Reference]

Chapter 9, 1. **PRESET** KEY OPERATION

GP.er= [%s] Invalid on the Selected Data

[Problem]

You cannot execute the command, whose name is specified in the message, on the data which are selected.

[Solution]

Check the data type versus the specified command, and correct the settings.

GP.er= [%s] Invalid= CH-A ANALOG

GP.er= [%s] Invalid= CH-A and B ANALOG

GP.er= [%s] Invalid= CH-A and B DIGITAL

GP.er= [%s] Invalid= CH-A DIGITAL

GP.er= [%s] Invalid= CH-B ANALOG

GP.er= [%s] Invalid= CH-B DIGITAL

[Problem]

With the input block status (for example CH-A ANALOG input), the command, whose name is specified in the message, cannot be executed. These error messages are only displayed on the version provided with the digital input functionality.

[Solution]

Check the input block status versus the specified command and correct the settings.

4. ERROR MESSAGES

GP.er= [%s] Invalid= Incorrect Machine Type (2)

[Problem]

The analyzer you are using is not a R9211A , B, C or F, and the command, whose name is specified in the message, cannot be executed on it.

[Solution]

The only solution to your problem is to get the appropriate analyzer version ...

GP.er= [%s] Invalid= Incorrect Machine Type (3)

[Problem]

The analyzer you are using, is not provided with the functionality required by the command, whose name is specified in the message. You cannot execute this command on this version.

[Solution]

The only solution to your problem is to get the appropriate analyzer version ...

GP.er= [%s] Invalid= Measurement Mode Mismatch

[Problem]

The command, whose name is specified in the message, does not match the selected measurement mode.

[Solution]

Check the measurement mode actually selected. Eventually, change to fit what you want to do.

GP.er= [%s] Invalid= No FDD Option

[Problem]

Though your analyzer is not equipped with a Floppy Disk Drive (FDD), you tried to execute the command, whose name is specified in the message, which is a floppy disk utility command.

[Solution]

You should consider the installation of a floppy disk drive option on your analyzer.

GP.er= [%s] Invalid= No IO Board

[Problem]

Although your analyzer is not equipped with an I/O Board, you tried to execute the command, whose name is specified in the message, which is an I/O board related command.

[Solution]

You consider the installation of an I/O board option on your analyzer.

4. ERROR MESSAGES

```
GP.er= [%s] Invalid= No SG option
```

[Problem]

Although your analyzer is not equipped with a Signal Generation block (SG), you tried to execute the command, whose name is specified in the message, which is a signal generation related command.

[Solution]

You consider the installation of a signal generation block option on your analyzer.

```
GP.er= [%s] Invalid= Printer Error n %d
```

[Problem]

A printer error occurred. The printer error codes are:

- %d = 1 => "Printing"
- %d = 2 => "No Paper in the printer"
- %d = 3 => "Printer Head UP"
- %d = 4 => "The printer is not connected"

[Solution]

- %d = 1 => Wait until job completion
- %d = 2 => Put some paper in the paper!
- %d = 3 => Position the printer's head down
- %d = 4 => Check whether the printer is correctly connected

```
GP.er= [%s] Invalid= SG ANALOG
```

```
GP.er= [%s] Invalid= SG DIGITAL
```

[Problem]

With the signal generation (SG) block status (for example SG ANALOG), the command, whose name is specified in the message, cannot be executed. These error messages are only displayed on the version provided with the digital input functionality.



[Solution]

Check the signal generation block status versus the specified command and correct the settings.

■ Marker Errors [MK.er]

MK.er= invalid X MARKER: Match Marker and Waveform

[Problem]

- ① The X MARKER utility you have selected cannot be applied on the type of waveform displayed.
- ② While no marker function is selected, you press the  →  → SEL to OTHER key.

[Solution]



- ① Check the X MARKER function you have selected and the type of data which are displayed, and match one with the other.
- ② Select a marker function before pressing the SEL to OTHER key.

[Reference]

Chapter 10, 2. SEARCH MARKERS, ■ Relationships between Search Makers and Waveform Types

MK.er= No Marker Function Selected: Select One

[Problem]

Even though no X MARKER function was selected, you pressed the  →  → X MARKER DO ESTIM key.

[Solution]

Make sure that a X MARKER function is selected before pressing the X MARKER DO ESTIM key.

[Reference]



Chapter 10, 2. SEARCH MARKERS, ■ Operating the Search Markers

4. ERROR MESSAGES

■ **MarKer Messages [MK.mg]**

MK.mg= Press X MARKER DO ESTIM !

This message is displayed when the selected marker you have selected is not an automatic marker.

In such cases, it tells you to press the  →  → X MARKER DO ESTIM key, to start the marker estimation.

[Reference]

Chapter 10, 2. SEARCH MARKERS, ■ Operating the Search Markers

■ MaTh Errors [MT.er]

MT.er= Bad *** Operand: Check!

[Problem]

The operation type, whose name is specified in the message (***) cannot be executed on the data selected as operand.

[Solution]

The different operation types can be:

***	The operand must be
FFT	Xa or Xb
jw	Frequency Response Function (FRF) or spectrum
ROTATION	Sa, Sb or <Hab>
CEPSTRUM	Power spectrum
LIFTERING	Cepstrum
FREQ SHFT	Frequency Response Function (FRF) or spectrum
BANDPASS	Frequency Response Function (FRF) or spectrum
BANDSTOP	Frequency Response Function (FRF) or spectrum
OpnCis	Frequency Response Function (FRF)
CisOpn	Frequency Response Function (FRF)
EQUALIZE	Frequency Response Function (FRF)
SNR	Coherence Function
NOP	Coherence Function
COP	Coherence Function or Power spectrum
InCOP	Coherence Function or Power spectrum

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= *** math Can't be executed: OperandS Check

[Problem]

The operation, whose name is specified in the message (***), cannot be executed because the operands do not match. For example, when you try to add Gaa and Gab.

[Solution]

Check the operands types and choose operands of identical type.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

4. ERROR MESSAGES

MT.er= A *** OPERATOR Can't be Selected: Clear it

[Problem]

You cannot set any operation after a domain transformation. For example, if Xa being the operand, you select "to FFT" as first operator, you cannot set a second operator, and if you do, the message "MT.er= A 2nd OPERATOR Can't be selected: Clear it" will be displayed.

[Solution]

You must clear the specified operator.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Different f-RANGE Operands: Adjust Ranges

[Problem]

You tried to execute an operation on two operands which do not have the same frequency range.

[Solution]

Check the operand's frequency ranges, and adjust them so that they are equivalent.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Different Modes Operands: Choose ONE Mode

[Problem]

You tried to execute an operation on two operands, which are one a <Hab> obtained through the FRF mode, the other one a <Hab> obtained through the servo-mode.

[Solution]

Choose <Hab> data coming from the same one mode.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

4. ERROR MESSAGES

MT.er= Different Sizes Operands: Try New Settings


[Problem]

You tried to execute an operation on operands that do not have the same size. The number of samples is not the same. For example, this message is displayed when you try to add a Xa studied on 512 points and a Xa studied in 1024 points!

Note that this error message might hide another worse error. Indeed if you were trying to add a Xa type waveform with the corresponding Sa type waveform, it is possible that this message will be displayed, because the size is what will be tested first. Xa is studied on 512 points, Sa is represented on 200 lines (real part + imaginary part).

[Solution]

You should select the same number of points for both operands! To do this you must set the

SETUP  **RANGE** menu correctly.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Different Sweeps Methods: Adjust Sweeps

[Problem]

You tried to execute an operation on operands obtained in the servo mode with 2 different sweep methods.

[Solution]

You should select data obtained with the same sweep method.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er = Different X-axes Operands: Check Them

[Problem]

The operands selected for the current operation do not have the same X axis. For example, this message is displayed when you try to add together an autocorrelation function (Raa) and a time waveform (Xa), since the axes units are time for Xa and LAG for Raa.

[Solution]

You should check the operands and set the operation again with compatible operands.

4. ERROR MESSAGES

MT.er= fMATH Can t be Executed on Coherence Data

[Problem]

You tried to execute a fMATH operation on Coherence data.

[Solution]

There is no real solution. It is just not possible to execute any fMATH operation on coherence data.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Invalid IFFT Operand: Select Sa or Hab

[Problem]

You tried to apply the IFFT (Inverse Fast Fourier Transform) operation on an incompatible type operand. For example, this message is displayed when you select IFFT as operator when the operand is Gaal

[Solution]

The only compatible types are Sa or < Hab >

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Invalid on Log-f Data: Choose Lin-f

[Problem]

You tried to execute a domain transformation (to FFT) on some logarithmic frequency data.

[Solution]

The operand of a domain transformation must be linear frequency data.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Invalid on Zoom Data: Set Zero-Start Mode

[Problem]

You tried to execute a domain transformation (FFT, IFFT) on zoom analysis data.

[Solution]

Select the zero-start analysis mode: cancel the zoom analysis mode.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

4. ERROR MESSAGES

MT.er= Invalid Operand: Choose another lin-f SWEEP

[Problem]

You tried to execute a domain transformation (FFT, IFFT) on some data obtained in the servo mode, with a linear frequency table.

[Solution]

You should select a linear sweep method other than a frequency table.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= No Computation Allowed on ORBITAL Data

[Problem]

You selected ORBITAL data as operand.

[Solution]

There is no solution: no operation is allowed on ORBITAL data.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= No Computation Allowed on T-F Data

[Problem]

You selected T-F analysis (Time-Frequency) data as operand.

[Solution]

There is no solution: no operation is allowed on T-F data.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

4. ERROR MESSAGES

MT.er= No Operand Selected: Select ONE

[Problem]

You forgot to select some data as operand!

[Solution]

You just have to select an operand. Remember that to select the first operand of an operation you must select, with the SEL key, the screen where the desired data are displayed.

Then you must press the MATH SEL key and the OPERAND key. In the case of a second operand you must select the data with the SEL key before selecting the operator and once both have been selected, you must press the xxx OPRTR key (xxx standing for 1st or 2nd or 3rd depending on the operator you are setting).

[Reference]

Chapter 11, 2. BASIC PROCEDURES, ■ Basic Operation Procedure(Example of "X+Y")

MT.er= No Operator Selected: Select ONE

[Problem]

You forgot to select an operator.

[Solution]

Select the desired operator. You must press the operation key, then you must press the xxx OPRTR key.

[Reference]

Chapter 11, 2. BASIC PROCEDURES, ■ Basic Operation Procedure(Example of "X+Y")

MT.er= On Correlation: No tMATH op. but CMP CNJ

[Problem]

You tried to execute a forbidden tMATH operation on Correlation data.

[Solution]

The only allowed tMATH operation on Correlation data is the COMPLEX CONJUGATE operation

(COMPLEX
CONJUGATE key).

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

4. ERROR MESSAGES

MT.er= Operand can't be MATH result: Check Operand

[Problem]

You tried to execute an operation on a MATH operation result.

[Solution]

You cannot select a MATH operation result as an operand. To bypass this problem, you should use the combination operation feature of this analyzer. That is to say that instead of specifying one operation, getting the result and executing a new operation on the result, you are going to specify both operations at the same time, once as 1st OPERATOR, the other as 2nd OPERATOR. Note however that there are limits to this feature.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Operand Type Invalid for this Operation

[Problem]

The operand type you specified for this operation is not allowed.

[Solution]

Check the operand type and make sure it matches the operation type.

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Too Many Lines (Points): Try a New Size

[Problem]

The operand you have selected is too large for a MATH operation.

[Solution]

The maximum operand size is 1024 samples (→ 400 complex spectrum lines).

[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

4. ERROR MESSAGES

MT.er= TR MATH Can't be Executed: Set Lin-f

[Problem]

You tried to apply a TR MATH utility (smoothing, trend removing) on non-linear frequency resolution data.

[Solution]

Set the frequency resolution to lin-f:

press the following key sequence:



[Reference]

Chapter 11, 1. MATHEMATICAL OPERATIONS, ■ Restrictions on the Mathematical Operations

MT.er= Window Error: Select Rect, Hanning, Minimum

[Problem]

You tried to execute an IFFT on data for which a window other than the Rectangular, the Hanning or the minimum window is selected.

[Solution]

Select one of the allowed windows : RECT (Rectangular), HANNING, or MINIMUM.

■ MaTh MessaGes [MT.mg]

MT.mg= Calculate by Exchanging Upper f and Lower f

In the **MATH** menu, (BANDPASS, BANDSTOP, jw ...), you set a larger value for the Lower Frequency than for the Upper Frequency. Since such a setting makes no sense, the actual computation is performed considering that the value you set as upper frequency is in fact the lower frequency value, and reciprocally. This exchange is not mirrored on the frequency menu, thus if you look at this menu again, you will not see any settings modification. This message is displayed because you might not want such an exchange to happen, and you had better check back your settings. Particularly, do not mistake the kHz, Hz and mHz keys.

MT.mg= Real Time Math Process Interruption !

Because you press one of the keys that interrupts the real time math process, this process was interrupted. It will start again, in the new conditions you are about to set, when you will press the

DO MATH key. To definitely stop it, you must switch the REAL TIME key (in the **MATH** menu).
ON/OFF

4. ERROR MESSAGES

■ **Plot Errors [PL.er]**

PL.er= No Plotter is available!

[Problem]

No plotter is available: either no plotter is connected to the analyzer, or the connected plotter is switched off.

[Solution]

Connect the plotter and switch it on.

[Reference]

Chapter 16, 2. How To Use A Plotter, ■ Connectable Plotters and Connection Method
Chapter 16, 3. How To Use A Video Printer, ■ Video Printer Connection Method

PL.er= Plotting Process Abnormally Completed!

[Problem]

The currently running plotting process was abnormally terminated. Perhaps the power was shutdown during plotting.

[Solution]

Check the plotter condition and try to plot again.

■ PLOt Messages [PL.mg]

PL.mg= Plotting (List Display)

This message is displayed when a list display is being plotted.

PL.mg= Plotting: Wait a moment Please

[Problem]

This message is displayed when:

- ① You press a forbidden key while the plotter is busy.
- ② You try to open the alphabetical window while the plotter is busy.

[Solution]

You just have to wait until completion of the plotting process.

PL.mg= Press once more the COPY key: 3D Display!

[Problem]

This message tells you to press a second time the COPY key to start a hard-copy of a tridimensional display (3D display).

[Reference]

Chapter 16, 2. How To Use A Plotter, ■ Precautions, ● How to plot 3-dimensional graphs

4. ERROR MESSAGES

■ Recall & Save Errors [RS.er]

RS.er= Can't Save POLAR data: Change Coordinates

[Problem]

POLAR data cannot be saved to the analyzer memory. It includes ORBITAL data, NYQUIST diagram data, Cole-Cole diagram data...

[Solution]

You should change the displayed data, in the **INST VIEW** menu (for ORBITAL), or in the

COORD menu (for the other types).

[Reference]

About Memory Save and Recall:

Chapter 9, 4. **VIEW** KEY OPERATION, ■ How to Display Various Data, ● Saving and retrieving data

RS.er= MATH results can't be saved in Memory

[Problem]

You cannot save math operations results into the analyzer memory.

[Solution]

There is no solution. You just cannot do it!

RS.er= No Data to be Recalled: Use DATA SAVE X

[Problem]

Although no data have been saved into the analyzer memory number X, you tried to recall some data from this memory.

[Solution]

Try again, without forgetting to save the desired data in the memory with the **DATA SAVE X** key.

[Reference]

About Memory Save and Recall:

Chapter 9, 4. **VIEW** KEY OPERATION, ■ How to Display Various Data, ● Saving and retrieving data

4. ERROR MESSAGES

RS.er= No Servo Option: Data Loaded as WAVEFORM

[Problem]

You tried to load Servo Data from the disk, on an analyzer not provided with the servo option. Such data cannot be loaded as such. Thus, these data are loaded and displayed in the waveform mode.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ● Data Compatibility between Models

RS.er= No Zoom Option: Data Loaded as Zero-Start

[Problem]

You tried to load Zoom Data from the disk, on an analyzer not provided with the zoom option.

[Solution]

Such data cannot be loaded as such. Thus, these data are loaded and displayed in the zero-start mode (non-zoom mode).

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ Data Compatibility between Models

RS.er= ORBITAL data RECALL: Only on 1st SEL screen

[Problem]

You tried to recall from the analyzer memory some orbital data, on a screen other than the first screen.

[Solution]

Orbital data can only be recalled on the 1st screen. Thus, make sure that the 1st screen is selected before recalling orbital data from the memory.

RS.er= Servo Data Can't Be Loaded on this Version

[Problem]

Although, the analyzer you are actually using is not provided with servo-mode features, you attempted to recall some servo mode data from the disk.

[Solution]

There is no real solution. These servo mode data can only be recovered from a version provided with the servo mode feature.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ Data Compatibility between Models

4. ERROR MESSAGES

RS.er= Such Data Can't be Saved on Disk!

[Problem]

You tried to save unallowed data on the disk.

[Solution]

Check the type of the data you wish to save on disk. And make sure this type can be saved on the disk.

[Reference]

Chapter 15, 2. How To Use Floppy Disk, ■ MEAS File(Data File/View File) + ■ Table File(R9211 Only)

RS.er= Zoom Data Can't Be Loaded on this Version

[Problem]

Although, the analyzer you are actually using is not provided with zoom features, you attempted to recall some zoom data from the disk.

[Solution]

There is no real solution. These zoom data can only be recovered from a version provided with the zoom feature.

[Reference]

Chapter 15, 2. How To Use A Floppy Disk, ■ Data Compatibility between Models

■ Recall & Save Messages [RS.mg]

RS.mg= Damaged File: Changed to Waveform Display

This message is displayed when a damaged is accessed (load). In such a case, the valid portion of the file is read from the disk, and displayed in the WAVEFORM format by default.

PL.er= Plotting Process Abnormally Completed!

This message is displayed to indicate you the completion of the data saving to memory operation. The memory number is also indicated in the message.

4. ERROR MESSAGES

■ SetUp Errors [SU.er]

SU.er= Invalid DECADE (frequency<10mHz)!

[Problem]

Because of a decade or of a frequency modification, the smaller studied frequency became smaller than the smallest allowed frequency (= 10mHz).

[Solution]

Check your frequency and decade settings.

[Reference]

Chapter 5, 3. Toward Better Measurement, ■ Setting the Frequency Range and the Resolution of the Measurement

SU.er= Invalid Input Signal: Make a New Input

[Problem]

The signal acquisition which was just performed, is invalid and cannot be trusted.

[Solution]

This error usually occurs at the beginning of an acquisition phase, and is not very dangerous. You have to be aware that the signal for which the message was displayed is not correct. The following acquisition should correct.

SU.er= Log/Oct f Invalid: Set Lin f

[Problem]

You cannot select a logarithmic nor an octave frequency resolution on such data.

[Solution]

You may only choose the linear frequency resolution.

SU.er= Lower Limit Exceeded: Check Settings

[Problem]

In one of the Y softmenus accessed by the **SETUP** key, the value you have set exceeds the lower limit for the considered parameter. For example, you tried to set the SAMPLE number to less than 64.

[Solution]

Check your setting.

4. ERROR MESSAGES

SU.er= No ICH DELAY on 1 Channel: ACTIVE CH= CHA&B

[Problem]

You selected the Interchannel delay (ICH DELAY) functionality, but only one channel is active so that an interchannel delay is meaningless.

[Solution]

Make both channels active.

[Reference]

About Interchannel delay:

Chapter 9, 3. **SETUP** KEY OPERATION, ■ Setting of the Interchannel Delay

SU.er= SENS=AUTO: Select MANUAL if SAMPL CLK= EXT

[Problem]

You tried to select the external sampling clock mode (SAMPL CLK INT~~EXT~~), while the sensitivity setting is on automatic.

[Solution]

You should change the sensitivity mode to MANUAL.

SU.er= SAMPL CLK=EXT => Operation Invalid

[Problem]

Because the sampling clock is external, the operation you just attempted is forbidden. For example:

- ① You cannot execute a zoom analysis.
- ② The sensitivity mode cannot be automatic.

[Solution]

You could choose the internal sampling clock.

SU.er= Upper Limit Exceeded: Check Settings

[Problem]

In one of the Y softmenus accessed by the **SETUP** key, the value you have set exceeds the upper limit for the considered parameter. For example, you tried to set the SAMPLE number to more than 8192.

[Solution]

Check your setting.

4. ERROR MESSAGES

■ **SetUp Messages [SU.mg]**

SU.mg= Condition Already Selected

This message is displayed when you are attempting to set a condition that is already selected.

SU.mg= Conflict: SINGLE channel => ICH DELAY OFF

This message is displayed to warn you that because you selected a single channel mode, the interchannel delay functionality is automatically cancelled.

SU.mg= Digital Input: SENS is set to MANUAL

[Problem]

The automatic sensitivity function cannot be used on digital input. Thus, the analyzer automatically selected the MANUAL SENSitivity mode when you chose a digital input.

[Reference]

About Digital Input/Output:
Chapter 14

SU.mg= FREE RUN must be selected

For one of the following reasons the free run mode must be selected:

- ① You selected the calibration mode (**MODE** → **CAL** → **SINGLE DC CAL**).
- ② You modified the measurement mode (**MODE** → **MEAS**).
- ③ You changed the setting of one of the following menus:

- **SETUP** → **RANGE**
- **SETUP** → **SENS**
- **SETUP** → **INPUT**

To select the free run option, press the following key sequence:

SETUP → **ARM/HLD** → **FREE RUN**

4. ERROR MESSAGES

SU.mg= SENSitivity is changed from AUTO to MAN!

This message tell you that the sensitivity (   menu) has automatically been changed from automatic mode to manual mode.

SU.mg= SENS=AUTO Invalid

[Problem]

For one of the following reasons you cannot use the automatic sensitivity mode of the analyzer:

- ① The frequency range is smaller than 2Hz.
- ② You are doing a zoom analysis.
- ③ The frequency resolution is logarithmic or octave.

[Solution]

Choose the manual sensitivity mode of the analyzer or cancel the forbidding measurement condition.

SU.mg= Zooming => Force/Resp. To HANNING

This message tells you that, because the zooming function is started, the force/response window cannot be used. Thus the window is automatically changed from force/response to Hanning.

4. ERROR MESSAGES

■ Time-Frequency Errors [TF.er]

TF.er= Data Freq. Outside f Domain: Check Settings

[Problem]

The TF analysis frequency of the just recalled data is outside the analysis frequency domain.

[Solution]

Check the settings and correct them so that the data frequency is inside the analysis frequency domain.

TF.er= Invalid Change if INST t-f ON: Set it OFF

[Problem]

You tried to change one of the following parameters, while the INST t-f mode is ON:

- ① SETUP → T-F → t-RANGE
- ② SETUP → T-F → t-f MODE

[Solution]

You should first set INST t-f to OFF, then you can change the t-RANGE and t-f MODE parameters.

Remember that to set INST t-f OFF you only have to toggle the SETUP → T-F → INST t-f ON/OFF key.

[Reference]

Chapter 9, 3. SETUP KEY OPERATION, ■ T-F Analysis setup

TF.er= Log/Oct f Invalid: Set Lin f

[Problem]

With the settings you have made, logarithmic and octave frequency resolution are not allowed.

[Solution]

You should select the linear frequency resolution (lin-f).

[Reference]

Chapter 9, 3. SETUP KEY OPERATION, ■ T-F Analysis setup

4. ERROR MESSAGES


TF.er= NON-Active Channel: Activate Both Channels

[Problem]

You tried to perform a Time-Frequency (T-F) analysis on a non-active channel. For example, if channel A only is active, you cannot perform a T-F analysis on channel B.

[Solution]

Activate both channels: press the following key sequence:



[Reference]

Chapter 9, 3. **SETUP** KEY OPERATION, ■ T-F Analysis setup

TF.er= TF running: STOP key then set INST t-f OFF

[Problem]

This message is displayed in the following conditions: in the T-F mode, the INST t-f functionality being ON, you start a measurement by pressing the **START** key. Then, and here comes the error, you try to switch off the INST t-f functionality, even though the t-f analysis is still running.

[Solution]

You must stop the t-f analysis, by pressing the **STOP/C** key, and only then can you toggle off the INST t-f ON/OFF key.




[Reference]

Chapter 9, 3. **SETUP** KEY OPERATION, ■ T-F Analysis setup

4. ERROR MESSAGES

■ Time-Frequency Messages [TF.mg]

TF.mg= All Changes Ignored: TF data in 3D Display

This message is displayed when you attempt to modify the settings of the    menu while the display is tridimensional and the measurement mode is the T-F mode.

TF.mg= Conflict: DATA VIEW ON => INST t-f OFF

This message tells you that because you switch on the DATA VIEW mode the INST t-f mode is automatically switched off. These two modes are in conflict.

TF.mg= Conflict: INST t-f ON => DATA VIEW OFF

This message tells you that because you switch on the INST t-f mode the DATA VIEW mode is automatically switched off. These two modes are in conflict.

■ Welcome Errors [WL.er]

WL.er= Self Test -> Memory Error

[Problem]

This message warns you that a memory error was detected during the self test operation.

[Reference]

Chapter 3, 2. After Turning the Power ON

WL.er= System Error => DEFAULT Settings

[Problem]

This message tells you that a system error has occur when the power was switched on, and that the default settings were consequently selected.

[Reference]

Chapter 3, 2. After Turning the Power ON

■ Welcome Messages [WL.mg]

WL.mg: Option Change

[Problem]

This message reminds you that the option for which this message is displayed was recently changed.

[Reference]

Chapter 3, 2. After Turning the Power ON

WL.mg= Default Configuration

[Problem]

This message is displayed on the first display of the analyzer, after power on, when you press the

PRESET key.

[Reference]

Chapter 3, 2. After Turning the Power ON

■ Miscellaneous Errors [XX.er]

XX.er= Didn't Exit the LABEL Menu: Press DONE

[Problem]

You pressed a key which does not belong to the LABEL edition menu, although you did not exit the label menu.

Note that the term "label menu" includes:

- the LABEL menu
- the UNIT-LABEL menu
- the FLOPPY-File Name menu

[Solution]

You must explicitly specify that you exit the LABEL menu, by pressing the

MODE → **LABEL**

→ **DONE** key, before proceeding to some other tasks.

[Reference]

Chapter 9, 2. **MODE** KEY OPERATION, ■ Label, (4)Label Validation

4. ERROR MESSAGES

XX.er= FATAL ERROR: Switch the Power OFF then ON

[Problem]

A device driver error occurred, and cannot be recovered.

[Solution]

You should switch the power off then on again.

XX.er= LABEL Maximum Size Reached: Exit(DONE)

[Problem]

The labels have a certain size limit depending on their nature. If you reach this limit and try to input new characters nonetheless, this message will be displayed.

[Solution]

You should either accept the label you have just entered, and exit the label menu by pressing the DONE key, or change it so that it satisfies you, always bearing in mind that the size is limited.

XX.er= Invalid for Zoom analysis: set ZOOM off

[Problem]

For on of the following reasons, the zoom analysis is not valid anymore:

- ① You have tried to select an external sampling clock (SAMPL CLK / INT/EXT).
- ② You have tried to modify a setting such the lines number or the measurement function.
- ③ You have tried to switch the filter off.

[Solution]

You should cancel the zoom analysis mode and switch on the zero start analysis mode.

[Reference]

Chapter 7, 3. Toward Better Measurement, ■ Zoom

XX.er= Invalid Key!

This message indicates that the key you have just pressed is invalid in the actual measurement conditions.

4. ERROR MESSAGES

XX.er= NON-Active Channel: Activate it

[Problem]

You tried to modify the setting on a non-active channel. These settings can be:

- | | | | |
|---|-------|---|---------------------------------|
| ① | INPUT | ⇒ | <u>COUPLING</u>
<u>AC/DC</u> |
| ② | INPUT | ⇒ | <u>+ INPUT</u>
<u>IN/GND</u> |
| ③ | INPUT | ⇒ | <u>- INPUT</u>
<u>ON/GND</u> |
| ④ | INPUT | ⇒ | <u>FILTER</u>
<u>ON/OFF</u> |
| ⑤ | INPUT | ⇒ | <u>ICP</u>
<u>ON/OFF</u> |
| ⑥ | INPUT | ⇒ | <u>TEST</u>
<u>ON/OFF</u> |
| ⑦ | TRIG | ⇒ | <u>SOURCE</u>
<u>(****)</u> |

[Solution]

You should activate the channel of which you are trying to modify the setting.

4. ERROR MESSAGES

■ Miscellaneous Messages [XX.mg]

XX.mg= Averaging Process not yet Completed: Wait

This message is displayed when, although the averaging process is not completed, you try to execute one of the following modifications:

(1) During a simple average process:

- ① You tried to toggle INST t-f
ON/OFF
- ② You tried to modify either the **MODE** or **SETUP** menu setting.

(2) During a curve-fit process:

- ① You pressed the CREATE
FIT key to start a new curve-fit process.

(3) During a servo mode measurement:



- ① You tried to modify the **SETUP** → **RANGE** menu setting.
- ② You tried to modify the **MODE** or **SETUP** menu setting.

You should wait for the averaging process to be completed.

XX.mg= Avg Already started: START Ignored!

This message is displayed when you press the **START** key (a second time) while an averaging process is being executed. The second **START** key pressing will be ignored.

XX.mg= LABEL Limits Exceeded!

This message is displayed when you try to go beyond the LABEL limits with the  softkey and the  softkey.

XX.mg= Select a Character and press the ENT key

[Problem]

This message is displayed when the alphabetical window is being used.

[Solution]

It indicates how to proceed: you must select a character within the window and press the

ENT key to transfer it to the text you are editing.

4. ERROR MESSAGES

XX.mg= Selection IGNORED!

This message tells you that the selection you just made, being, for some reasons, invalid, is ignored.

XX.mg= This Key is NOT AVAILABLE on this version

This message is displayed when you tried to use a functionality which is not available on the analyzer you are using. The version of your analyzer is not provided with these features.

XX.mg= Wait a moment, Please!

This message is displayed when you do not wait long enough between two settings. The former selection has not yet been updated.

XX.mg= Zoom mode is switched OFF

For some reasons the Zoom mode is automatically switched OFF. It happens when you change the measurement mode.

INDEX

[A]

AC Power Socket	3-16
ARM	8-15
AUTO ARM	8-15
Acceleration Sensor Scaling	7-34
active channel	9-10
analysis lines	9-12
analysis resolution	9-14
analysis samples	9-12
Analyzed and Displayed Data	2-14
Antialiasing Filter	7-20
antialiasing filter	9-17
Applying a Window	7-17
Arithmetic Averaging	7-22
arm length	9-23
Audio Weighting Filter	7-19
Audio Weights Characteristics	A-18
Averaged Data	9-27
Averaged data display	9-56
Averaging	6-14
Averaging	7-20
Averaging Method	7-22
Averaging Modes	2-14
averaging method	9-28

[B]

BANDPASS(BANDSTOP)	11-34
BI-SLOPE Trigger	8-14
BI-SLOPE domain	9-21
BODE MKR	10-38
Bode diagram display	9-70
Built-In Printer	16-23
Buzzer's Control	9-6

[C]

CMV Looping of the Power Supply	1-5
COPY Operation	15-16
CRT Display Explanation	3-5
CURSOR MARKERS	10-2
Calendar Display	3-8
Calendar's Setting	9-6
Calibration	9-3
Catalog Display	15-9
Cepstrum and Liftering	11-17

Changing the display format	9-50
Changing the display mode	9-52
Cleaning the CRT screen	1-5
Co-cole diagram display	9-71
Co-quad diagram display	9-70
Coherence Function	6-10
Complex Averaging	7-20
Connectable Plotters	16-3
Connection Method (Plotter)	16-3
Connection Method (Video Printer)	16-21
Constant Ratio Band Filter	2-19
Cooling and Ventilation	1-5
Correlation Function Measurement	8-7
Cross-spectrum Estimation	2-19

[D]

DAMP PWR	10-29
DATA	3-12
dB Scale Spectrum	7-28
DELETE Operation	15-18
DIGITAL I/O	3-16
digital input mode	9-10
Damping Factor	7-50
Damping Factor	7-56
Data File	15-5
Data Format(Floppy Disk)	15-22
Data Types(Floppy Disk)	15-22
Data acquisition Mode	9-24
Deletion method	10-20
Differential Input Connection	4-4
Differential Input Method	4-18
Digital I/O Connector	14-3
Digital I/O Function	14-12
Digital Input Connections	14-6
Digital Input Function	14-4
Digital Input Signal	14-5
Digital Output Connections	14-10
Digital Output Function	14-8
Digital Output Signal	14-9
Display Character	3-7
Display Intensity and Life Span	1-5
Display Various Data	9-55

[E]

ERROR MESSAGES	A-27
Engineering Unit	7-28
Engineering Unit	8-16

Engineering Unit	9-31
Engineering Unit	11-4
Equalizer	6-25
Exponential Averaging	7-23
Extended Function	9-6
External Trigger Circuit	4-8

[F]

FRF Estimation	2-19
FRF Mode	2-4, 6-2
FUNCTION	3-12
Fast Fourier Transform	2-18
Feedback Loop System	11-22
File Names	15-9
Floppy Disk	15-3
Floppy Disk Drive	3-13, 15-2
Floppy Disk Operation Menus	15-13
Force Window	6-7
force/response windows	9-26
Frequency Range	6-16
Frequency Range	7-15
Frequency Resolution	6-16
frequency domain data	9-27
Front Panel	3-12
Function key	3-2
Fuse Holder	1-4

[G]

GLOSSARY	A-13
GPIB	3-12, 3-16
Grounding	1-2
Group delay display	9-68

[H]

HARMONIC	10-33
HISTOGRAM function	9-15
Hierarchical Structure	3-2
Highest Frequency Range's Spectrum	2-19
Hilbert Transform	7-37
Histogram Measurement	8-6
Histogram Voltage Amplitude	8-10
hysteresis width	9-20

[I]

IEEE floating format	15-22
INPUT	3-13, 3-16
INTENSITY	3-13

Imagenary part display	9-64
Impedance between the Input Outlets	4-3
Impulse Hammer	6-20
InCOP(COP,SNR)	11-25
Indications	3-16
Initial Display	3-6
Initialization	3-11
Input Cable	4-2
Input Circuit	4-2
Input Connection	4-2
Input Sensitivity	9-16
Input Sensitivity Auto-range Function	4-9
Input Sensitivity versus Y Scale	4-12
Input Waveform Buffer	2-18
input connectors status	9-17
input coupling	9-17
insert a floppy disk	15-4
Instantaneous data display	9-55
Instantaneous data monitor	9-48
Interchannel Delay	6-12
Interchannel Delay	9-35
Inverse phase display	9-67

[J]

$j \omega$ Operations	7-35
-----------------------------	------

[L]

LEVEL Trigger	8-13
Label	9-4
Label Setting procedure	9-5
Lag Window	8-16
Linear Frequency Resolution	7-15
Linear Resolution Frequency Analysis	7-7
Linear Scale Spectrum	7-31
Linear square magnitude display	9-66
linear resolution	9-14
Lists of Search Markers	10-22
Log/octave analysis	2-20
Logarithmic Frequency Resolution	7-16
Logarithmic Resolution Frequency Analysis	7-12
Logarithmic magnitude display	9-66
logarithmic analysis	9-14
Lowpass Filter	2-18

[M]

MATH Function	9-2
MATHEMATICAL OPERATIONS	11-2
MEAS File	15-5

MEASUREMENT	3-12	Plot Area	16-12
MODE Menu	9-8	Plotter	16-3
Magnitude display	9-66	Plotter Setting	16-4
Marker Display Examples	10-14	Power Spectrum Averaging	7-20
Mastering Key	3-2	Power Supply	1-2
Mathematical operation results display	9-59	Power Supply for ICP	4-6
Maximum Applicable Voltages	4-3	Power-spectrum Estimation	2-19
Measurement Blocks	2-18	power spectrum density	9-34
Measurement Flow	3-3	Pulse Marker	8-17
Measurement Functions	9-9	Pulse Rise Time Measurement	8-17
Measurement Mode	9-3		
Mode	7-3		
monitor X function	9-7		
Multi-Screen Configuration	9-46		

[N]

NEXT RIGHT PK(NEXT LEFT PK)	10-24
NUMERIC LIST	9-51
Nichois diagram display	9-71
Nickel Cadmium Battery	1-6
Noise Meter	7-42
Number of Display Points	8-10
Number of Lines	6-16
Number of Lines	7-15
number of decades	9-14
number of screens	9-47
Nyquist diagram display	9-69

[O]

OUTPUT	3-16
octave analysis	9-14
Octave Band Filter	2-19
Ocrave Spectrum Analysis	2-19
Operating Environment	1-5
Outline	2-2
Overlap	7-26
overlapped data	9-30
overloaded data	9-30

[P]

PANEL FILE	15-7
PKPK	10-24
POWER	3-13
PROCESS	7-24
PSD	7-34
Panels Description	3-12
Phase display	9-67

[Q]

QUICK OPERATION GUIDE	A-21
-----------------------------	------

[R]

RECALL	15-8
RECALL Operation	15-18
REJECT	7-25
Read-out window	9-49
Real part display	9-64
Real-Time Operation	11-13
Rear Panel	3-16
Recall method	10-20
Reducing The Noise Effects	4-18
Reference Markers	10-20
Replacing a Fuse	1-4
Response Window	6-7
Retrieved Data	15-21
Retrieving Procedure	15-20
Rotation	11-15

[S]

SAVE	15-8
SAVE Operation	15-15
SEARCH MARKERS	10-10
SETUP Menu List	9-49
Safety Requirements	1-2
Sampling Rate	8-9
sampling clock source	9-12
sampling frequency	9-11
sampling interval	9-10
sampling rate	9-11
Saving and retrieving data	9-58
Scale Conversion (Input)	14-7
Scale Conversion (Output)	14-11
Search Markers Display Timing	10-19
Selecting an Input Method	4-3
Self-diagnostic Function	3-9

Setting a Menu	4-3
Signal Input Block	9-17
Signal-to-Noise Ratio	6-19
Softkeys	3-13
Softmenus	3-13
Specifications	A-2
Specifying pen colors	16-15
Spectrum Analysis	2-19
Spectrum Mode	2-6
Spectrum Mode	7-2
Storage	1-7
start frequency	9-15
stop frequency	9-15
Synchronous Averaging Method	4-19
Synchronous Averaging Setup	4-20

[T]

T-F Analysis	9-37
T-F Mode	2-10
T-F analysis data	9-38
T-F analysis results	9-41
T-F data display	9-61
test signal	9-18
TR MATH	11-36
The Four Measurement Modes	2-3
The Measurement Modes	2-4
Three-dimensional Display	7-54
Time Waveform	7-32
time domain	9-37
to CMP TIME	11-28
to TIME/to FREQ	11-31
Trace-on-start function	9-7
Transportation	1-7
Trigger	8-11, 9-19
Trigger Delay	8-14
Trigger Operation	2-14
Trigger Position Marker	8-15, 9-22
Trigger Source	8-12
Trigger Types	8-12
trigger delay	9-21
trigger level	9-20
trigger signal	9-19
triggering conditions	9-19
Troubleshooting	1-8

[U]

Unevenly Rotating Device	7-46
Unit	9-31
Use under Normal Conditions	1-5

[V]

VIDEO OUTPUT	3-16
VIEW Menu List	9-76
Various Data Display Formats	9-64
Video Printer	16-21
Video Printer Setting	16-22
View File	15-5
View File Reading Program	15-24
Vlt	7-27
Vrms	7-27

[W]

Waveform Mode	2-12
Waveform Mode	8-2
Waveform Observation	8-3
Window	9-24
Window's types	9-24
Wow and Flutter Meter's Setup	7-46
Write protection	15-3

[X]

X Axis Cursor Markers	10-2
X Axis Scale	9-72
X dB BWD	10-37
X softkey	3-2
Y Axis Cursor Markers	10-4
Y softkey	3-2

[Z]

Zoom	6-17
Zoom	7-39
Zoom Analysis Setup	7-41
Zoom Processor	2-18
Zoom's Limitations	7-40

[+]

+ Input Single Ended Connection	4-4
---------------------------------------	-----

[-]

- Input Single Ended Connection	4-5
---------------------------------------	-----

[1]

$1/(j\omega)^2$	11-11	
1/10 Lowpass Digital Filter	2-19
1/100 Lowpass Digital Filter	2-19
16-bit A/D Converter	2-18

[3D]

3D DISPLAY	9-51
------------	-------	------

A words surrounded by [] (square) indicates the X or the Y soft menu and panel key.

[A]

[A WGT]	9-27
[A:UNIT]	9-32
[A:VALUE]	9-32
[ACTIVE CH]	9-10
[ARM LEN]	9-23
[ARM/HLD]	9-24
[ARM/HOLD]	9-53
[ARM]	9-24
[AUTO ARM]	9-24
[AVE]	9-28
[AVG END]	9-53
[AVG MODE]	9-28
[AVG NO]	9-29
[AVG VW]	9-56

[B]

[B WGT]	9-27
[BAND PASS]	10-29
[BI-SLOPE INSIDE]	9-20
[BI-SLOPE OUTSIDE]	9-20
[BODE MKR]	10-38
[BODE]	9-70
[BODE]	10-38
[BUZZER]	9-6

[C]

[C WGT]	9-27
[C-MES WGT]	9-27
[CAL]	9-3
[CH-A PWR SPECT]	9-56
[CH-A SPECT]	9-55
[CH-A TIME]	9-55
[CH-A&B]	9-10
[CH-A]	9-10
[CH-A]	9-16
[CH-B PWR SPECT]	9-56
[CH-B SPECT]	9-55
[CH-B TIME]	9-55
[CH-B]	9-10
[CH-B]	9-16
[CHANNEL]	9-17
[CO-QUAD]	9-70

[COORD]	9-32
[COUPLING]	9-17
[CROSS]	9-31
[CS.er]	A-27
[CTRL SYS]	10-38
[ChDELAY]	9-35
[Cole-Cole]	9-71

[D]

[DALAY]	9-22
[DAMPING]	9-26
[DATA RECALL#]	9-58
[DATA SAVE#]	9-58
[DATE]	9-6
[DAY]	9-6
[dBMag]	9-66
[DECADE]	9-14
[DEL CHAR]	9-4
[DEL CHAR]	9-33
[DEL LINE]	9-4
[DEL REF]	10-20
[DELAY T]	9-35
[DIGITAL in]	9-10
[DONE]	9-4
[DUAL]	9-47
[DY.er]	A-28
[DY.mg]	A-32

[E]

[EU or Vlt]	9-33
[EXP]	9-28
[EXTEND]	9-6
[EXTEND]	9-48
[EXT]	9-19

[F]

[f PEAK]	9-38
[f RESOLN]	9-12
[FAST]	9-29
[FD.er]	A-35
[FD.mg]	A-41
[FILTERING]	10-29
[FILTER]	9-17
[FLAT-PASS]	9-25

[FORCE/RESPONSE]	9-25
[FORMAT]	9-51
[FRAME TIM]	9-13
[FREE RUN]	9-24
[FREE STEP]	9-53
[FREQ RNG]	9-11
[FRF CODE]	10-38
[FRF COORD]	9-69
[FRF]	9-3
[FUNC]	9-9
[FUND SET]	10-33

[G]

[GP.er]	A-44
[GRAPH]	9-51
[GRATICULE]	9-52
[GROUP DELAY]	9-68
[Gxx]	9-38

[H]

[HANNING]	9-25
[HARMONIC]	10-33
[HIST POIN]	9-15
[HISTERESI]	9-21
[HOLD]	9-24
[HOUR]	9-6

[I]

[ICH DELAY]	9-35
[ICP]	9-18
[IMAG]	9-38
[IMAG]	9-64
[INPUT]	9-17
[INSERT]	9-4
[INST VW]	9-55
[INST t-f]	9-40

[L]

[LABEL]	9-4
[LABEL]	9-5
[LAG WND]	9-26
[LEVEL]	9-20
[LIFT]	9-72
[LIMIT NO]	9-29
[LIN f]	9-14
[LINE/SPN]	9-13
[LOG f]	9-14

[LOWER f]	10-29
[LOWER]	9-74

[M]

[MAG ²]	9-66
[MAG]	9-32
[MAG]	9-66
[MATH MENU]	9-2
[MATH SEL]	10-29
[MATH VW]	9-59
[MATH]	9-2
[MEAS]	9-3
[MEM VW]	9-58
[MINIMUM]	9-25
[MINUTE]	9-6
[MK.er]	A-47
[MK.mg]	A-48
[MKR VAL]	10-2
[MOD f]	10-29
[MODE]	9-3
[MONITOR X]	9-48
[MONITOR]	9-7
[MONTH]	9-6
[msec]	9-22
[MT.er]	A-49
[MT.mg]	A-57

[N]

[NEXT]	9-35
[NORMAL]	9-29
[NUMERIC LIST]	9-51
[NYQUIST]	9-69
[Nichois]	9-71

[O]

[OFF]	9-27
[OVERLAP]	9-30
[OVERLAY]	9-52

[P]

[PEAK]	9-28
[PHASE]	9-38
[PHASE]	9-67
[PKPK]	10-24
[PL.er]	A-58
[PL.mg]	A-59
[POSITION]	9-4

[PRESET]	9-2	[SUB]	9-28
[PROCESS]	9-29	[SUM]	9-28
[PSD]	9-35		
		[T]	
[Q]		[T-F]	9-37
[QUAD]	9-47	[t-f CH]	9-38
		[t-f DATA]	9-38
[R]		[t-f ID]	9-38
[REAL]	9-38	[t-f MODE]	9-38
[REAL]	9-64	[t-f TRACE#]	9-40
[RECT]	9-25	[t-f TRACE#]	9-61
[REJECT]	9-30	[TEST]	9-18
[RESULT ARRAY]	9-59	[TF.er]	A-68
[RETURN]	9-38	[TF.mg]	A-70
[RIGHT]	9-72	[TIME-FREQ]	9-3
[RS.er]	A-60	[TRACEonST]	9-7
[RS.mg]	A-63	[t RANGE]	9-37
		[TRANSIENT]	9-26
[S]		[TRIG]	9-19
[SAMPL CLK]	9-12	[TRIPLE]	9-47
[SAMPLE RAT]	9-11	[TYPE]	9-47
[sec]	9-22		
[SECOND]	9-6	[U]	
[SELECT CH]	9-31	[UNIT]	9-31
[SENS]	9-16	[UPPER]	9-74
[SET CH-A]	9-16		
[SET CH-B]	9-16	[V]	
[SET CH]	9-26	[VIEW STEP]	9-53
[SET WND]	9-26	[VIEW SW]	9-26
[SETUP]	9-9	[VIEW]	9-47
[SINGLE DC CAL]	9-3	[Visible]	9-48
[SINGLE]	9-47		
[SLOPE]	9-20	[W]	
[SOURCE]	9-19	[WARNING]	9-6
[SPECTRUM]	9-3	[WAVEFORM]	9-3
[SPOT f]	9-39	[WEIGHT]	9-25
[STACK NO]	9-53	[WL.er]	A-70
[START TIM]	9-26	[WL.mg]	A-71
[START f]	9-15		
[START t]	9-37	[X]	
[STATIONAR]	9-26	[X AUTO SCALE]	9-73
[STEP t]	9-37	[X DEFAULT]	9-73
[STOP TIM]	9-26	[X SCALE]	9-72
[STOP f]	9-15	[X-AXIS]	9-52
[STOP t]	9-37	[XX.er]	A-71
[STOP + 1]	9-29		
[SU.er]	A-64		
[SU.mg]	A-66		

[XX.mg] A-74

[M]

[Y AUTO SCALE] 9-75

[Y DEFAULT] 9-75

[Y SCALE] 9-73

[YEAR] 9-6

[+]

[+ 1 AVG] 9-29

[+ INPUT] 9-17

[+ MONITOR] 9-48

[+ SLOPE] 9-20

[-]

[- INPUT] 9-17

[- PHASE] 9-67

[- SLOPE] 9-20

[Σ]

[ΣGxx(f)] 9-38

[μ]

[μsec] 9-22

[1]

[1/1 OCT] 9-14

[1/3 OCT] 9-14

[3D]

[3D ANGLE] 9-53

[3D CTRL] 9-53

[3D DISPLAY] 9-51


[3D SETUP] 9-53

[←]

[←] 9-4

[→]


[→] 9-4

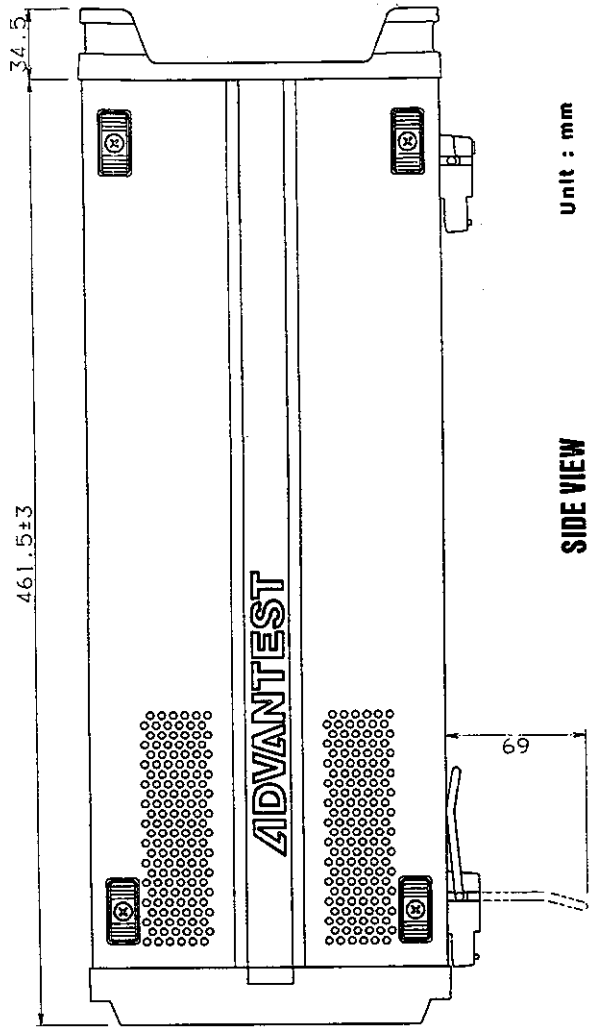


Unit : mm

SIDE VIEW

**R9211E
EXTERNAL VIEW**

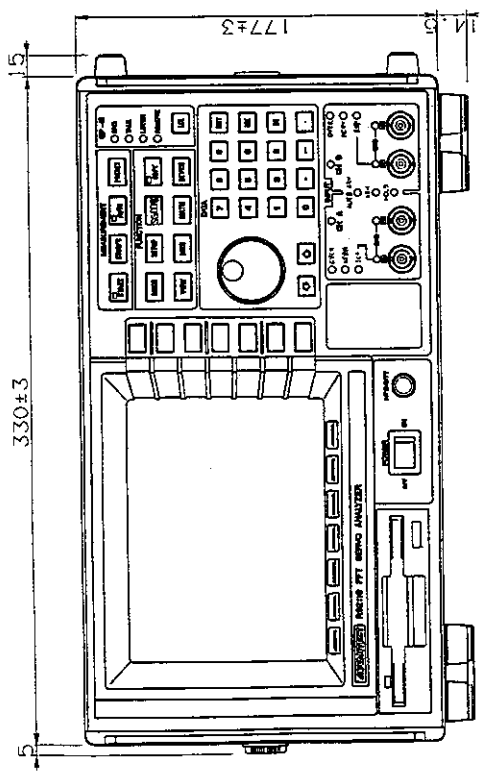

FRONT VIEW

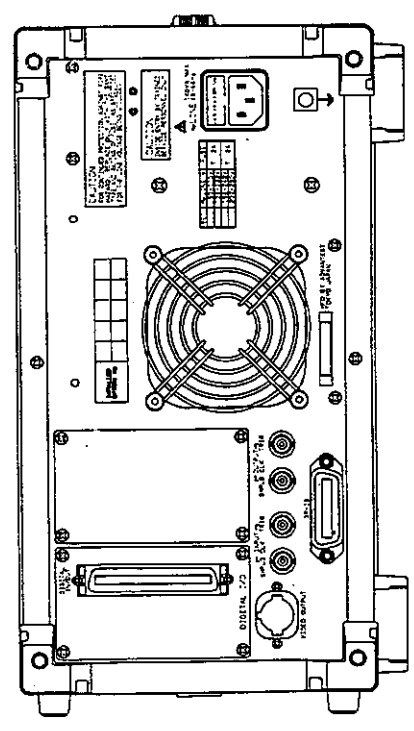

REAR VIEW

R9211EXT1-812-B

IMPORTANT INFORMATION FOR ADVANTEST SOFTWARE

PLEASE READ CAREFULLY: This is an important notice for the software defined herein. Computer programs including any additions, modifications and updates thereof, operation manuals, and related materials provided by ADVANTEST (hereafter referred to as "SOFTWARE"), included in or used with hardware produced by ADVANTEST (hereafter referred to as "PRODUCTS").

SOFTWARE License

All rights in and to the SOFTWARE (including, but not limited to, copyright) shall be and remain vested in ADVANTEST. ADVANTEST hereby grants you a license to use the SOFTWARE only on or with ADVANTEST PRODUCTS.

Restrictions

- (1) You may not use the SOFTWARE for any purpose other than for the use of the PRODUCTS.
- (2) You may not copy, modify, or change, all or any part of, the SOFTWARE without permission from ADVANTEST.
- (3) You may not reverse engineer, de-compile, or disassemble, all or any part of, the SOFTWARE.

Liability

ADVANTEST shall have no liability (1) for any PRODUCT failures, which may arise out of any misuse (misuse is deemed to be use of the SOFTWARE for purposes other than it's intended use) of the SOFTWARE. (2) For any dispute between you and any third party for any reason whatsoever including, but not limited to, infringement of intellectual property rights.

LIMITED WARRANTY

1. Unless otherwise specifically agreed by Seller and Purchaser in writing, ADVANTEST will warrant to the Purchaser that during the Warranty Period this Product (other than consumables included in the Product) will be free from defects in material and workmanship and shall conform to the specifications set forth in this Operation Manual.
2. The warranty period for the Product (the "Warranty Period") will be a period of one year commencing on the delivery date of the Product.
3. If the Product is found to be defective during the Warranty Period, ADVANTEST will, at its option and in its sole and absolute discretion, either (a) repair the defective Product or part or component thereof or (b) replace the defective Product or part or component thereof, in either case at ADVANTEST's sole cost and expense.
4. This limited warranty will not apply to defects or damage to the Product or any part or component thereof resulting from any of the following:
 - (a) any modifications, maintenance or repairs other than modifications, maintenance or repairs (i) performed by ADVANTEST or (ii) specifically recommended or authorized by ADVANTEST and performed in accordance with ADVANTEST's instructions;
 - (b) any improper or inadequate handling, carriage or storage of the Product by the Purchaser or any third party (other than ADVANTEST or its agents);
 - (c) use of the Product under operating conditions or environments different than those specified in the Operation Manual or recommended by ADVANTEST, including, without limitation, (i) instances where the Product has been subjected to physical stress or electrical voltage exceeding the permissible range and (ii) instances where the corrosion of electrical circuits or other deterioration was accelerated by exposure to corrosive gases or dusty environments;
 - (d) use of the Product in connection with software, interfaces, products or parts other than software, interfaces, products or parts supplied or recommended by ADVANTEST;
 - (e) the occurrence of an event of force majeure, including, without limitation, fire, explosion, geological change, storm, flood, earthquake, tidal wave, lightning or act of war; or
 - (f) any negligent act or omission of the Purchaser or any third party other than ADVANTEST.
5. **EXCEPT TO THE EXTENT EXPRESSLY PROVIDED HEREIN, ADVANTEST HEREBY EXPRESSLY DISCLAIMS, AND THE PURCHASER HEREBY WAIVES, ALL WARRANTIES, WHETHER EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, INCLUDING, WITHOUT LIMITATION, (A) ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND (B) ANY WARRANTY OR REPRESENTATION AS TO THE VALIDITY, SCOPE, EFFECTIVENESS OR USEFULNESS OF ANY TECHNOLOGY OR ANY INVENTION.**
6. **THE REMEDY SET FORTH HEREIN SHALL BE THE SOLE AND EXCLUSIVE REMEDY OF THE PURCHASER FOR BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.**
7. **ADVANTEST WILL NOT HAVE ANY LIABILITY TO THE PURCHASER FOR ANY INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF ANTICIPATED PROFITS OR REVENUES, IN ANY AND ALL CIRCUMSTANCES, EVEN IF ADVANTEST HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND WHETHER ARISING OUT OF BREACH OF CONTRACT, WARRANTY, TORT (INCLUDING, WITHOUT LIMITATION, NEGLIGENCE), STRICT LIABILITY, INDEMNITY, CONTRIBUTION OR OTHERWISE.**

CUSTOMER SERVICE DESCRIPTION

In order to maintain safe and trouble-free operation of the Product and to prevent the incurrence of unnecessary costs and expenses, ADVANTEST recommends a regular preventive maintenance program under its maintenance agreement.

ADVANTEST's maintenance agreement provides the Purchaser on-site and off-site maintenance, parts, maintenance machinery, regular inspections, and telephone support and will last a maximum of ten years from the date the delivery of the Product. For specific details of the services provided under the maintenance agreement, please contact the nearest ADVANTEST office listed at the end of this Operation Manual or ADVANTEST's sales representatives.

Some of the components and parts of this Product have a limited operating life (such as, electrical and mechanical parts, fan motors, unit power supply, etc.). Accordingly, these components and parts will have to be replaced on a periodic basis. If the operating life of a component or part has expired and such component or part has not been replaced, there is a possibility that the Product will not perform properly. Additionally, if the operating life of a component or part has expired and continued use of such component or part damages the Product, the Product may not be repairable. Please contact the nearest ADVANTEST office listed at the end of this Operation Manual or ADVANTEST's sales representatives to determine the operating life of a specific component or part, as the operating life may vary depending on various factors such as operating condition and usage environment.

CLAIM FOR DAMAGE IN SHIPMENT TO ORIGINAL BUYER

The product should be thoroughly inspected immediately upon original delivery to buyer. All material in the container should be checked against the enclosed packing list or the instruction manual alternatively. ADVANTEST will not be responsible for shortage unless notified immediately.

If the product is damaged in any way, a claim should be filed by the buyer with carrier immediately. (To obtain a quotation to repair shipment damage, contact ADVANTEST or the local supplier.) Final claim and negotiations with the carrier must be completed by buyer.

SALES & SUPPORT OFFICES

Advantest America, Inc.(North America)

New Jersey Office

258 Fernwood Avenue Edison, NJ 08837, U.S.A.

Phone: +1-732-346-2600 Facsimile: +1-732-346-2610

Advantest Taiwan Inc. (Taiwan)

No.1 Alley 17, Lane 62, Chung-Ho Street,

Chu-Pei, Hsin-Chu Hsien, Taiwan R.O.C. 302

Phone: +886-3-5532111 Facsimile: +886-3-5541168

Advantest (Singapore) Pte. Ltd. (Singapore)

438A Alexandra Road, #08-03/06

Alexandra Technopark Singapore 119967

Phone: +65-6274-3100 Facsimile: +65-6274-4055

Advantest Korea Co., Ltd. (Korea)

22BF, Kyobo KangNam Tower, 1303-22,

Seocho-Dong, Seocho-Ku, Seoul #137-070, Korea

Phone: +82-2-532-7071 Facsimile: +82-2-532-7132

Advantest (Suzhou) Co., Ltd. (China)

Shanghai Branch Office

5F, No.46 Section Factory Building, No.555 Gui Ping Road,

Caohejing, Hi-Tech Area, Shanghai, China 200233

Phone: +86-21-6485-2725 Facsimile: +86-21-6485-2726

Beijing Branch Office

406/F, Ying Building, Quantum Plaza, No. 23 Zhi Chun Road,

Hai Dian District, Beijing, China 100083

Phone: +86-10-8235-3377 Facsimile: +86-10-8235-6717

ROHDE & SCHWARZ Europe GmbH (Europe)

Mühlendorfstraße 15

D-81671 München, Germany

(P.O.B. 80 14 60

D-81614 München, Germany)

Phone: +49-89-4129-13711

Facsimile:+49-89-4129-13723

Technology Support on the Leading Edge
ADVANTEST®
ADVANTEST CORPORATION

Shin-Marunouchi Center Building, 1-6-2 Marunouchi, Chiyoda-ku, Tokyo 100-0005, Japan
Tel: +81-3-3214-7500